STR-DA4300ES

SERVICE MANUAL

US Model
Canadian Model

Ver. 1.1 2007.10

This receiver incorporates Dolby* Digital and Pro Logic Surround and the DTS** Digital Surround System.

* Manufactured under license from Dolby Laboratories.
Dolby, Pro Logic, Surround EX, and the double-D symbol are trademarks of Dolby Laboratories.

** Manufactured under license from DTS, Inc.
"DTS", "DTS-ES" and "Neo:6" are registered trademarks of DTS, Inc. and "DTS-HD Master Audio", "DTS-HD High Resolution Audio" and "DTS 96/24" are trademarks of DTS, Inc.

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS (US model)

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 8 ohm loads, both channels driven, from 20 – 20,000 Hz; rated 100 watts per channel minimum RMS power, with no more than 0.09% total harmonic distortion from 250 milliwatts to rated output.

Amplifier section

POWER OUTPUT

Rated Power Output at Stereo Mode[1) 2)]
(8 ohms 20 Hz – 20 kHz, THD 0.09%): 100W + 100W

Reference Power Output at Stereo Mode
(4 ohms 20 Hz – 20 kHz, THD 0.15%): 85W + 85W

Reference Power Output
(8 ohms 1 kHz, THD 0.7%)
FRONT[2)]: 110W + 110W
CENTER[2)]: 110 W
SURROUND[2)]: 110W + 110W
SUR BACK[2)]: 110W + 110W

Reference Power Output
(4 ohms 1 kHz, THD 0.7%)
FRONT[2)]: 100W + 100W
CENTER[2)]: 100 W
SURROUND[2)]: 100W + 100W
SUR BACK[2)]: 100W + 100W

[1)]Depending on the sound field settings and the source, there may be no sound output.
[2)]Measured under the following conditions:
Power requirements: 120 V AC, 60 Hz

Frequency response

PHONO	RIAA equalization curve ± 0.5 dB
MULTI CHANNEL INPUT, SA-CD/CD, MD/TAPE, DVD/BD, TV, SAT/CATV, VIDEO 1/2/3	10 Hz – 100 kHz ± 3 dB

Inputs (Analog)

PHONO	Sensitivity: 2.5 mV Impedance: 50 kohms S/N: 90dB (A, 20 kHz LPF)
MULTI CHANNEL INPUT, SA-CD/CD, MD/TAPE, DVD/BD, TV, SAT/CATV, VIDEO 1/2/3	Sensitivity: 150 mV Impedance: 50 kohms S/N: 100 dB (A, 20 kHz LPF)

Inputs (Digital)

DVD/BD,VIDEO 2, SA-CD/CD (Coaxial)	Impedance: 75 ohms S/N: 96 dB (A, 20 kHz LPF)
VIDEO 1, VIDEO 3, SAT/CATV, TV, MD/TAPE (Optical)	S/N: 96 dB (A, 20 kHz LPF)

Outputs

MD/TAPE (REC OUT), VIDEO 1 (AUDIO OUT)	Voltage:150 mV Impedance: 1 kohm
FRONT L/R, CENTER, SURROUND L/R, SUR BACK L/R, SUB WOOFER	Voltage: 2 V Impedance: 1 kohm

EQUALIZER

Gain levels	±10 dB, 1 dB step

FM tuner section

Tuning range	87.5 – 108.0 MHz
Antenna (aerial)	FM wire antenna (aerial)
Antenna (aerial) terminals	75 ohms, unbalanced

– Continued on next page –

MULTI CHANNEL AV RECEIVER

9-887-785-02
2007J05-1
© 2007.10

Sony Corporation
Home Audio Division
Published by Sony Techno Create Corporation

SONY

AM tuner section

Tuning range
- With 10-kHz tuning scale: 530 – 1,710 kHz[3)]
- With 9-kHz tuning scale: 531 – 1,710 kHz[3)]

Antenna (aerial): Loop antenna (aerial)

[3)]You can change the AM tuning scale to either 9 kHz or 10 kHz. After tuning in any AM station, turn off the receiver. While holding down TUNING MODE, press POWER on the receiver. All preset stations will be erased when you change the tuning scale. To reset the scale to 10 kHz (or 9 kHz), repeat the procedure.

Video section

Inputs/Outputs
- Video: 1 Vp-p, 75 ohms
- COMPONENT VIDEO:
  - Y: 1 Vp-p, 75 ohms
  - P_B/C_B: 0.7 Vp-p, 75 ohms
  - P_R/C_R: 0.7 Vp-p, 75 ohms
  - 80 MHz HD Pass Through

HDMI Video

Input/Output (HDMI Repeater block)
- 640 × 480p@60Hz
- 720 × 480p@59.94/60Hz
- 1440 × 480p@59.94/60Hz (pixel sent 2times)
- 1280 × 720p@59.94/60Hz
- 1920 × 1080i@59.94/60Hz
- 1920 × 1080p@59.94/60Hz
- 720 × 576p@50Hz
- 1440 × 576p@50Hz (pixel sent 2times)
- 1280 × 720p@50Hz
- 1920 × 1080i@50Hz
- 1920 × 1080p@50Hz
- 1920 × 1080p@24Hz

General

Power requirements	120 V AC, 60 Hz
Power output (DIGITAL MEDIA PORT)	DC OUT: 5 V, 700 mA
Power consumption	350 W/480 VA (US/Canada)
Power consumption (during standby mode)	0.7 W (when “HDMI Control” and “RS-232C Control” are set to “OFF”)
Dimensions	430 × 175 × 430 mm (width/height/depth) including projecting parts and controls
Mass (Approx.)	14.5 kg

Supplied accessories

Operating Instructions
Quick Setup Guide (1)
HDMI CONTROL Guide (1)
GUI Menu List (1)
Optimizer microphone ECM-AC2 (1)
FM wire antenna (aerial) (1)
AM loop antenna (aerial) (1)
AC power cord (mains lead) (1)
Remote commander RM-AAL011 (1)
Remote commander RM-AAU018 (1)
R6 (size-AA) batteries (4)

Design and specifications are subject to change without notice.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:
Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage.
Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes.). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

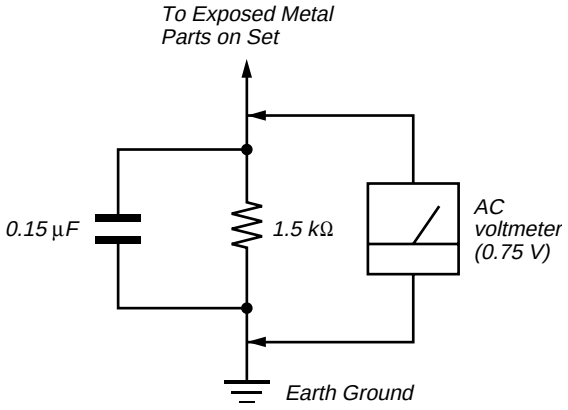

Fig. A. Using an AC voltmeter to check AC leakage.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COM- POSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

TABLE OF CONTENTS

1. SERVICING NOTES 5

2. GENERAL 8

3. DISASSEMBLY
3-1. Disassembly Flow 12
3-2. Case 13
3-3. Front Panel Block 13
3-4. CIS Board, Tuner (FM/AM) 14
3-5. D.AUDIO Board, DSP Board 14
3-6. TUNER Board, CONTROL Board 15
3-7. PREOUT Board, S_SPTM Board 15
3-8. D_VIDEO Board 16
3-9. A_VIDEO Board 16
3-10. MAIN Board, C_SPTM Board 17
3-11. AC Board, Power Transformer (T001) 18
3-12. Power AMP Block 18

4. TEST MODE 19

5. ELECTRICAL ADJUSTMENTS 23

6. DIAGRAMS
6-1. Block Diagram – CONTROL Section – 25
6-2. Block Diagram – DSP Section – 26
6-3. Block Diagram – DIGITAL AUDIO Section – 27
6-4. Block Diagram – HDMI Section – 28
6-5. Block Diagram – VIDEO PROCESS Section – 29
6-6. Block Diagram – ANALOG AUDIO Section – 30
6-7. Block Diagram – POWER AMP Section – 31
6-8. Block Diagram – VIDEO Section – 32
6-9. Block Diagram – PANEL, CIS, XM/ SIRIUS RECEIVER, DMPORT Section – 33
6-10. Block Diagram – POWER SUPPLY Section – 34
6-11. Schematic Diagram – MAIN Board (1/4) – 36
6-12. Schematic Diagram – MAIN Board (2/4) – 37
6-13. Schematic Diagram – MAIN Board (3/4) – 38
6-14. Schematic Diagram – MAIN Board (4/4) – 39
6-15. Printed Wiring Board – MAIN Board – 40
6-16. Schematic Diagram – D.AUDIO Board (1/5) – 41
6-17. Schematic Diagram – D.AUDIO Board (2/5) – 42
6-18. Schematic Diagram – D.AUDIO Board (3/5) – 43
6-19. Schematic Diagram – D.AUDIO Board (4/5) – 44
6-20. Schematic Diagram – D.AUDIO Board (5/5) – 45
6-21. Printed Wiring Board – D.AUDIO Board (Component Side) – 46
6-22. Printed Wiring Board – D.AUDIO Board (Conductor Side) – 47
6-23. Printed Wiring Board – TUNER Board (Component Side) – 48
6-24. Printed Wiring Board – TUNER Board (Conductor Side) – 49
6-25. Schematic Diagram – TUNER Board (1/2) – 50
6-26. Schematic Diagram – TUNER Board (2/2) – 51
6-27. Printed Wiring Board – DSP Board (Side A) – 52
6-28. Printed Wiring Board – DSP Board (Side B) – 53
6-29. Schematic Diagram – DSP Board (1/4) – 54
6-30. Schematic Diagram – DSP Board (2/4) – 55
6-31. Schematic Diagram – DSP Board (3/4) – 56
6-32. Schematic Diagram – DSP Board (4/4) – 57
6-33. Printed Wiring Boards – CONNECTOR Section – 58
6-34. Schematic Diagram – CONNECTOR Section – 59
6-35. Printed Wiring Board – TEMPERATURE DETECTION Board – 60

6-36. Schematic Diagram
– TEMPERATURE DETECTION Board – 60
6-37. Printed Wiring Board – A CLASS AMP Board – 61
6-38. Schematic Diagram – A CLASS AMP Board (1/2) – 62
6-39. Schematic Diagram – A CLASS AMP Board (2/2) – 63
6-40. Printed Wiring Board – POWER AMP Board – 64
6-41. Schematic Diagram – POWER AMP Board – 65
6-42. Printed Wiring Board – PROTECTOR (F-C) Board – ... 66
6-43. Schematic Diagram – PROTECTOR (F-C) Board – 67
6-44. Printed Wiring Boards
– PROTECTOR (SB/SURR) Section – 68
6-45. Schematic Diagram
– PROTECTOR (SB/SURR) Section – 69
6-46. Printed Wiring Board – BIAS Board – 70
6-47. Schematic Diagram – BIAS Board – 71
6-48. Printed Wiring Board – PREOUT Board – 72
6-49. Schematic Diagram – PREOUT Board – 73
6-50. Printed Wiring Boards – SPEAKER Section – 74
6-51. Schematic Diagram – SPEAKER Section – 75
6-52. Printed Wiring Board
– D_VIDEO Board (Component Side) – 76
6-53. Printed Wiring Board
– D_VIDEO Board (Conductor Side) – 77
6-54. Schematic Diagram – D_VIDEO Board (1/10) – 78
6-55. Schematic Diagram – D_VIDEO Board (2/10) – 79
6-56. Schematic Diagram – D_VIDEO Board (3/10) – 80
6-57. Schematic Diagram – D_VIDEO Board (4/10) – 81
6-58. Schematic Diagram – D_VIDEO Board (5/10) – 82
6-59. Schematic Diagram – D_VIDEO Board (6/10) – 83
6-60. Schematic Diagram – D_VIDEO Board (7/10) – 84
6-61. Schematic Diagram – D_VIDEO Board (8/10) – 85
6-62. Schematic Diagram – D_VIDEO Board (9/10) – 86
6-63. Schematic Diagram – D_VIDEO Board (10/10) – 87
6-64. Printed Wiring Board
– A_VIDEO Board (Component Side) – 88
6-65. Printed Wiring Board
– A_VIDEO Board (Conductor Side) – 89
6-66. Schematic Diagram – A_VIDEO Board (1/4) – 90
6-67. Schematic Diagram – A_VIDEO Board (2/4) – 91
6-68. Schematic Diagram – A_VIDEO Board (3/4) – 92
6-69. Schematic Diagram – A_VIDEO Board (4/4) – 93
6-70. Printed Wiring Board – VIDEO3 Board – 94
6-71. Schematic Diagram – VIDEO3 Board – 95
6-72. Printed Wiring Board
– CONTROL Board (Component Side) – 96
6-73. Printed Wiring Board
– CONTROL Board (Conductor Side) – 97
6-74. Schematic Diagram – CONTROL Board (1/2) – 98
6-75. Schematic Diagram – CONTROL Board (2/2) – 99
6-76. Printed Wiring Board – CIS Board – 100
6-77. Schematic Diagram – CIS Board – 101
6-78. Printed Wiring Board – DISPLAY Board – 102
6-79. Schematic Diagram – DISPLAY Board – 103
6-80. Printed Wiring Boards – PANEL Section – 104
6-81. Schematic Diagram – PANEL Section – 105
6-82. Printed Wiring Board – DC-DC Board – 106
6-83. Schematic Diagram – DC-DC Board – 107
6-84. Printed Wiring Board – AC Board – 108
6-85. Schematic Diagram – AC Board – 109

7. EXPLODED VIEWS

7-1. Case Section 156
7-2. DISPLAY Board Section 157
7-3. Front Panel Section 158
7-4. AC/DC-DC Boards Section 159
7-5. D.AUDIO/D_VIDEO Boards Section 160
7-6. A_VIDEO Board Section 161
7-7. Heat Sink Section 162
7-8. MAIN Board Section 163

8. ELECTRICAL PARTS LIST 164

SECTION 1
SERVICING NOTES

UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.
(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)

: LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.
  Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
  Soldering irons using a temperature regulator should be set to about 350 °C.
  Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
  Unleaded solder is more viscou-s (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
  It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

NOTE OF REPLACING THE IC3601 ON THE D_VIDEO BOARD

Replacement of IC3601 on the D_VIDEO board used in this set requires a special tool.

NOTE OF REPLACING THE IC3511 AND IC3513 ON THE D_VIDEO BOARD

IC3511 and IC3513 on the D_VIDEO board cannot exchange with single. When IC3511 and IC3513 on the D_VIDEO board are damaged, exchange the entire mounted board.

NOTE OF REPLACING THE IC5002 AND IC5202 ON THE DSP BOARD

IC5002 and IC5202 on the DSP board cannot exchange with single. When IC5002 and IC5202 on the DSP board are damaged, exchange the entire mounted board.

UPDATE OF SOFTWARE OF IC2003 ON THE CONTROL BOARD, IC3610 ON THE D_VIDEO BOARD AND IC5208 ON THE DSP BOARD

Perform operation of the following when the update of software of the IC2003 on the CONTROL board, IC3610 on the D_VIDEO board and IC5208 on the DSP board is necessary.

Connect:

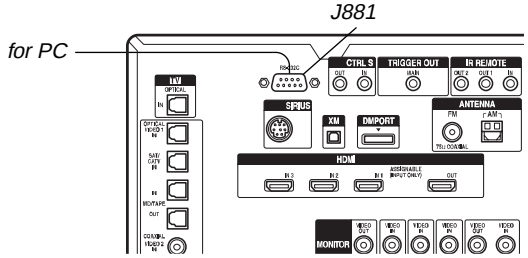

Procedure:

1. Connect J881 on the CIS board and PC by using the RS-232C cable.
2. Turn on the main power.
3. The update is executed by using PC.
4. When the update ends, turn off the main power.
5. Remove the RS-232C cable from the J881 on the CIS board and PC.

ERROR MESSAGES

If there is a malfunction, the display shows a code of two numbers and a message. You can check the condition of the system by the message. Refer to the following table to solve the problem.

messages	cause and response
PROTECTOR	Irregular current is output to the speakers, or the upper panel of the receiver is covered with something. The receiver will automatically turn off after a few seconds. Cheack the speakers connection and turn on the power again.

POWER AMP BLOCK SERVICE POSITION

In checking the Power AMP block, prepare jig (extension cable J-2501-291-A: 2 mm Pitch, 12 cores, Length 300 mm/J-2501-311-A: 2 mm Pitch, 15 cores, Length 300 mm).

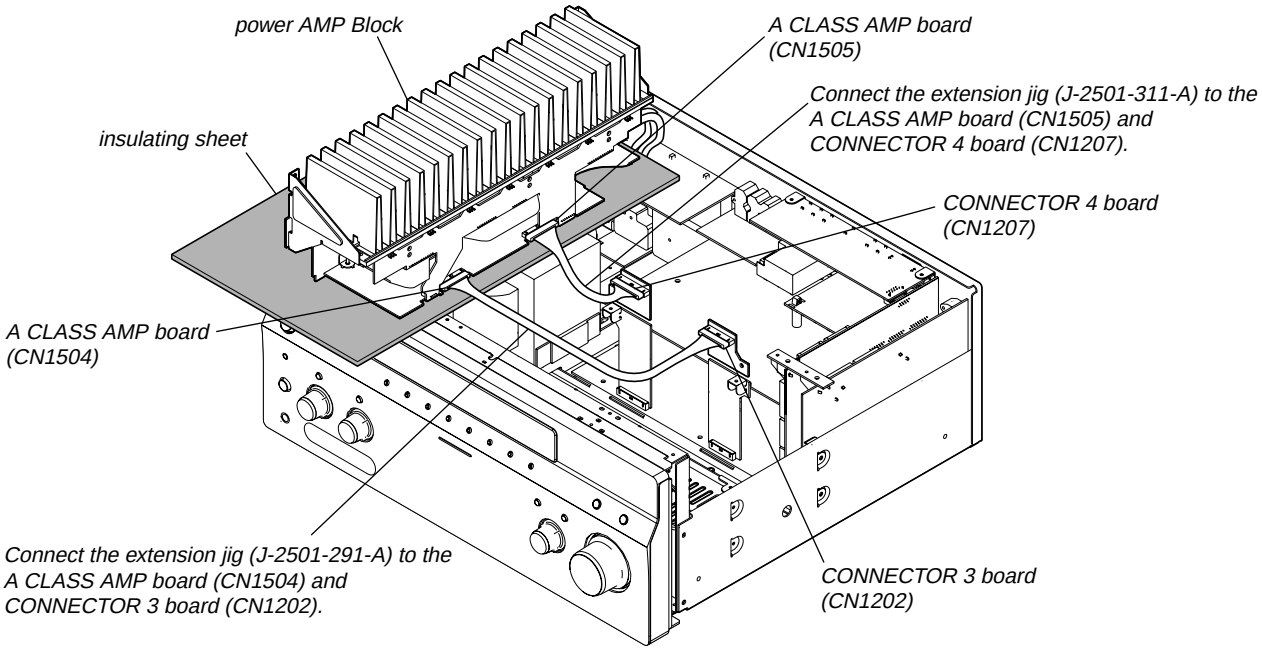

MAIN BOARD SERVICE POSITION

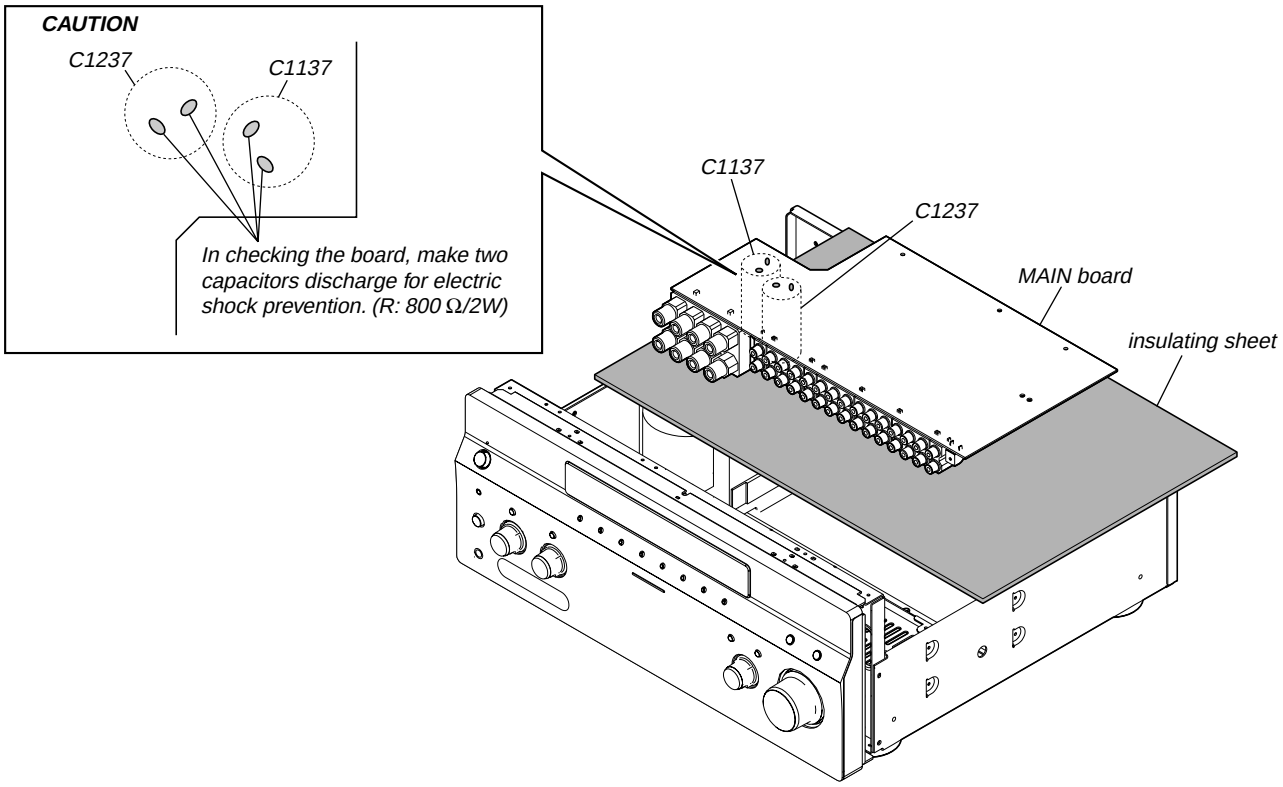

LEAD WIRE SETTING

The lead wire must not come in contact with the transformer and the heat sink.

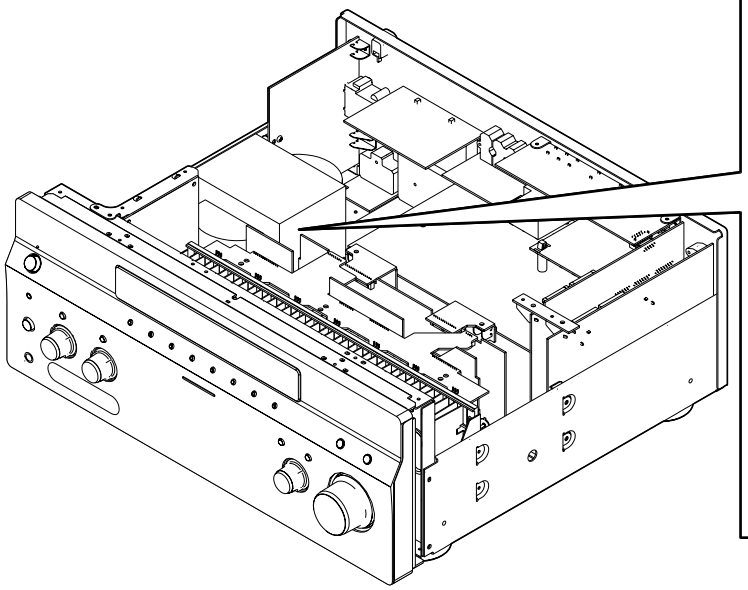

Please band together so that a primary side cable cannot touch a power transformer and heat sink.

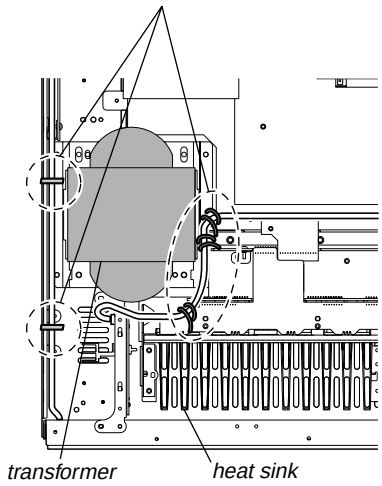

SECTION 2
GENERAL

This section is extracted from instruction manual.

Getting Started

Description and location of parts

Front panel

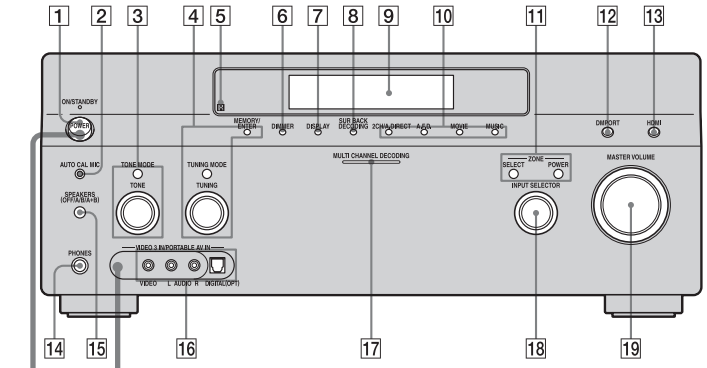

To remove the cover
Press PUSH.
When you remove the cover, keep it out of reach from children.

Status of the POWER button

Off
The receiver is turned off (initial setting).
Press POWER to turn the receiver on.
You cannot turn the receiver on using the remote.

On/Standby
Press I/⏻ on the remote to turn the receiver on or set it to the standby mode.
When you press POWER on the receiver, the receiver will be turned off.

Name	Function
1 **POWER**	Press to turn the receiver on or off.
2 **AUTO CAL MIC jack**	Connects to the supplied optimizer microphone for the Digital Cinema Auto Calibration function.
3 **TONE MODE** / **TONE**	Adjusts FRONT/ CENTER/ SURROUND/ SURROUND BACK BASS and TREBLE. Press TONE MODE repeatedly to select BASS or TREBLE, then turn TONE to adjust the level.
4 **MEMORY/ ENTER** / **TUNING MODE** / **TUNING**	Press to operate a tuner (FM/AM) and satellite radio (XM/SIRIUS).
5 **Remote sensor**	Receives signals from remote commander.
6 **DIMMER**	Press repeatedly to adjust brightness of the display.
7 **DISPLAY**	Press repeatedly to select information displayed on the display.
8 **SUR BACK DECODING**	Press to activate SB DECODING.

Name	Function
9 **Display window**	The current status of the selected component or a list of selectable items appears here.
10 **2CH/A.DIRECT** / **A.F.D.** / **MOVIE** / **MUSIC**	Press to select sound field.
11 **ZONE/ POWER, SELECT**	Press SELECT repeatedly to select zone 2 or main zone. Each time you press POWER, the output signals for the selected zone will be turned on or off.
12 **DMPORT**	Press to select the audio/video input signal from the component connected to the DIGITAL MEDIA PORT adapter.
13 **HDMI**	Press to select input source from the component connected to the HDMI IN jack.
14 **PHONES jack**	Connects to headphones.
15 **SPEAKERS (OFF/A/B/A+B)**	Switch to OFF, A, B, A+B of the front speakers.

Name	Function
16 **VIDEO 3 IN/ PORTABLE AV IN jacks**	Connect to a portable audio/video component such as a camcorder or video game.
17 **MULTI CHANNEL DECODING lamp**	Lights up when multi-channel audio signals are decoded.
18 **INPUT SELECTOR**	Turn to select the input source to play back. To select the input source for zone 2, press ZONE/SELECT (11) to select zone 2 first ("ZONE 2 INPUT" appears on the display), then turn INPUT SELECTOR to select the input source.
19 **MASTER VOLUME**	Turn to adjust the volume level of all speakers at the same time.

Rear panel

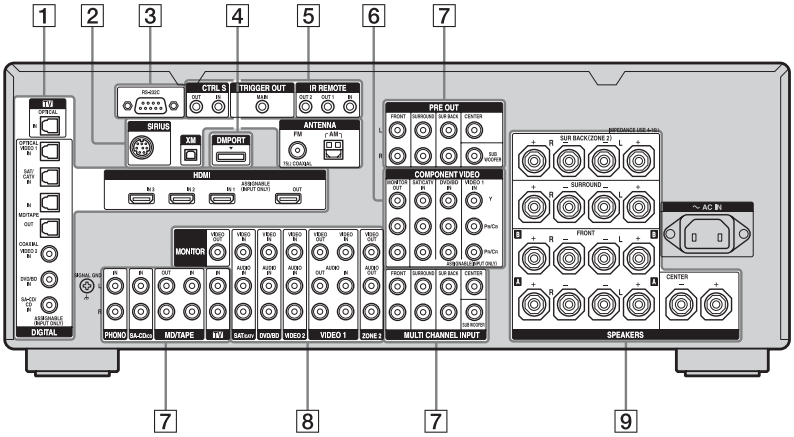

1 DIGITAL INPUT/OUTPUT section

	OPTICAL IN/ OUT jacks	Connect to a DVD player, Super Audio CD player, etc. The COAXIAL jack provides a better quality sound.
	COAXIAL IN jacks	
	HDMI IN/ OUT* jacks	Connect to a DVD player, Blu-ray Disc Player, or a satellite tuner. An image and the sound are output to TV or a projector.

2 ANTENNA section

	FM ANTENNA jack	Connects to the FM wire antenna (aerial) supplied with this receiver.
	AM ANTENNA jack	Connects to the AM loop antenna (aerial) supplied with this receiver.
	XM jack	Connects to the XM Mini Tuner and Home Dock (not supplied).
	SIRIUS jack	Connects to a SiriusConnect Home tuner (not supplied).

3 RS-232C port

Used for maintenance and service.	

4 DMPORT

Connects to a Sony DIGITAL MEDIA PORT adapter.	

5 Control jack for Sony equipment and other external components

	CTRL S IN/ OUT jacks	Connect to Sony TV, DVD player or VCR with CONTROL S jack.
	TRIGGER OUT jack	Connect to interlock on/off of the power supply of other 12V TRIGGER compliant components, or the amplifier/receiver of zone 2.
	IR REMOTE IN/OUT jacks	Connect an IR repeater.

6 COMPONENT VIDEO INPUT/ OUTPUT section

	Y, P_B/C_B, P_R/C_R IN/OUT* jacks	Connect to a DVD player, TV, or a satellite tuner.

7 AUDIO INPUT/OUTPUT section

	AUDIO IN/ OUT jacks	Connect to a tape deck or MD deck, etc.
	MULTI CHANNEL INPUT jacks	Connect to a Super Audio CD player or DVD player with an analog audio jack for 7.1 channel or 5.1 channel sound.
	PRE OUT jacks	Connect to an external power amplifier.

8 VIDEO/AUDIO INPUT/OUTPUT section

	AUDIO IN/ OUT jacks	Connect to a VCR or a DVD player etc.
	VIDEO IN/ OUT* jacks	
	AUDIO OUT jacks VIDEO OUT jack	Connect to the component in zone 2.

9 SPEAKERS section

	Connects to speakers.

* You can watch the selected input image when you connect the MONITOR VIDEO OUT jack to a TV. You can operate this receiver using a GUI (Graphical User Interface).

Remote commander

You can use the supplied remote RM-AAL011 to operate the receiver and to control the Sony audio/video components that the remote is assigned to operate.

RM-AAL011

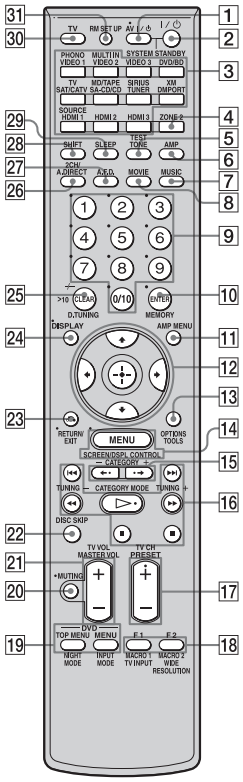

Name	Function
1 **AV I/⏻ (on/standby)**	Press to turn on or off the audio/video components that the remote is assigned to operate. If you press the I/⏻ (2) at the same time, it will turn off the receiver and other Sony components (SYSTEM STANDBY). **Note** The function of the AV I/⏻ switch changes automatically each time you press the input button (3).
2 **I/⏻ (on/standby)**	Press to turn the receiver on or off. If ZONE 2 is selected, only the main receiver is turned on or off with this button. To turn off all components including an amplifier in zone 2, press I/⏻ and AVI/⏻ (1) at the same time (SYSTEM STANDBY).
3 **Input buttons**	Press one of the buttons to select the component you want to use. Press a pink-labeled button after pressing SHIFT (28). When you press any of the input buttons, the receiver turns on. The buttons are factory assigned to control Sony components. You can program the remote to control non-Sony components following the steps in "Programming the remote".
4 **ZONE 2**	Press to enable the zone 2 operation.
5 **TEST TONE**	Press to output the test tone from each speaker.
6 **AMP**	Press to enable the receiver operation.
7 **MUSIC**	Press to select sound field.

Name	Function
8 **MOVIE**	Press to select sound field.
9 **Numeric buttons**	Press to – preset/tune to preset stations. – select track numbers of the CD player, DVD player, Blu-ray Disc Player or MD deck. Press 0/10 to select track number 10. – select channel numbers of the VCR or satellite tuner. – After pressing TV (30), press the numeric buttons to select the TV channels.
10 **ENTER**	Press to enter the value after selecting a channel, disc or track using the numeric buttons.
MEMORY	Press to store a station during tuner operation.
11 **AMP MENU**	Press to display the menu to operate the receiver.
12 ↑/↓/←/→	Press ↑/↓/←/→ to select the menu items. Then press ⊕ to enter the selection.
13 **OPTIONS**	Press to display and select items from option menus for receiver and DVD player, Blu-ray Disc Player.
TOOLS	Press to display and select items from the option menus for DVD player or Blu-ray Disc Player, etc.
14 **MENU**	Press to display the menu to operate the audio/video components.
SCREEN/ DSPL CONTROL	Press SHIFT (28), then press MENU to switch the display mode of the menu between SCREEN (to display the menu on the TV screen) and DSPL (to display the menu in the display window).
15 **CATEGORY +/–**	Press to select the category for satellite tuner.
16 **◀◀/▶▶** a) **■** a) **❚❚** a) **▷** a) b) **I◀◀/▶▶I** a)	Press to operate the DVD player, Blu-ray Disc Player, CD player, MD deck, tape deck, or component connected to the DIGITAL MEDIA PORT adapter etc.
CATEGORY MODE	Press to select the category mode for satellite tuner.
TUNING +/–	Press to select station.
17 **PRESET + b)/–**	Press to register FM/AM/satellite tuner stations or to select preset stations.
TV CH +/–	Press TV (30), then press TV CH +/– to operate the TV, satellite tuner, VCR, etc.
18 **F1/F2**	Press TV (30), then press F1 or F2 to select a component to operate. • HDD recorder F1: HDD F2: DVD player, Blu-ray Disc Player • DVD/VHS combo player F1: DVD player, Blu-ray Disc Player F2: VHS
MACRO1, MACRO2	Press AMP (6), then press MACRO 1 or MACRO 2 to set up the macro function.
TV/INPUT	Press TV/INPUT and TV (30) at the same time to select the input signal (TV input or video input).
WIDE	Press repeatedly to select the wide picture mode.
RESOLUTION	Press SHIFT (28), then press RESOLUTION repeatedly to change the resolution of signals output from the HDMI OUT or COMPONENT VIDEO MONITOR OUT jack.

Name	Function
19 **DVD/ TOP MENU, MENU**	Press to display the menus of the DVD player on the TV screen. Then use ↑/↓/←/→ and ⊕ to perform a menu operations.
NIGHT MODE	Press AMP (6), then press NIGHT MODE to activate the NIGHT MODE function.
INPUT MODE	Press AMP (6), then press INPUT MODE to select the input mode when the same components are connected to both digital and analog jacks.
20 **MUTING**	Press to turn off the sound temporarily. Press the button again to restore the sound.
21 **MASTER VOL +/–**	Press to adjust the volume level of all speakers at the same time.
TV VOL +/–	Press TV (30), then press TV VOL +/– to adjust the volume level of the TV.
22 **DISC SKIP**	Press to skip a disc when using a multi-disc changer.
23 **RETURN/ EXIT ↶**	Press to return to the previous menu or exit the menu while the menu or on-screen guide of the VCR, DVD player, or satellite tuner is displayed on the TV screen.
24 **DISPLAY**	Press to select information displayed in the display window, TV screen of the VCR, satellite tuner, CD player, DVD player, Blu-ray Disc Player, or MD deck. **Note** In the SCREEN mode, press the button to display the menu on the TV screen.
25 **CLEAR**	Press to – clear a mistake when you press the incorrect numeric button. – return to continuous playback, etc. of the satellite tuner or DVD player.
>10	Press to select – track numbers over 10 of the VCR, satellite tuner, CD player or MD deck. – channel numbers of the Digital CATV terminal.
D.TUNING	Press to enter direct tuning mode.
26 **2CH/ A.DIRECT**	Press to select sound field or to switch the audio of the selected input to analog signal without any adjustment.
27 **A.F.D.**	Press to select sound field.
28 **SHIFT**	Press to light up the button. It changes the remote button function to activate the buttons with pink printing.
29 **SLEEP**	Press to activate the sleep timer function and the duration which the receiver turns off automatically.
30 **TV**	Press to enable the TV operation.
31 **RM SET UP**	Press to set up the remote.

a) See the table on page123 for information on the buttons that you can use to control each component.

b) The tactile dot is attached to these buttons (▷, PRESET+). Use as a mark of operation.

Notes

- Some functions explained in this section may not work depending on the model.
- The above explanation is intended to serve as an example only. Therefore, depending on the component, the above operation may not be possible or may operate differently than described.

RM-AAU018

This remote can only be used to operate the receiver. You can control the main functions of the receiver with simple operations using this remote.

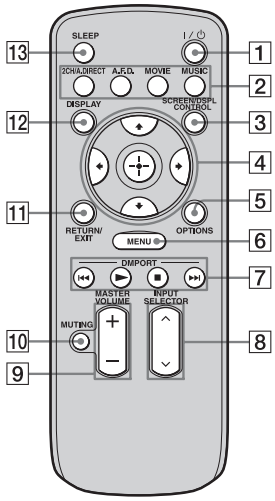

Name	Function
1 **I/⏻ (on/ standby)**	Press to turn a receiver on or off.
2 **2CH/ A.DIRECT**	Press to select sound field.
A.F.D.	
MOVIE	
MUSIC	
3 **SCREEN/ DSPL CONTROL**	Press to switch the display mode of the menu between SCREEN (to display the menu on the TV screen) and DSPL (to display the menu in the display window).
4 ↑/↓/←/→	After pressing SCREEN/DSPL CONTROL (3), press ↑/↓/←/→ to select the menu item. Then press ⊕ to enter the selection.

Name	Function
5 **OPTIONS**	Press to display and select items from option menus.
6 **MENU**	Press to display the menu to operate the receiver.
7 **DMPORT**	Press to operate the component connected to the DIGITAL MEDIA PORT adapter.
►	Starts play.
■	Stops play.
I◄◄ /►►I	Skips tracks.
8 **INPUT SELECTOR**	Press to select the input source to play back.
9 **MASTER VOLUME +/–**	Press to adjust the volume level.
10 **MUTING**	Press to turn off the sound temporarily. Press the button again to restore the sound.
11 **RETURN/ EXIT**	Press to return to the previous menu or exit the menu.
12 **DISPLAY**	Press to select information displayed in the display window. **Note** In the SCREEN mode, press the button to display the menu on the TV screen.
13 **SLEEP**	Press to activate the sleep timer function and the duration which the receiver turns off automatically.

SECTION 3
DISASSEMBLY

- This set can be disassembled in the order shown below.

3-1. DISASSEMBLY FLOW

Note 1: *The process described in* ▣ *can be performed in any order.*

Note 2: *Without completing the process described in* ▣*, the next process can not be performed.*

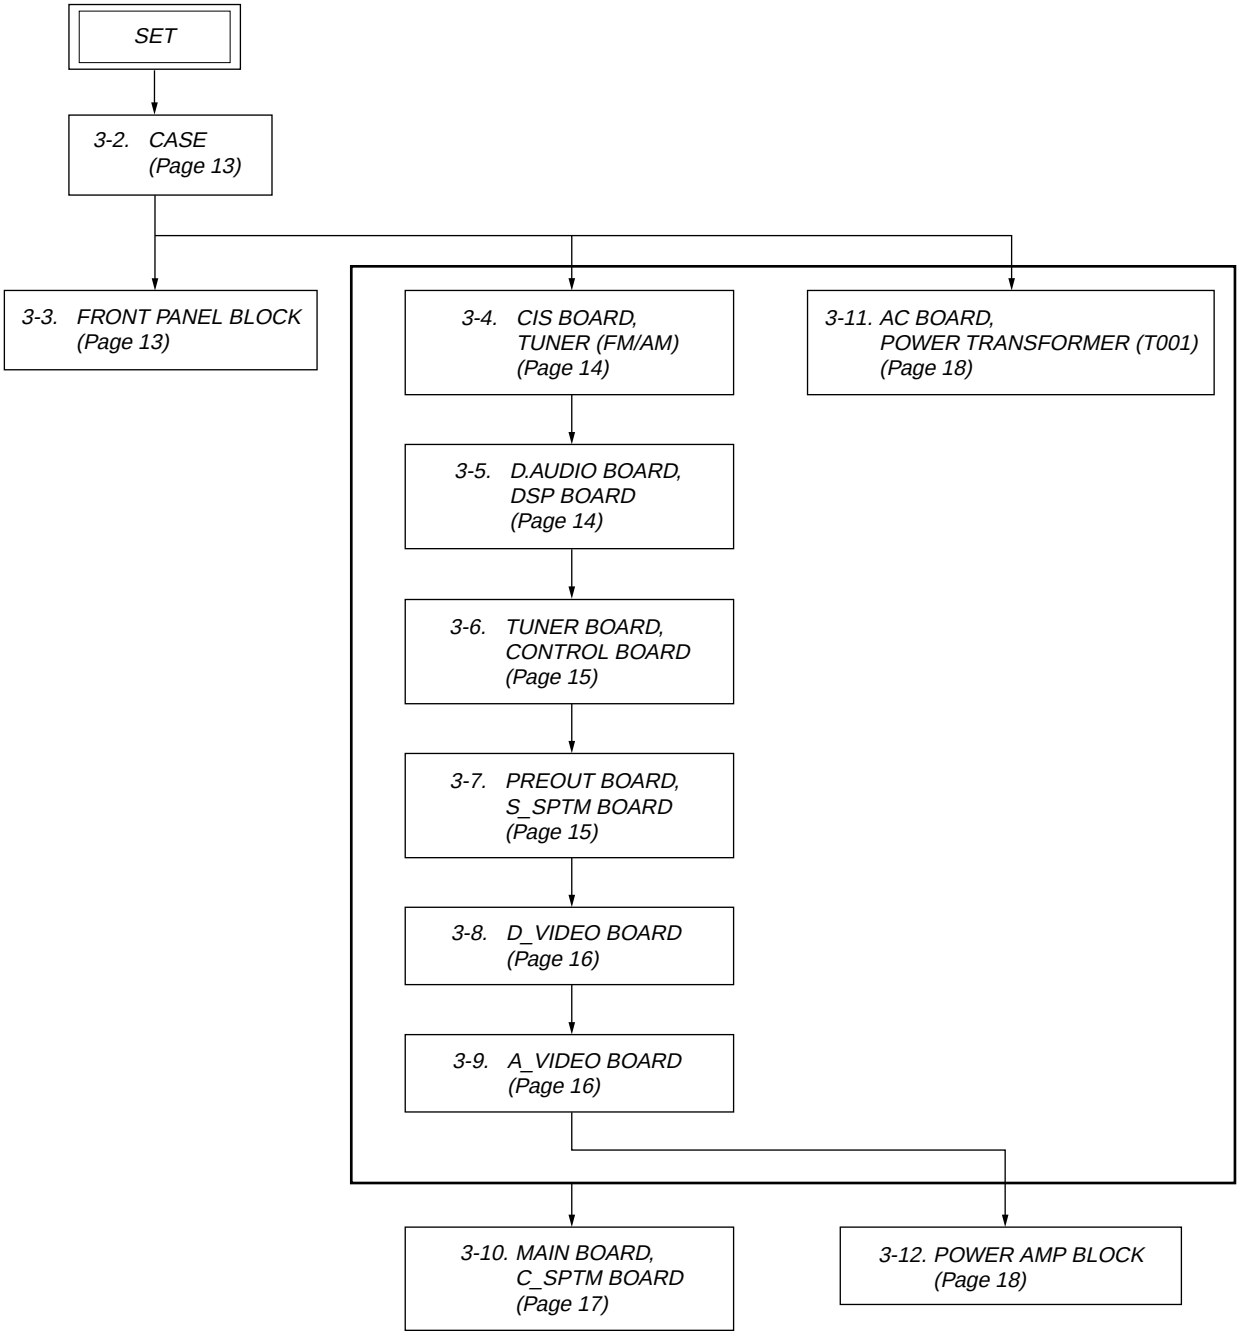
SET
3-2. CASE (Page 13)
3-3. FRONT PANEL BLOCK (Page 13)
3-4. CIS BOARD, TUNER (FM/AM) (Page 14)
3-5. D.AUDIO BOARD, DSP BOARD (Page 14)
3-6. TUNER BOARD, CONTROL BOARD (Page 15)
3-7. PREOUT BOARD, S_SPTM BOARD (Page 15)
3-8. D_VIDEO BOARD (Page 16)
3-9. A_VIDEO BOARD (Page 16)
3-10. MAIN BOARD, C_SPTM BOARD (Page 17)
3-11. AC BOARD, POWER TRANSFORMER (T001) (Page 18)
3-12. POWER AMP BLOCK (Page 18)

Note: Follow the disassembly procedure in the numerical order given.

3-2. CASE

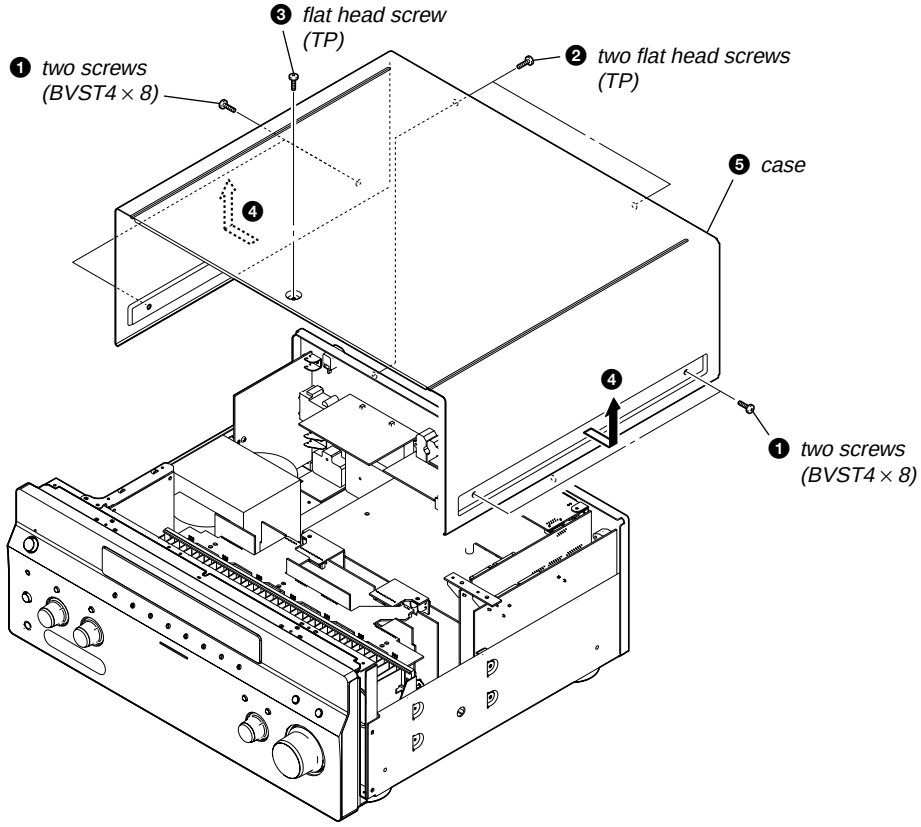

3-3. FRONT PANEL BLOCK

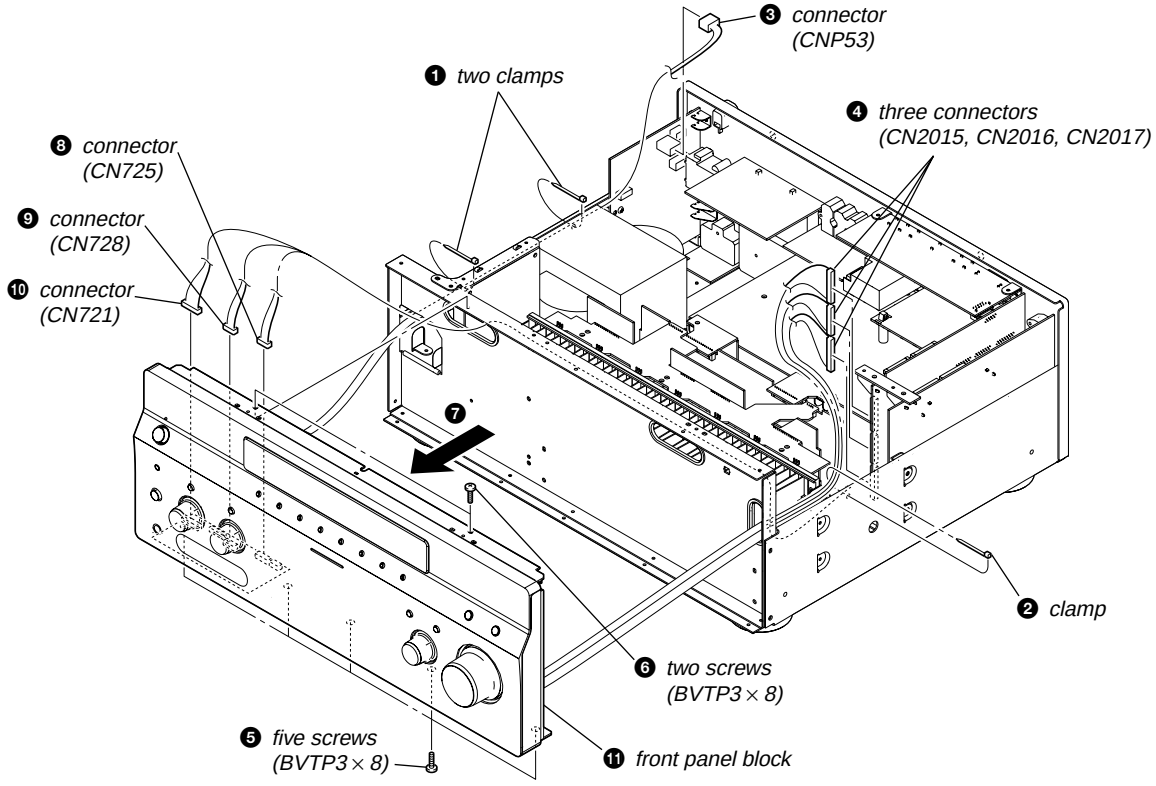

3-4. CIS BOARD, TUNER (FM/AM)

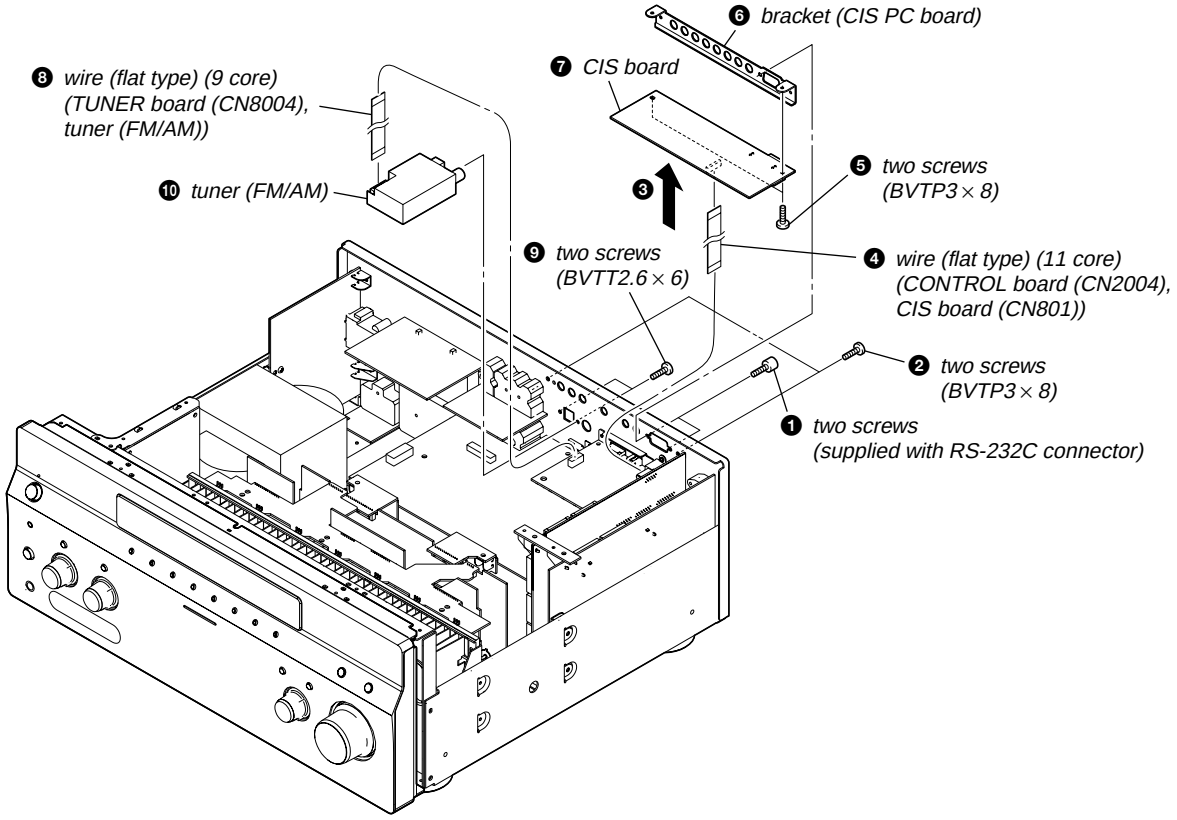

3-5. D.AUDIO BOARD, DSP BOARD

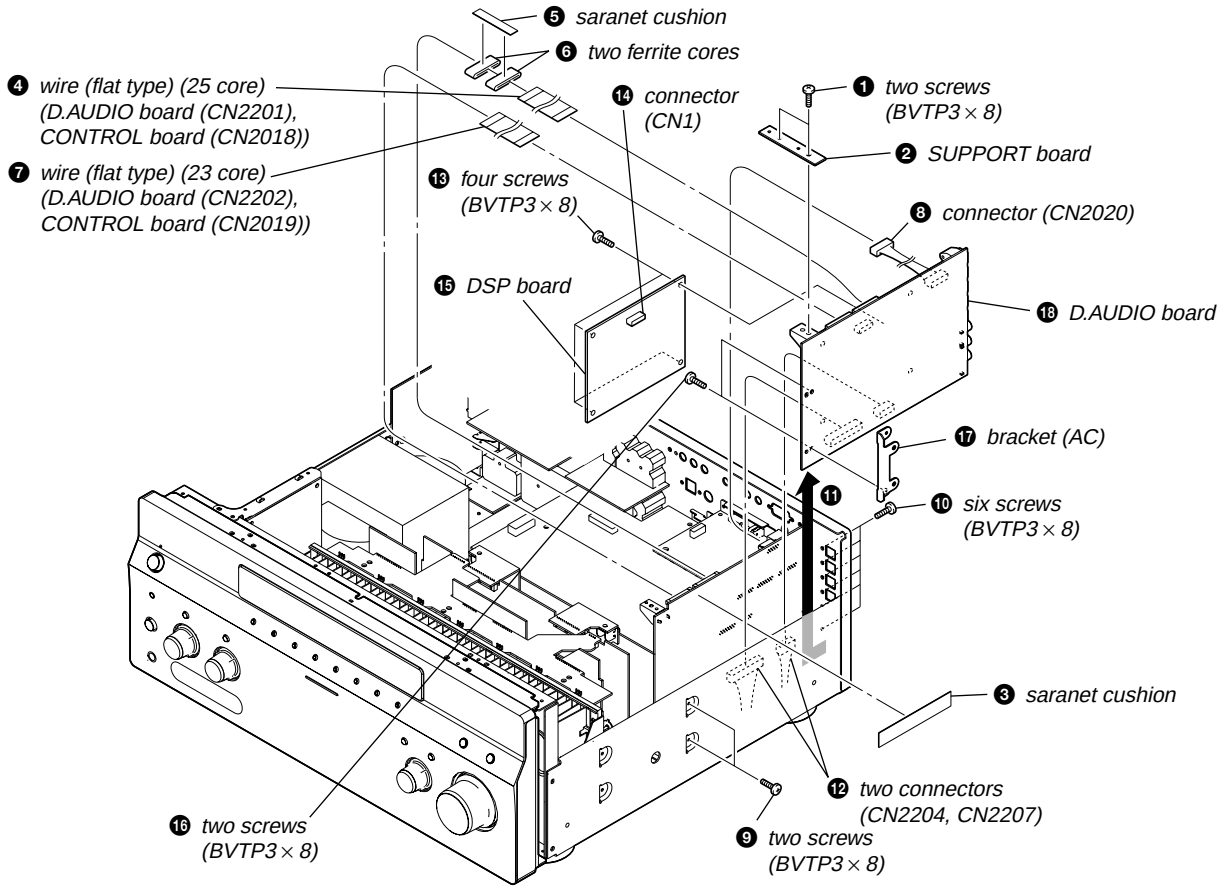

3-6. TUNER BOARD, CONTROL BOARD

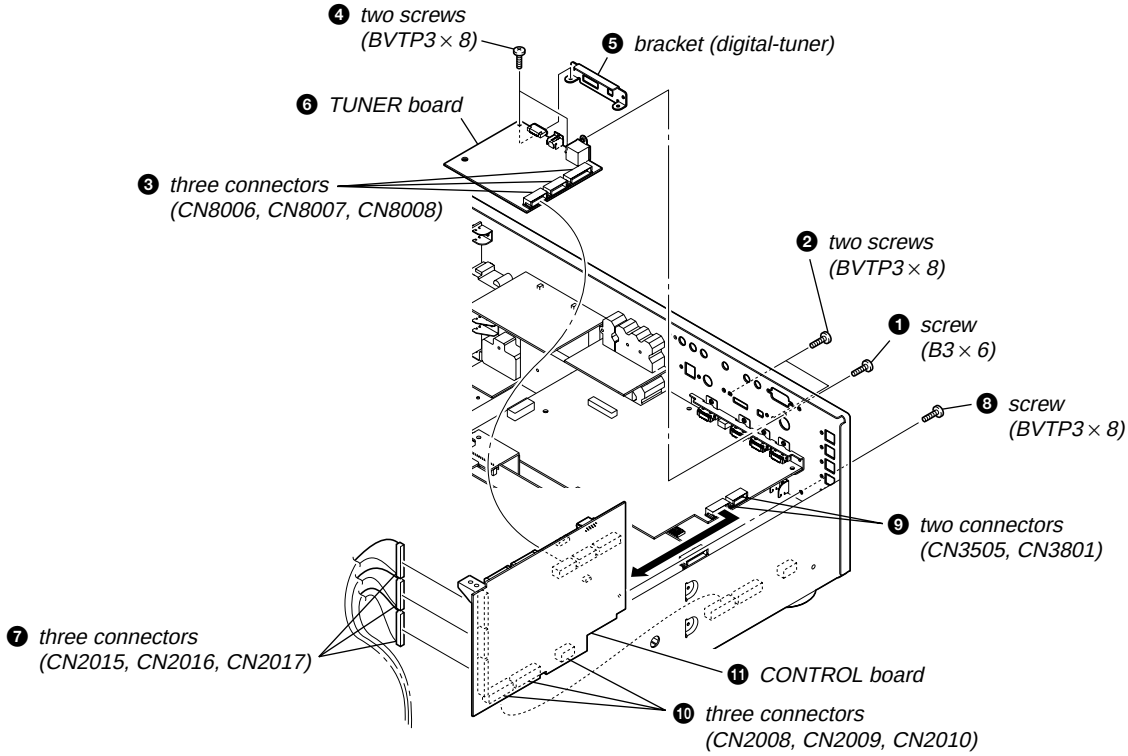

3-7. PREOUT BOARD, S_SPTM BOARD

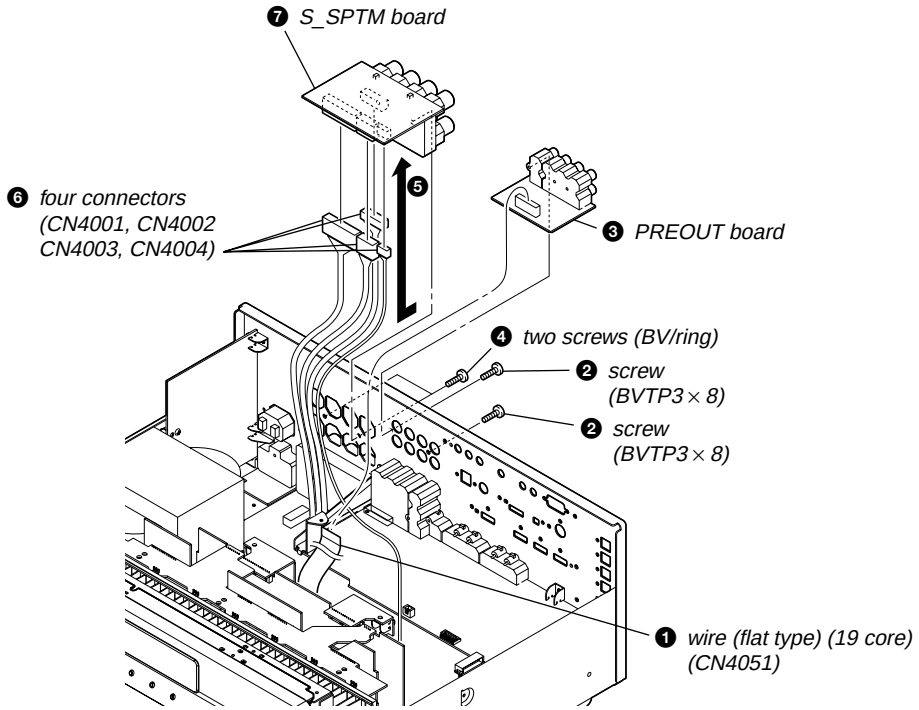

3-8. D_VIDEO BOARD

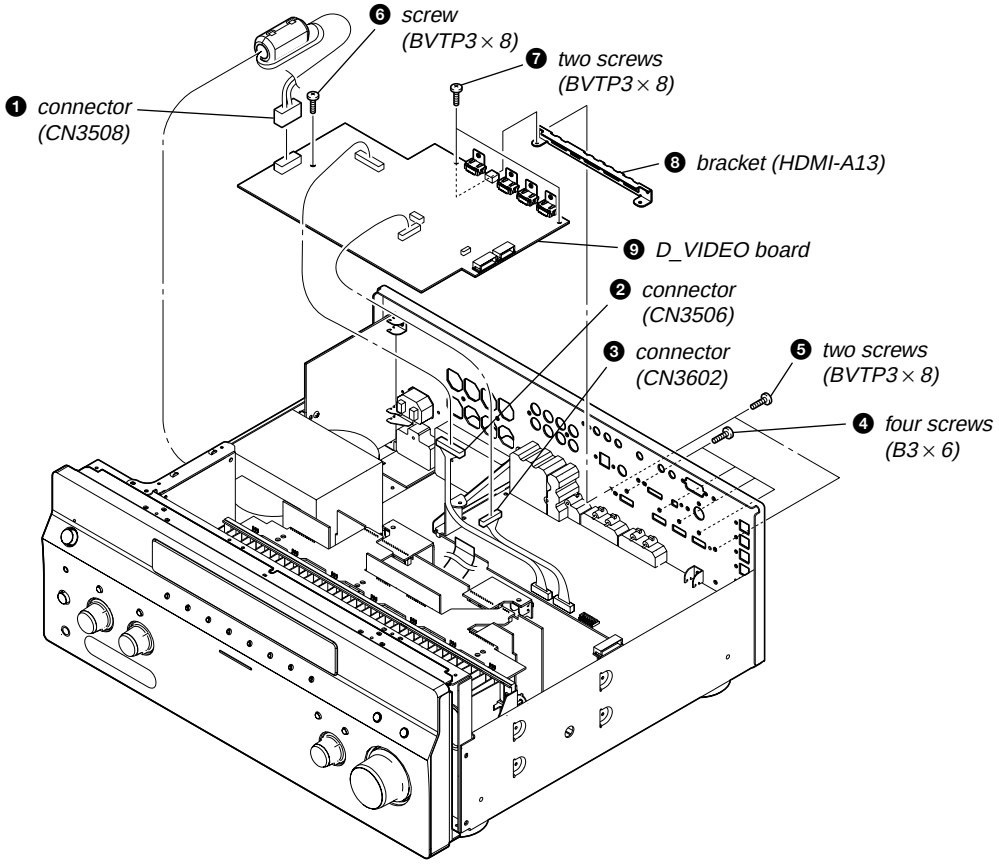

3-9. A_VIDEO BOARD

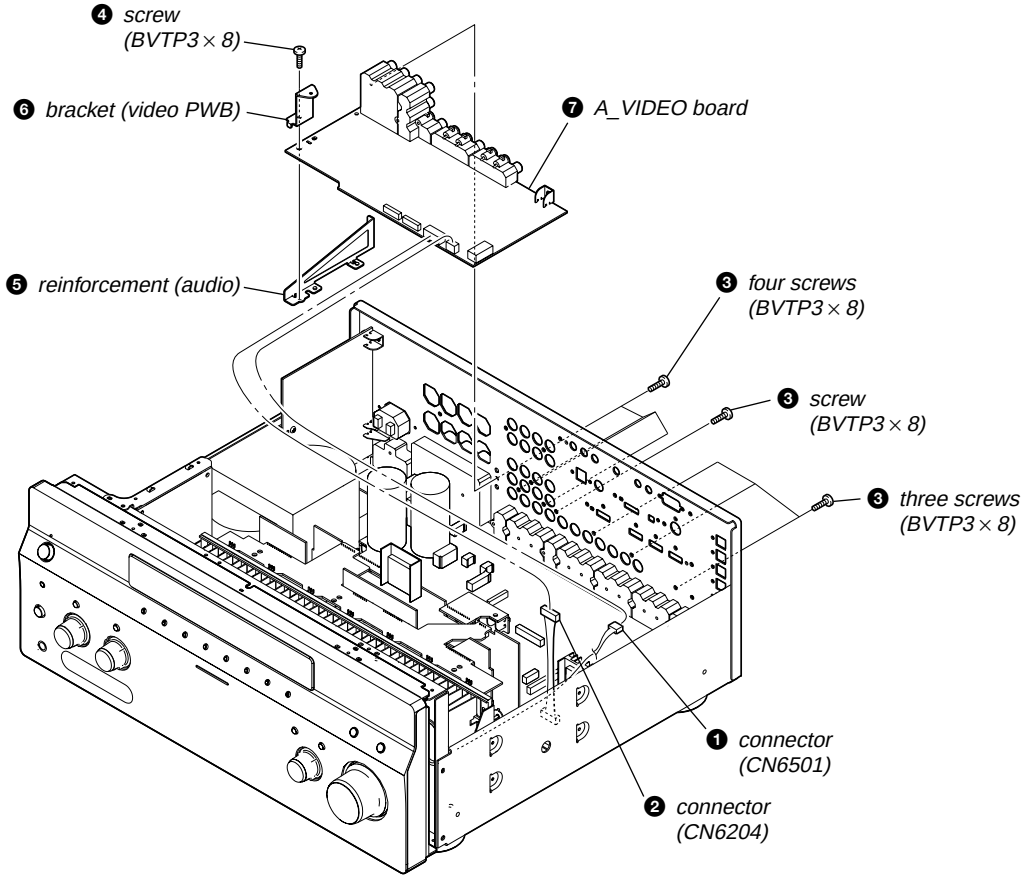

3-10. MAIN BOARD, C_SPTM BOARD

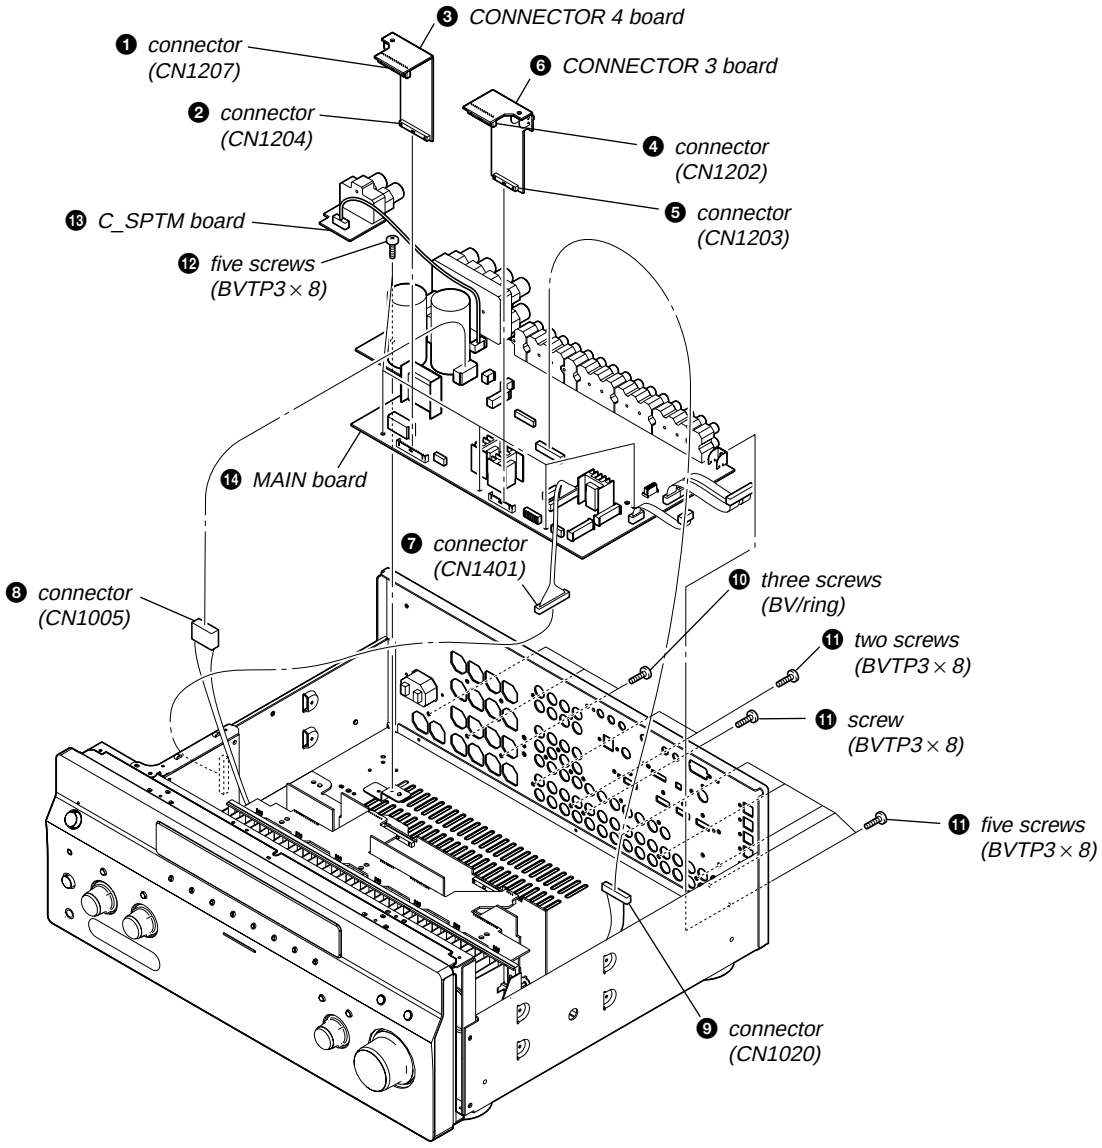

3-11. AC BOARD, POWER TRANSFORMER (T001)

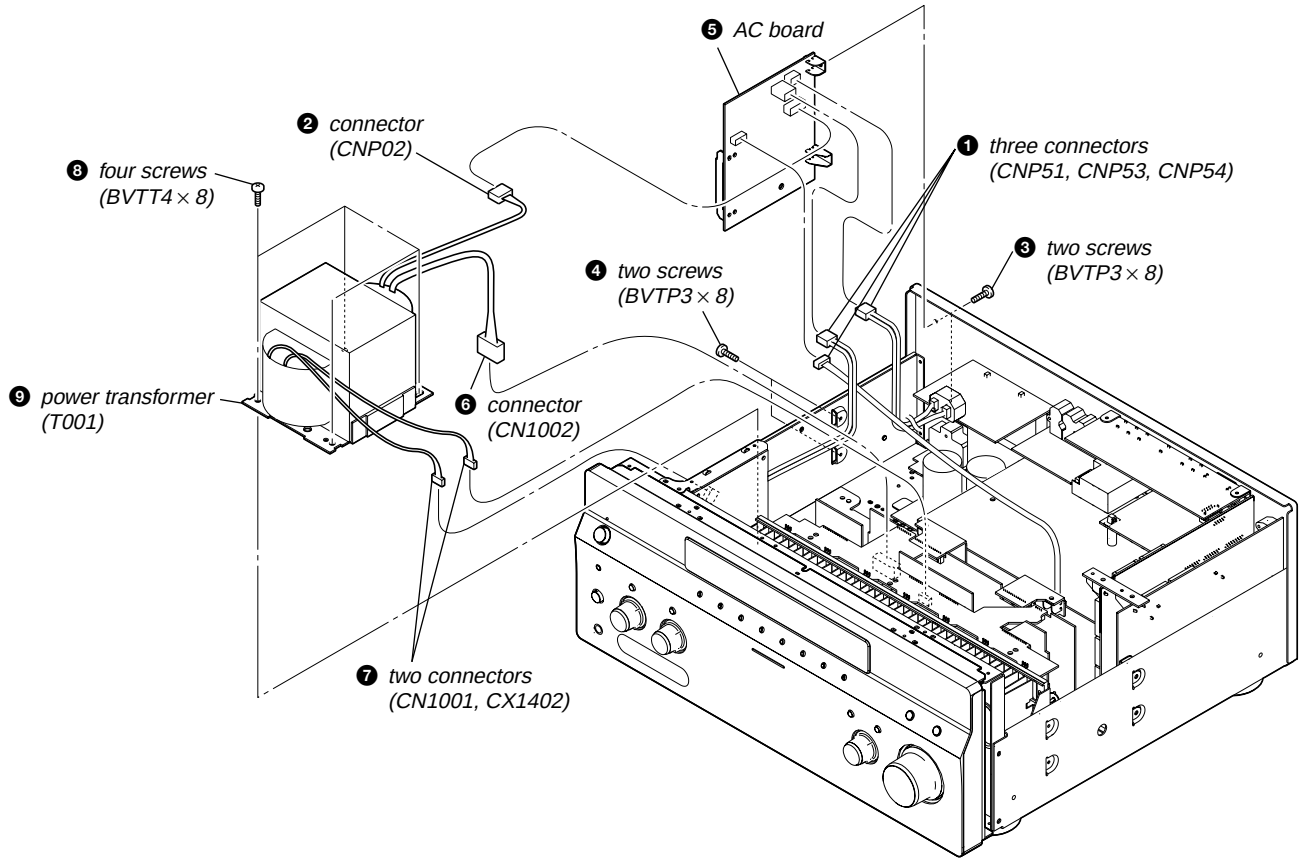
❺ AC board
❷ connector (CNP02)
❽ four screws (BVTT4 × 8)
❶ three connectors (CNP51, CNP53, CNP54)
❸ two screws (BVTP3 × 8)
❹ two screws (BVTP3 × 8)
❾ power transformer (T001)
❻ connector (CN1002)
❼ two connectors (CN1001, CX1402)

3-12. POWER AMP BLOCK

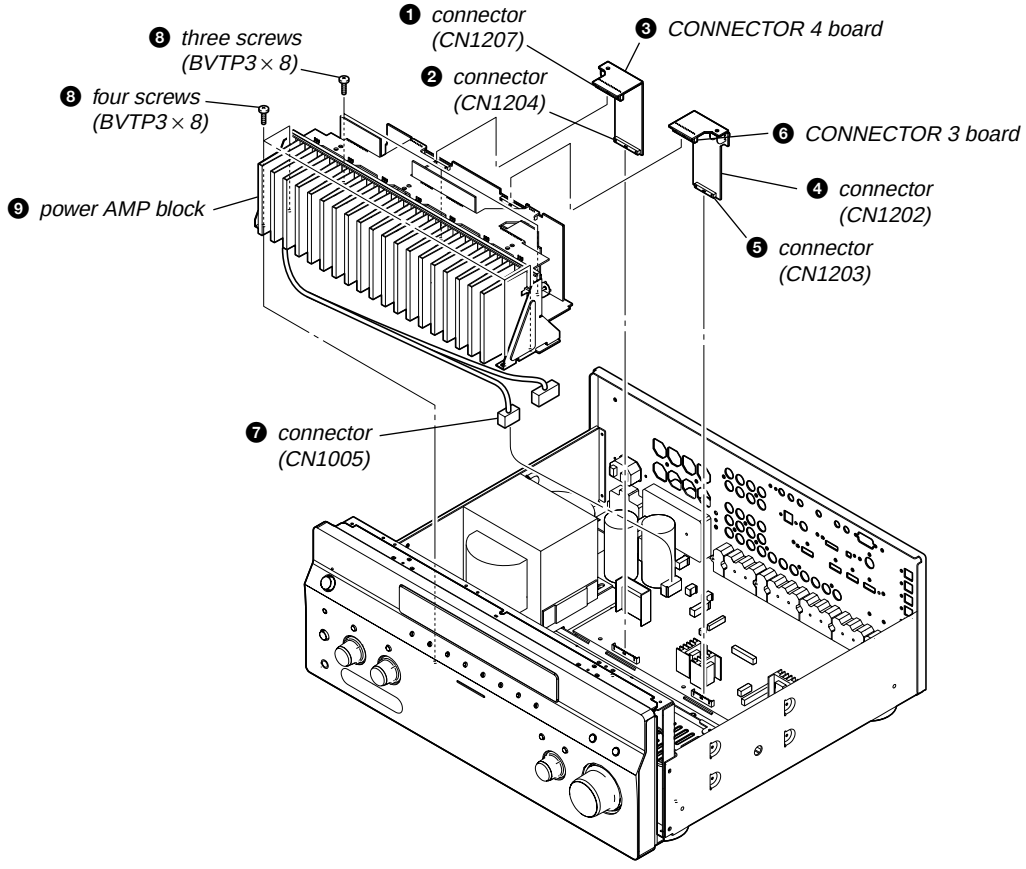

SECTION 4
TEST MODE

MEMORY CLEARING MODE

All preset contents are cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.

Procedure:

1. While pressing the TONE MODE and DMPORT buttons, press the POWER button to turn on the main power.
2. The message "MEMORY CLEARING***" appears and the memories are reset to the default values.
3. When done, the message "MEMORY CLEARED*" appears.

FLUORESCENT INDICATOR TUBE PATTERN CHECK MODE

All fluorescent segments are tested. When this test is activated, all segments turn on at the same time, then each segment turns on one after another.

Procedure:

1. While pressing the MOVIE and DMPORT buttons, press the POWER button to turn on the main power.
2. All segments and all LEDs turn on.

SOUND FIELD CLEAR MODE

The preset sound field is cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.

Procedure:

1. While pressing the MUSIC button, press the POWER button to turn on the main power.
2. The message "S. F. Initialize" appears and initialization is performed.

TUNER AM STEP CHANGE (9 kHz/10 kHz) MODE

Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.

Procedure:

1. Press the POWER button to turn on the main power.
2. Turn the INPUT SELECTOR dial to select the "AM".
3. Press the POWER button to turn off the main power.
4. While pressing the TUNING MODE button, press the POWER button to turn on the main power.
5. Either the message "AM 9kHz Step" or "AM 10kHz Step" appears, select the desired step.

COMMAND MODE CHANGE MODE

The command mode of the remote-commander which this set receives can be changed.

Procedure:

1. While pressing the 2CH/A. DIRECT button, press the POWER button to turn on the main power.
2. Either the message "COMMAND MODE [AV1]" or "COMMAND MODE [AV2]" appears. Select the desired mode.

SF LOCK ON/OFF CHANGE MODE

Procedure:

1. While pressing the MUSIC and DMPORT buttons, press the POWER button to turn on the main power.
2. Either the message "SF LOCK [OFF]" or "SF LOCK [ON]" appears.

XM FACTORY TEST MODE

Mode to confirm operation of XM. Doing display of ID of XM antenna and output of audio signal that XM antenna generates, it is confirmed that there are no probrems in the communication of the XM antenna and the tranmission of the audio signal.

Procedure:

1. The XM antenna was connected, while pressing the TUNING MODE and MOVIE buttons, press the POWER button to turn on the main power.
2. Whenever the DISPLAY button is pressed, the output of the audio signal of 1 kHz L/R, 20 Hz L/R, 5 kHz L/R, muting, 1 kHz L and 1kHz R are switched.

SIRIUS FACTORY TEST MODE

Mode to confirm operation of SIRIUS. Doing display of ID of SIRIUS antenna and output of audio signal that SIRIUS antenna generates, it is confirmed that there are no probrems in the communication of the SIRIUS antenna and the tranmission of the audio signal.

Procedure:

1. The SIRIUS antenna was connected, while pressing the TUNING MODE and A.F.D. buttons, press the POWER button to turn on the main power.
2. Whenever the DISPLAY button is pressed, the output of the audio signal of 1 kHz L/R, 20 Hz L/R, 5 kHz L/R, muting, 1 kHz L and 1 kHz R are switched.

DIGITAL MEIDA PORT TEST

Procedure:

1. Connect the DMPORT check jig (P/N: J-2501-309-A) with the DMPORT jack (CN8003) on the TUNER board.
2. While pressing the A.F.D. and DMPORT buttons, press the POWER button to turn on the main power.
3. The message "DMPORT OK." appears on the fluorescent indicator tube and enter the digital media port test mode. (Confirmation of communication line)
   When "NO DETECT", "UART NG" and "UART TO" are displayed on the fluorescent indicator tube, confirm the connection of the DMPORT check jig, and enter the mode again.
   Each time the ▶▶| button on the remote commander is pressed, the connect check and adaptor version check are switched.
   Press the |◀◀ button on the remote commander, connected confirmation of the DMPORT check jig is done again.
4. To a pinjack of the DMPORT check jig input information relevant to audio signal (sine-wave 1.0V rms) and composite video signal (white 100% 1.0Vp-p, color bar, etc.).
5. Confirm the output of speakers and monitor TV. (Confirmation of analog signal)
6. To exit from this mode, press the ■ button on the remote

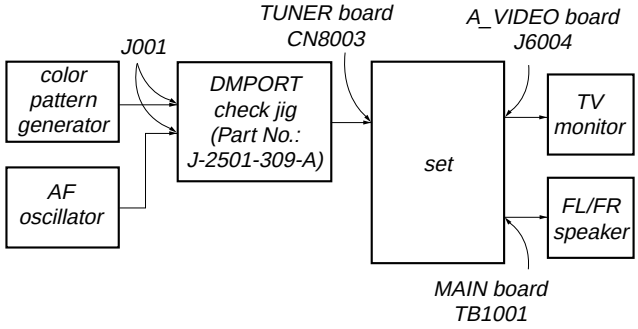

HISTORY MODE

The state that the set is used is memorized.

Procedure:

1. While pressing the [MUSIC] and [MEMORY/ENTER] buttons, press the [POWER] button to turn on the power and "HISTORY MODE" is displayed.
2. Each time the [↑] [↓] key of remote commander is pressed, the item is switched in order as follows.

Items	Display
Number of protector is generated	PRCT COUNT: XXX
Total use time	TTL_TIME: XXXXH XXM
Sound field setting	XXXXXXXXXXXXXXXX
Input when protect is detected	INPUT: XXXXXXXXXX
Input mode setting	INMODE: XXXXXXXXXXXX
Input mode under lick state	DSEL: XXXXXXXXXXXXXX
Stream under input	STREAM: XXXXXXX
Channel information	CONFIG:XXXXXXX
State of headphone	HEAD PHONES: XXX
Volume	VOL: XXXdB
EQ setting value	BASS: XXXdB
	TREB: XXXdB
Level collection value each channel	Lv FL/FR XXXX/XXXX
	Lv SL/SR XXXX/XXXX
	Lv CT/SW XXXX/XXXX
	Lv BL/BR XXXX/XXXX
Total time of power on	TTL_P_ON: XXXXH XXM

SPECIAL MENU MODE

Procedure:

1. Press the [POWER] button to turn on the main power, then while pressing the [TONE MODE] button, press the [A.F.D.], [2CH/A. DIRECT], [MUSIC], [MOVIE] button in order, the message "MENU SPECIALIZED!" appears.
2. Press the [↑] [↓] button of the remote commander, the message "<<< SPECIAL >>>" appears.
3. Press the [→] button of the remote commander, the item is appears.
4. Each time the [↑] [↓] button of the remote commander is pressed, the item is switched in order as follows.
   Some items can change the content. Display the cursor by pressing the [→] button of the remote commander, and changing the content by pressing the [↑] [↓] button of the remote commander, and fix the content by pressing the [←] button of the remote commander when you want to change the content of the item.
5. To release from this mode, while pressing the [TONE MODE] button, press the [A.F.D.], [2CH/A. DIRECT], [MUSIC], [MOVIE] button in order again, the message "MENU SPECIALIZED OFF" appears.

Items	Display	Remark
Video factory menu	<VIDEO FACTORY MENU>	Menu mode to enter video calibration menu and DDR access check menu If the [ENTER] button of the remote commander is pressed, entering the menu, and operating two the following menu become possible
Video calibration (Video factory menu)	V.CALIBRATION START?	Procedure: 1. "DVD" is selected by using [INPUT SELECTOR] jog. 2. Connect a color pattern generator to the COMPONENT VIDEO DVD/ BD IN jack (J6001) and DVD/BD VIDEO IN jack (J6004) on the A_VIDEO board. 3. Input 100% color bars signal from the color pattern generator. 4. Menu that measures individual difference of hardness by automatic operation in pressing the [ENTER] button of the remote commander, and corrects reference value. In a measurement once, only one of NTSC/PAL/HD can be measured "Check XXXX V-IN" at display: Video signal necessary for the measurement while measuring it last time was not detected and it became an error Confirm the input of the video of the terminal connection etc. , and measure the [ENTER] button of the remote commander again pressing
DDR access check (Video factory menu)	DDR CHECK [XX] sec	XX: Time to do access check on DDR (for design evaluation)
Auto cal mic test	SPEAKER OUT [XXXXX]	XXXXX: Selection of speaker output audio [SOURCE]: nomally mode, [MIC]: mode that output audio from mic from speaker
FL display fonts test	FL FONT [0x ** = X]	**: 20 to FE, X: character
FL display test	ALL ON	Each time DISPLAY button to change as follows all on → test pattern 1 → test pattern 2 → all off → all on
HDCP key read	HDCP KEY READ [XXX]	XXX: ON or OFF
DSP SRAM check	<DSP SRAM CHECK> ↓ [ENTER] button of the remote commander SRAM1 [XX] SRAM2 [XX]	XX: OK or NG OK: success access SRAM, NG: fail access to SRAM
Model version display	##### *** vX. XX @@@@	#####: Model ***: Destination X.XX: System controller software version @@@@: Sum value of flash memory in the system controller
Video Ucom version display	Video Ucom Ver X. XX	X.XX: Video system controller software version
FAROUDJA version display	FAROUDJA Ver X. XX	X.XX: Video Processor software version
DSP Ucom version display	DSP Ucom Ver X. XX	X.XX: DSP controller version
DSP serial flash version display	DSP SFLASH Ver X. XX	X.XX: Serial flash software version
DSP parallel flash version display	DSP PFLASH Ver X. XX	X.XX: DSP parallel flash version
DSP Version display	DSP Ver S: ***, P: XXX	***: DSP decoder patch version, XXX: DSP post process version
DSP halt	DSP HALT [XXX]	XXX: ON or OFF
DSP RAM	[*****]=XXXXXXXX	Mode that refers to internal RAM of DSP (for design evaluation)

Items	Display	Remark
Super reset	SUPER RESET [XXX]	Not used for the servicing If super reset is performed, “up convert signal level adjustment” will also be initialized When EEPROM initialization is required, perform the “memory clearing mode”
RAM watch menu	XXX	XXX: For monitor of various internal RAM (for design evaluation)
EERROM debug	EEPROM [****] [XX]	****: EEPROM address, XX: EEPROM data
Protector on/off	PROTECTOR ON/OFF [XXX]	XXX: ON or OFF
Model/destination change	MODEL [##### * * * *] X X	#####: Model, ****: Destination, XX: At or fx
Audio swap	SWAP [XXXXXXXXXXX]	Switching with ↑ ↓ button of the remote commander
Decoder select	DECODER SEL [XXXX]	XXXX: AUTO, LEGACY, DDPLUS, TRUEHD, DTSEXP, MP3SUR (for debug)
Volume value display (FL/FR)	FL**** FR XXXX	****: Front L-ch volume value, XXXX: Front R-ch volume value
Volume value display (SL/SR)	SL**** SR XXXX	****: Surround L-ch volume value, XXXX: Surround R-ch volume value
Volume value display (CT/SW)	CT**** SW XXXX	****: Center volume value, XXXX: Sub woofer volume value
Volume value display (SBL/SBR)	SBL**** SBR XXXX	****: Surround back L-ch volume value, XXXX: Surround back R-ch volume value
DAC mute information disclosure 1	DAC MUTE U XXXXXXXX	Display of module information to demand muting in system controller (for design evaluation)
DAC mute information disclosure 2	DAC MUTE L XXXXXXXX	Display of module information to demand muting in system controller (for design evaluation)
2nd volume value display	2nd VOLUME XXX	XXX: 2nd room volume value (00 to ∞)
FL display duty change	DARK OUT DUTY [XXX%]	XXX: Duty value of FL display (0% to 100%)
DMPORT debug	DMP KEY DEBUG [XXX]	XXX: ON or OFF (for debug)
Bus overflow debug HA link (receive)	OVERFLOW HAL R [XX]	XX: Counter of overflow receive buffer
Bus overflow debug HA link (transmit)	OVERFLOW HAL S [XX]	XX: Counter of overflow transmit buffer
Bus overflow debug DMPORT	OVERFLOW CLA [XX]	XX: Counter of overflow CLA transmit buffer

SECTION 5
ELECTRICAL ADJUSTMENTS

BIAS ALIGNMENT ADJUSTMENT

Note: Afer 10 minutes or more have passed since the power supply was turned on, this adjustment is done.

Connection:

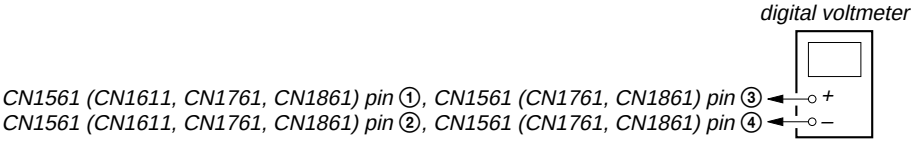

Procedure:

1. Connect a digital voltmeter to the CN1561 (CN1611, CN1761, CN1861).
2. Press the POWER button to turn on the main power.
3. Adjust the RV1501 (RV1551, RV1601, RV1701, RV1751, RV1801, RV1851) so that the digital voltmeter reading is 5 mV to 20 mV.

Adjustment and Connection Location:

– BIAS Board (Conductor Side) –

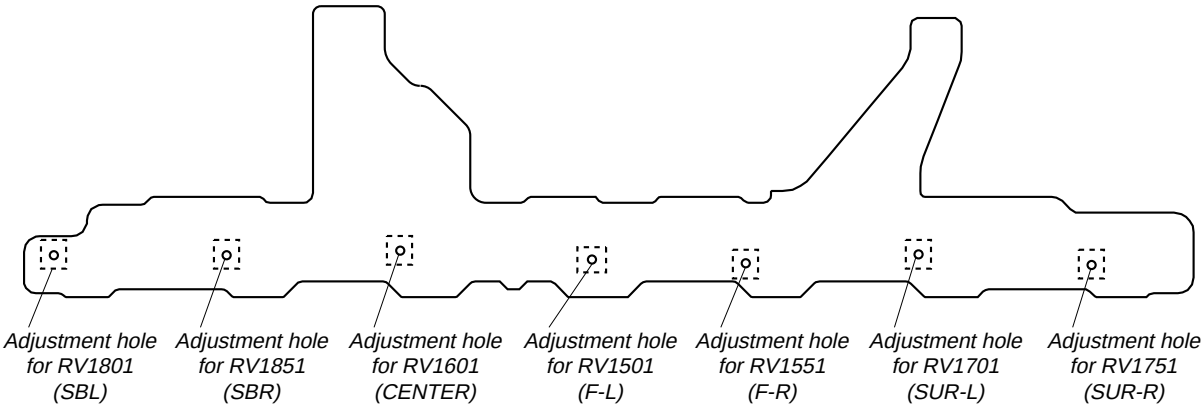
Adjustment hole for RV1801 (SBL)
Adjustment hole for RV1851 (SBR)
Adjustment hole for RV1601 (CENTER)
Adjustment hole for RV1501 (F-L)
Adjustment hole for RV1551 (F-R)
Adjustment hole for RV1701 (SUR-L)
Adjustment hole for RV1751 (SUR-R)

– PROTECTOR (SB) Board (Component Side) –

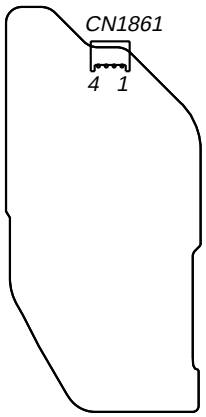

– PROTECTOR (F-C) Board (Component Side) –

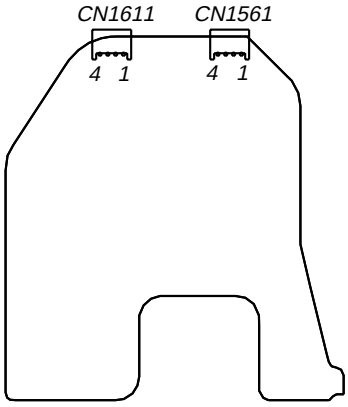

– PROTECTOR (SURR) Board (Component Side) –

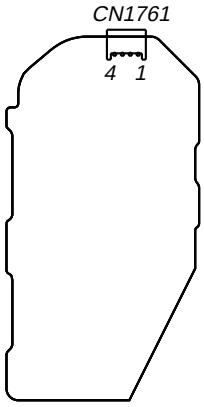

VIDEO CALIBRATION ADJUSTMENT

Adjustment to decide the standard of the video input signal.

Note: After replacing D_VIDEO board, or after "SUPER RESET" of the special menu mode is executed, perform this adjustment.

Connection:

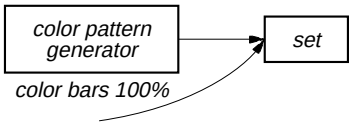

A_VIDEO board COMPONENT VIDEO DVD/BD IN jack (J6001)
DVD/BD VIDEO IN jack (J6004)

Procedure:

1. "DVD" is selected by using [INPUT SELECTOR] jog.
2. Connect a color pattern generator to the COMPONENT VIDEO DVD/BD IN jack (J6001) on the A_VIDEO board and DVD/BD VIDEO IN jack (J6004) on the A_VIDEO board.
3. Input NTSC color bars signal from the color pattern generator.
4. Press the [POWER] button to turn off the main power
5. While pressing the [MEMORY/ENTER], [MUSIC] and [DMPORT] buttons, press the [POWER] button to turn on the main power. It enters the test mode, and display as below.

   V.CALIBRATION START? ↔ NTSC : MW--_____
   (PAL input) PAL : MW--_____
   (HD input) HD-V : MW--_____

6. In state of step 5, press the [MEMORY/ENTER] button. The adjustment is automatically completed, and result is written in the EEPROM, and display as below.

   (NTSC input) NTSC : MW OK C_V__
   (PAL input) PAL : MW OK C_V__
   (HD input) HD-V : MW OK C_V__

   When "Check XXXX V-IN" is displayed, Video signal necessary for the measurement while measuring it last time was not detected and it became an error. Confirm the input of the video of the terminal connection etc., and measure the [MEMORY/ENTER] button again pressing.

7. Input PAL color bars signal from the color pattern generator.
8. Perform step 4 to 6.
9. Input HD color bars signal (720p or 1080p) from the color pattern generator.
10. Perform step 4 to 6.
11. When all the adjustments end, display as below.

    V.CAL COMPLETE N:P:H

FM AUTO STOP CHECK



Procedure:

1. Turn on the set.
2. Input the following signal from signal generator to FM antenna input directly.

Carrier frequency: A = 87.5 MHz, B = 98 MHz, C = 108 MHz

Deviation : 75 kHz
Modulation : 1 kHz
ANT input : 35 dBu (EMF)

Note: Use 75 ohm coaxial cable to connect signal generator and the set. You cannot use video cable for checking.
Use signal generator whose output impedance is 75 ohm.

3. Set to FM tuner function and scan the input FM signal with automatic scanning.
4. Confirm that input frequency of A, B and C are detected and automatic scanning stops.

When the station signal is received in good condition, automatic scanning stops.

SECTION 6
DIAGRAMS

6-1. BLOCK DIAGRAM – CONTROL Section –

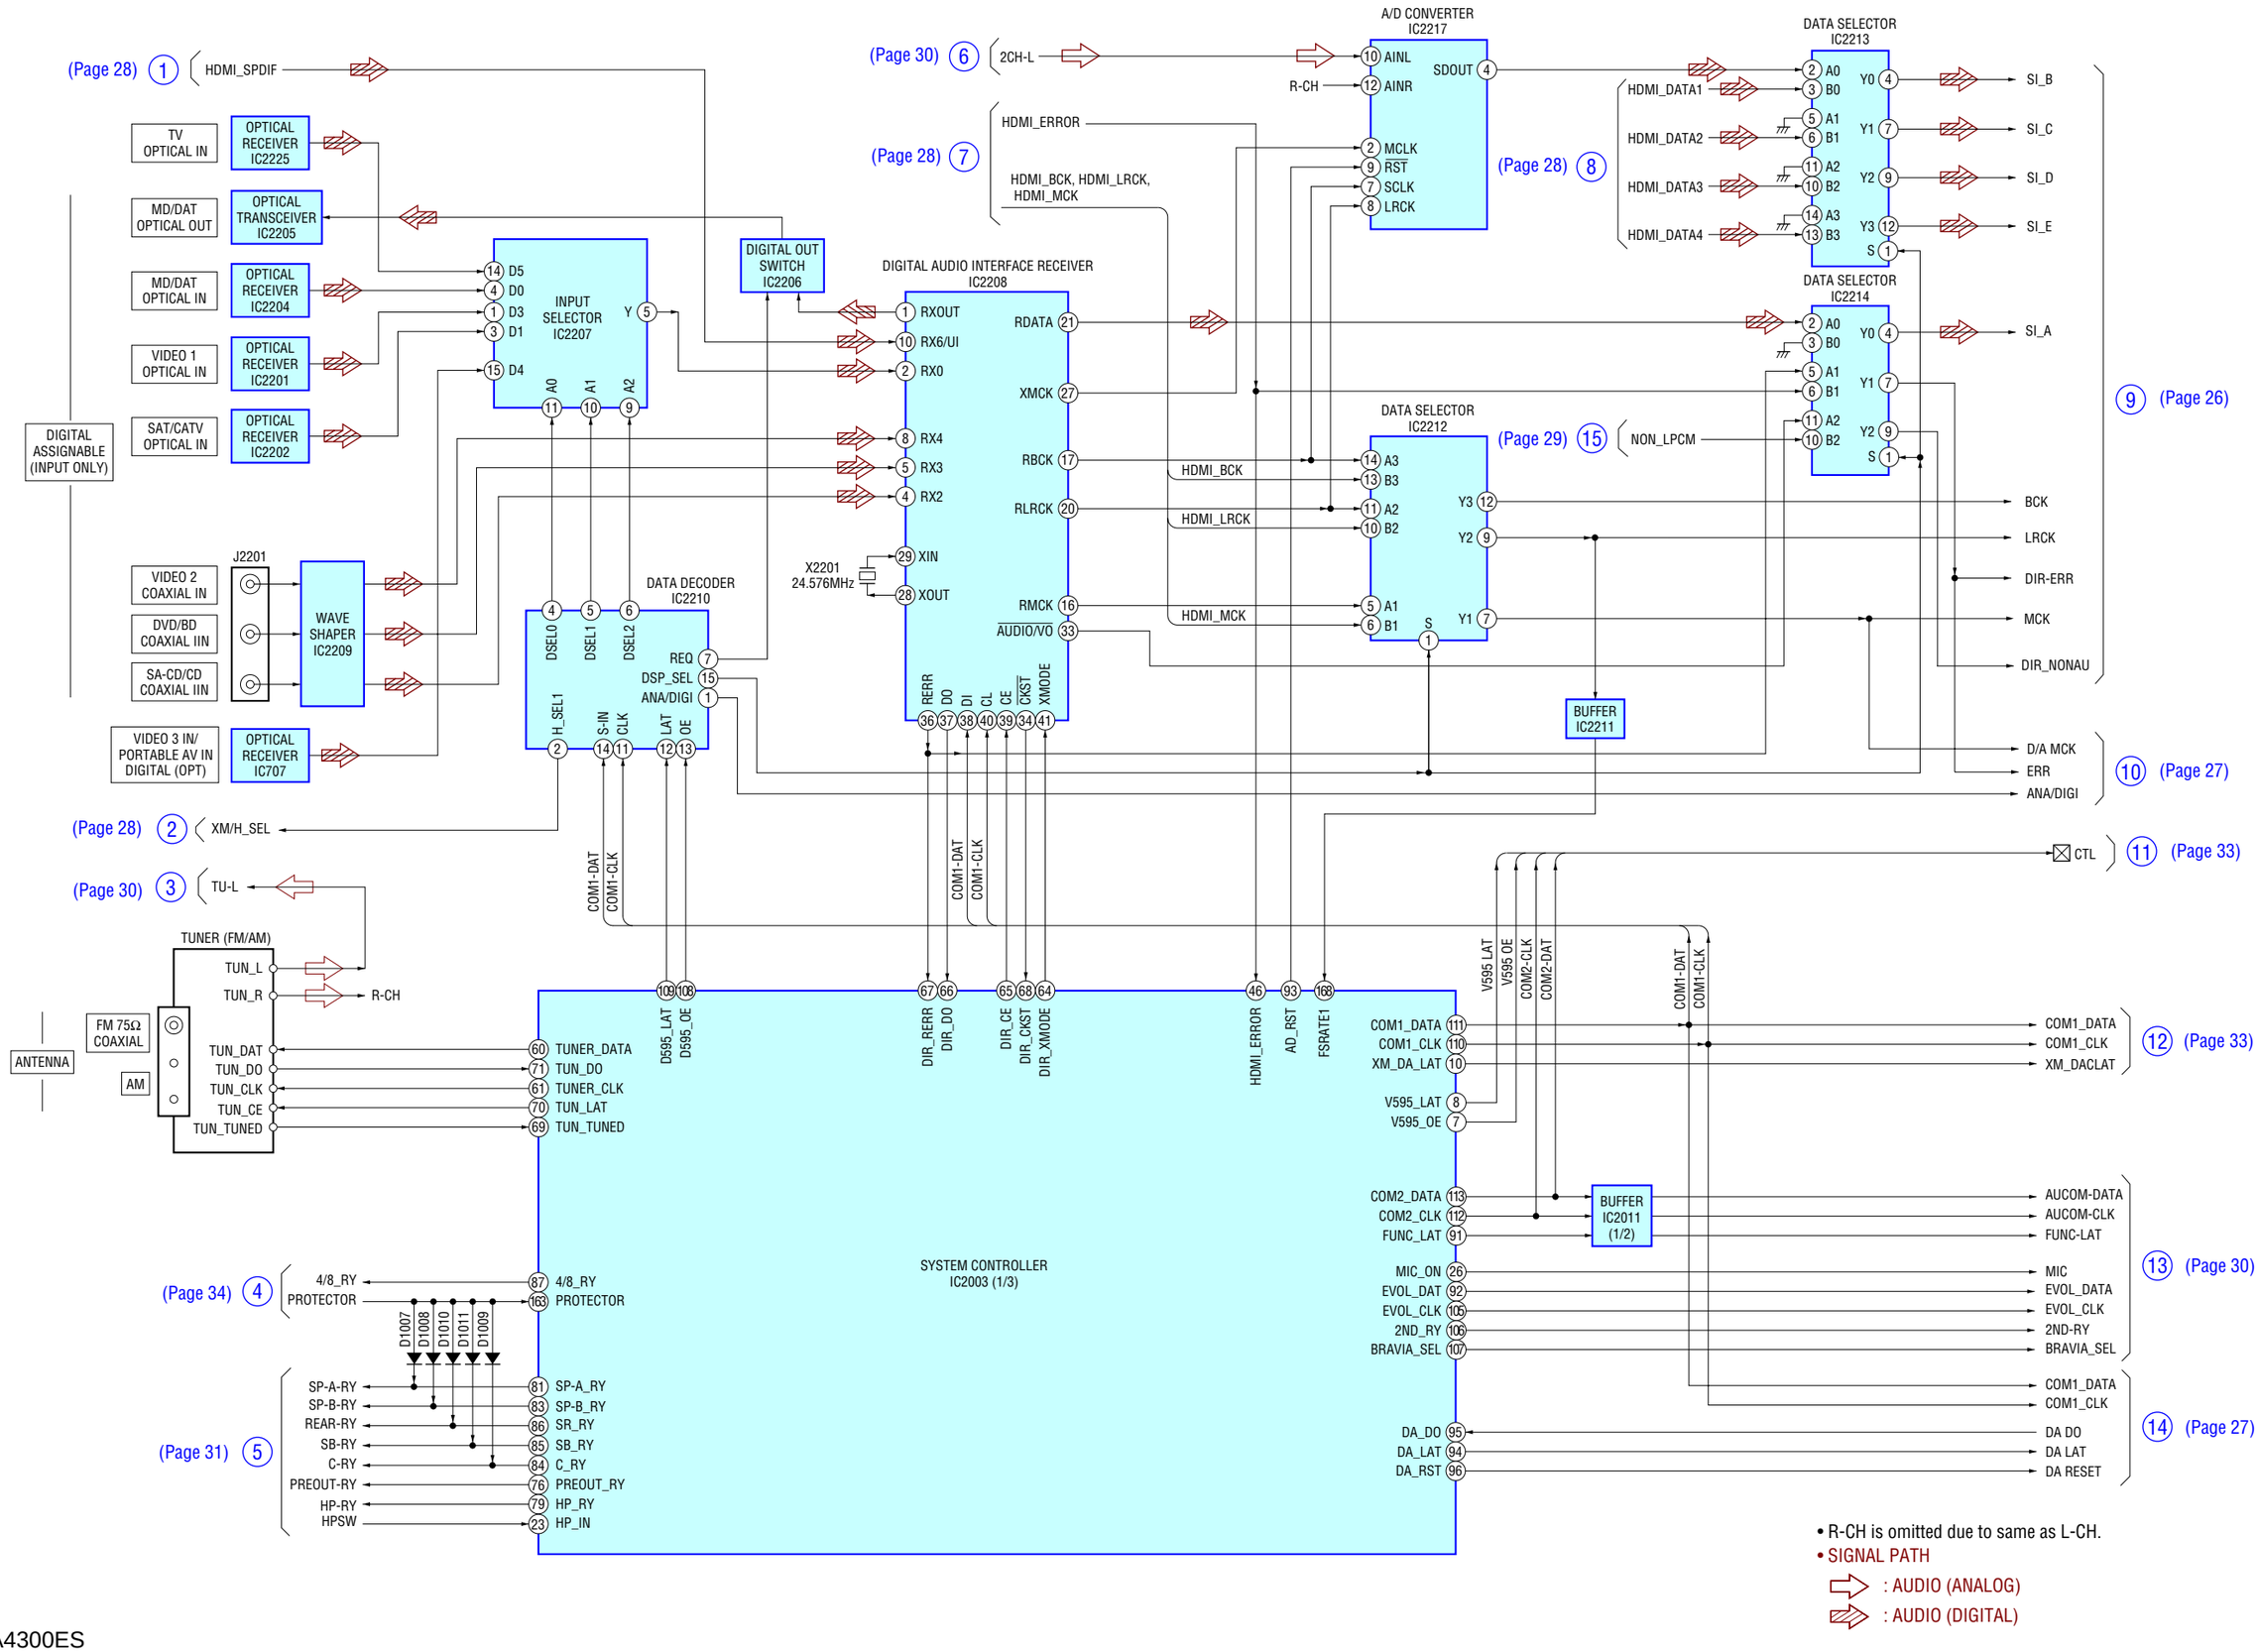

• R-CH is omitted due to same as L-CH.
• SIGNAL PATH
: AUDIO (ANALOG)
: AUDIO (DIGITAL)

6-2. BLOCK DIAGRAM – DSP Section –

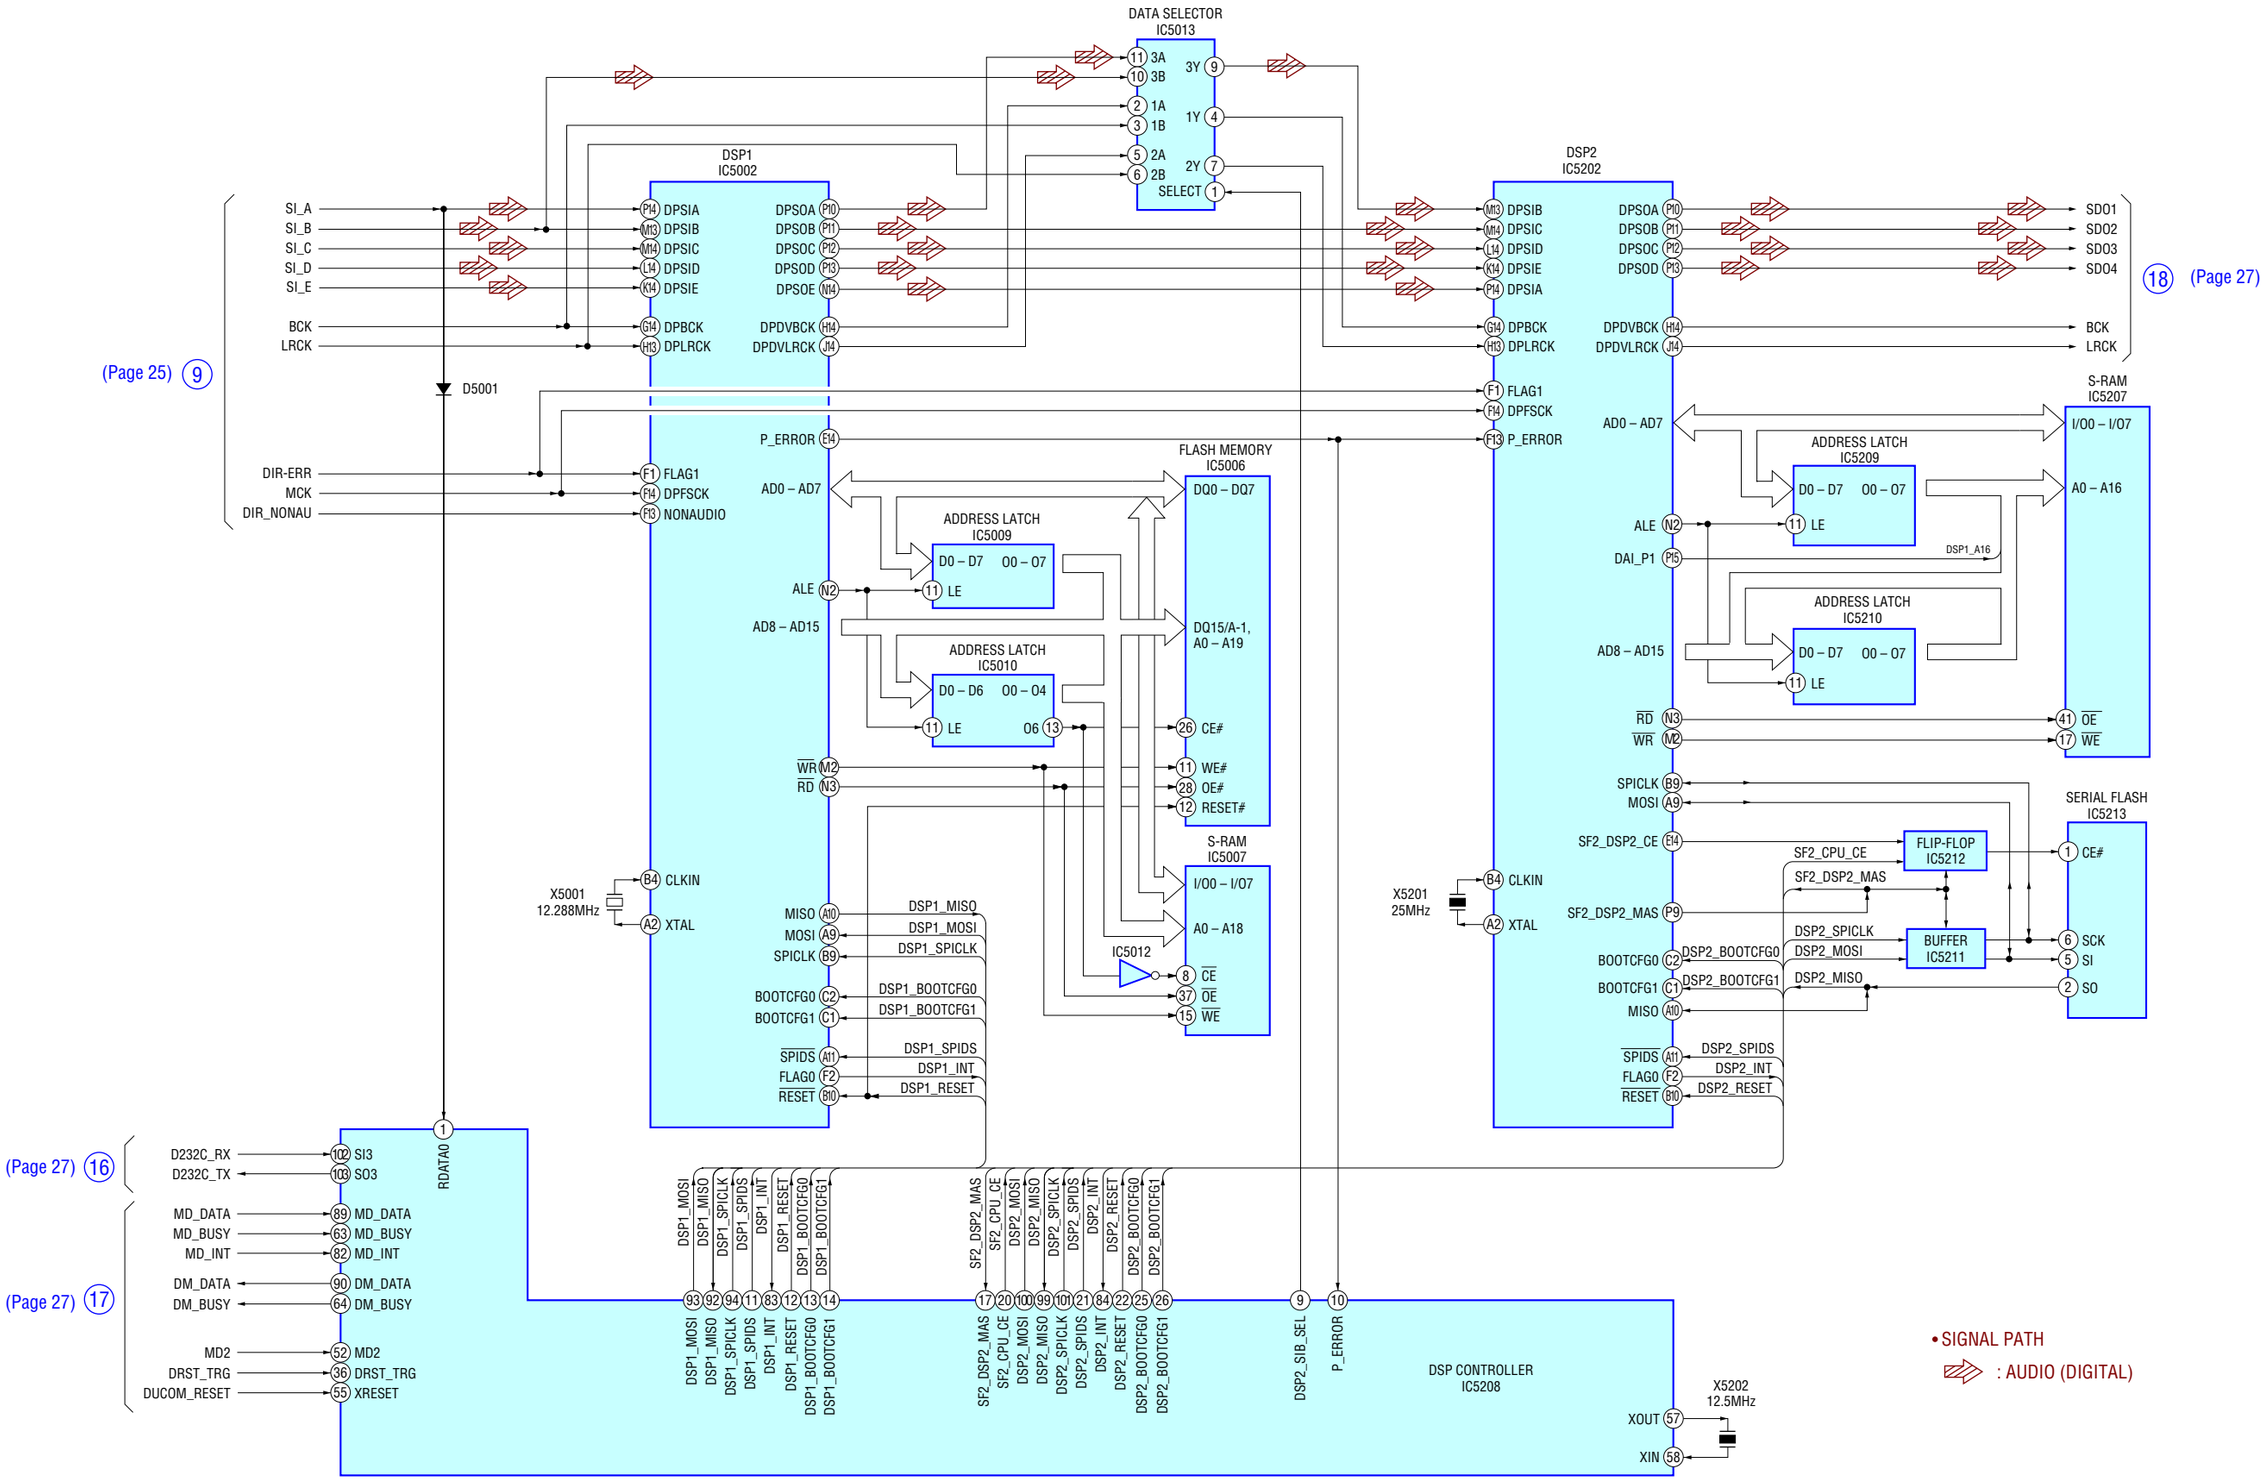

6-3. BLOCK DIAGRAM – DIGITAL AUDIO Section –

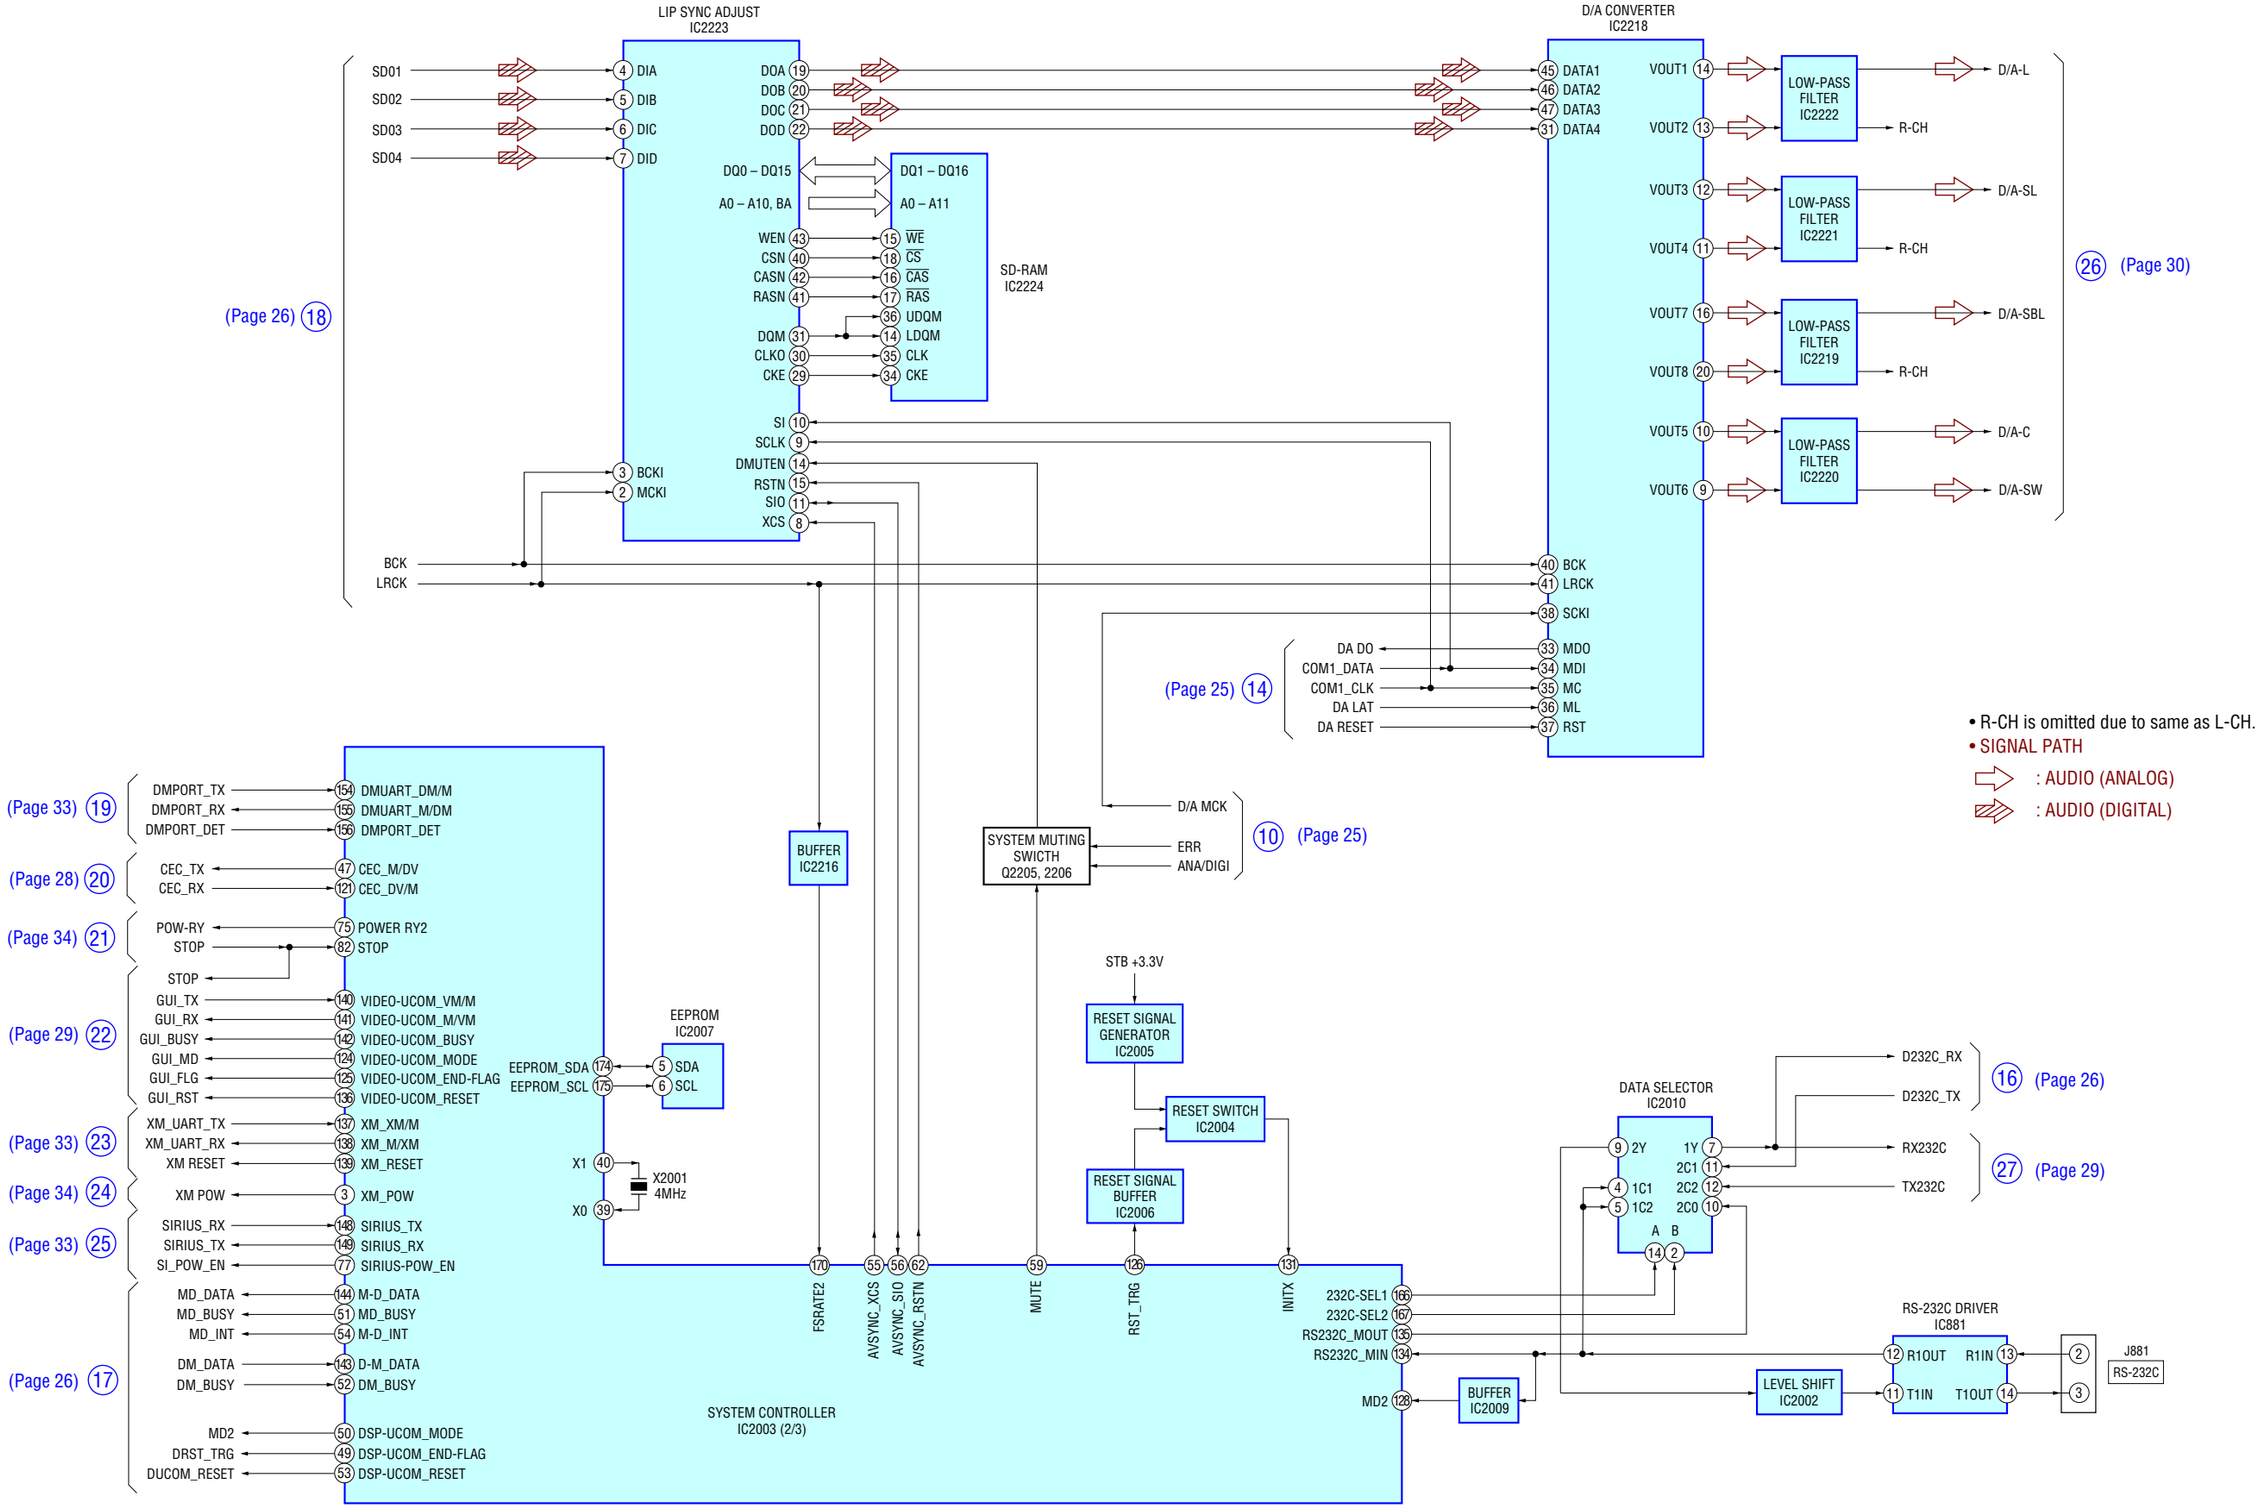

6-4. BLOCK DIAGRAM – HDMI Section –

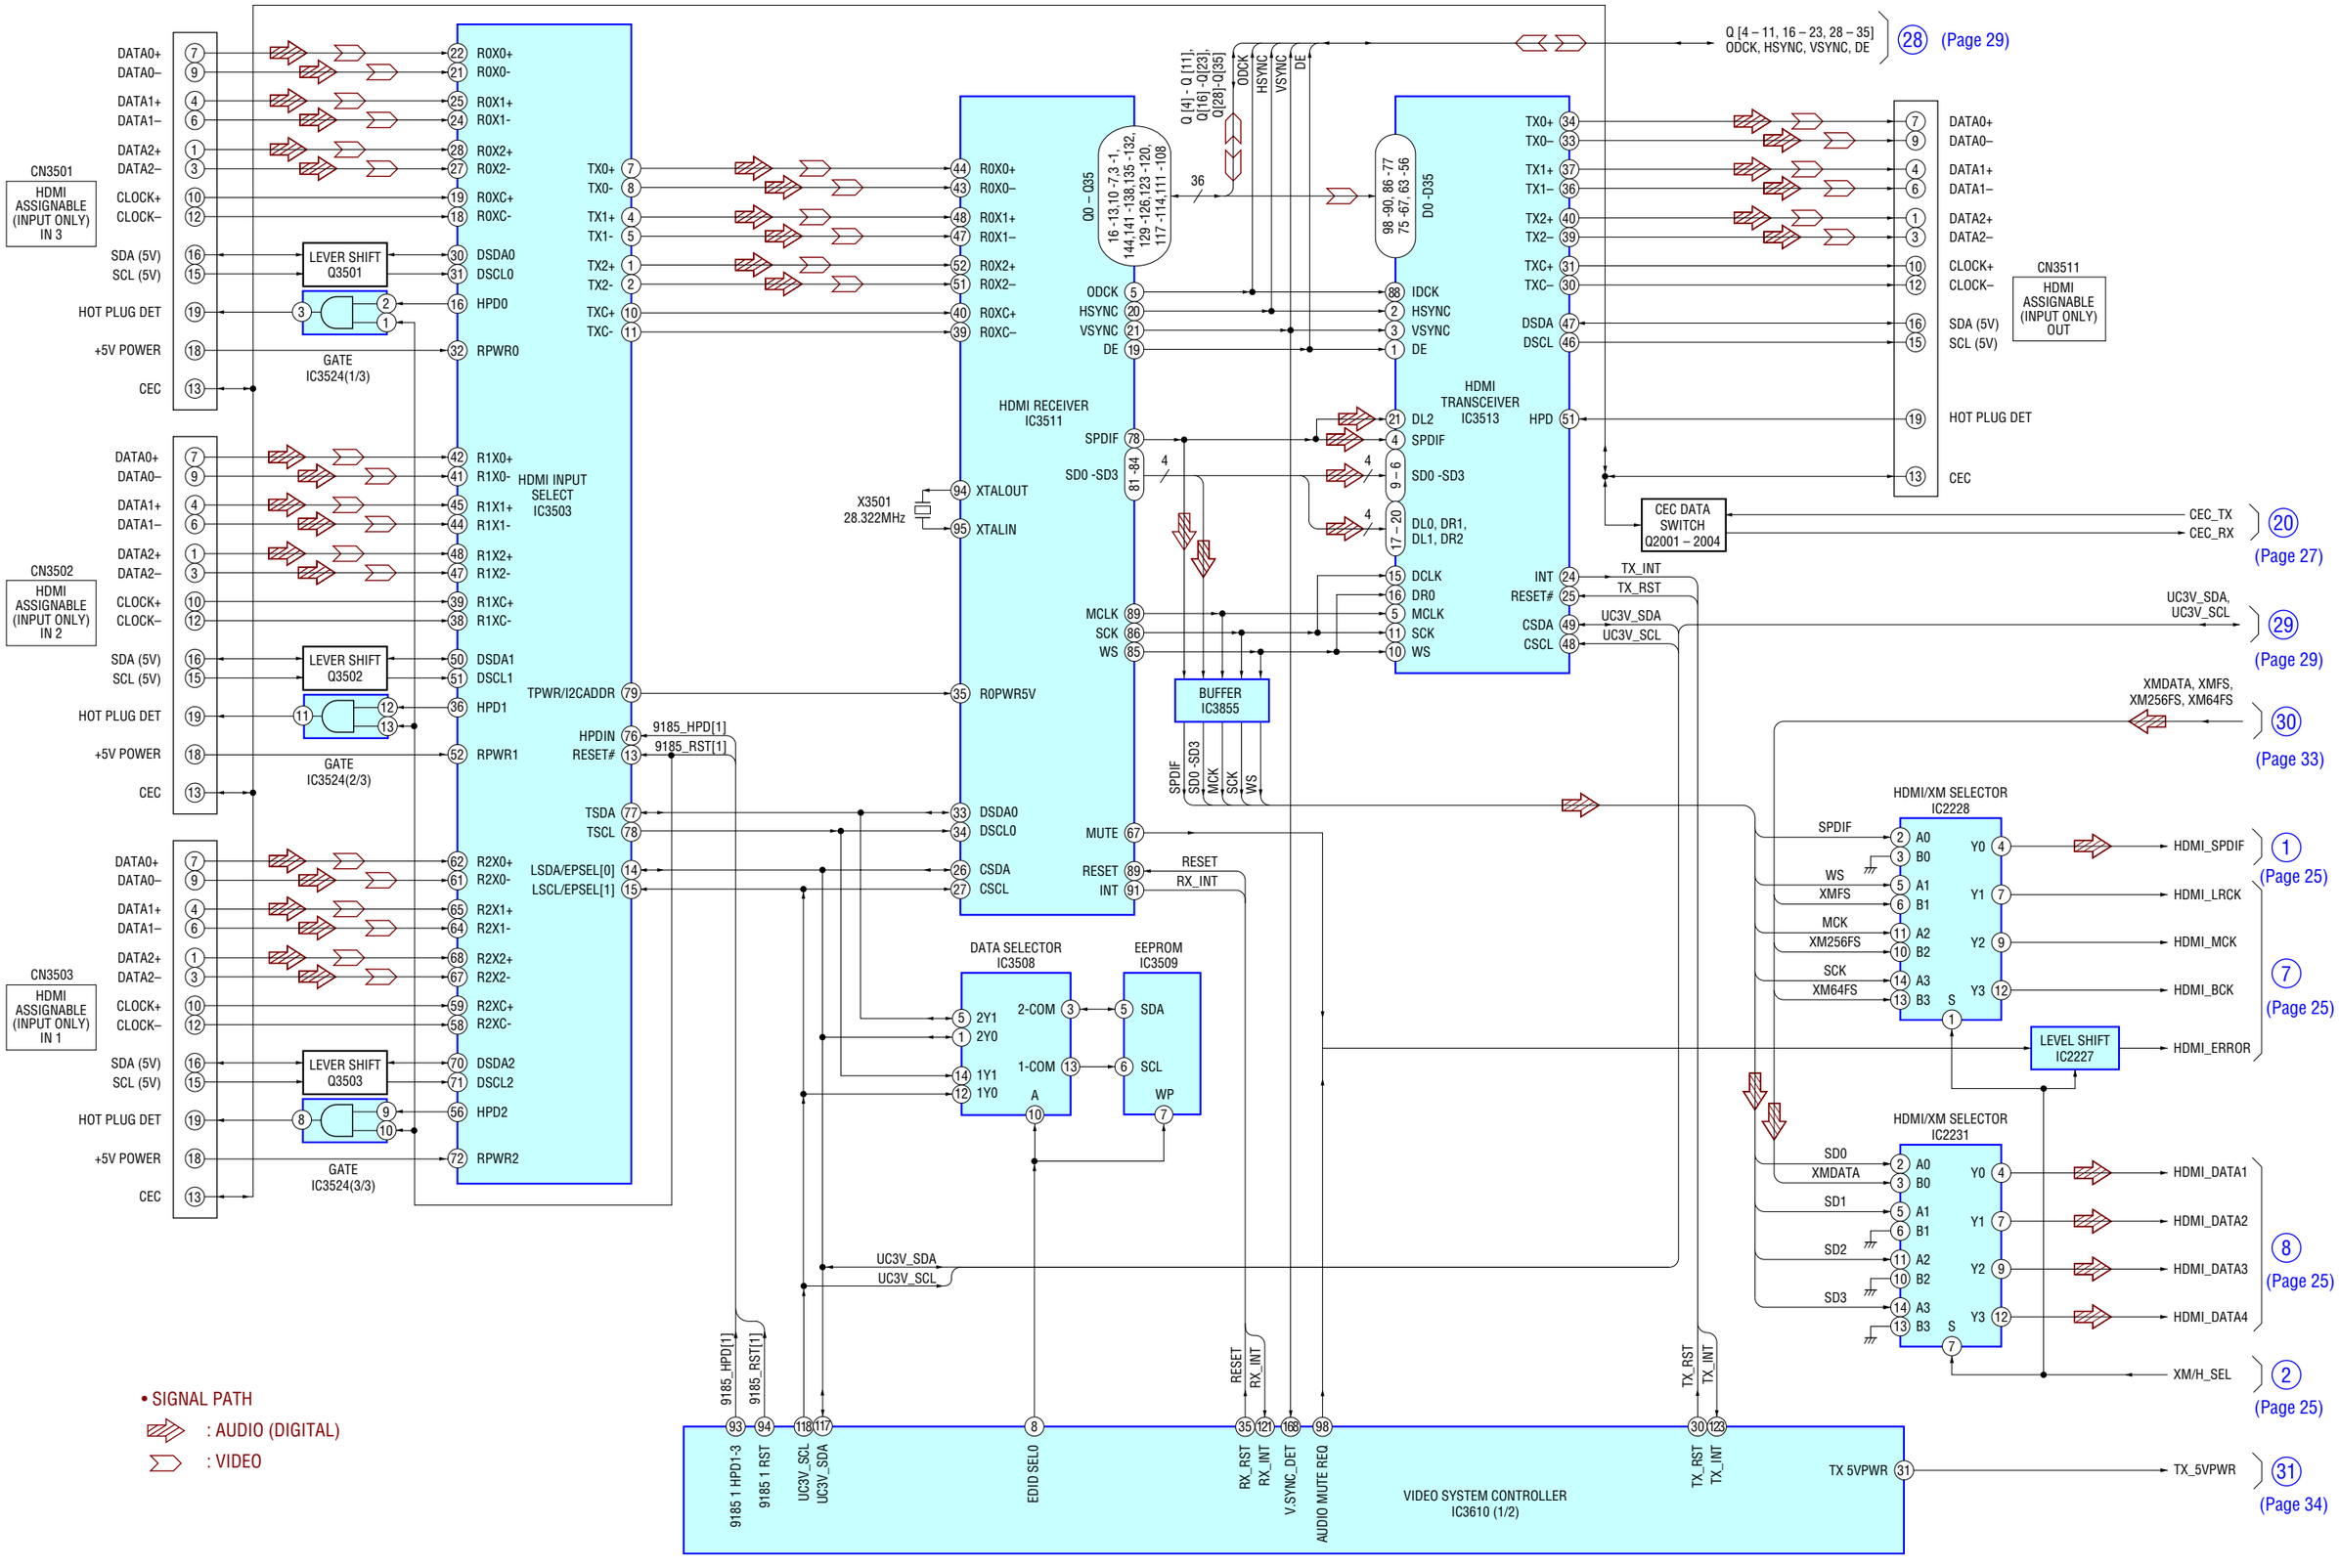

6-5. BLOCK DIAGRAM – VIDEO PROCESS Section –

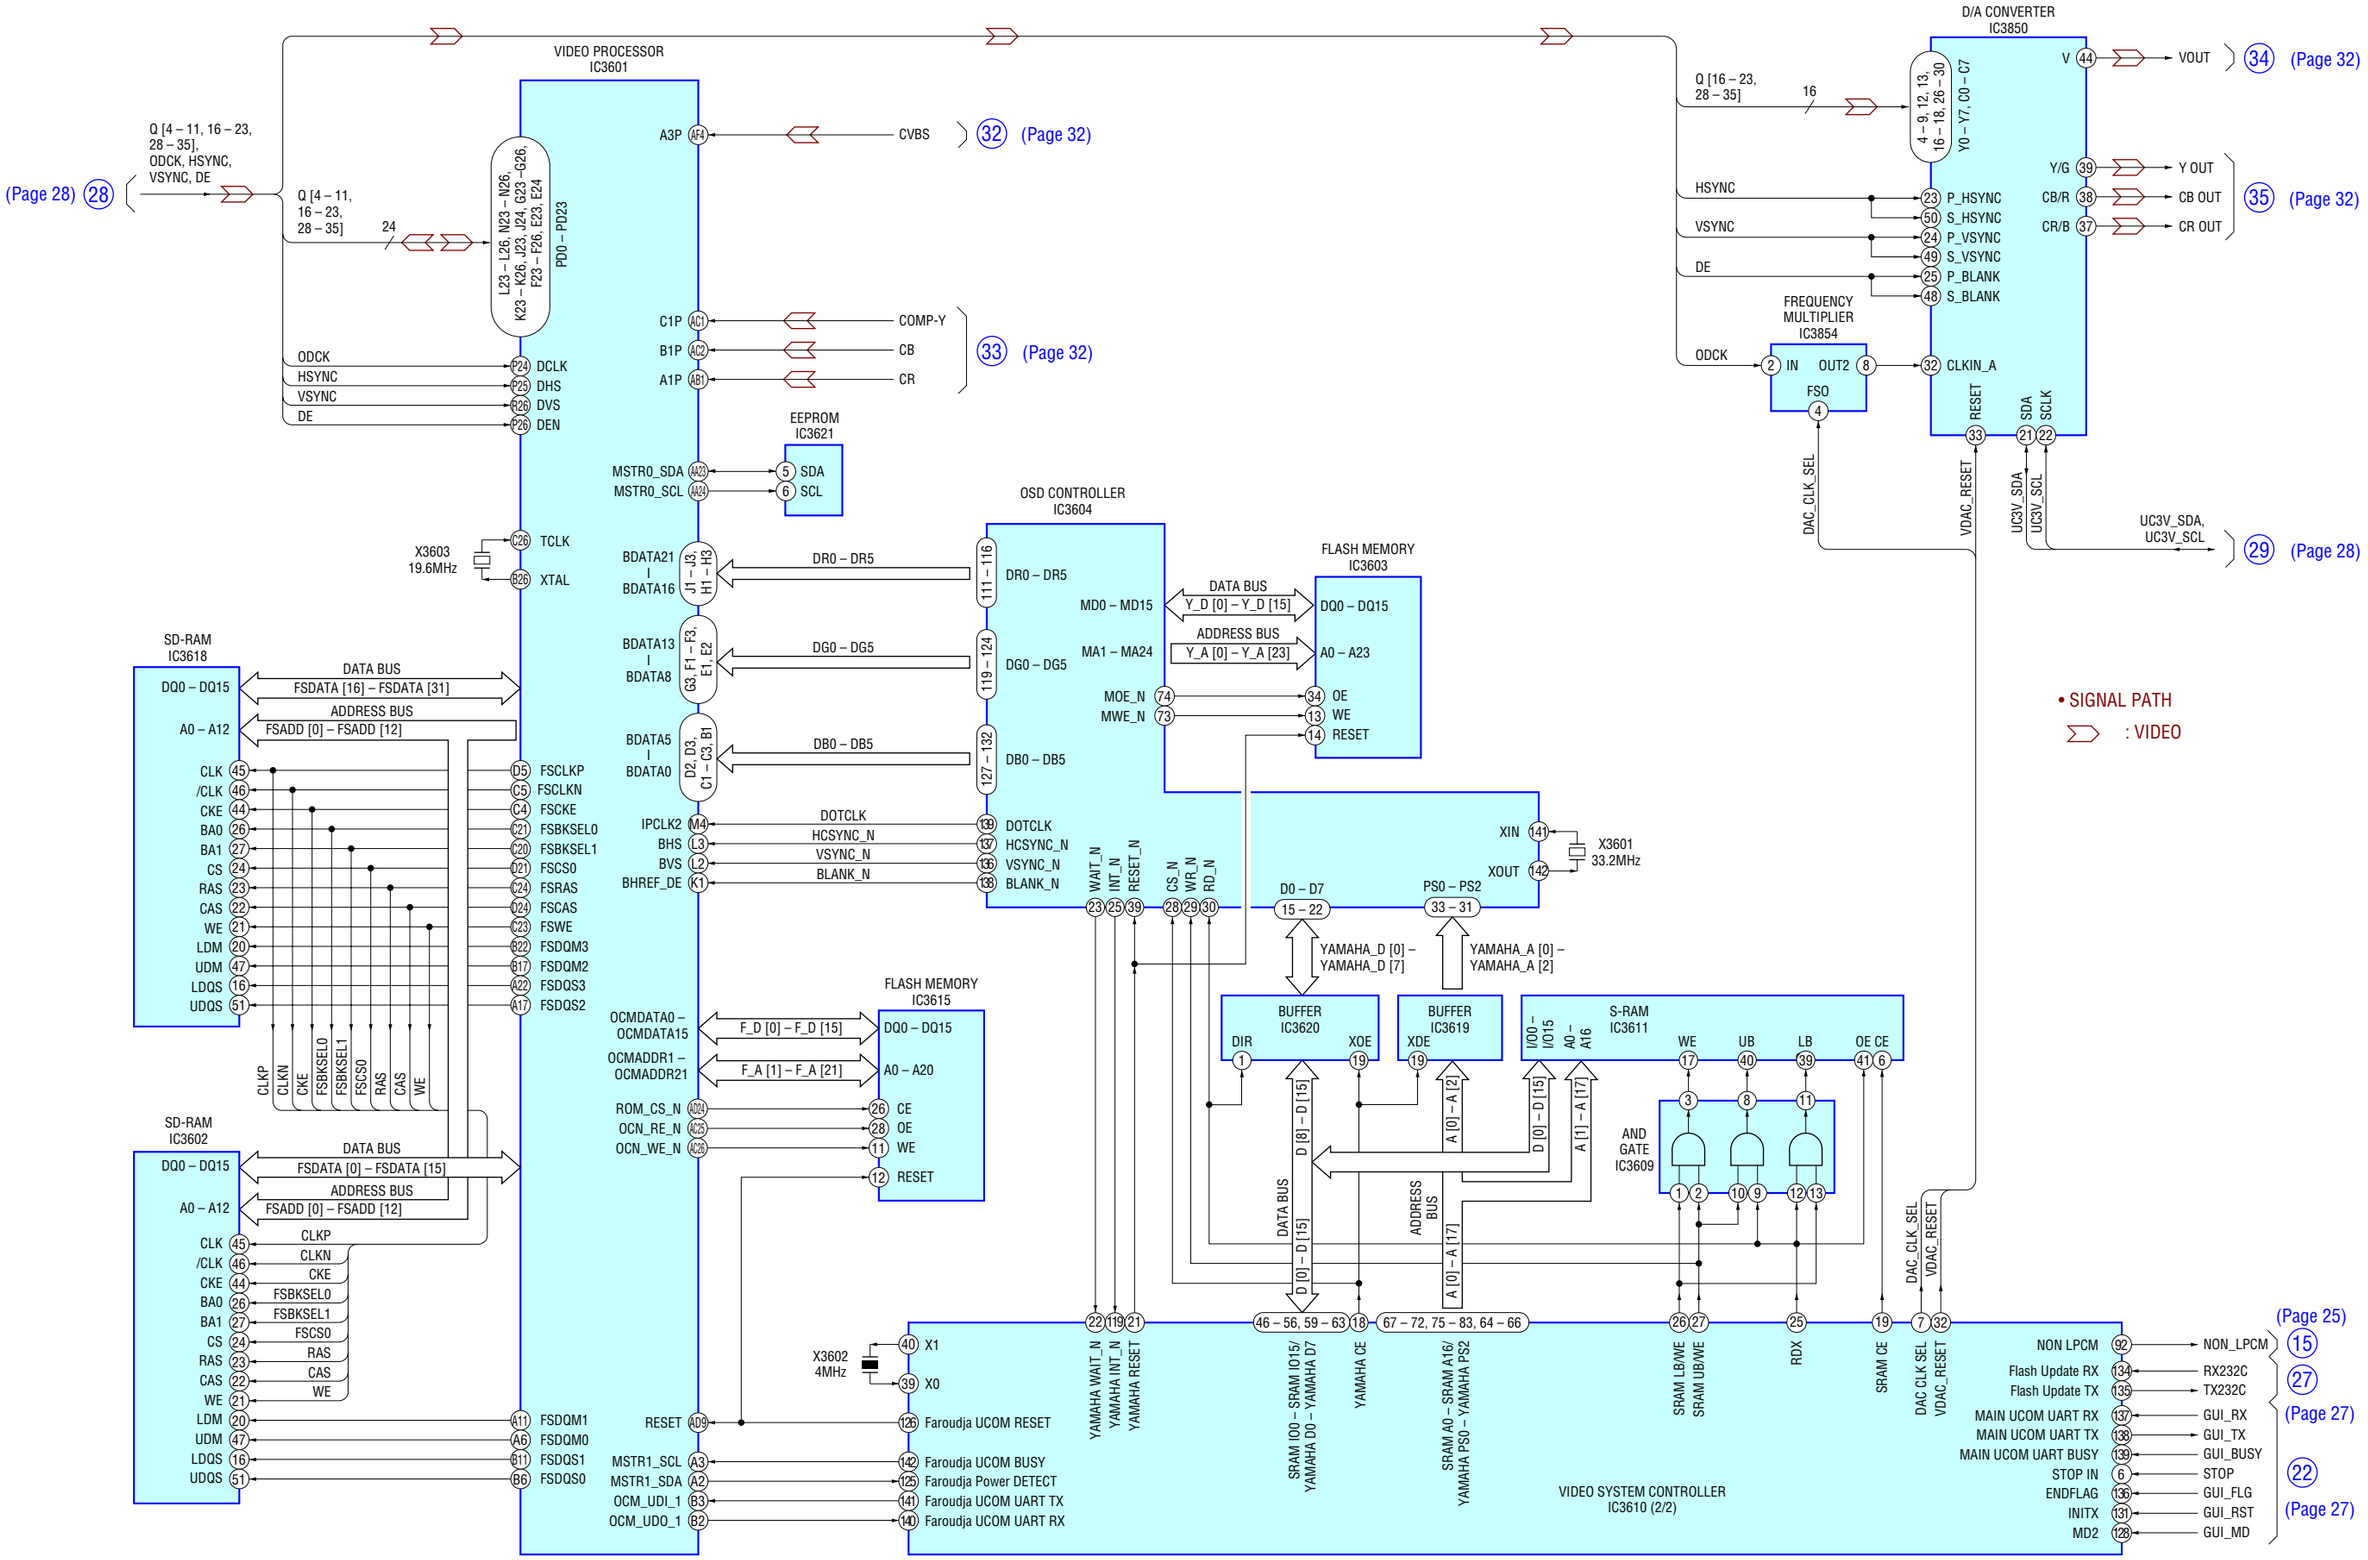

6-6. BLOCK DIAGRAM – ANALOG AUDIO Section –

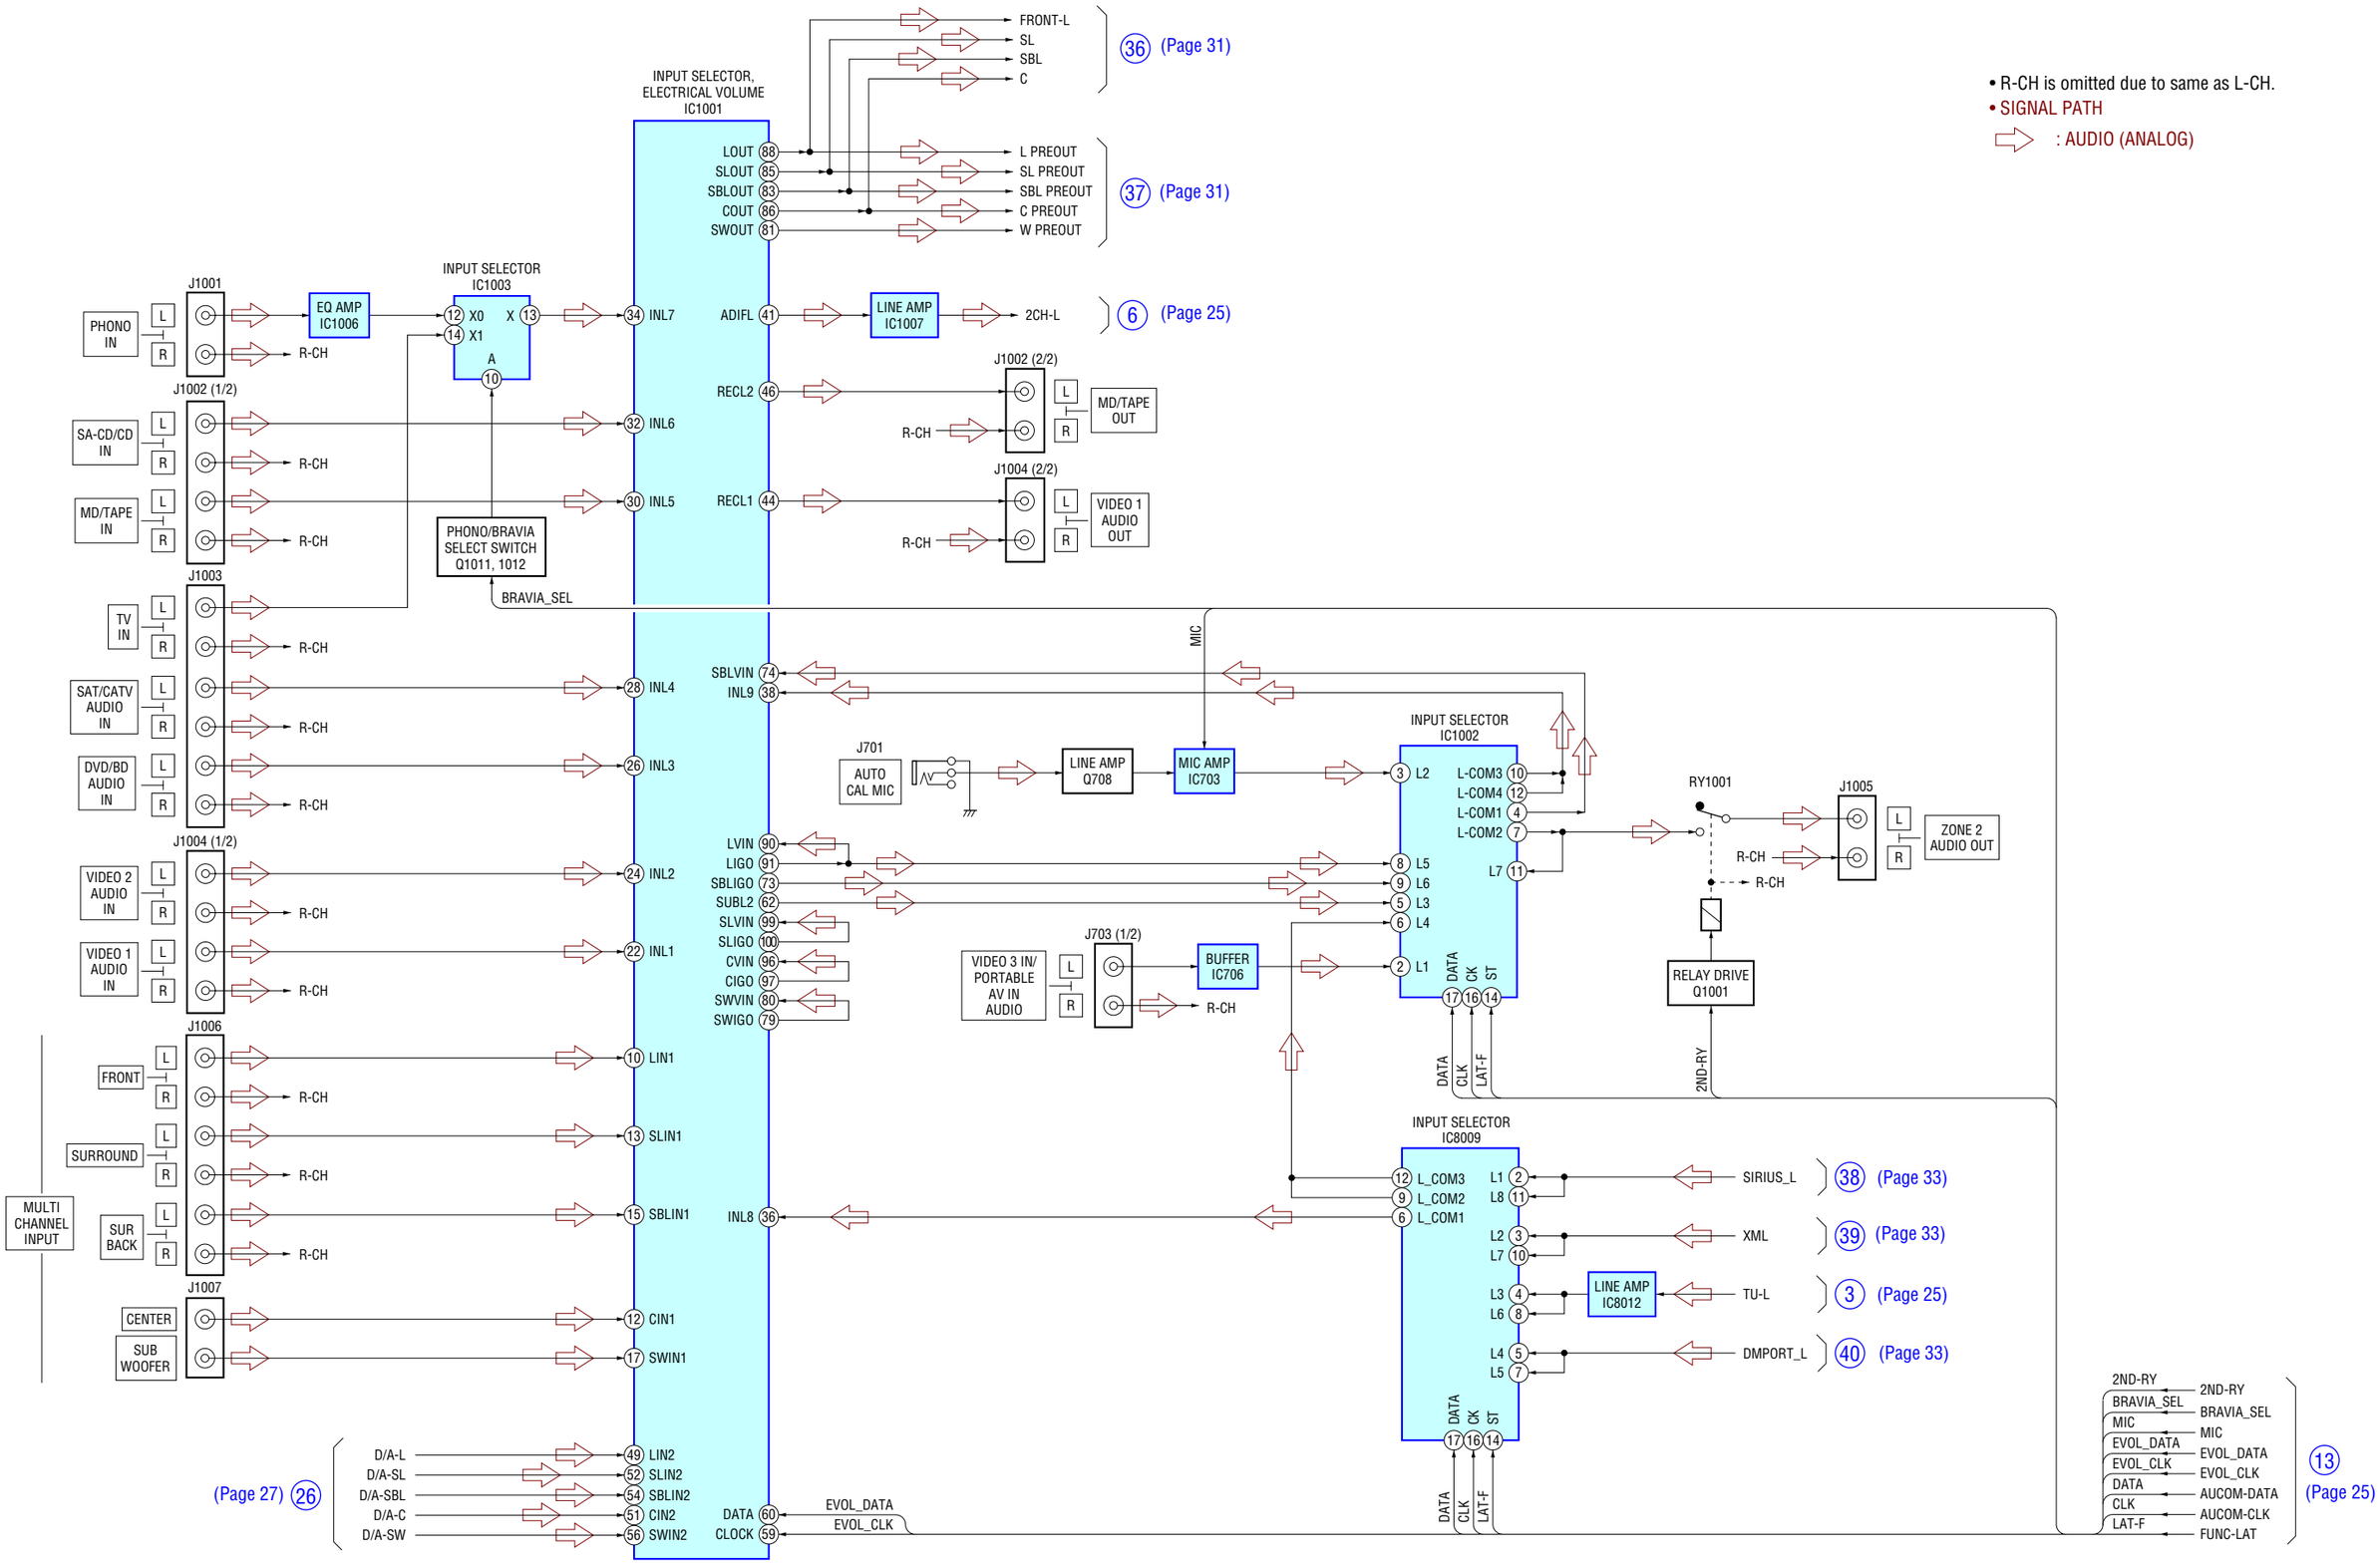

6-7. BLOCK DIAGRAM – POWER AMP Section –

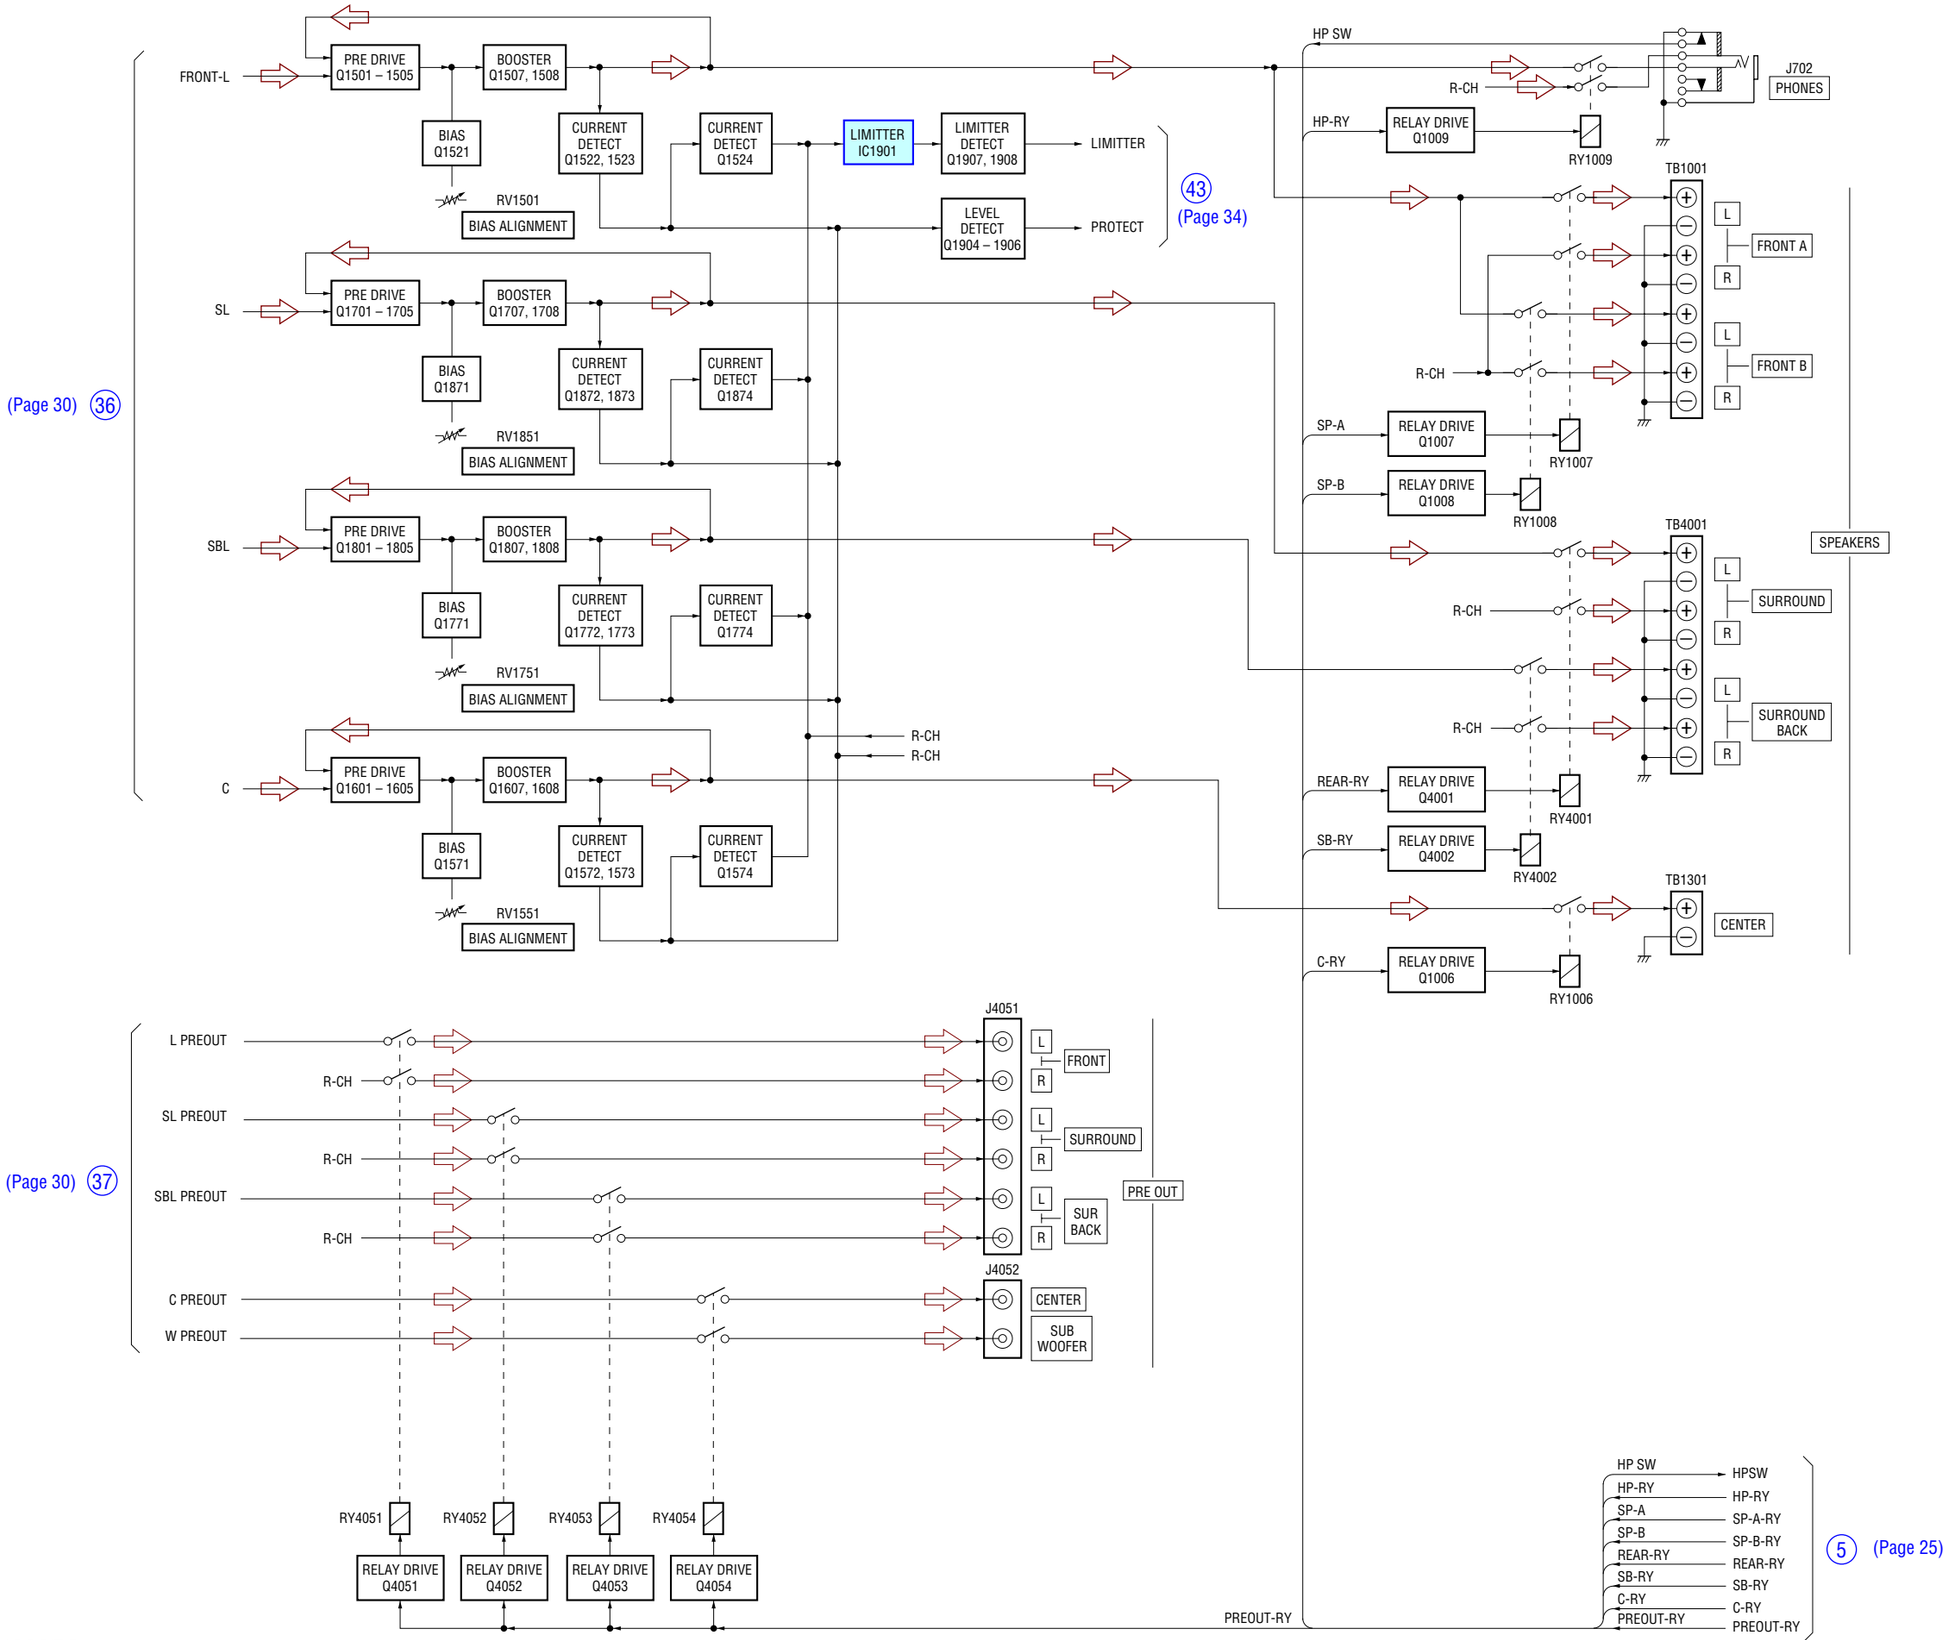

- R-CH is omitted due to same as L-CH.
- SIGNAL PATH
  ⇨ : AUDIO (ANALOG)

6-8. BLOCK DIAGRAM – VIDEO Section –

• SIGNAL PATH
:VIDEO

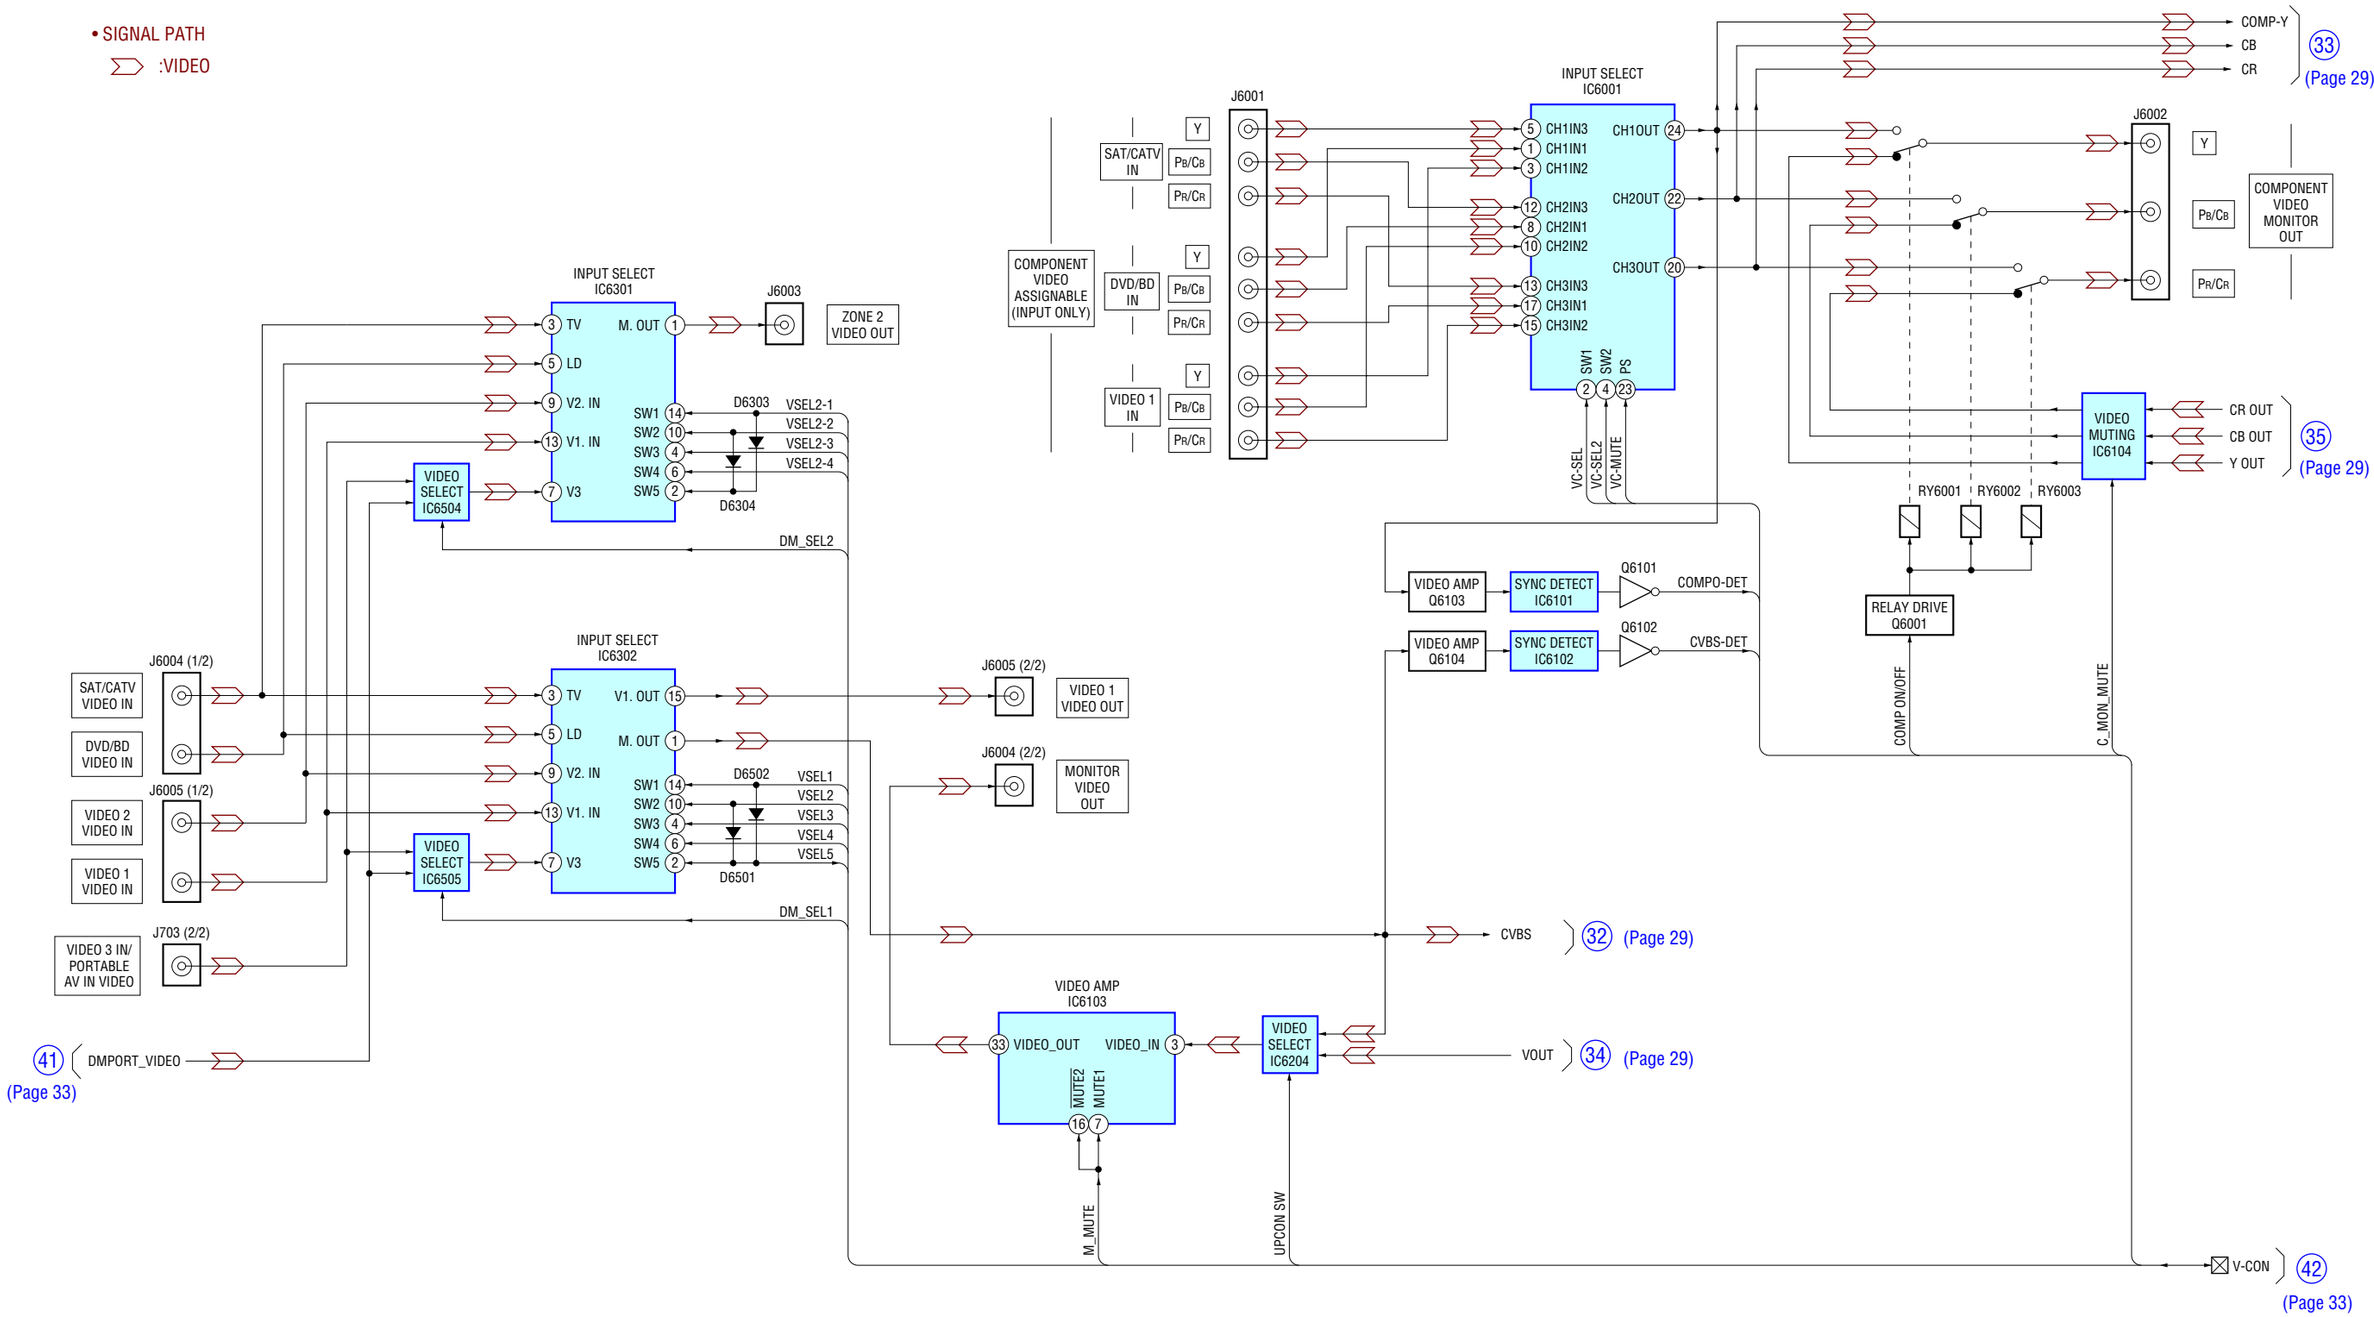

6-9. BLOCK DIAGRAM – PANEL, CIS, XM/SIRIUS RECEIVER, DMPORT Section –

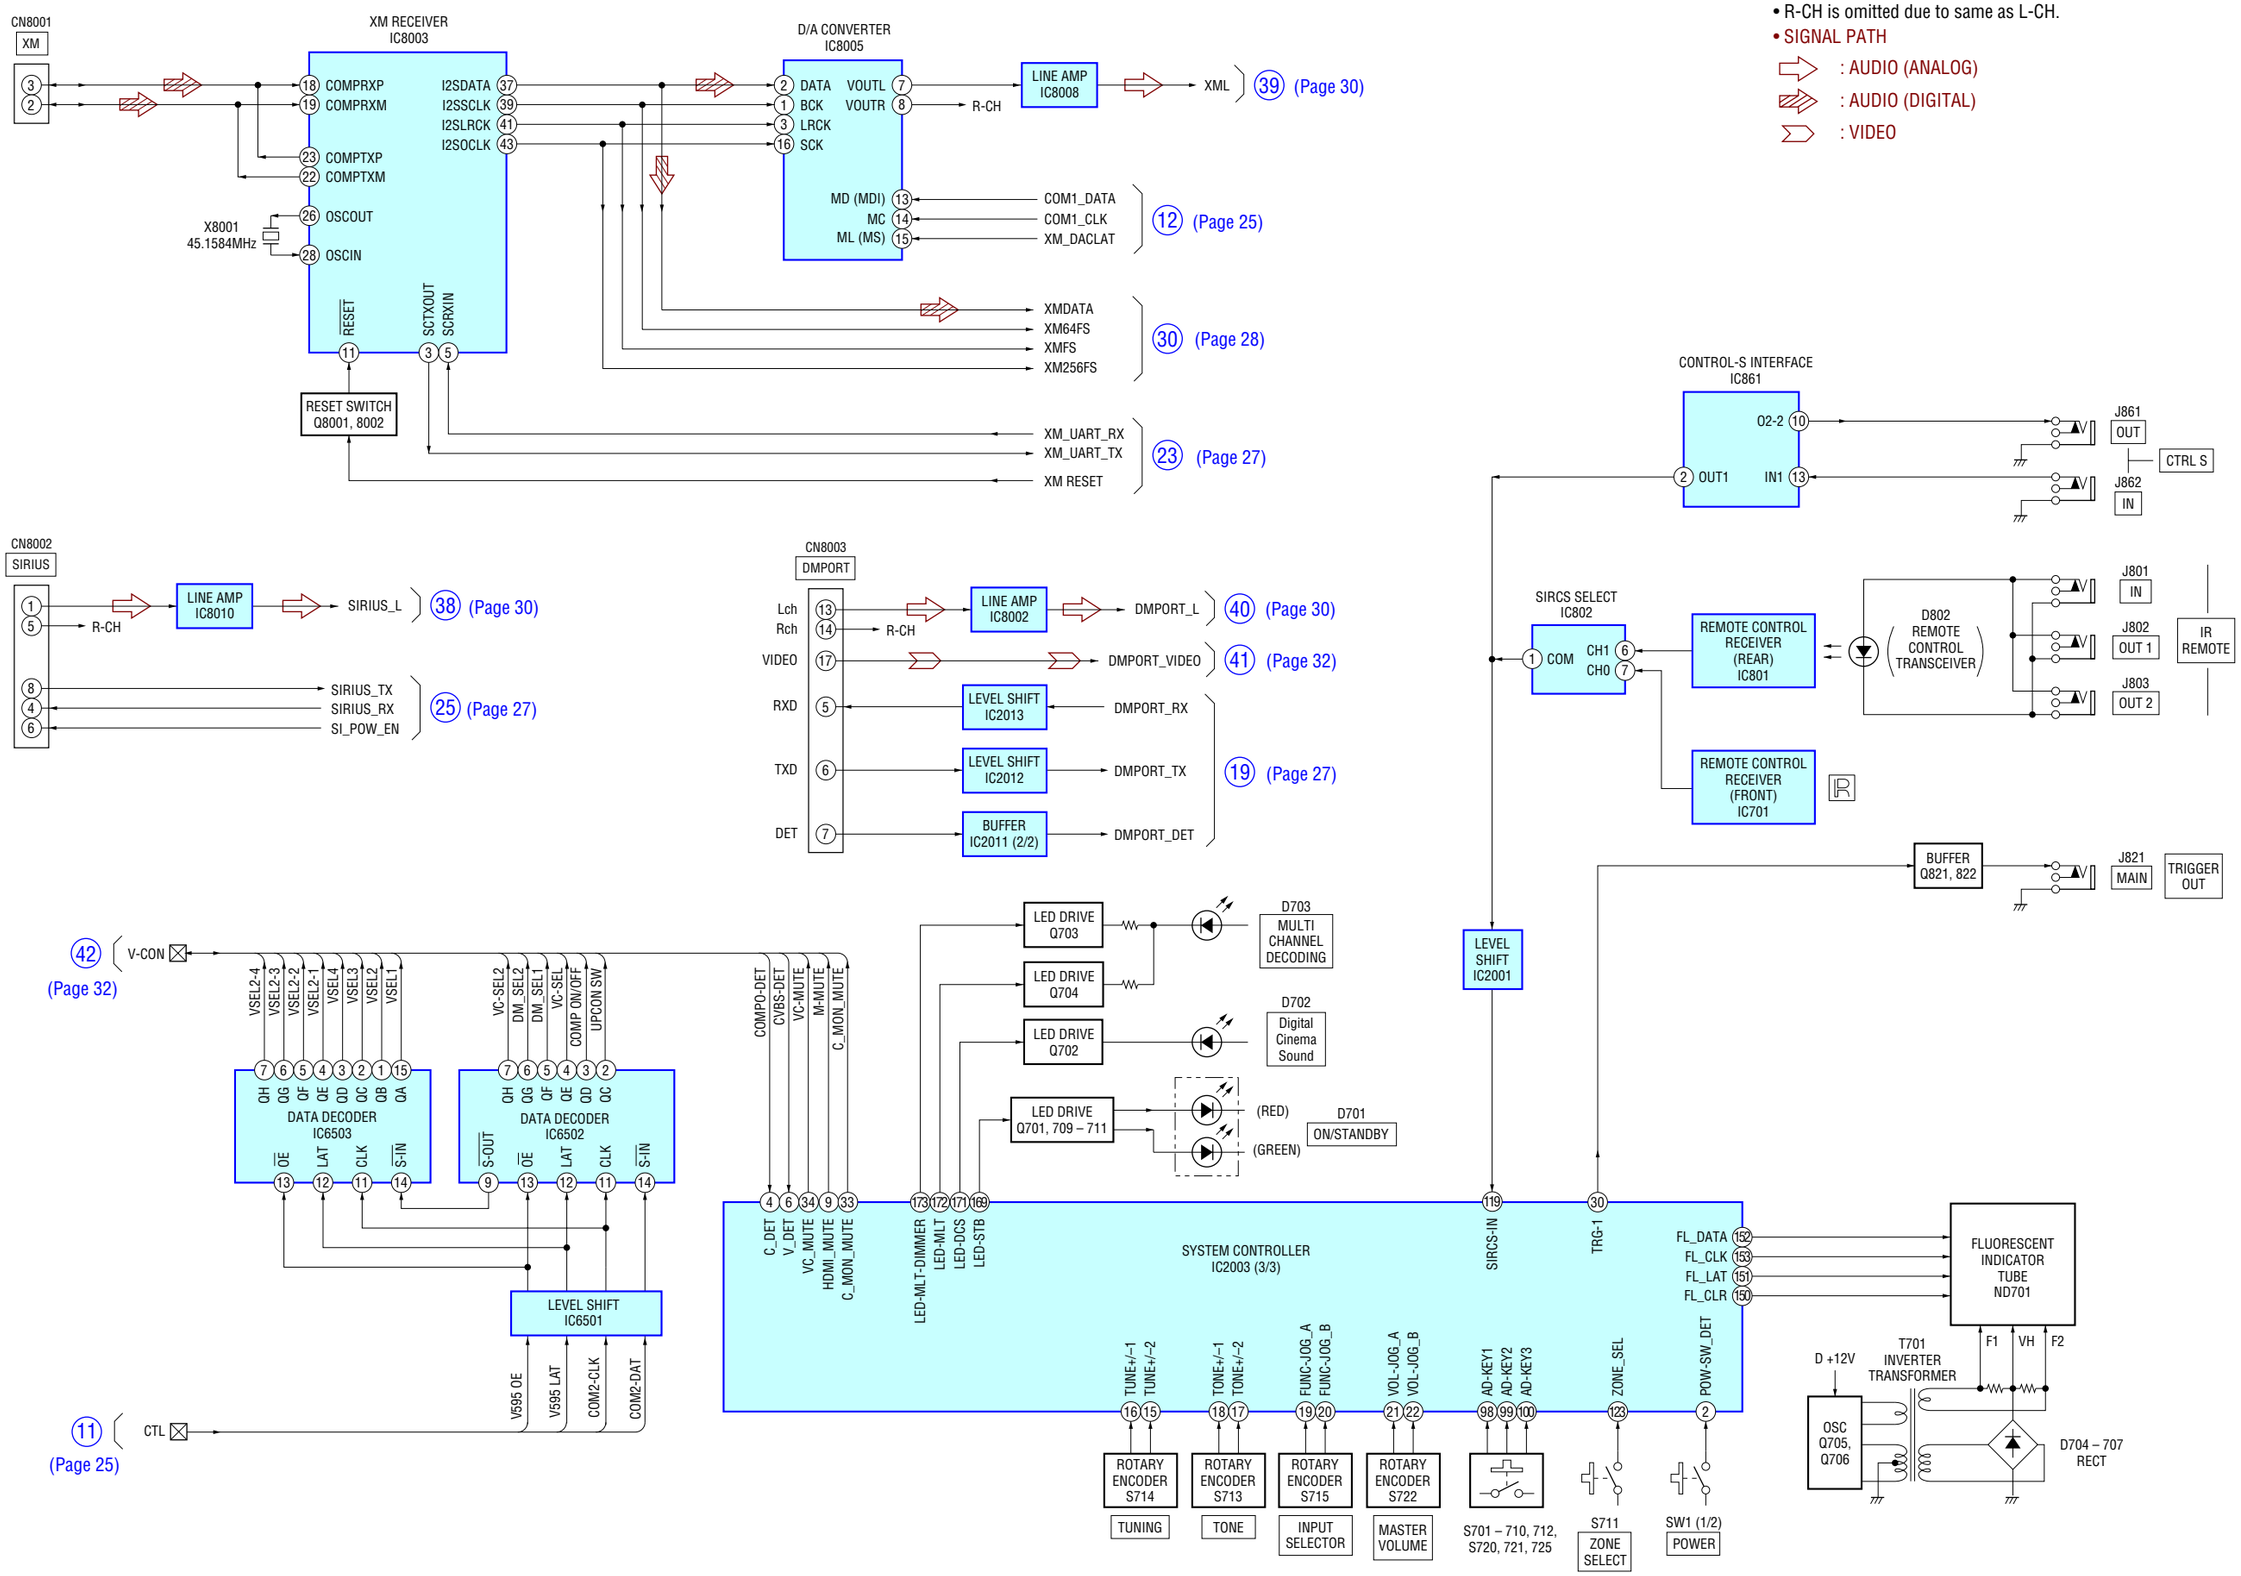

6-10. BLOCK DIAGRAM – POWER SUPPLY Section –

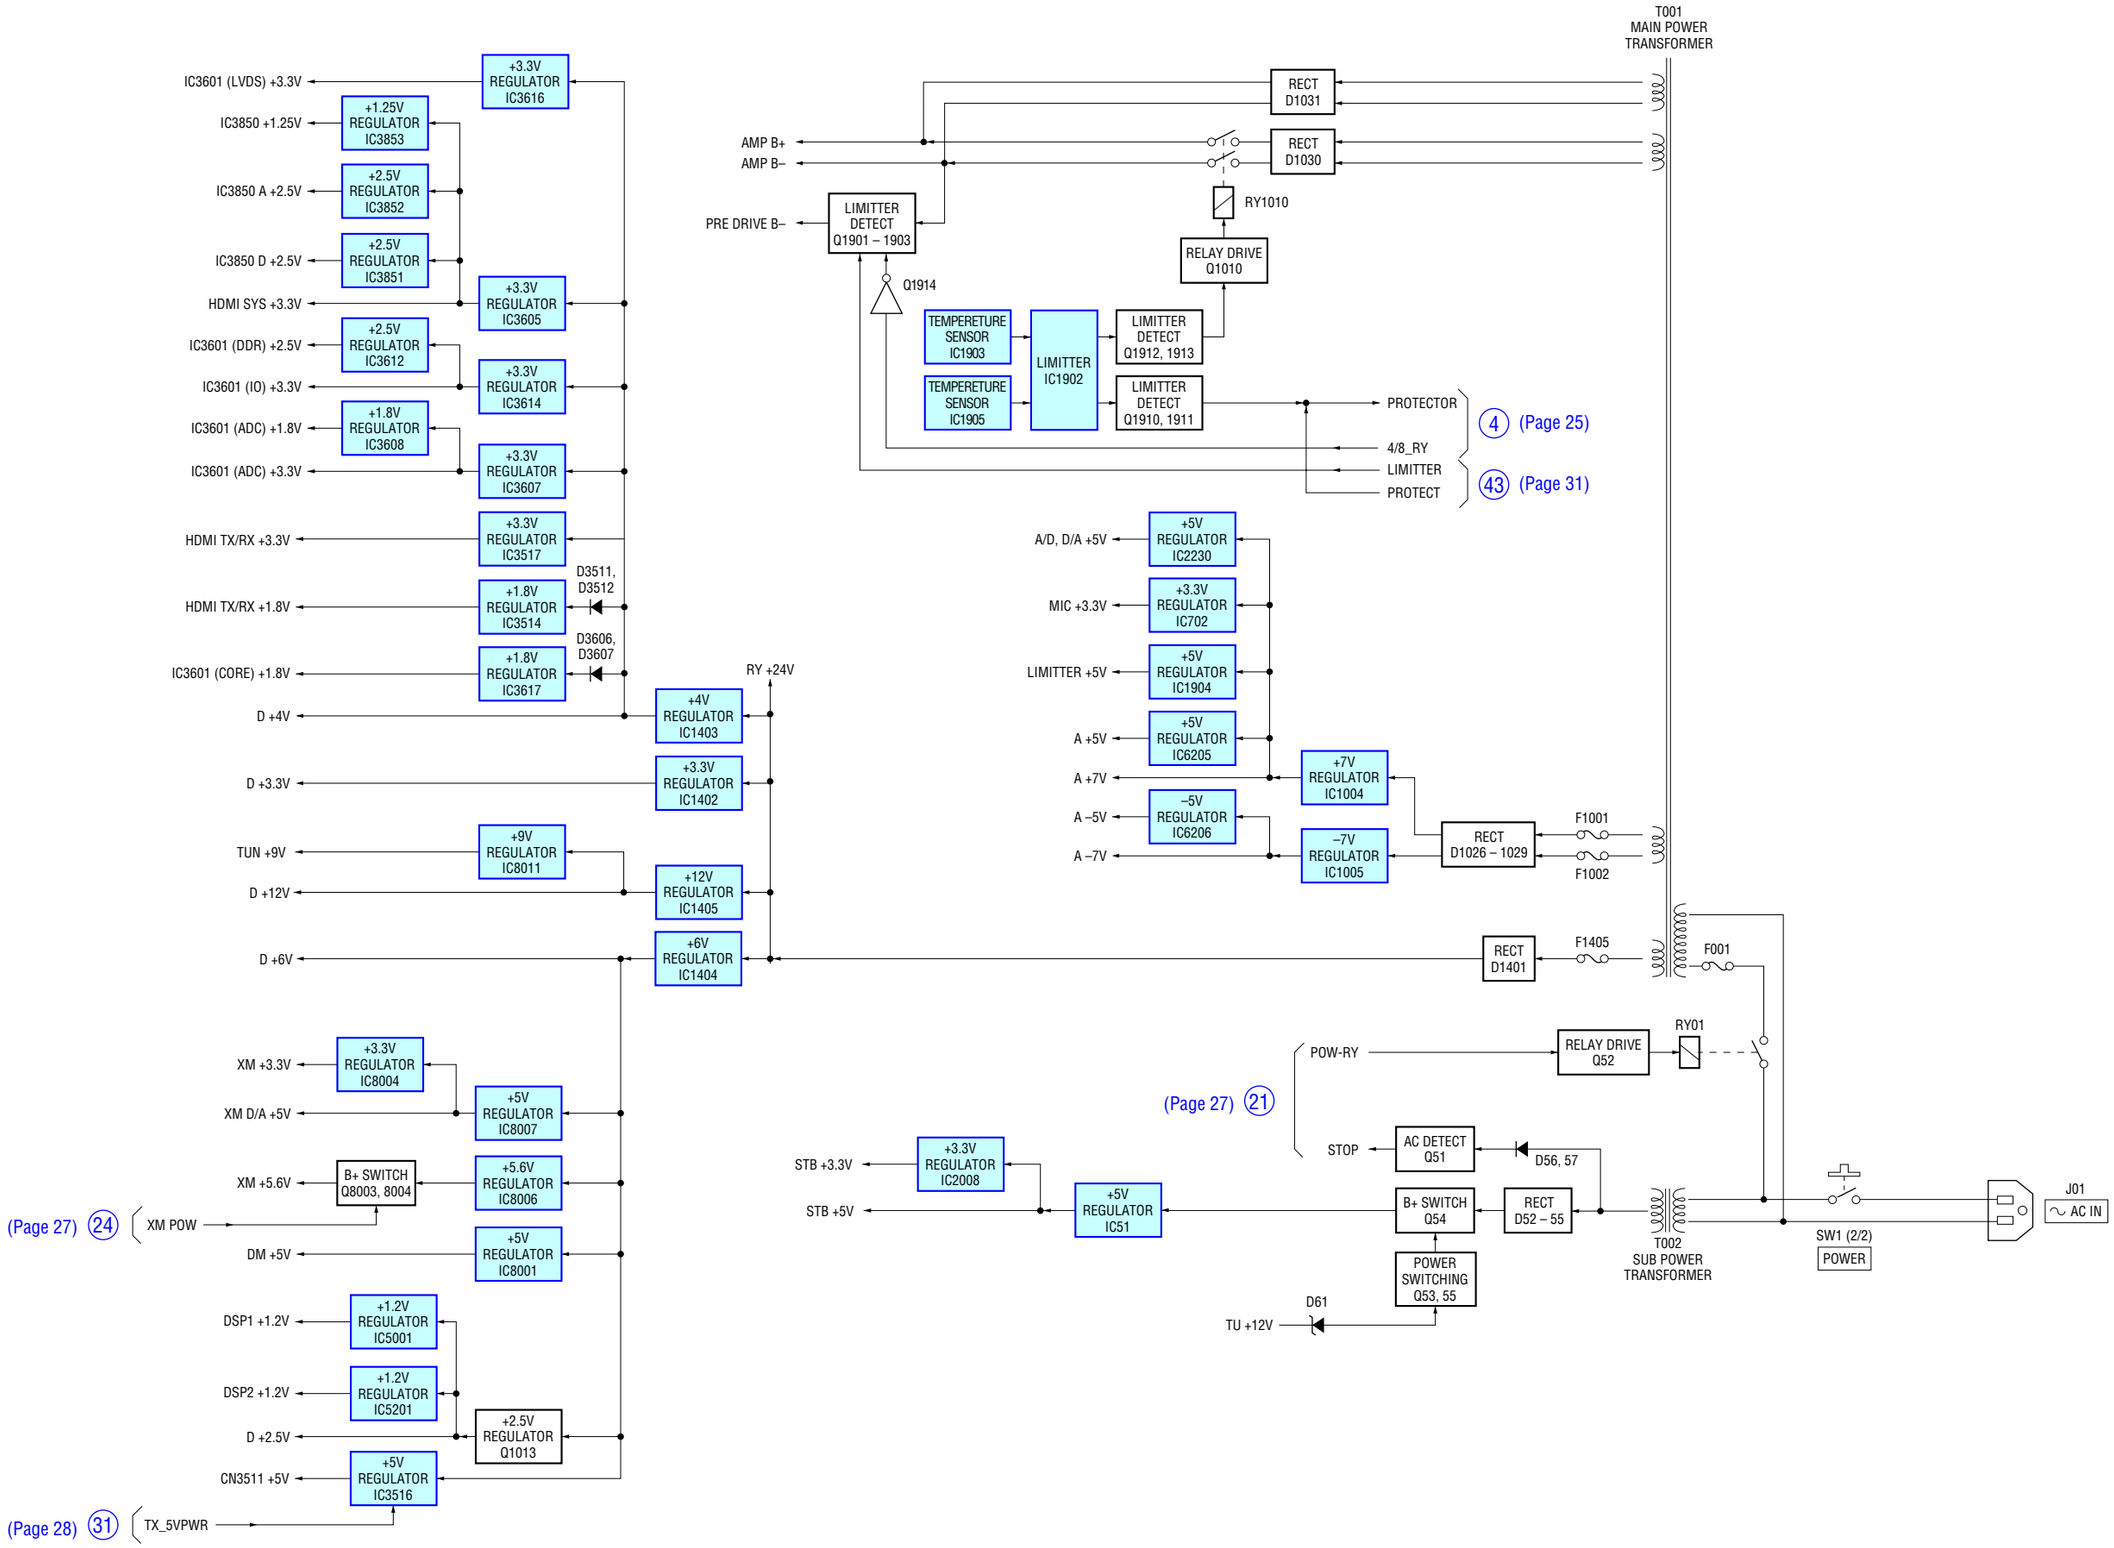

• Note for Printed Wiring Boards and Schematic Diagrams

Note on Printed Wiring Board:

- ○——— : parts extracted from the component side.
- ——— : parts extracted from the conductor side.
- △ : internal component.
- ▬ : Pattern from the side which enables seeing.

(The other layers' patterns are not indicated.)

Caution:	
Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component Side)	Parts on the parts face side seen from the parts face are indicated.

Caution:	
Pattern face side: (Side B)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Side A)	Parts on the parts face side seen from the parts face are indicated.

- D_VIDEO and DSP boards are multi-layer printed board. However, the patterns of intermediate-layers have not been included in this diagrams.
- Indication of transistor



Q



* Replacement of IC3601on the D-VIDEO board used in this set requires a special tool.

- Lead Layouts



Lead layout of conventional IC

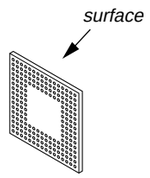

CSP (chip size package)

Note on Schematic Diagram:

- All capacitors are in µF unless otherwise noted. (p: pF) 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- △ : internal component.
- : nonflammable resistor.
- ▭ : panel designation.

Note:	**Note:**
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- ▬ : B+ Line.
- ▬ ▬ : B– Line.
- ▭ : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  – D_VIDEO and A_VIDEO boards –
  no mark : VIDEO 1 mode
  – Other boards –
  no mark : TUNER
- Voltages are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
  ⇨ : AUDIO (ANALOG)
  ⇨ : AUDIO (DIGITAL)
  ⇨ : VIDEO

* Replacement of IC3601on the D-VIDEO board used in this set requires a special tool.

- The voltage and waveform of CSP (chip size package) cannot be measured, because its lead layout is different from that of conventional IC.

• Circuit Boards Location

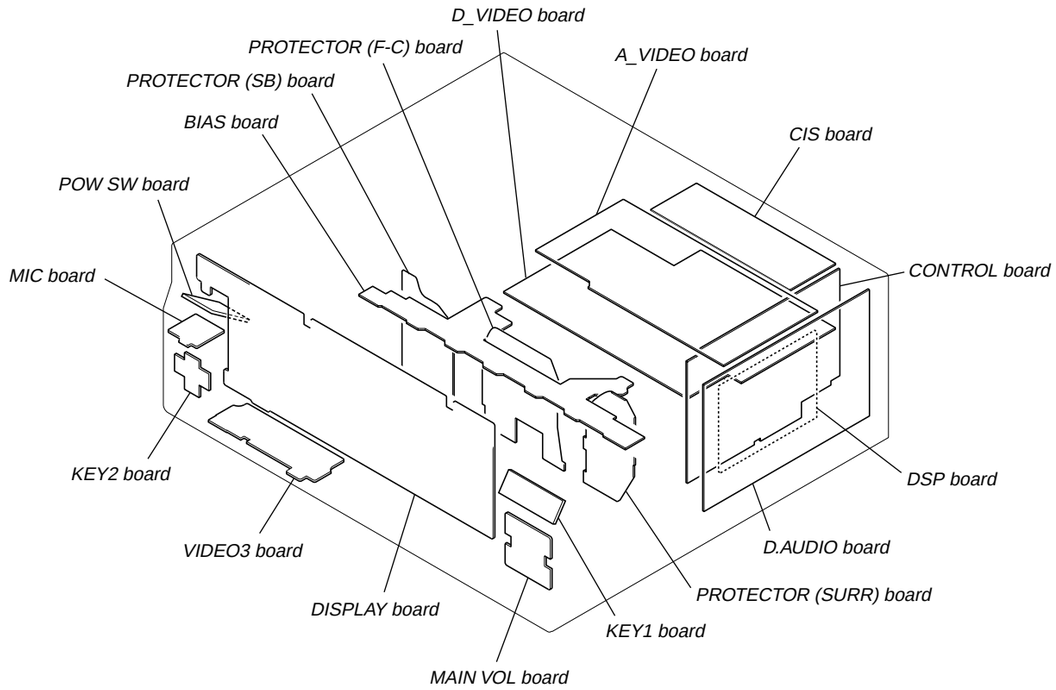

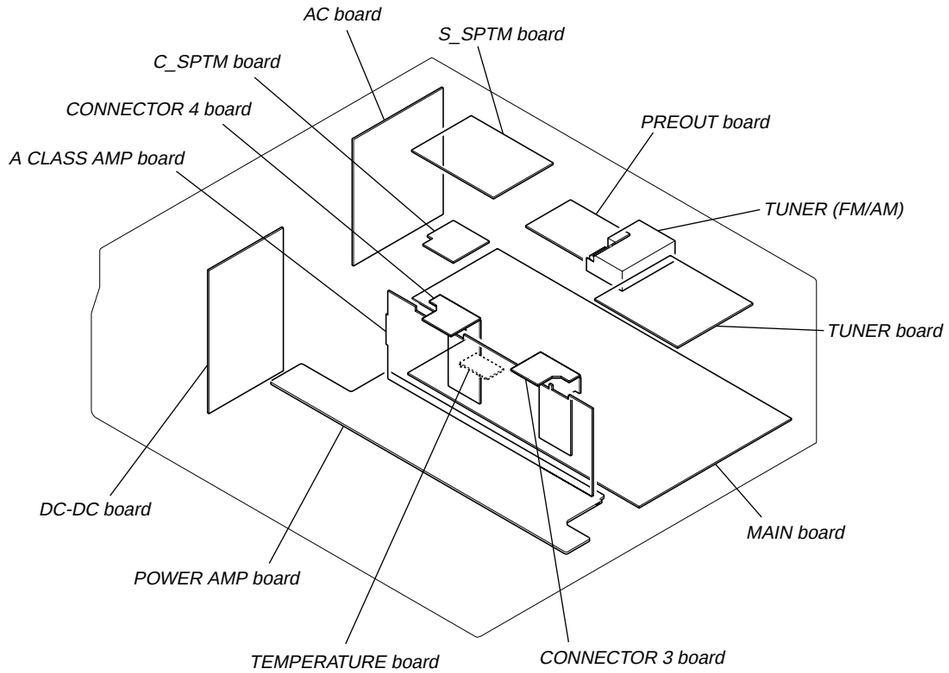

6-11. SCHEMATIC DIAGRAM – MAIN Board (1/4) –

• See page 110 for IC Block Diagrams.

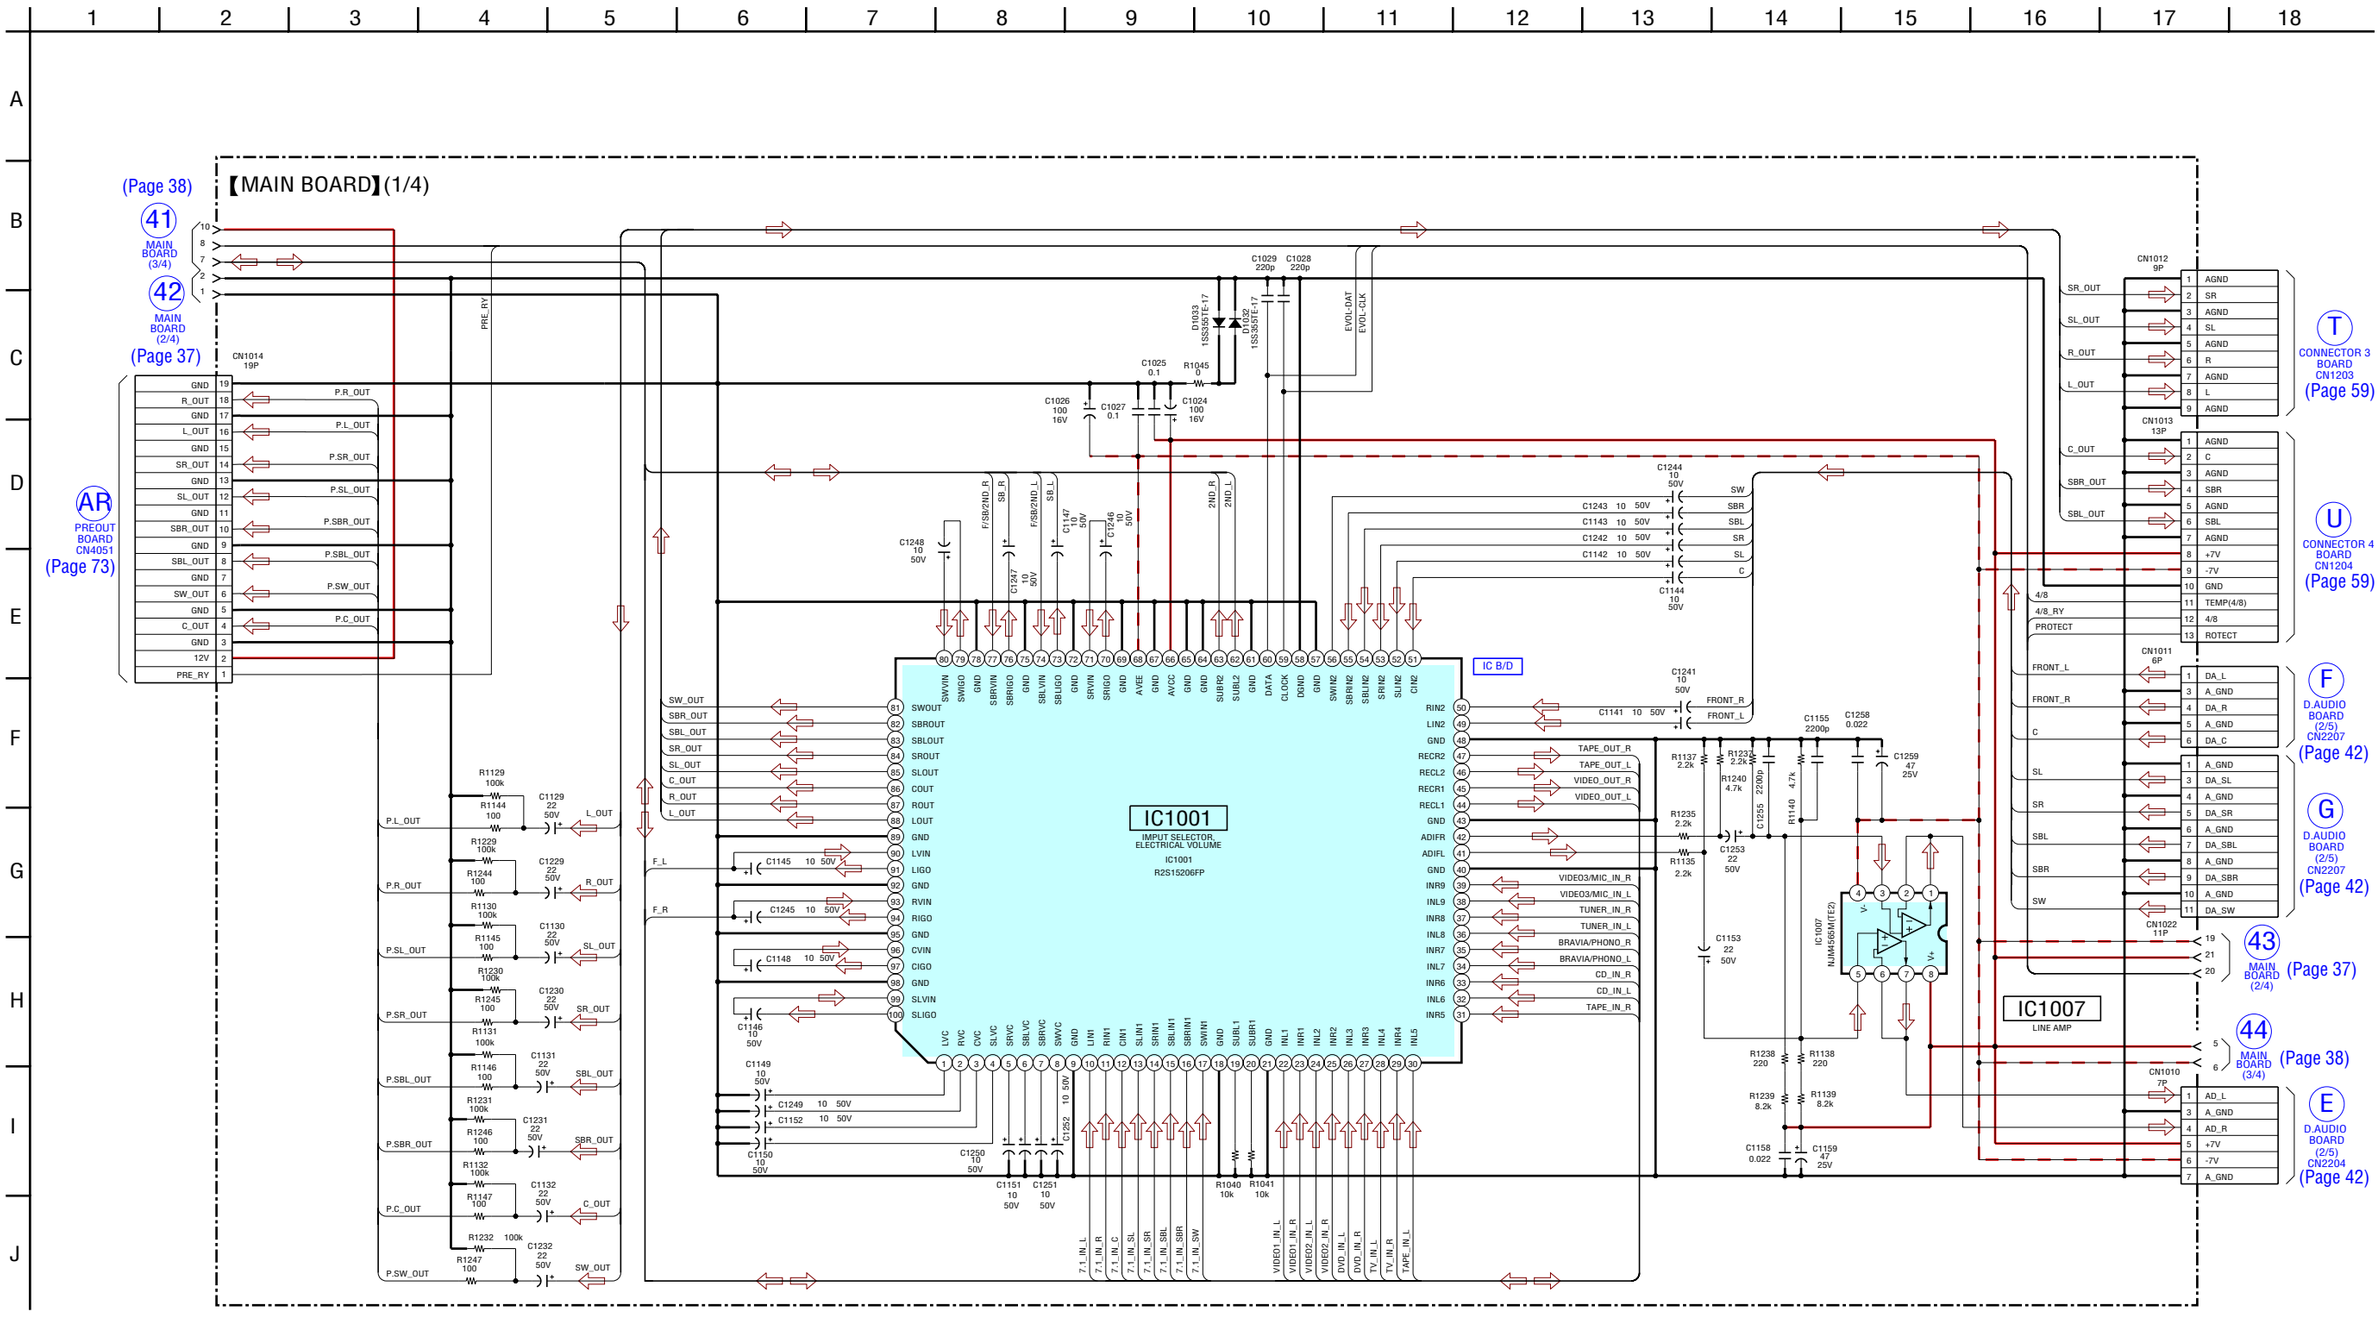

6-12. SCHEMATIC DIAGRAM – MAIN Board (2/4) –

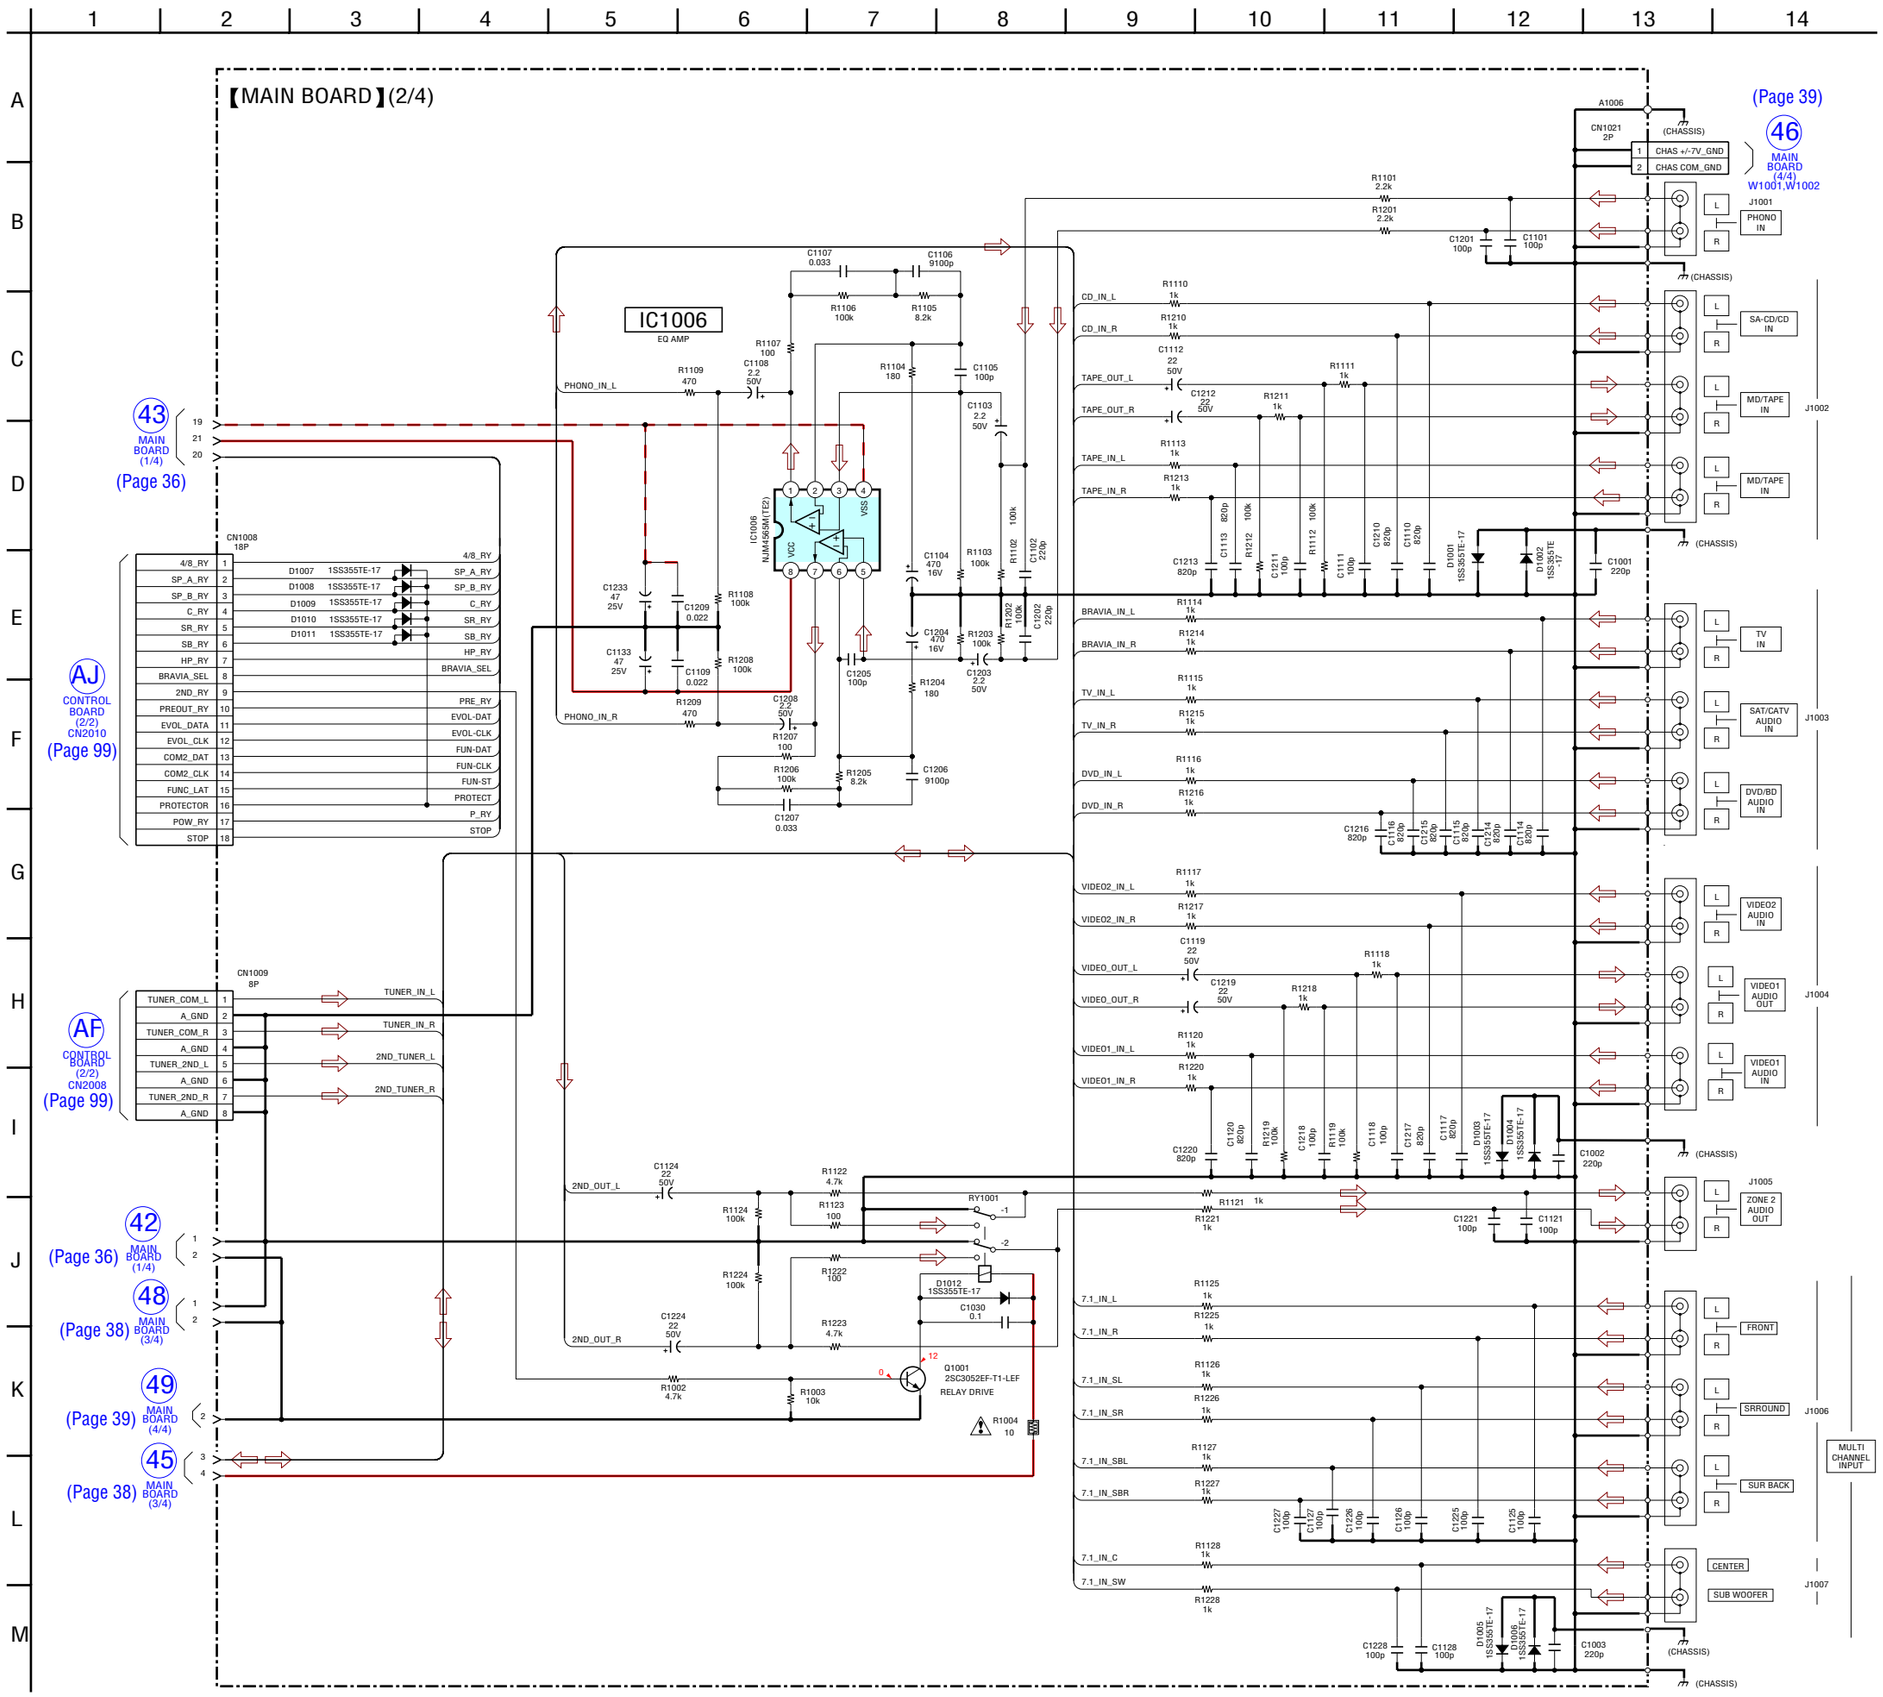

6-13. SCHEMATIC DIAGRAM – MAIN Board (3/4) –

• See page 110 for IC Block Diagrams.

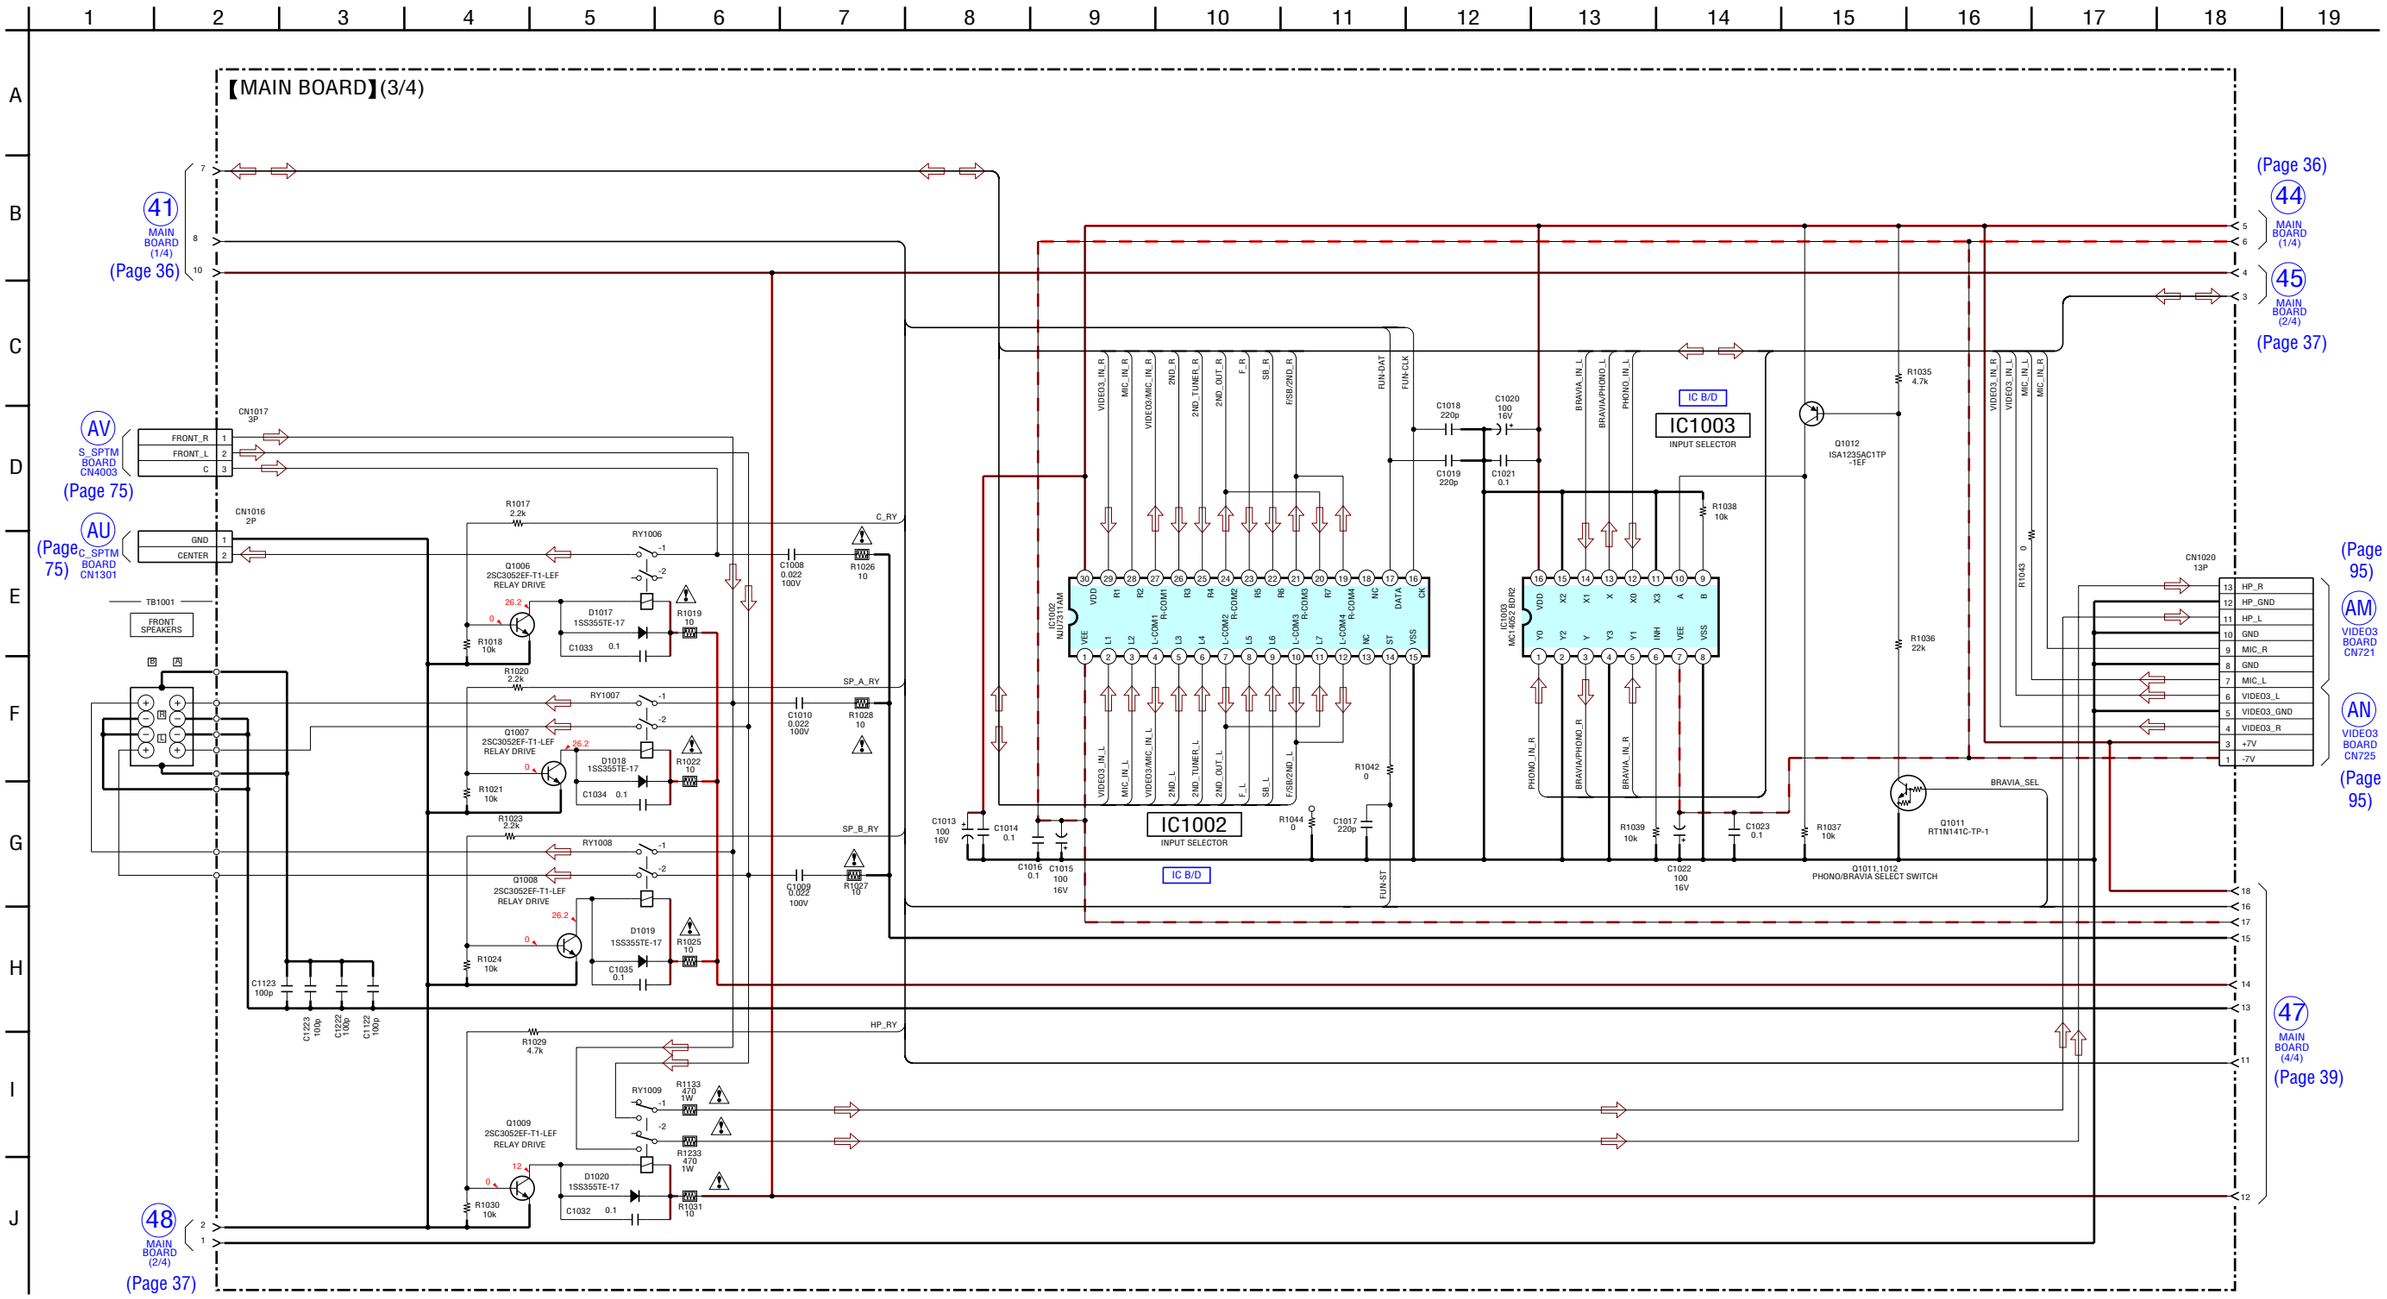

6-14. SCHEMATIC DIAGRAM – MAIN Board (4/4) –

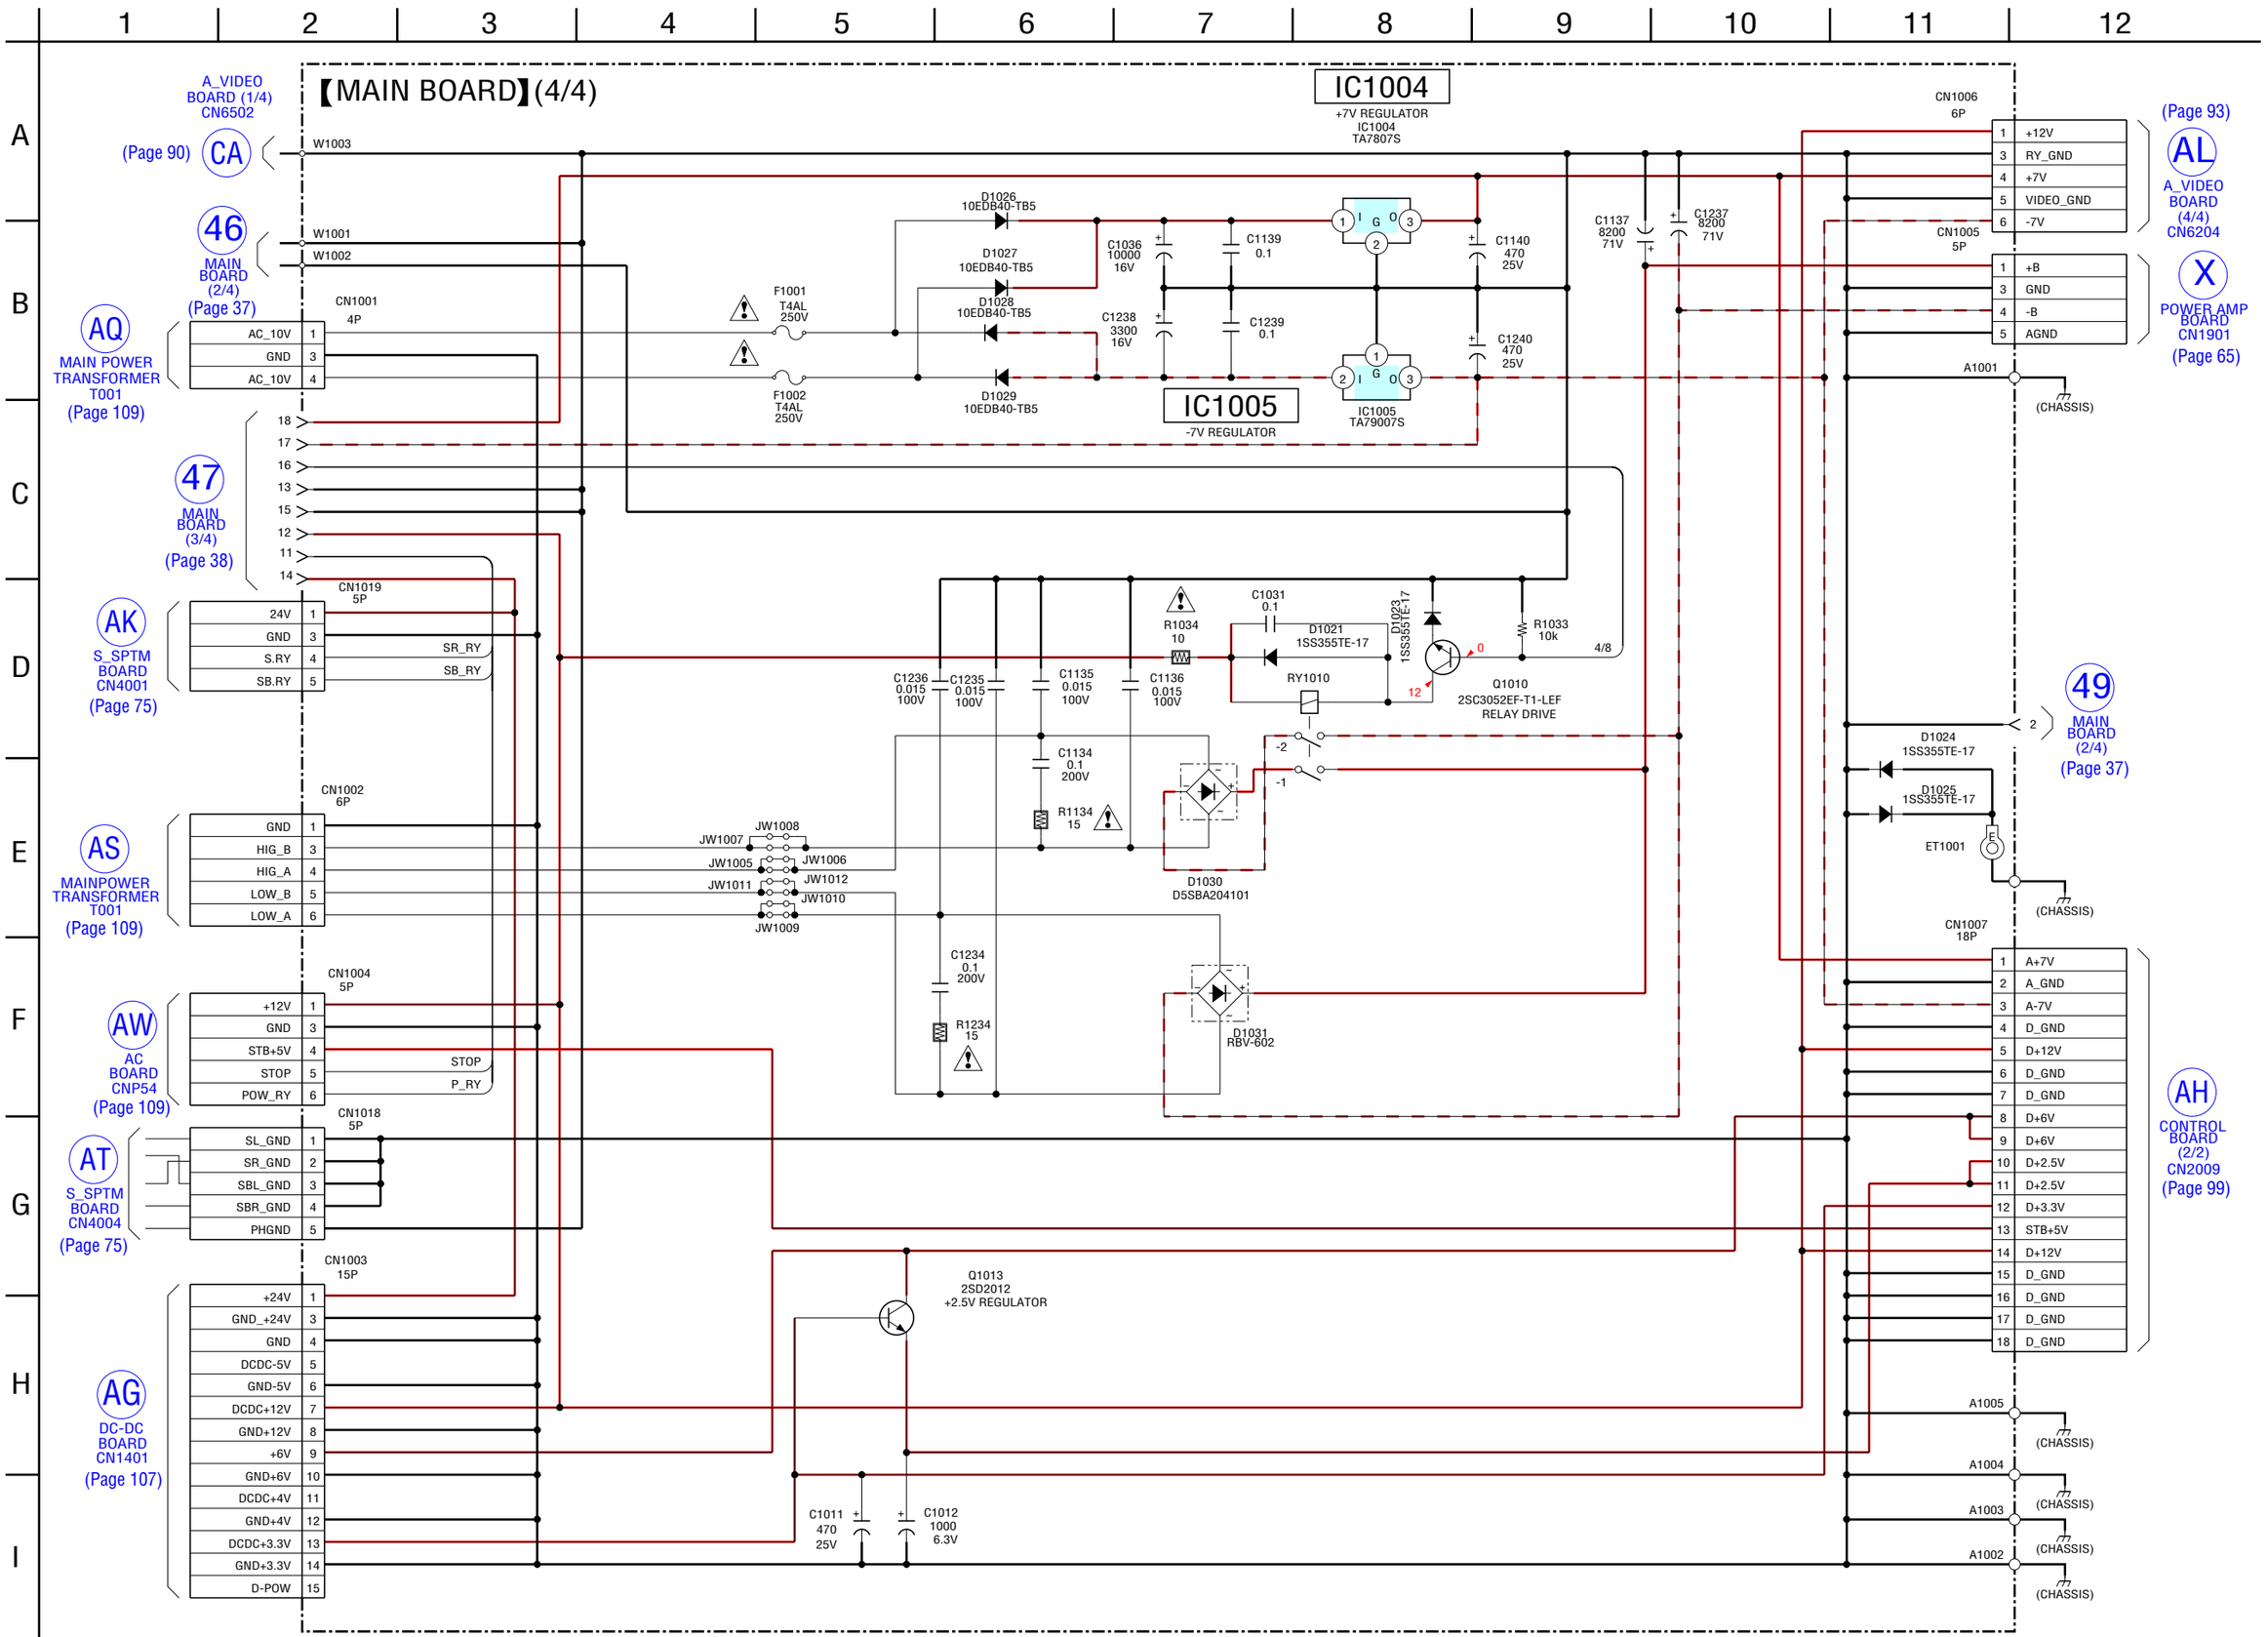

6-15. PRINTED WIRING BOARD – MAIN Board –

• See page 35 for Circuit Boards Location. : Uses unleaded solder.

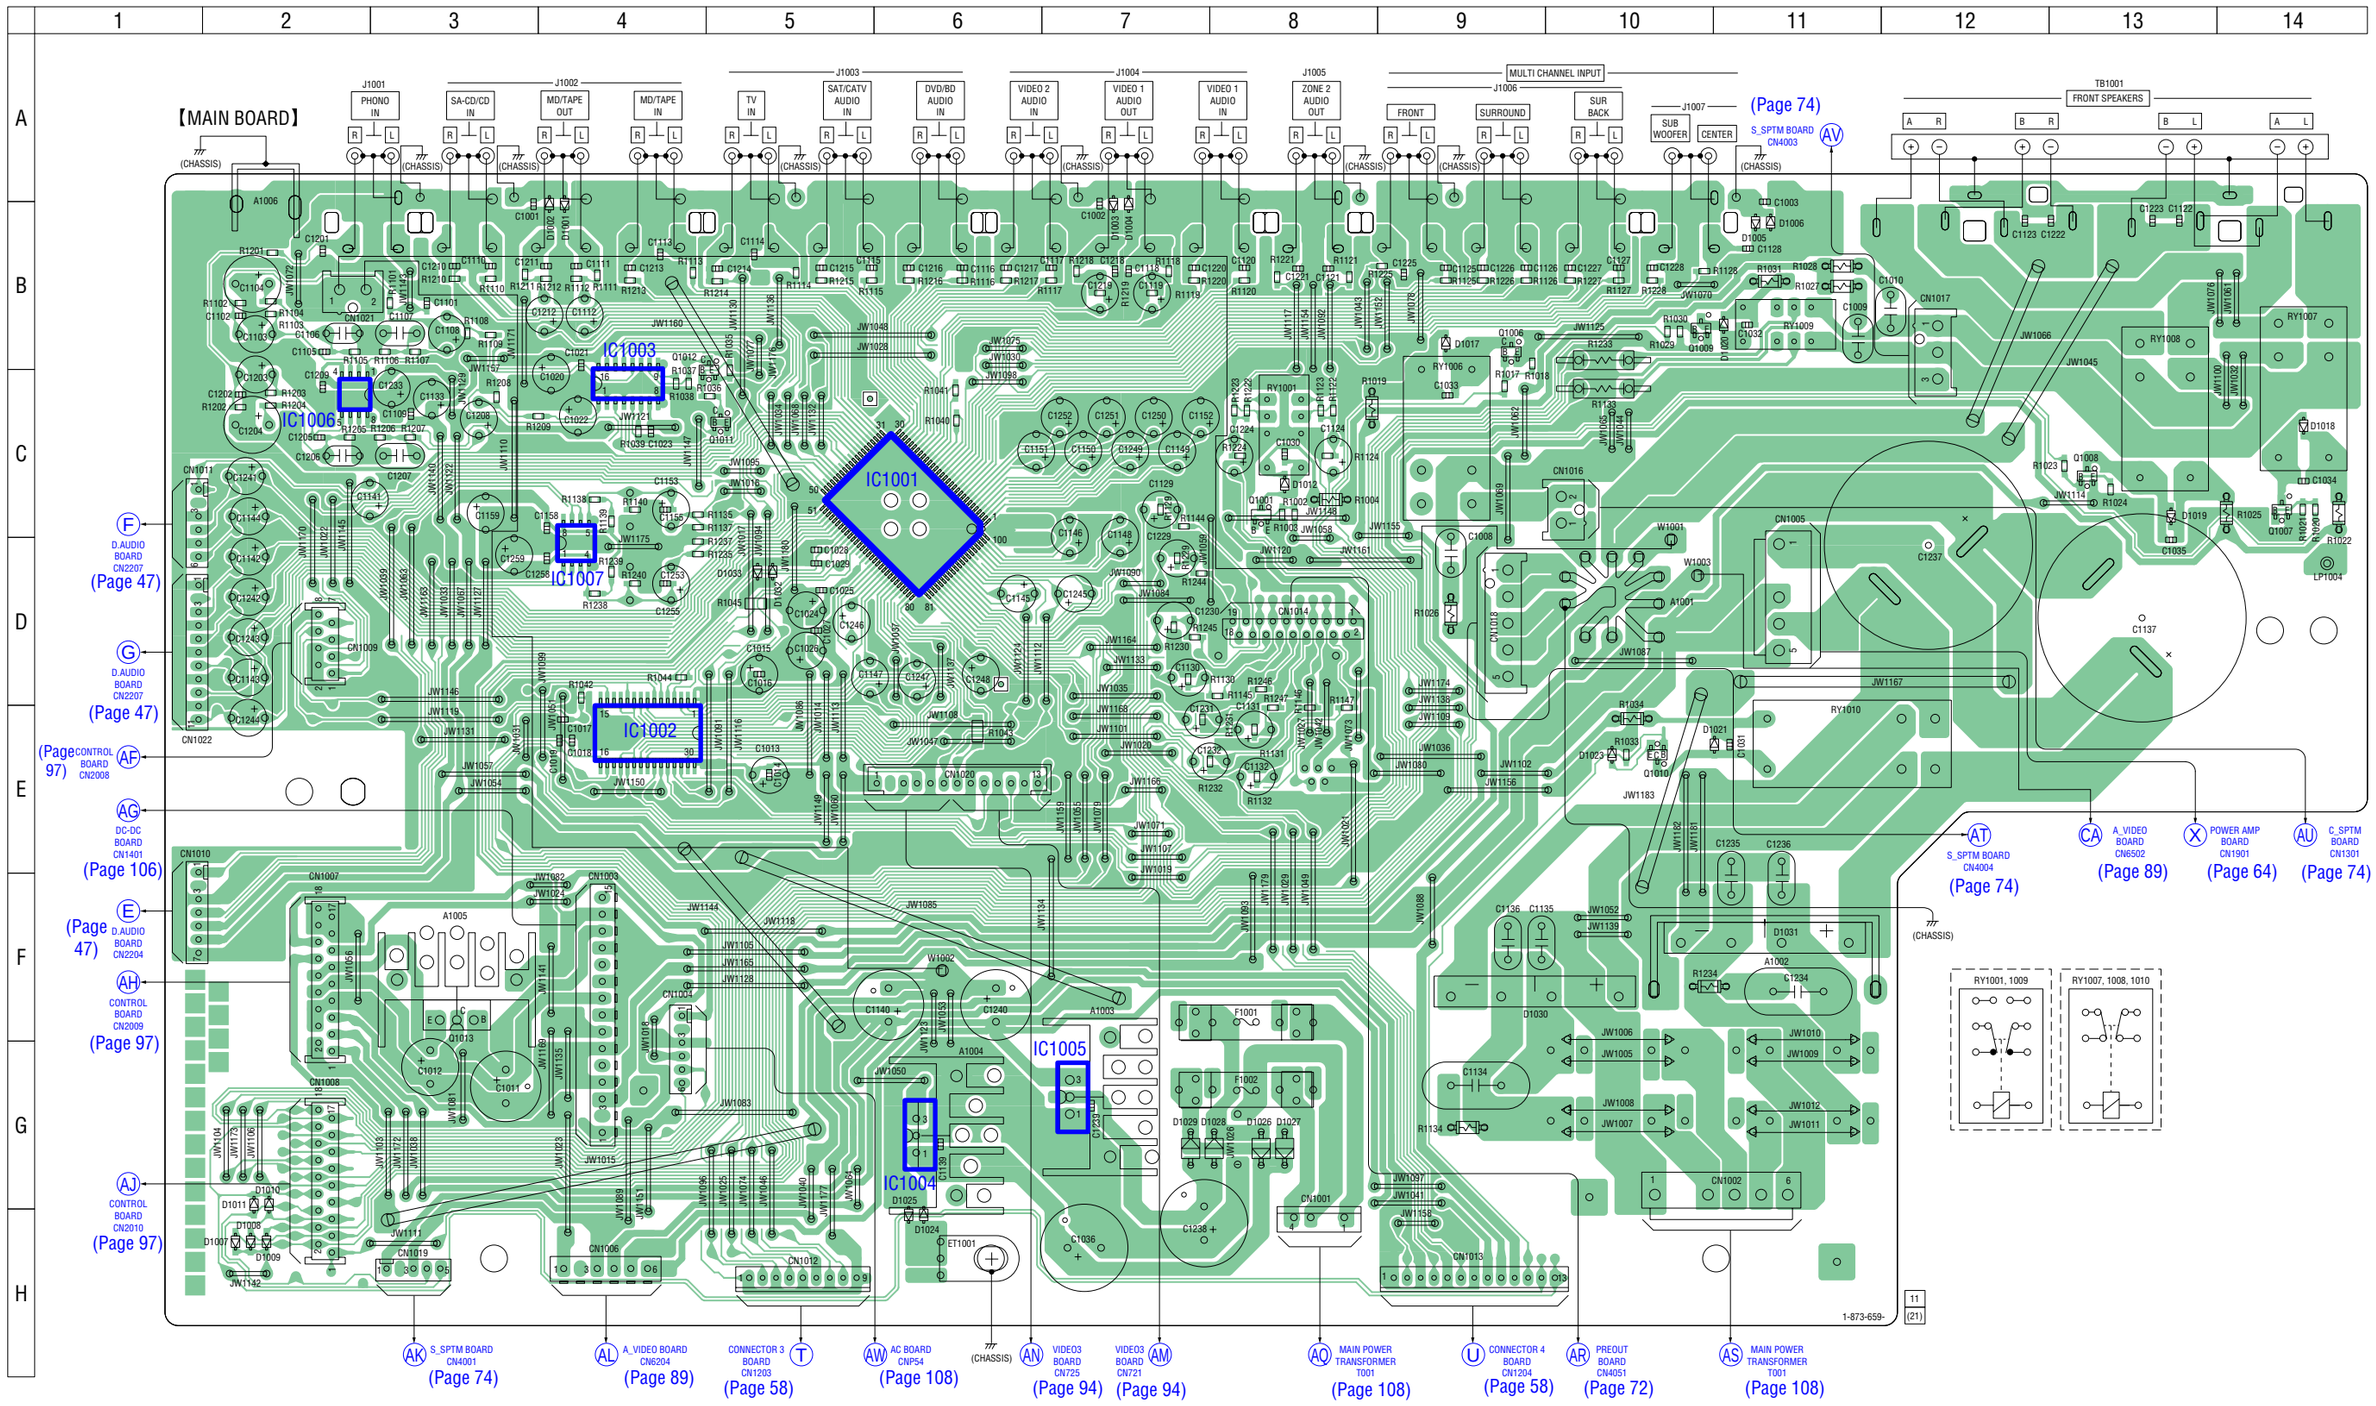
【MAIN BOARD】
IC1001
IC1002
IC1003
IC1004
IC1005
IC1006
IC1007
J1001 PHONO IN
J1002 SA-CD/CD IN, MD/TAPE OUT, MD/TAPE IN
J1003 TV IN, SAT/CATV AUDIO IN, DVD/BD AUDIO IN
J1004 VIDEO 2 AUDIO IN, VIDEO 1 AUDIO OUT
J1005 VIDEO 1 AUDIO IN, ZONE 2 AUDIO OUT
J1006 MULTI CHANNEL INPUT: FRONT, SURROUND, SUR BACK
J1007 SUB WOOFER, CENTER
TB1001 FRONT SPEAKERS
(Page 74) S_SPTM BOARD CN4003
(F) D.AUDIO BOARD CN2207 (Page 47)
(G) D.AUDIO BOARD CN2207 (Page 47)
(Page 97) (AF) CONTROL BOARD CN2008
(AG) DC-DC BOARD CN1401 (Page 106)
(E) (Page 47) D.AUDIO BOARD CN2204
(AH) CONTROL BOARD CN2009 (Page 97)
(AJ) CONTROL BOARD CN2010 (Page 97)
(AK) S_SPTM BOARD CN4001 (Page 74)
(AL) A_VIDEO BOARD CN6204 (Page 89)
CONNECTOR 3 BOARD CN1203 (T) (Page 58)
(AW) AC BOARD CNP54 (Page 108)
(CHASSIS)
(AN) VIDEO3 BOARD CN725 (Page 94)
(AM) VIDEO3 BOARD CN721 (Page 94)
(AQ) MAIN POWER TRANSFORMER T001 (Page 108)
(U) CONNECTOR 4 BOARD CN1204 (Page 58)
(AR) PREOUT BOARD CN4051 (Page 72)
(AS) MAIN POWER TRANSFORMER T001 (Page 108)
(AT) S_SPTM BOARD CN4004 (Page 74)
(CA) A_VIDEO BOARD CN6502 (Page 89)
(X) POWER AMP BOARD CN1901 (Page 64)
(AU) C_SPTM BOARD CN1301 (Page 74)
RY1001, 1009
RY1007, 1008, 1010
1-873-659-11 (21)

• **Semiconductor Location**

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D1001	B-4	D1011	G-2	D1026	G-8	IC1002	E-4	Q1008	C-13
D1002	B-4	D1012	C-8	D1027	G-8	IC1003	C-4	Q1009	B-10
D1003	B-7	D1017	B-9	D1028	G-8	IC1004	G-6	Q1010	E-10
D1004	B-7	D1018	C-14	D1029	G-7	IC1005	G-7	Q1011	C-5
D1005	B-11	D1019	C-13	D1030	F-9	IC1006	C-2	Q1012	C-5
D1006	B-11	D1020	B-11	D1031	F-11	IC1007	D-4	Q1013	F-3
D1007	H-2	D1021	E-11	D1032	D-5				
D1008	H-2	D1023	E-10	D1033	D-5	Q1001	C-8		
D1009	H-2	D1024	H-6			Q1006	B-9		
D1010	G-2	D1025	H-6	IC1001	C-6	Q1007	C-14		

6-16. SCHEMATIC DIAGRAM – D.AUDIO Board (1/5) –

• See page 110 for IC Block Diagrams.

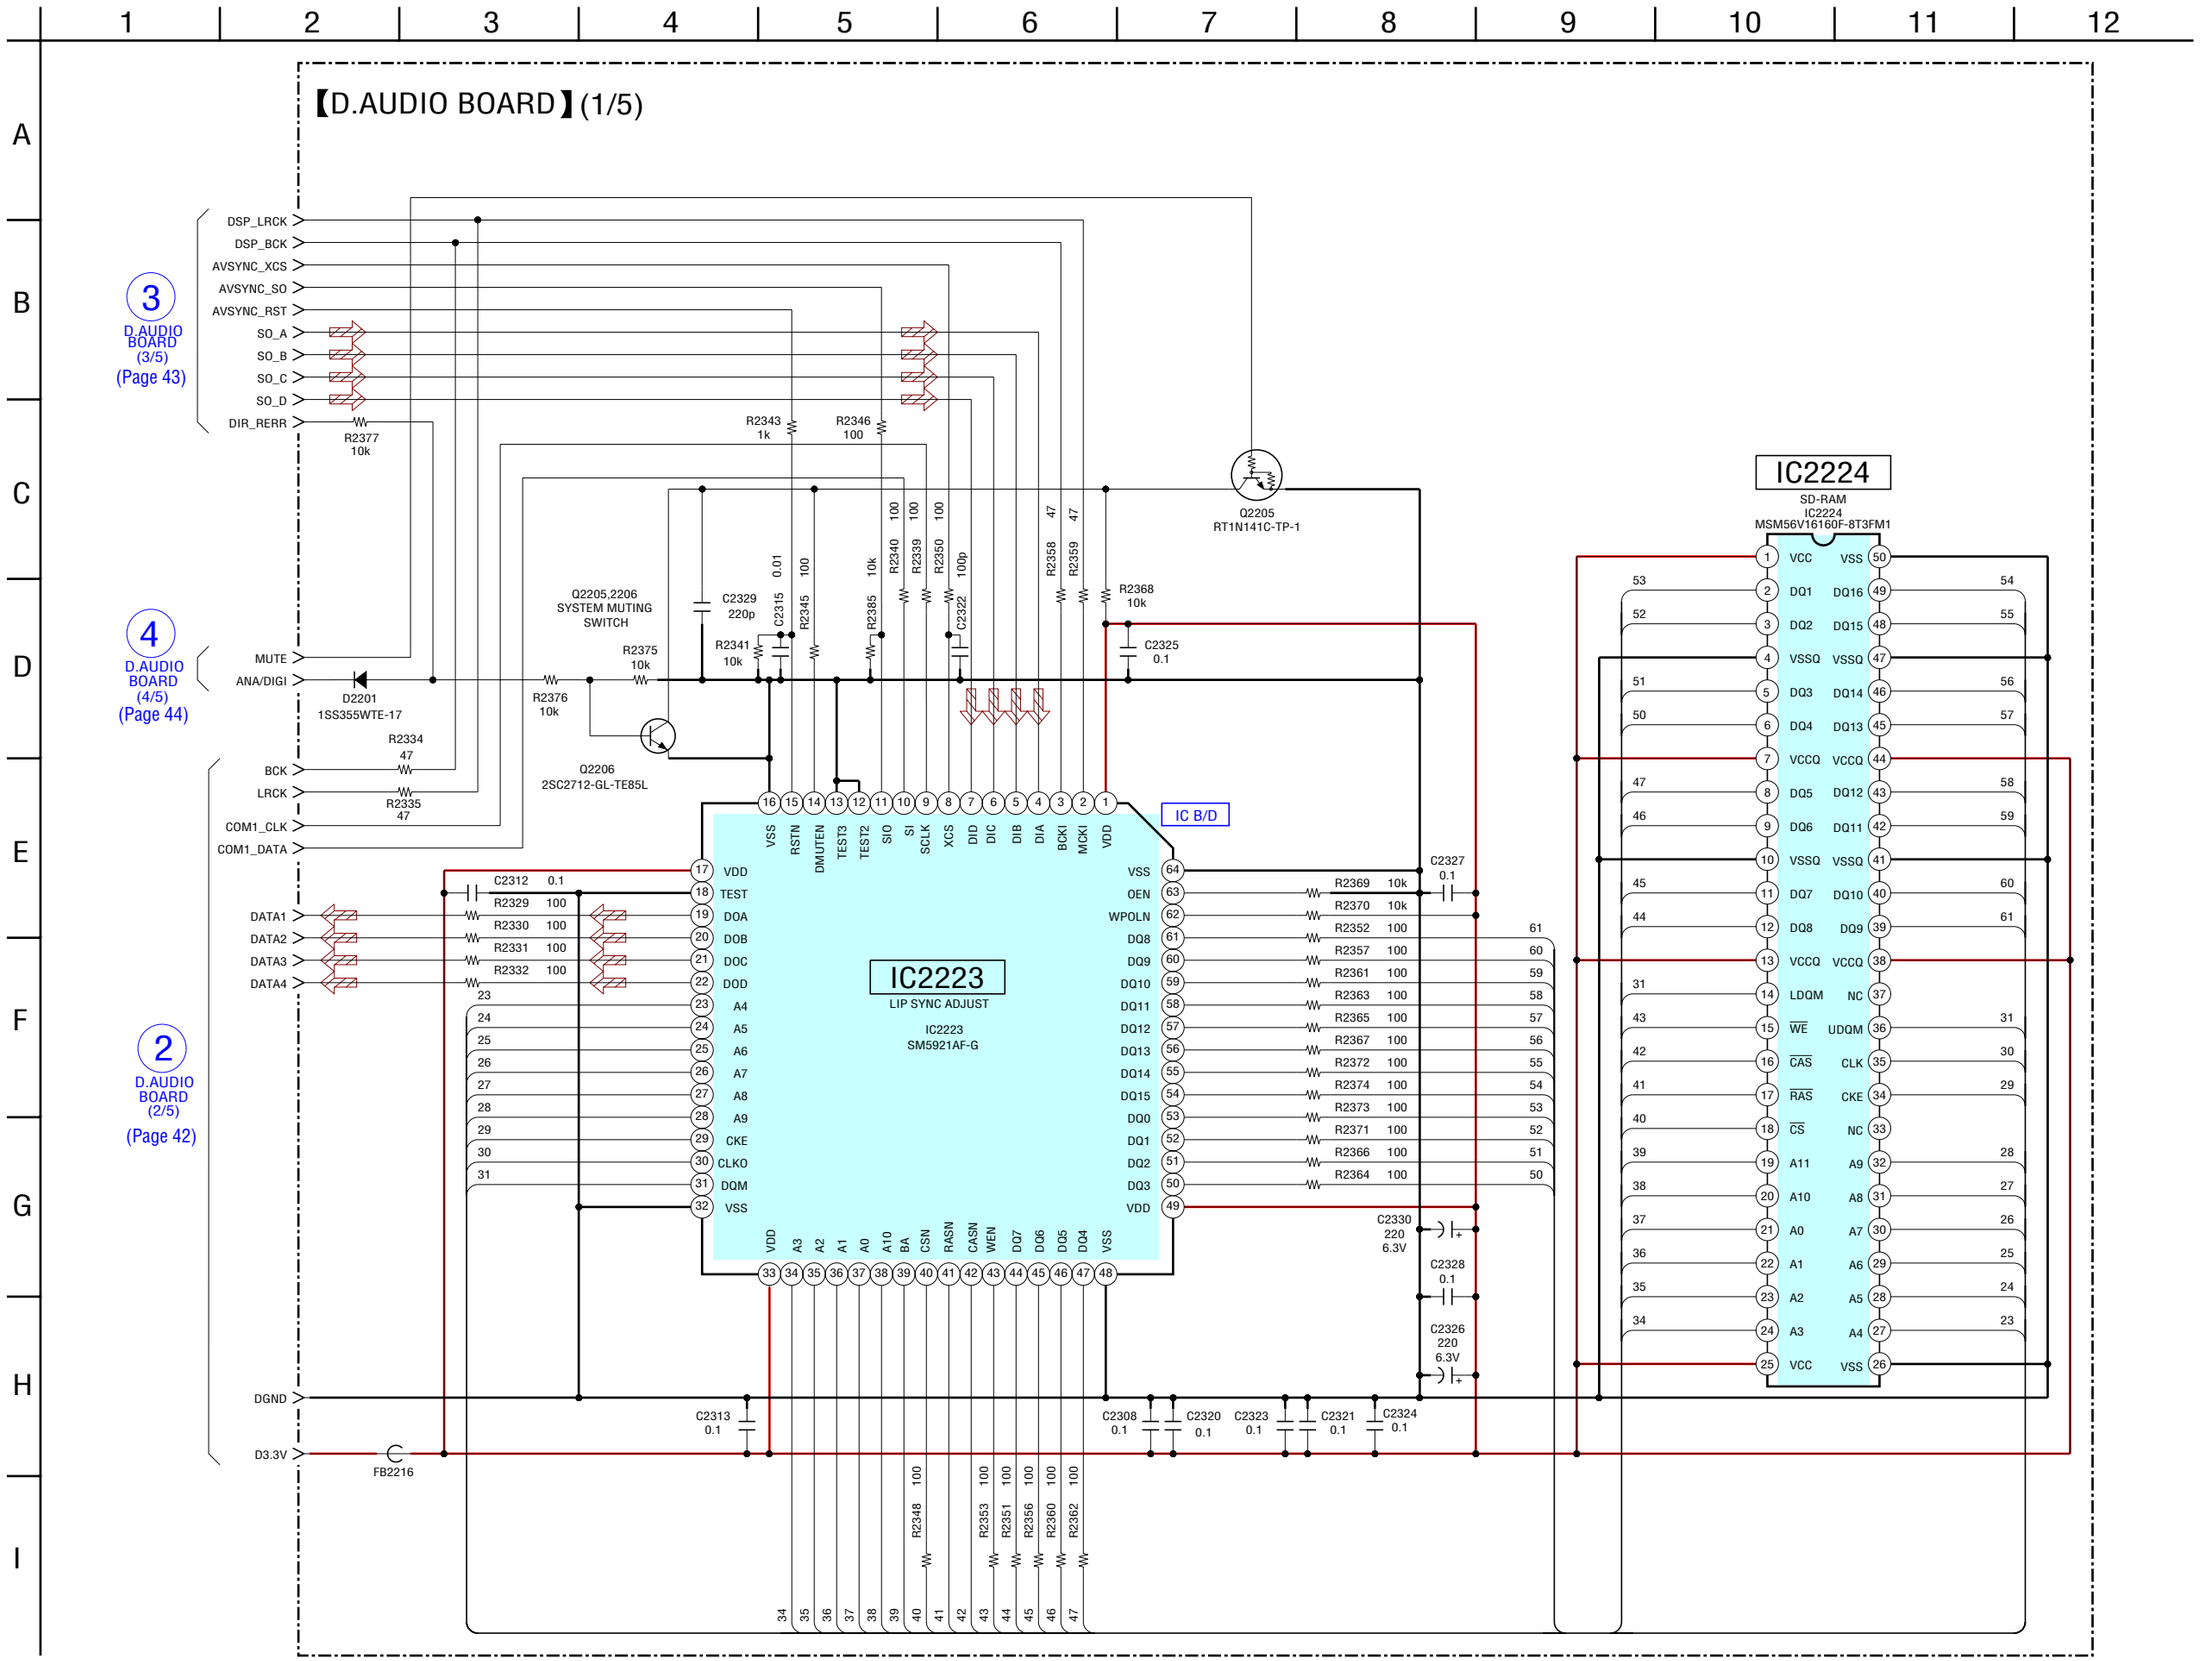

6-17. SCHEMATIC DIAGRAM – D.AUDIO Board (2/5) –

• See page 110 for IC Block Diagrams.

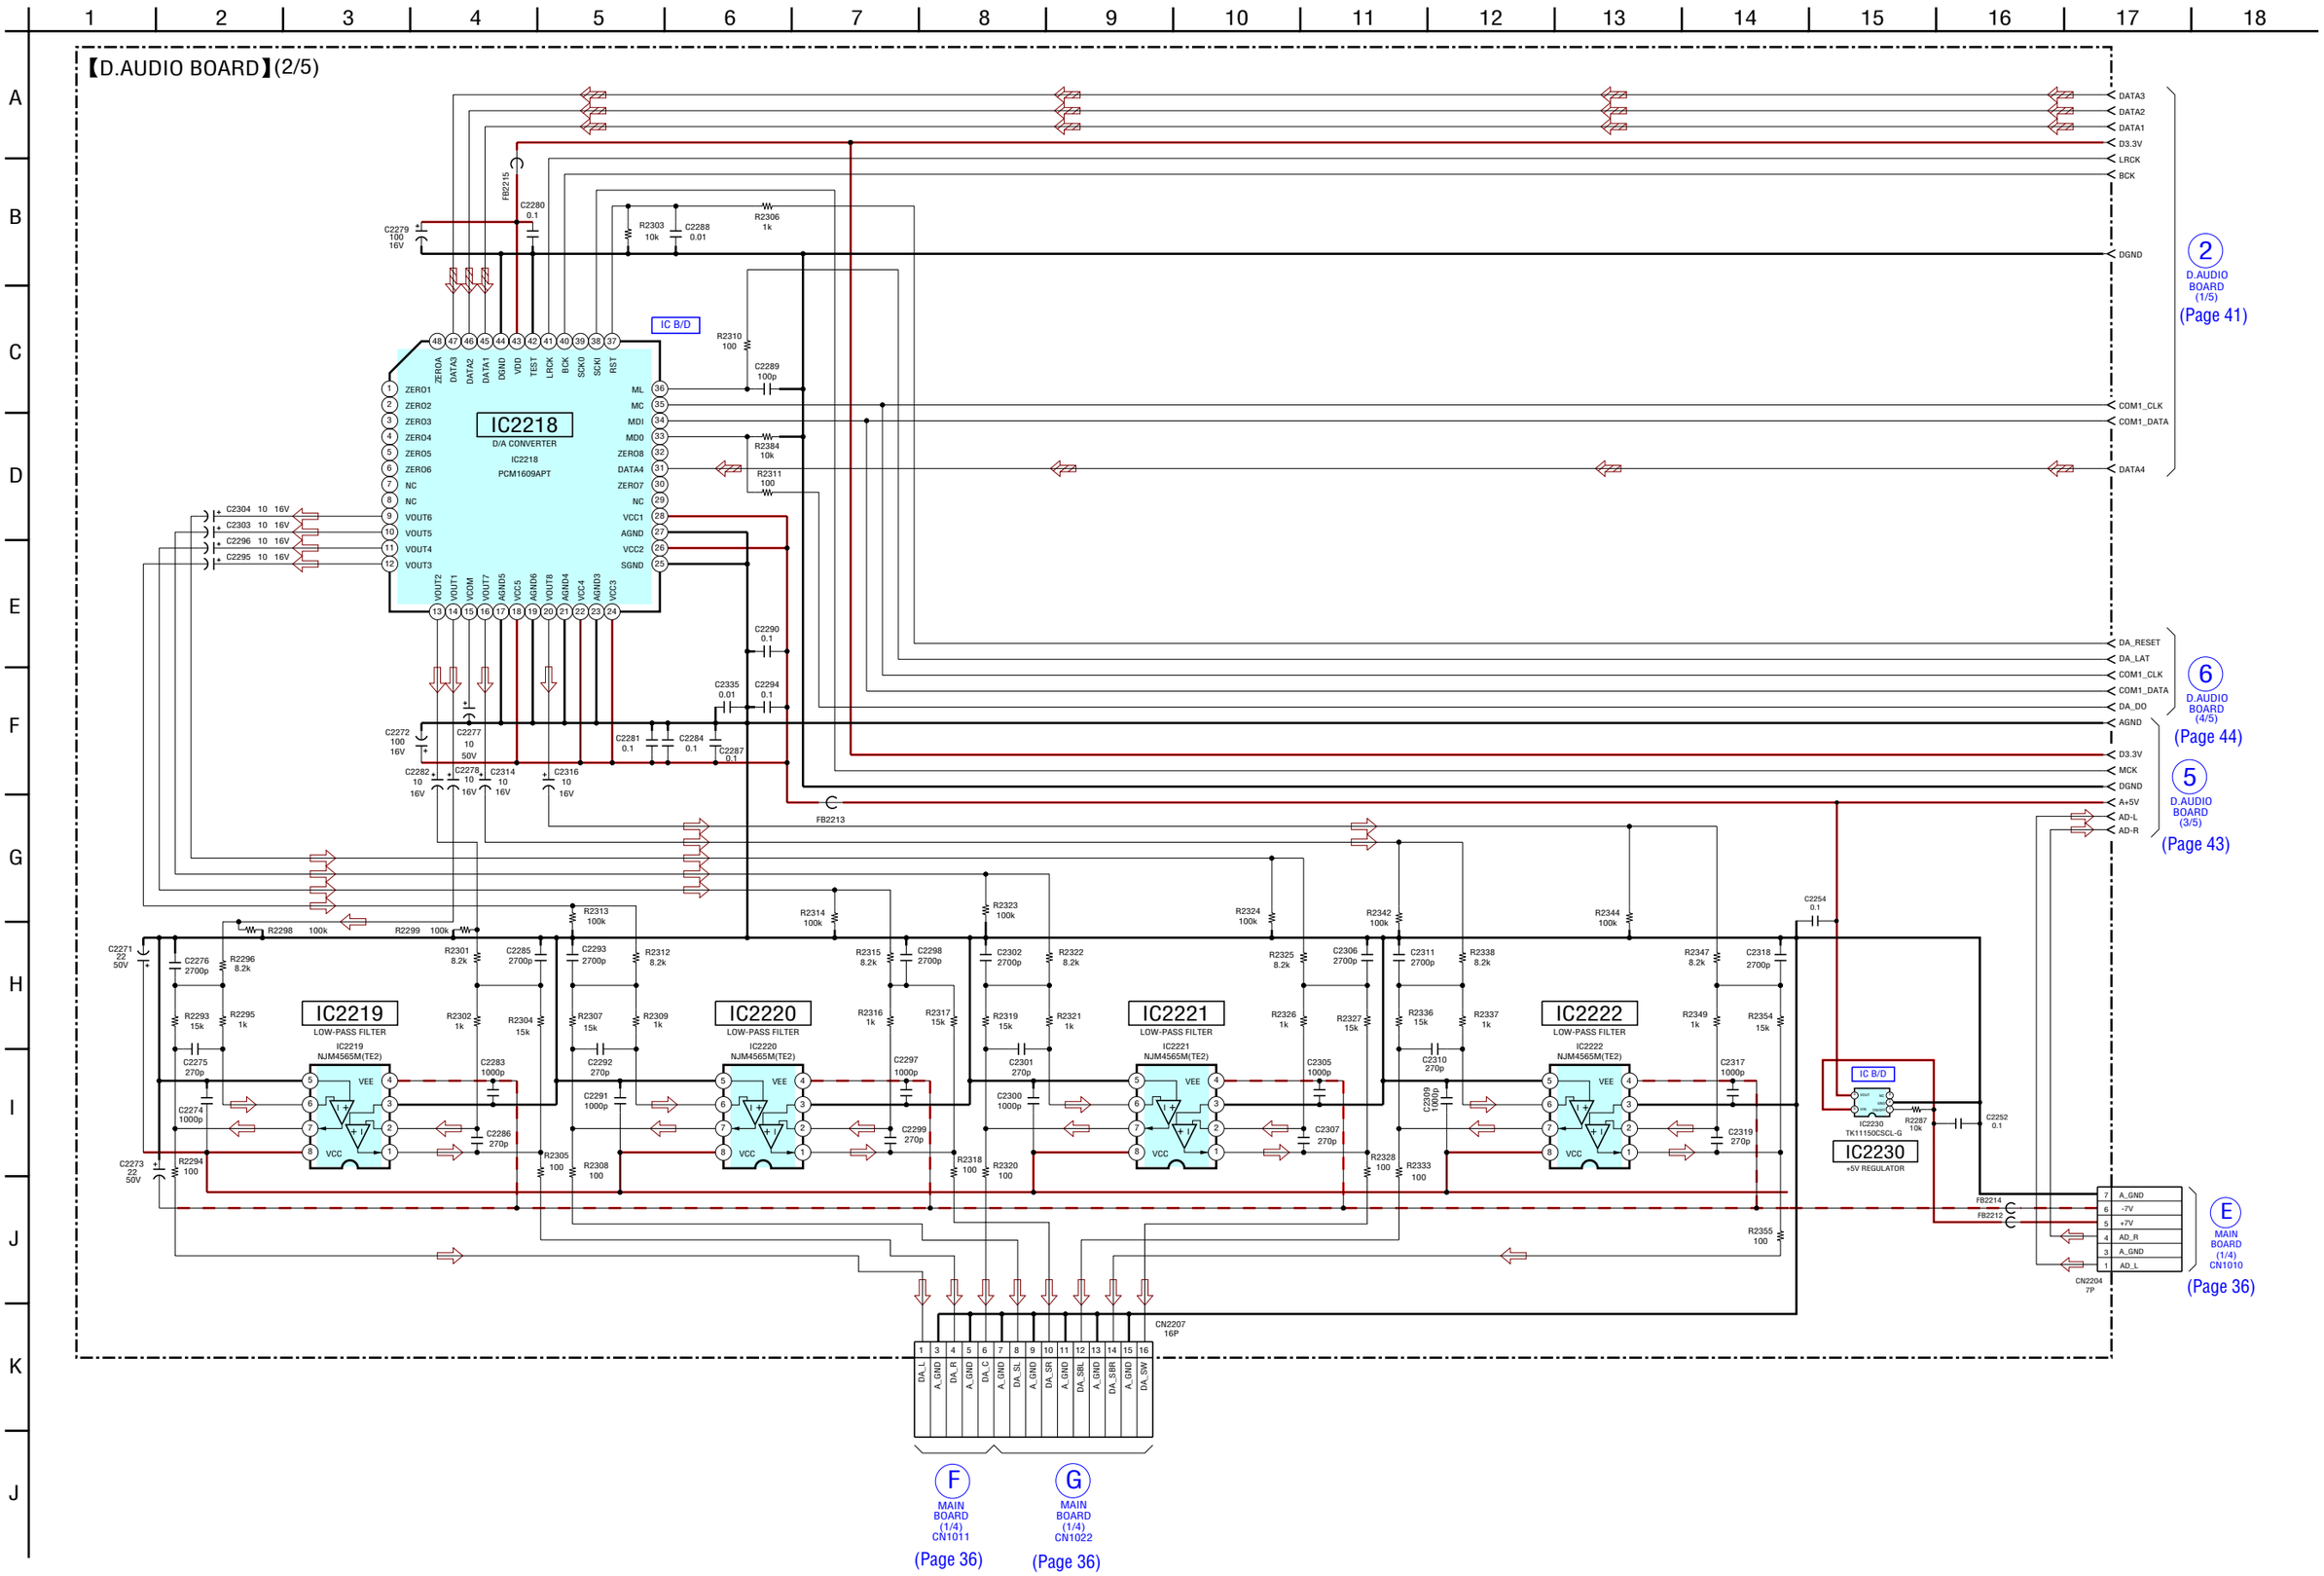

6-18. SCHEMATIC DIAGRAM – D.AUDIO Board (3/5) – • See page 110 for IC Block Diagrams.

【D.AUDIO BOARD】(3/5)

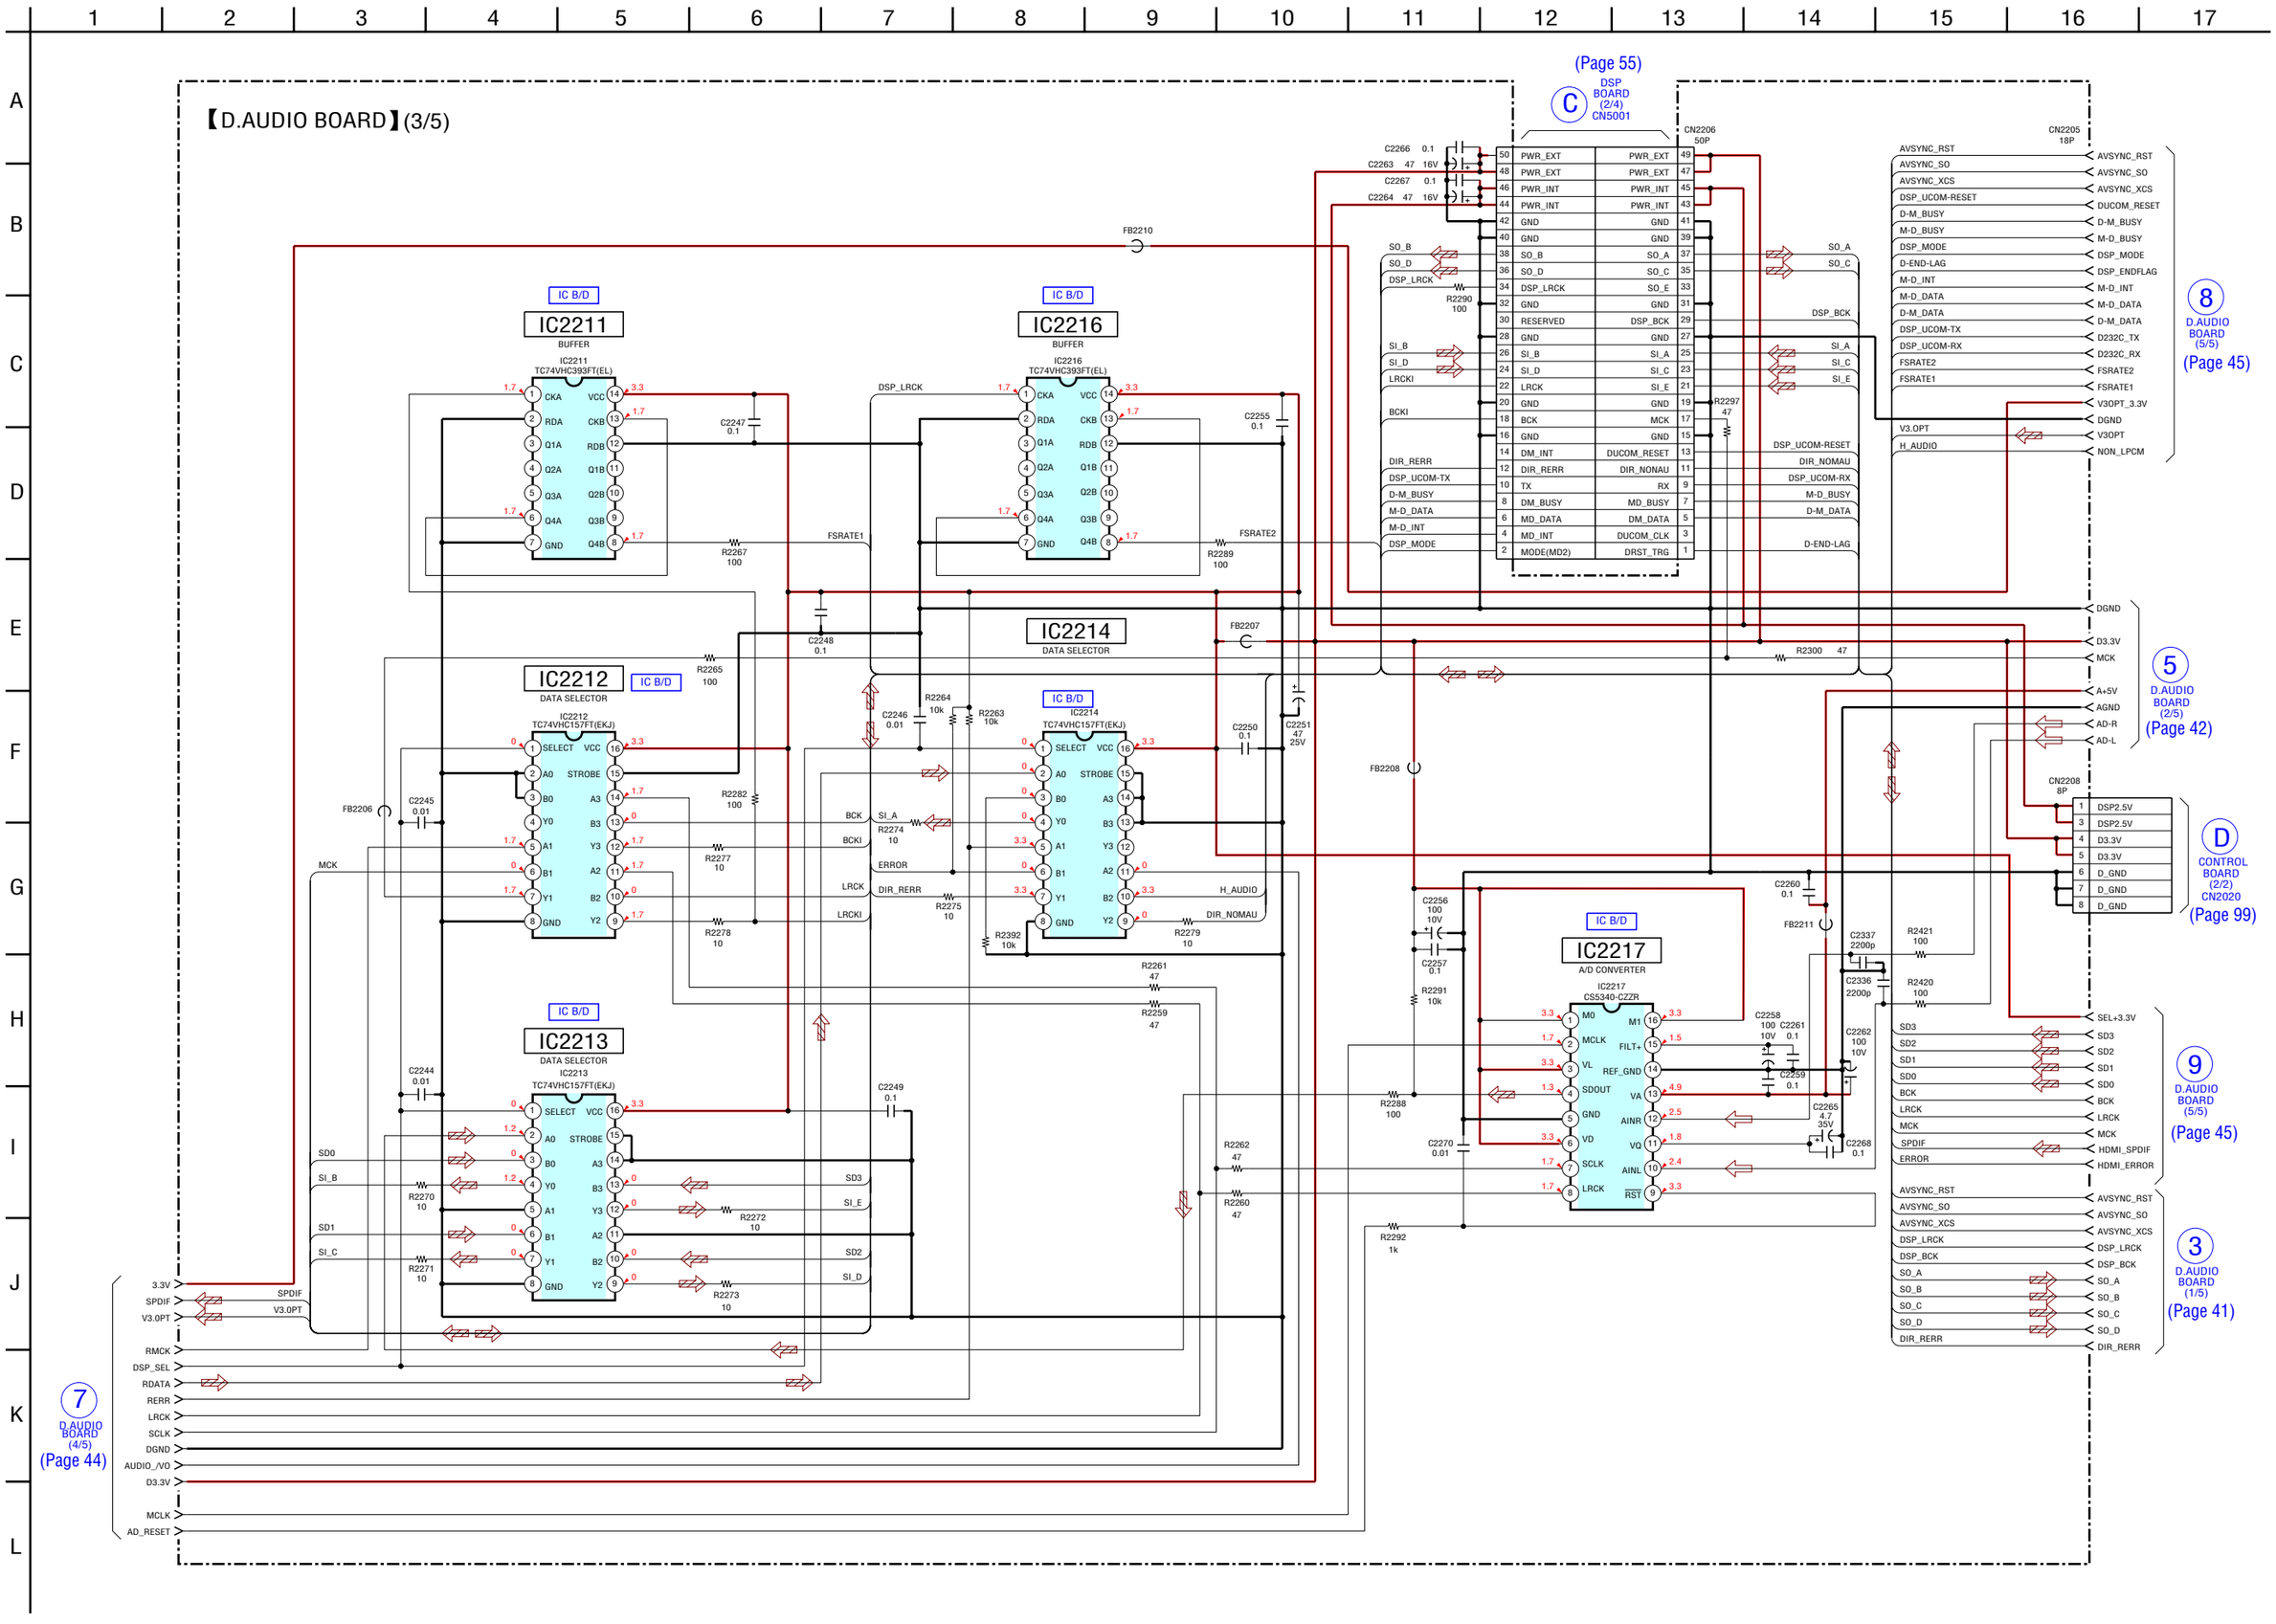

6-19. SCHEMATIC DIAGRAM – D.AUDIO Board (4/5) –

• See page 110 for IC Block Diagrams.

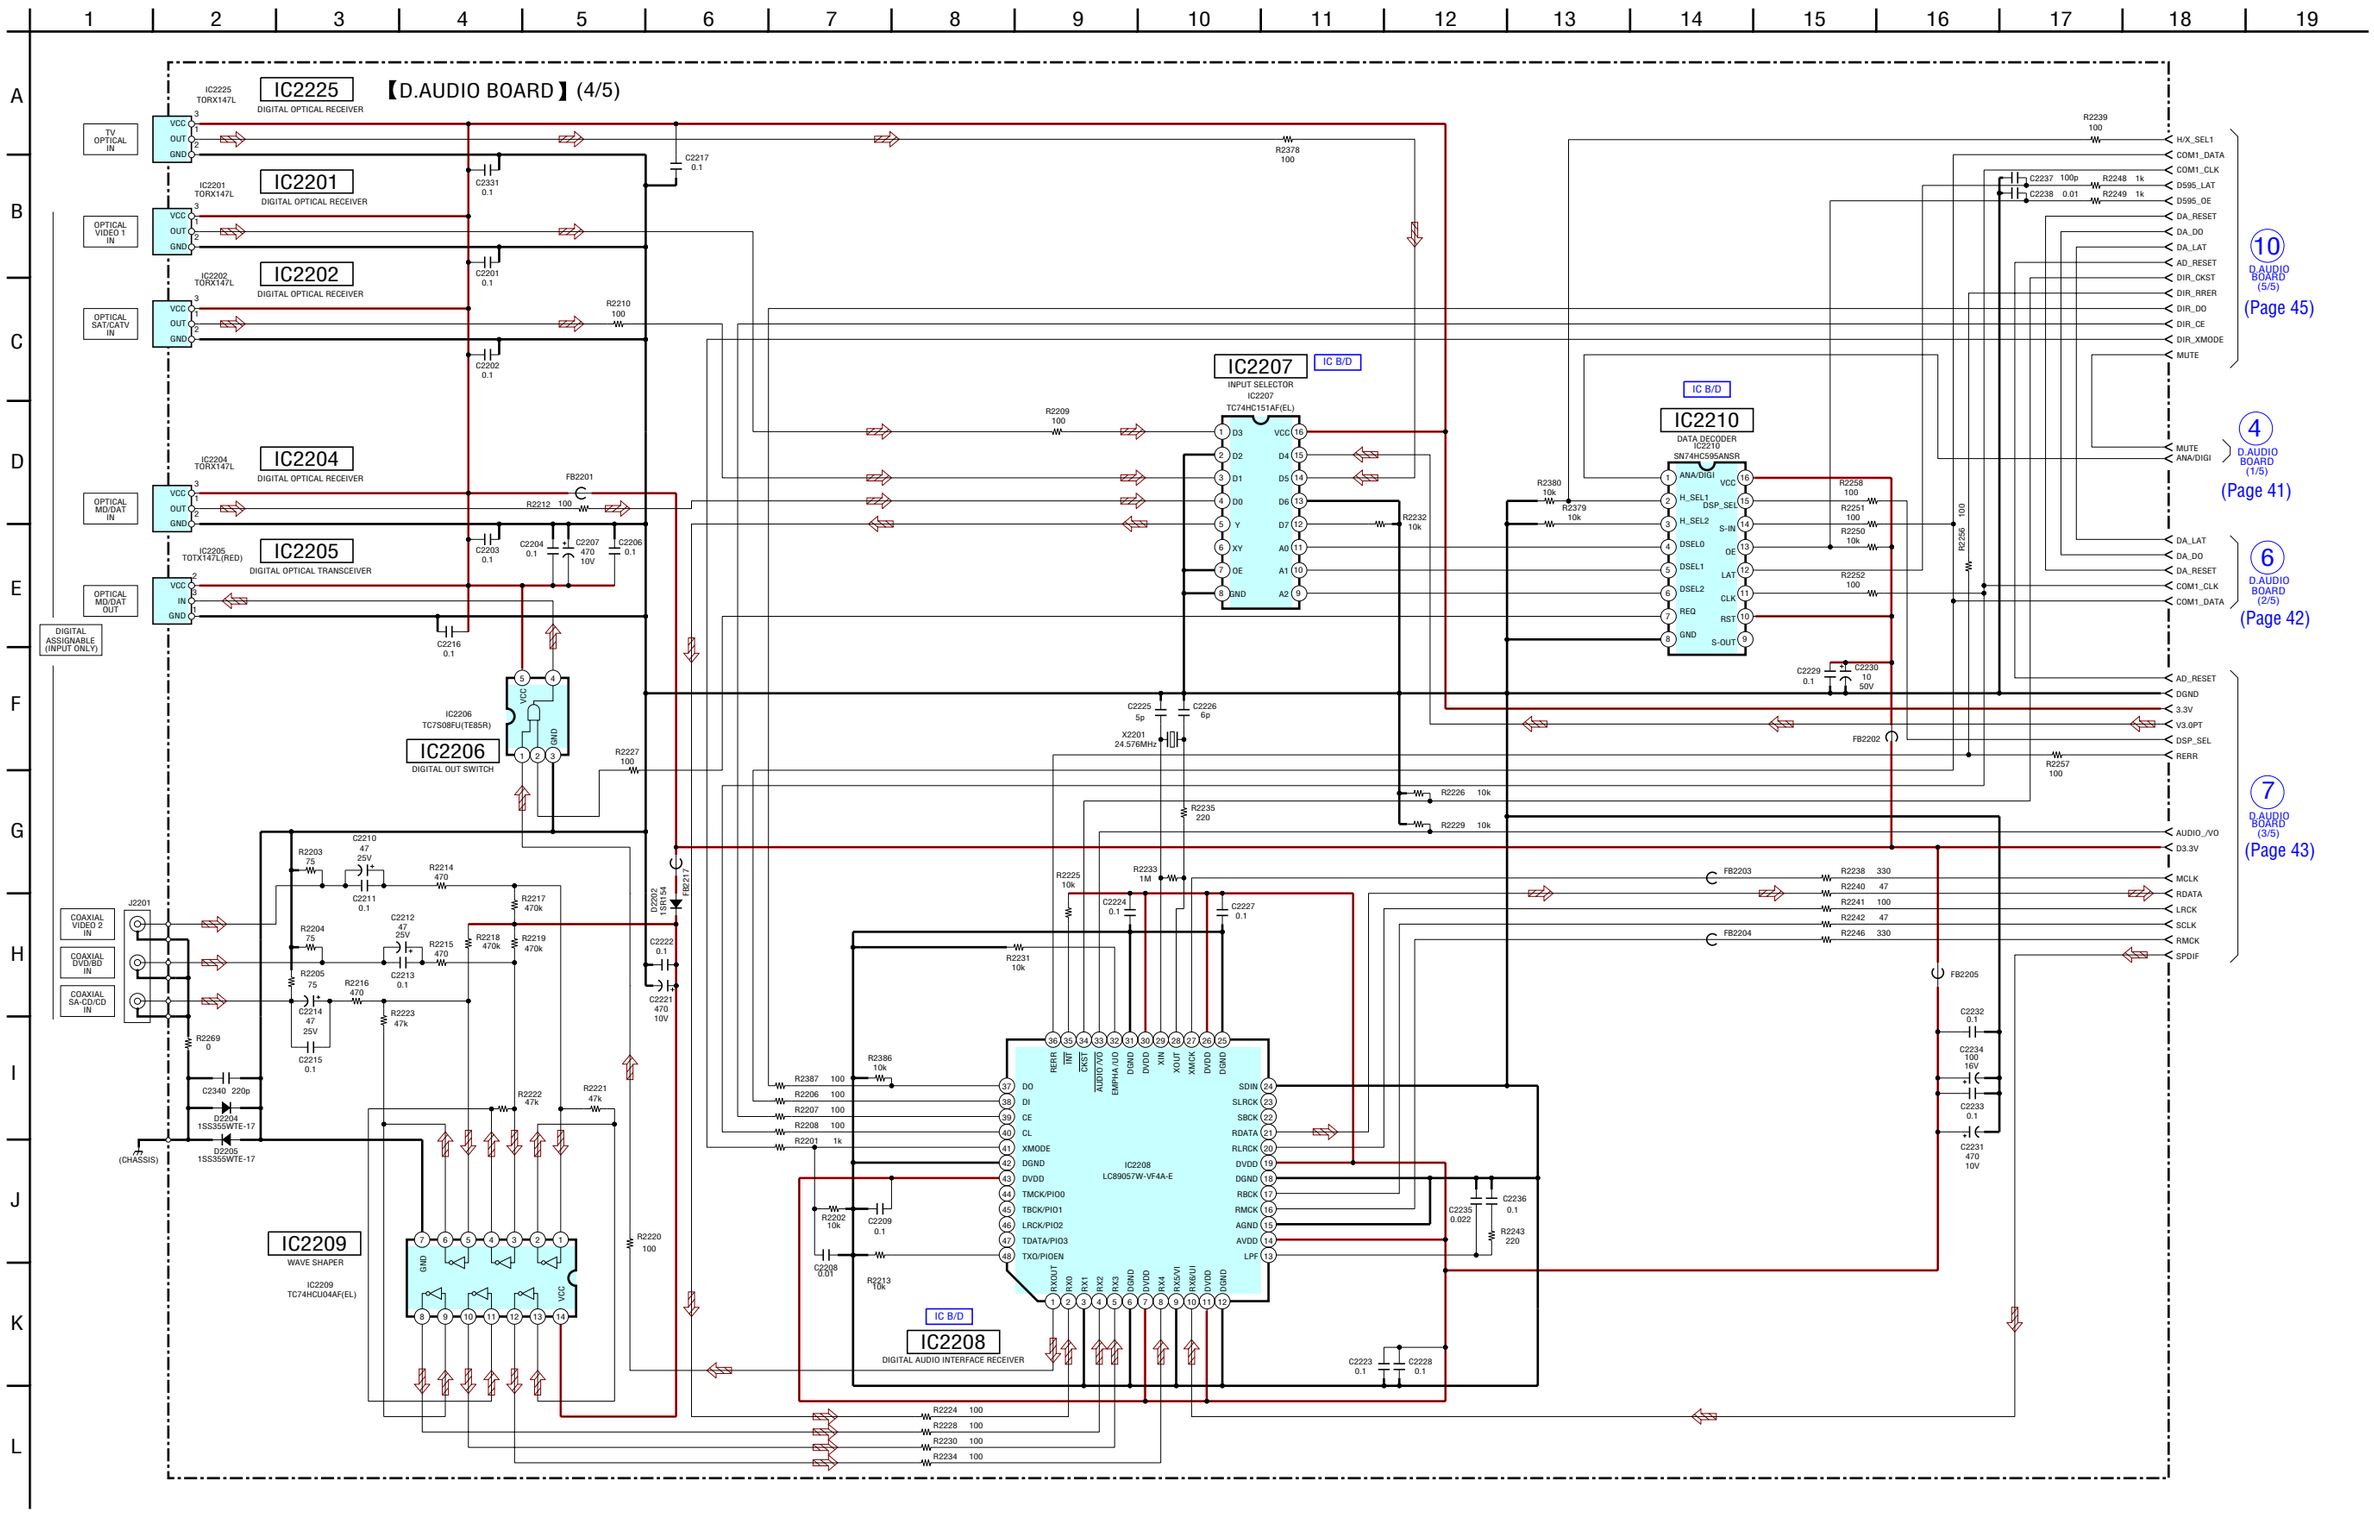

6-20. SCHEMATIC DIAGRAM – D.AUDIO Board (5/5) – • See page 110 for IC Block Diagrams.

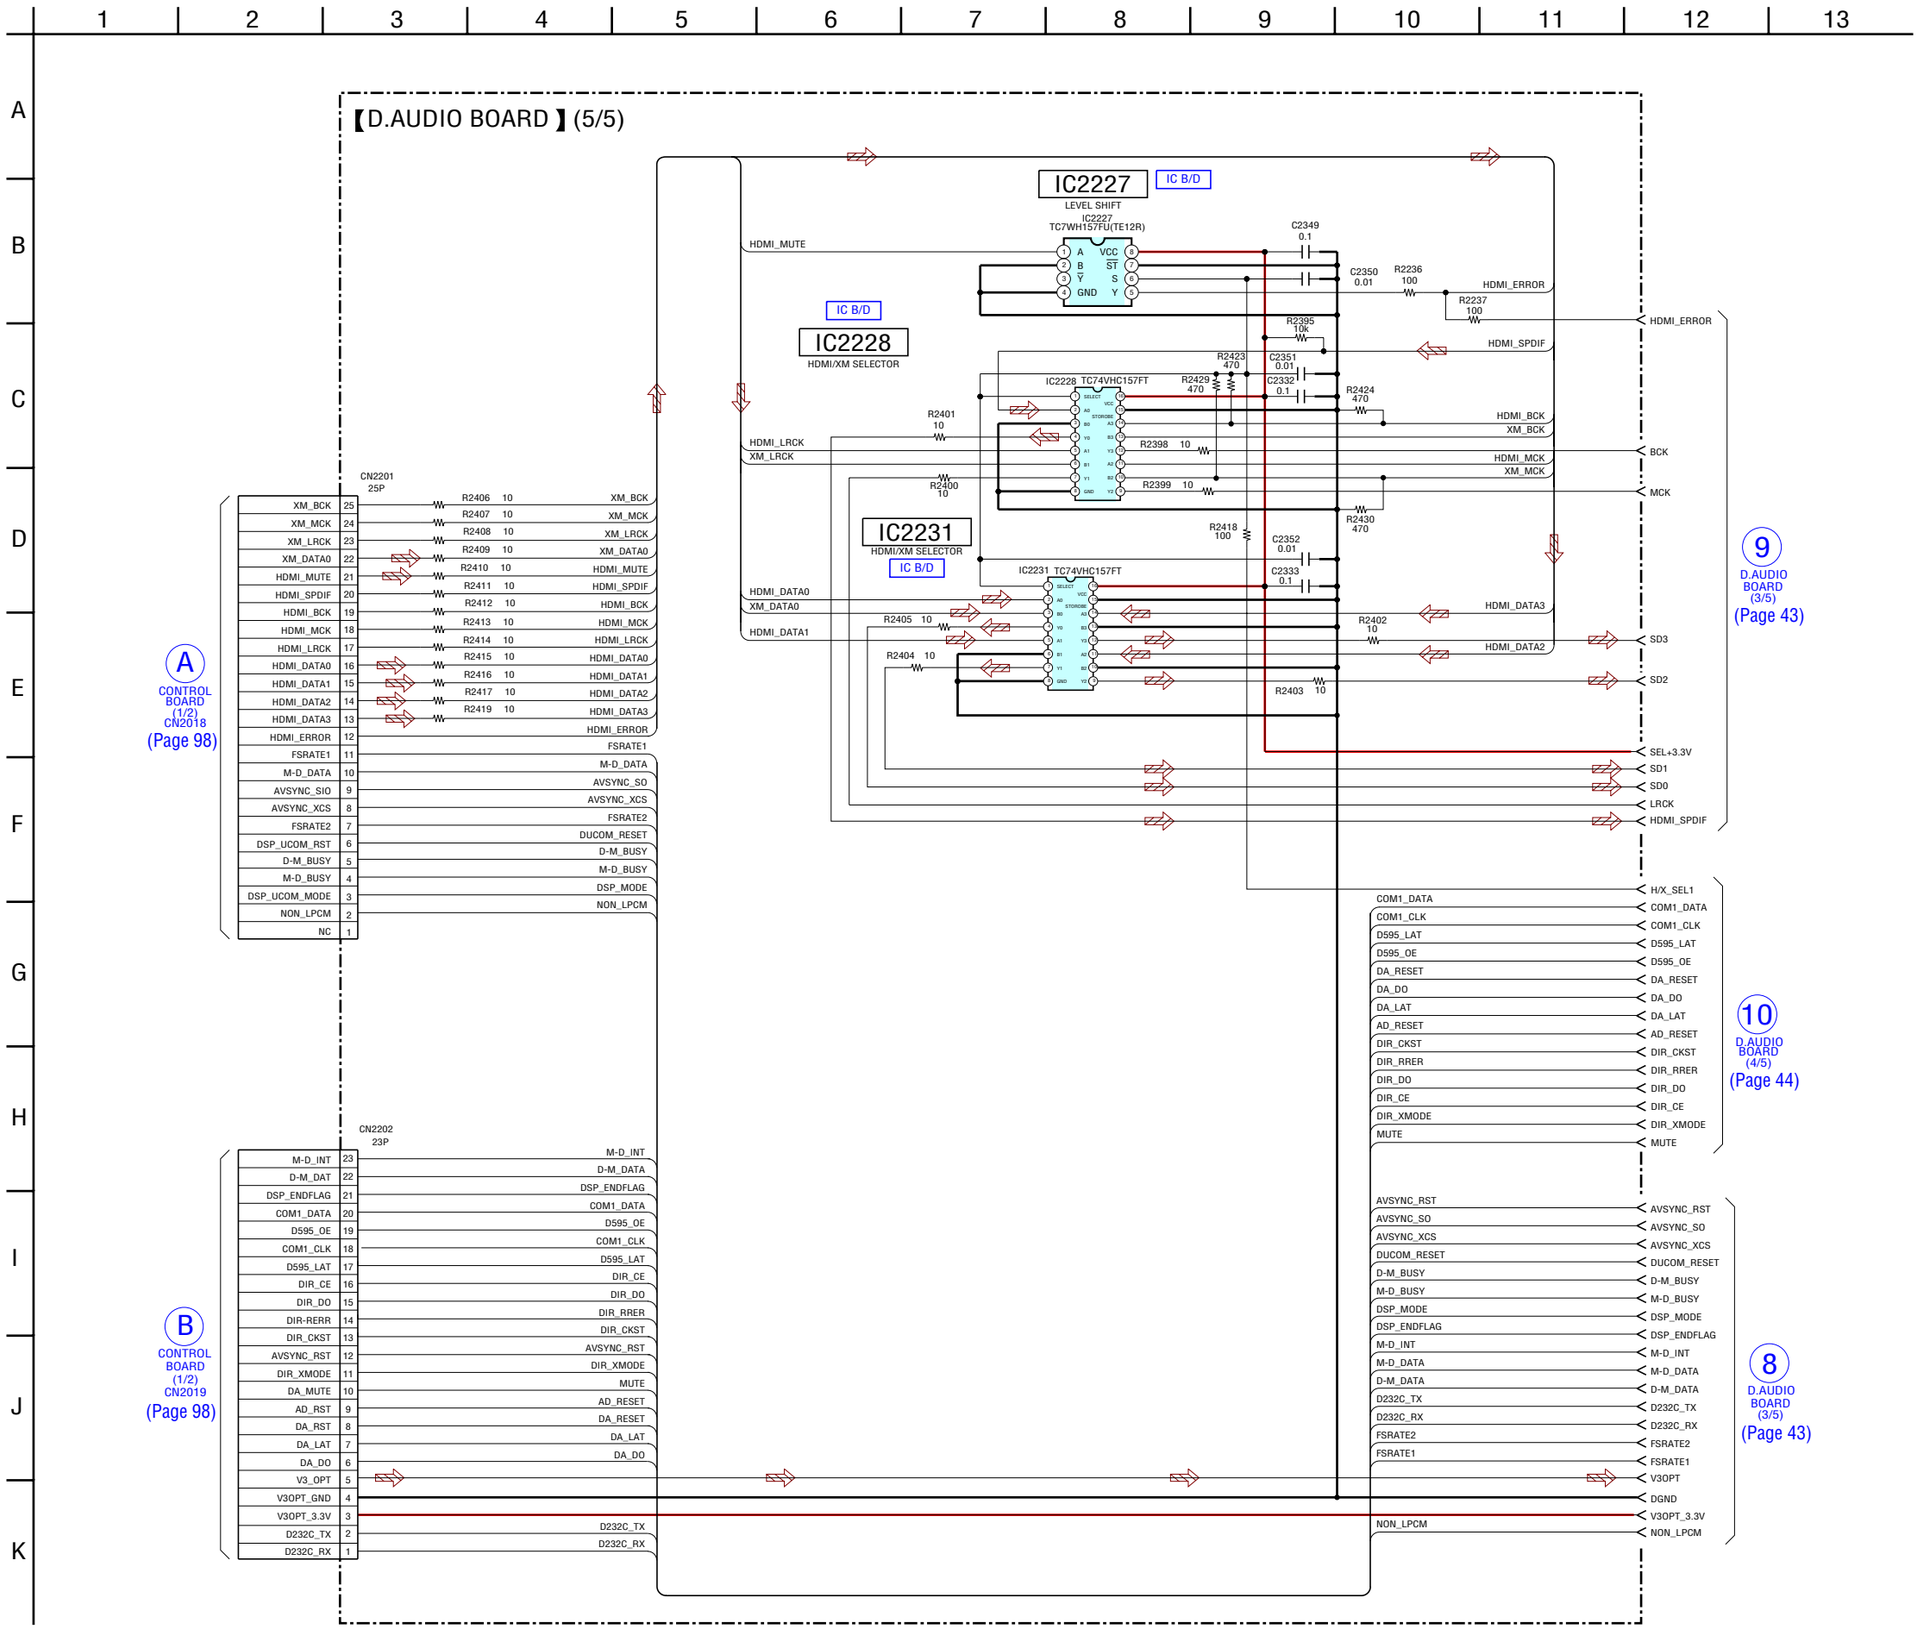

- **Semiconductor Location**

Ref. No.	Location
D2201	C-6
IC2206	C-1
IC2207	C-2
IC2208	E-2
IC2209	E-2
IC2210	B-2
IC2211	B-3
IC2212	C-3
IC2213	C-3
IC2214	C-3
IC2216	B-3
IC2217	E-4
IC2218	D-7
IC2219	E-5
IC2220	E-6
IC2221	E-6
IC2222	F-7
IC2223	C-5
IC2224	D-5
IC2227	B-4
IC2228	B-4
IC2230	E-4
IC2231	C-4
Q2205	B-6
Q2206	B-6

6-21. PRINTED WIRING BOARD – D.AUDIO Board (Component Side) –

• See page 35 for Circuit Boards Location.

: Uses unleaded solder.

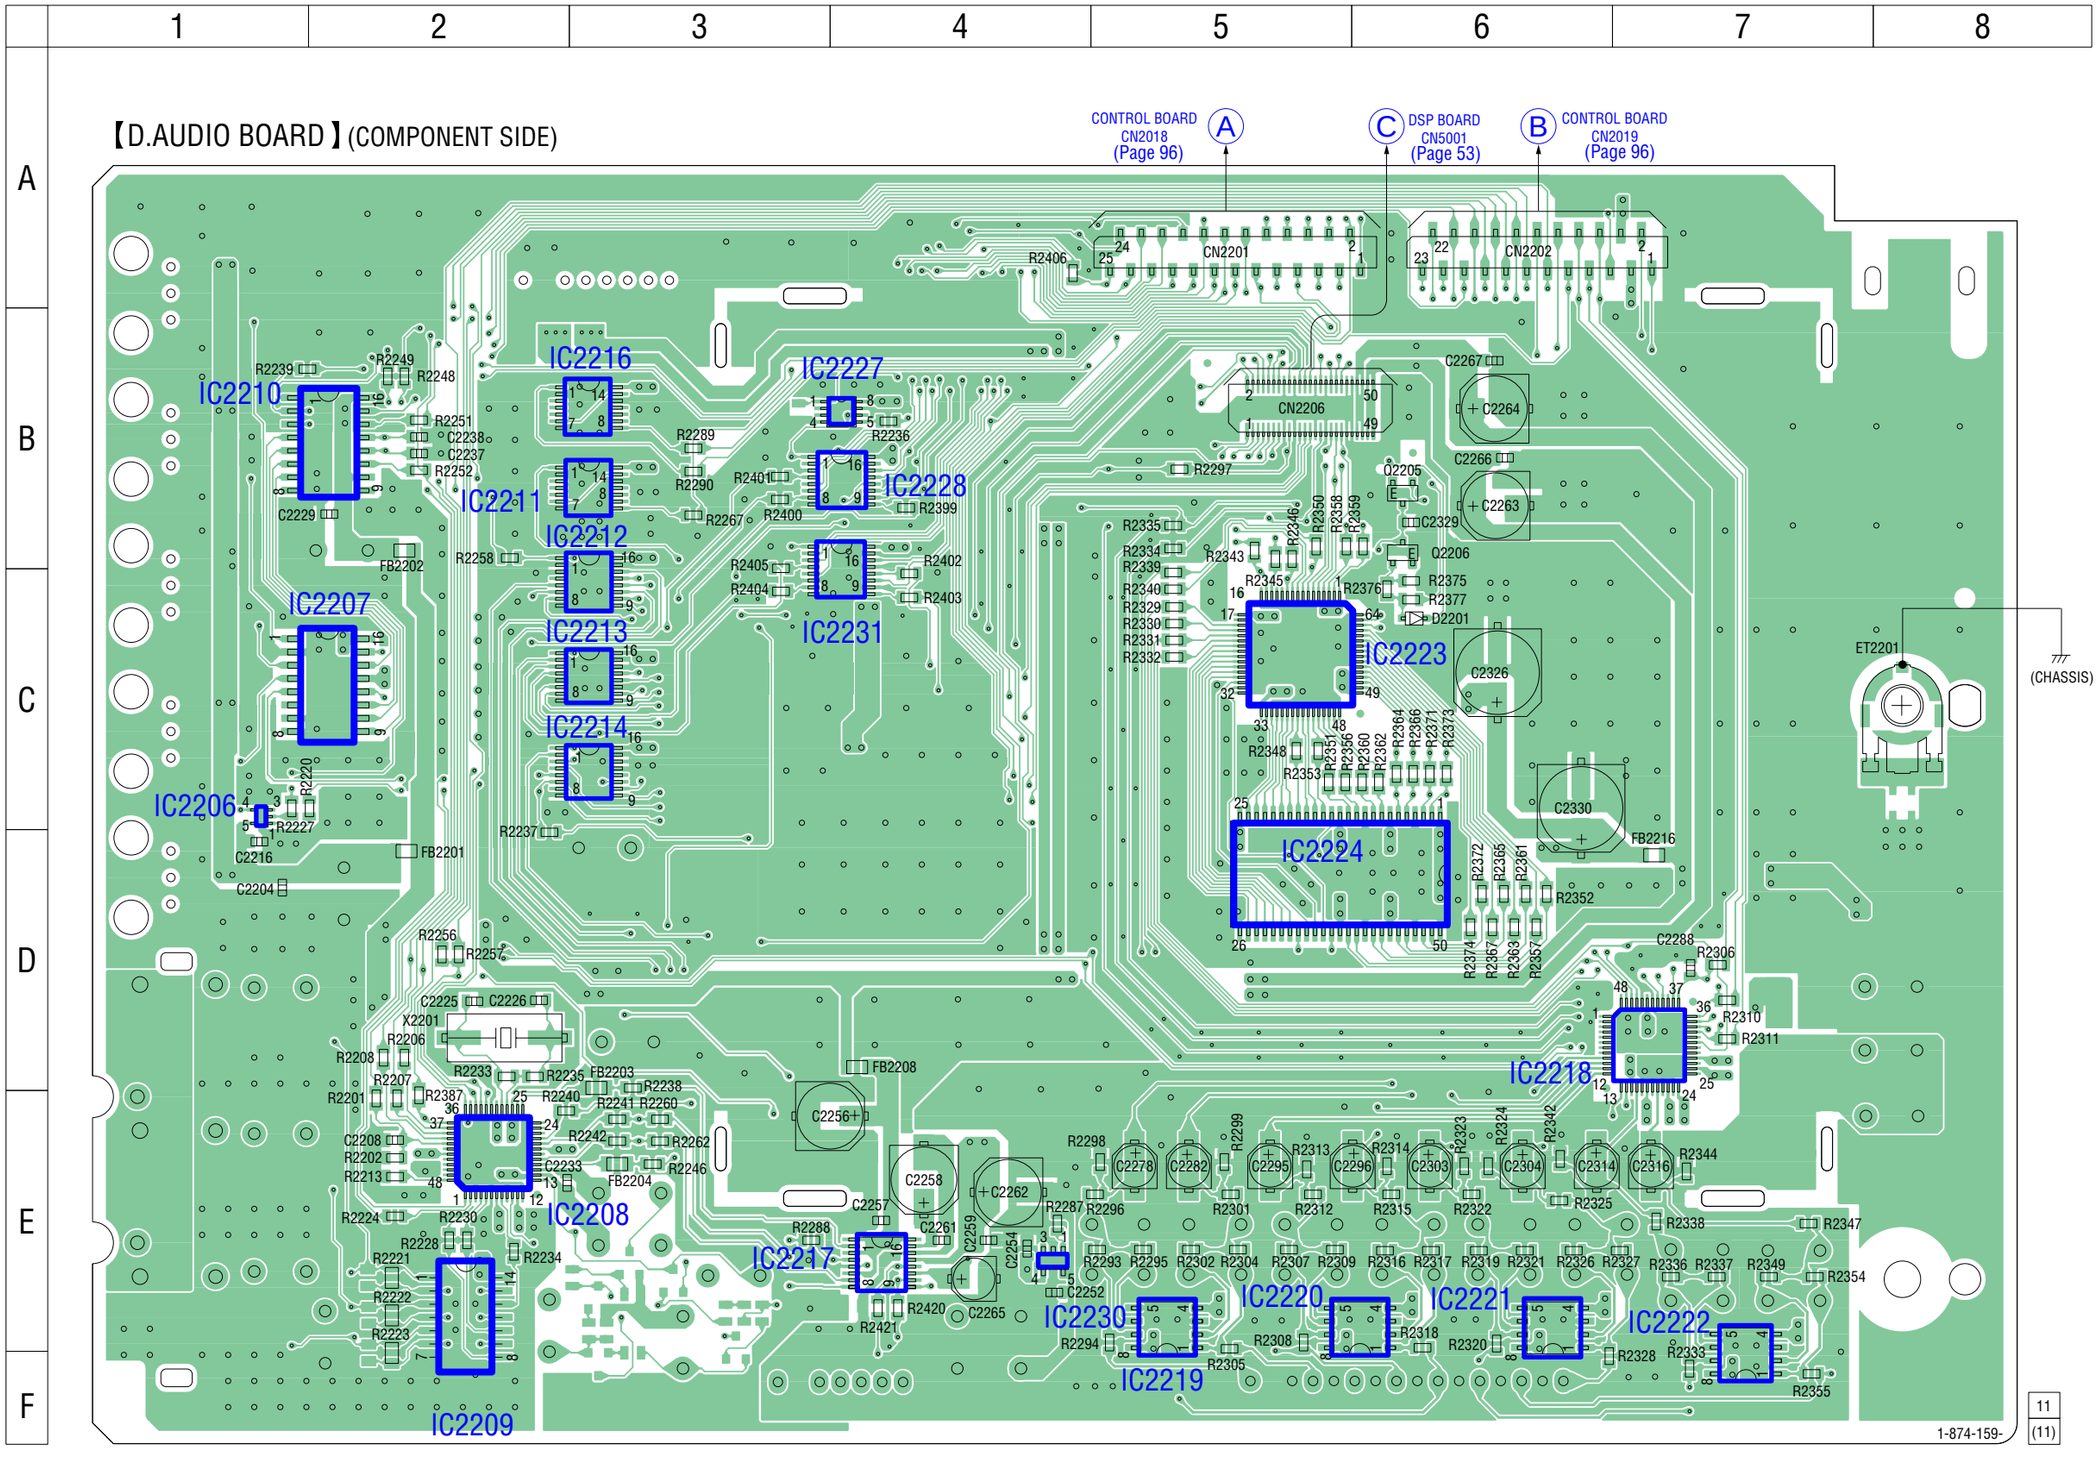

6-22. PRINTED WIRING BOARD – D.AUDIO Board (Conductor Side) –

• See page 35 for Circuit Boards Location. : Uses unleaded solder.

【D.AUDIO BOARD】(CONDUCTOR SIDE)

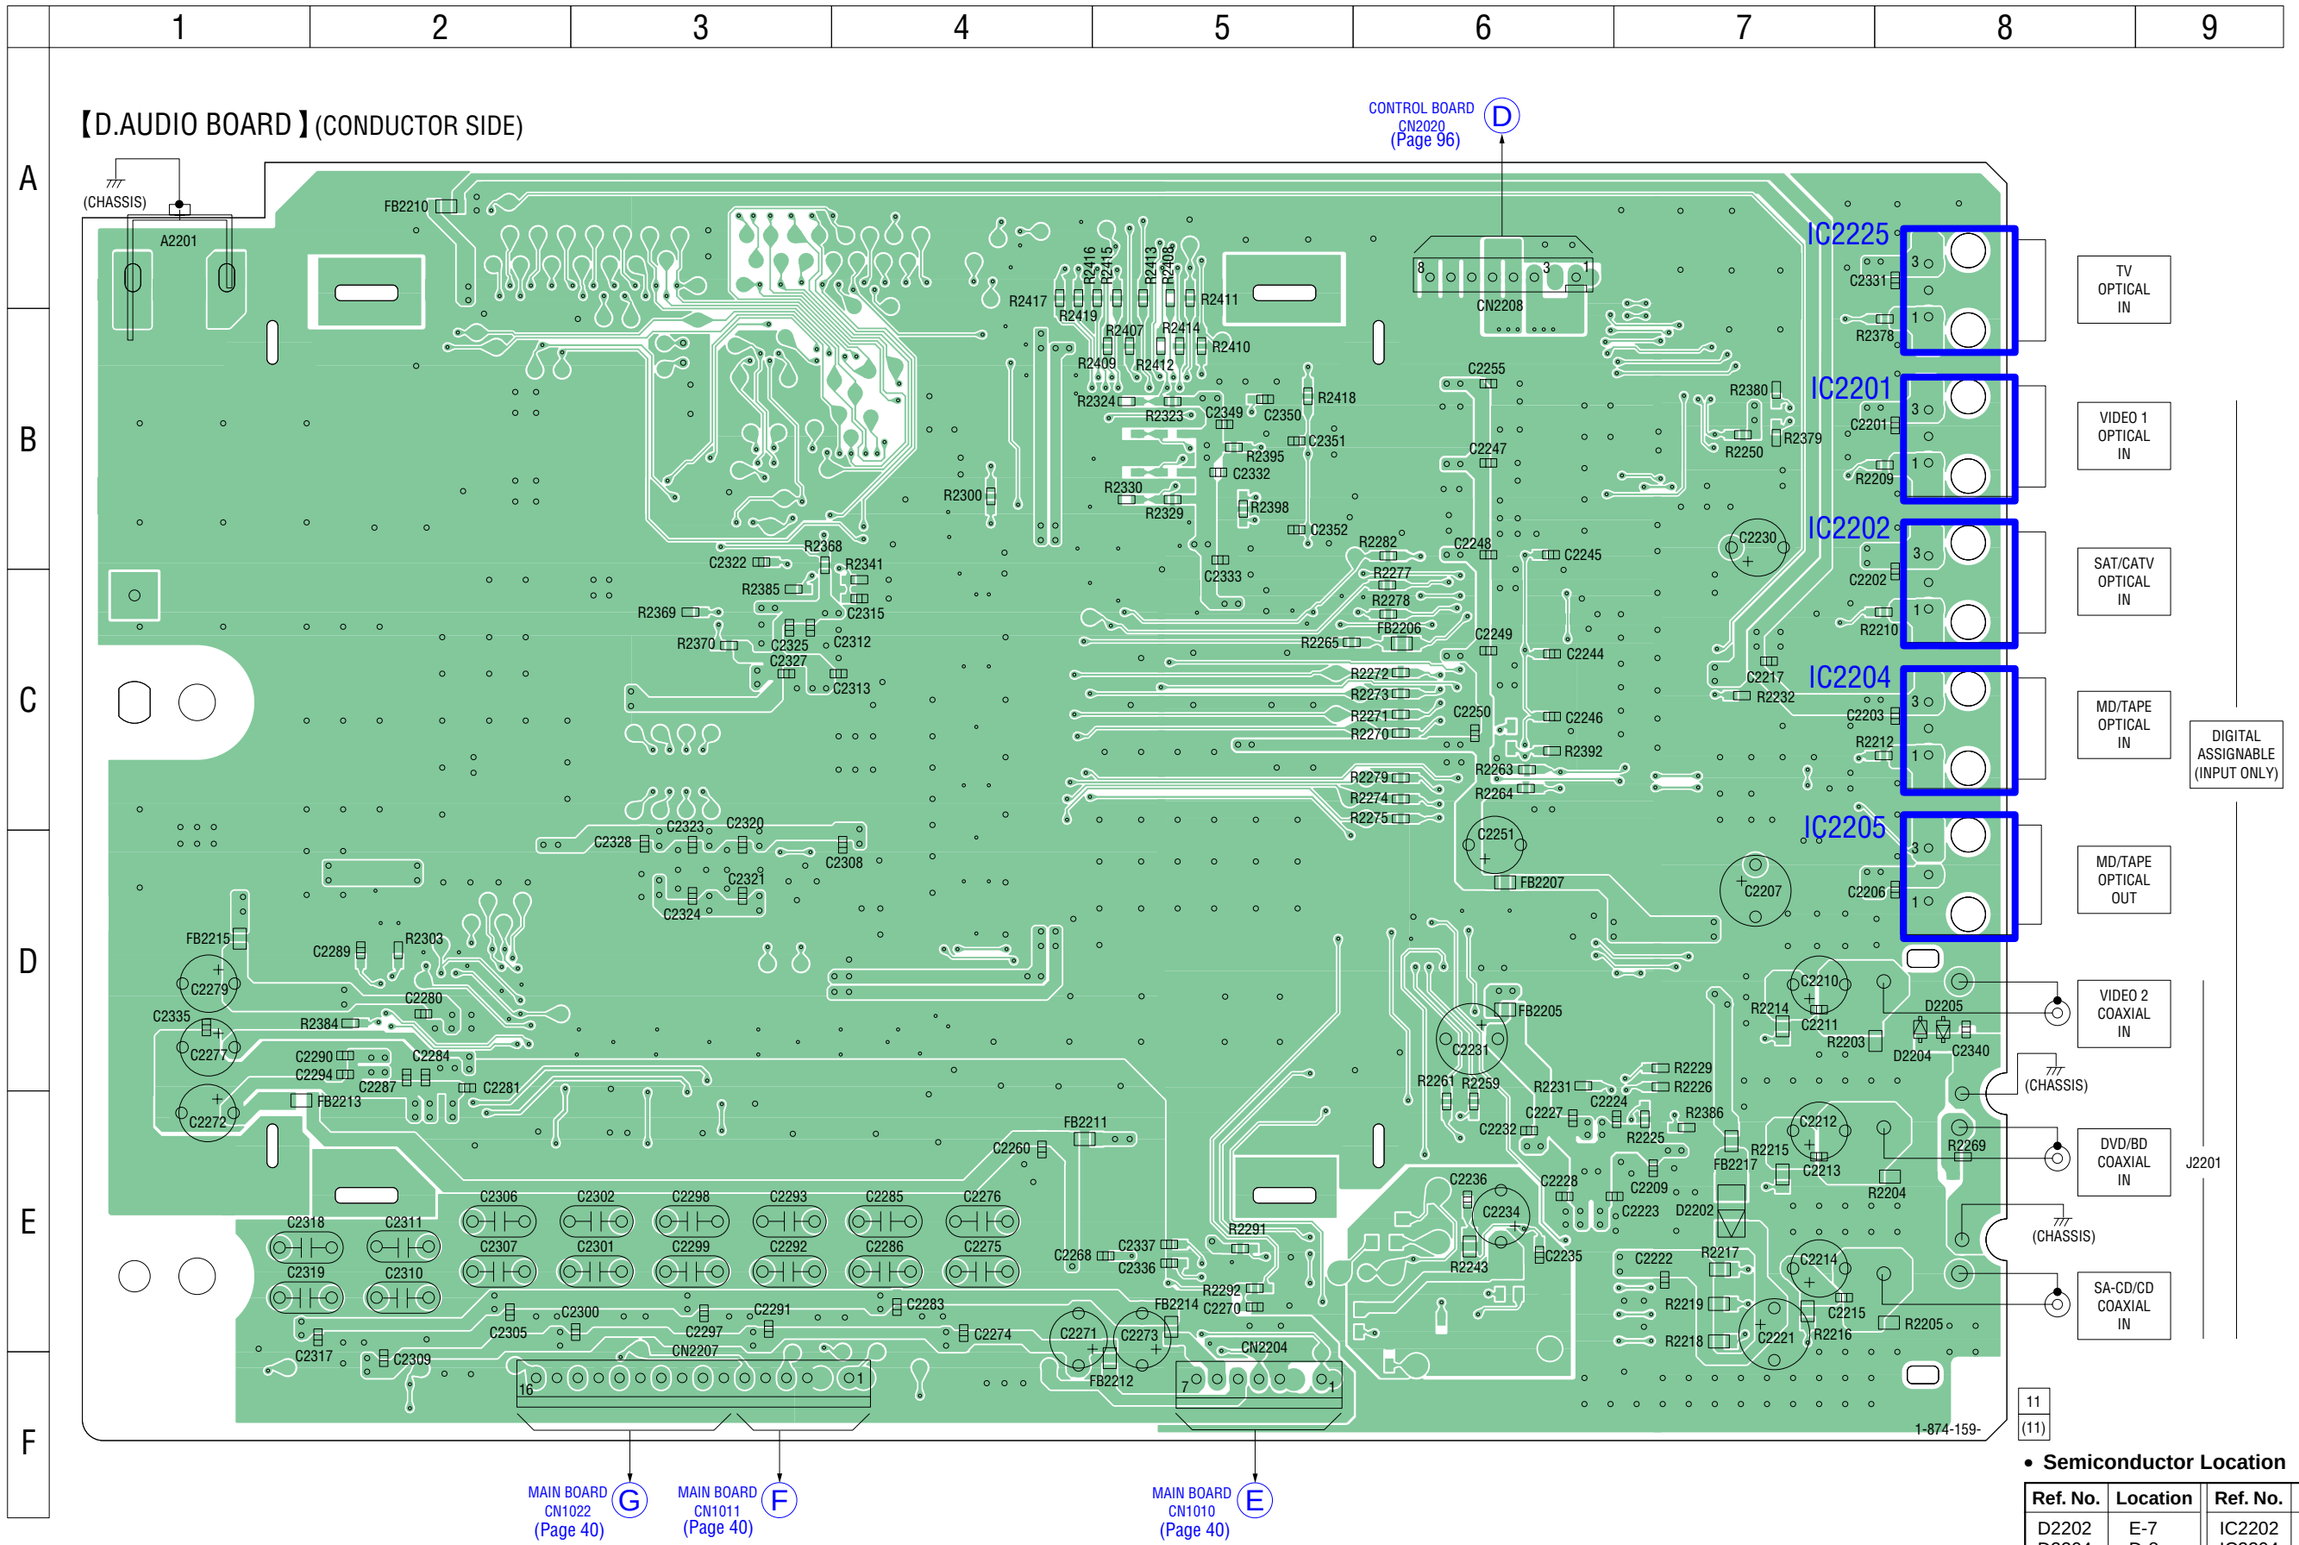

• **Semiconductor Location**

Ref. No.	Location	Ref. No.	Location
D2202	E-7	IC2202	C-8
D2204	D-8	IC2204	C-8
D2205	D-8	IC2205	D-8
		IC2225	A-8
IC2201	B-8		

- **Semiconductor Location**

Ref. No.	Location
D8003	E-4
D8004	E-4
D8005	E-4
IC8002	D-5
IC8003	D-4
IC8004	C-4
IC8005	C-4
IC8007	C-4
IC8008	C-4
IC8009	C-3
IC8010	D-3
IC8012	C-5
Q8001	D-4
Q8002	D-4
Q8003	B-4
Q8004	B-3

6-23. PRINTED WIRING BOARD – TUNER Board (Component Side) –

• See page 35 for Circuit Boards Location.

: Uses unleaded solder.

【TUNER BOARD】(COMPONENT SIDE)

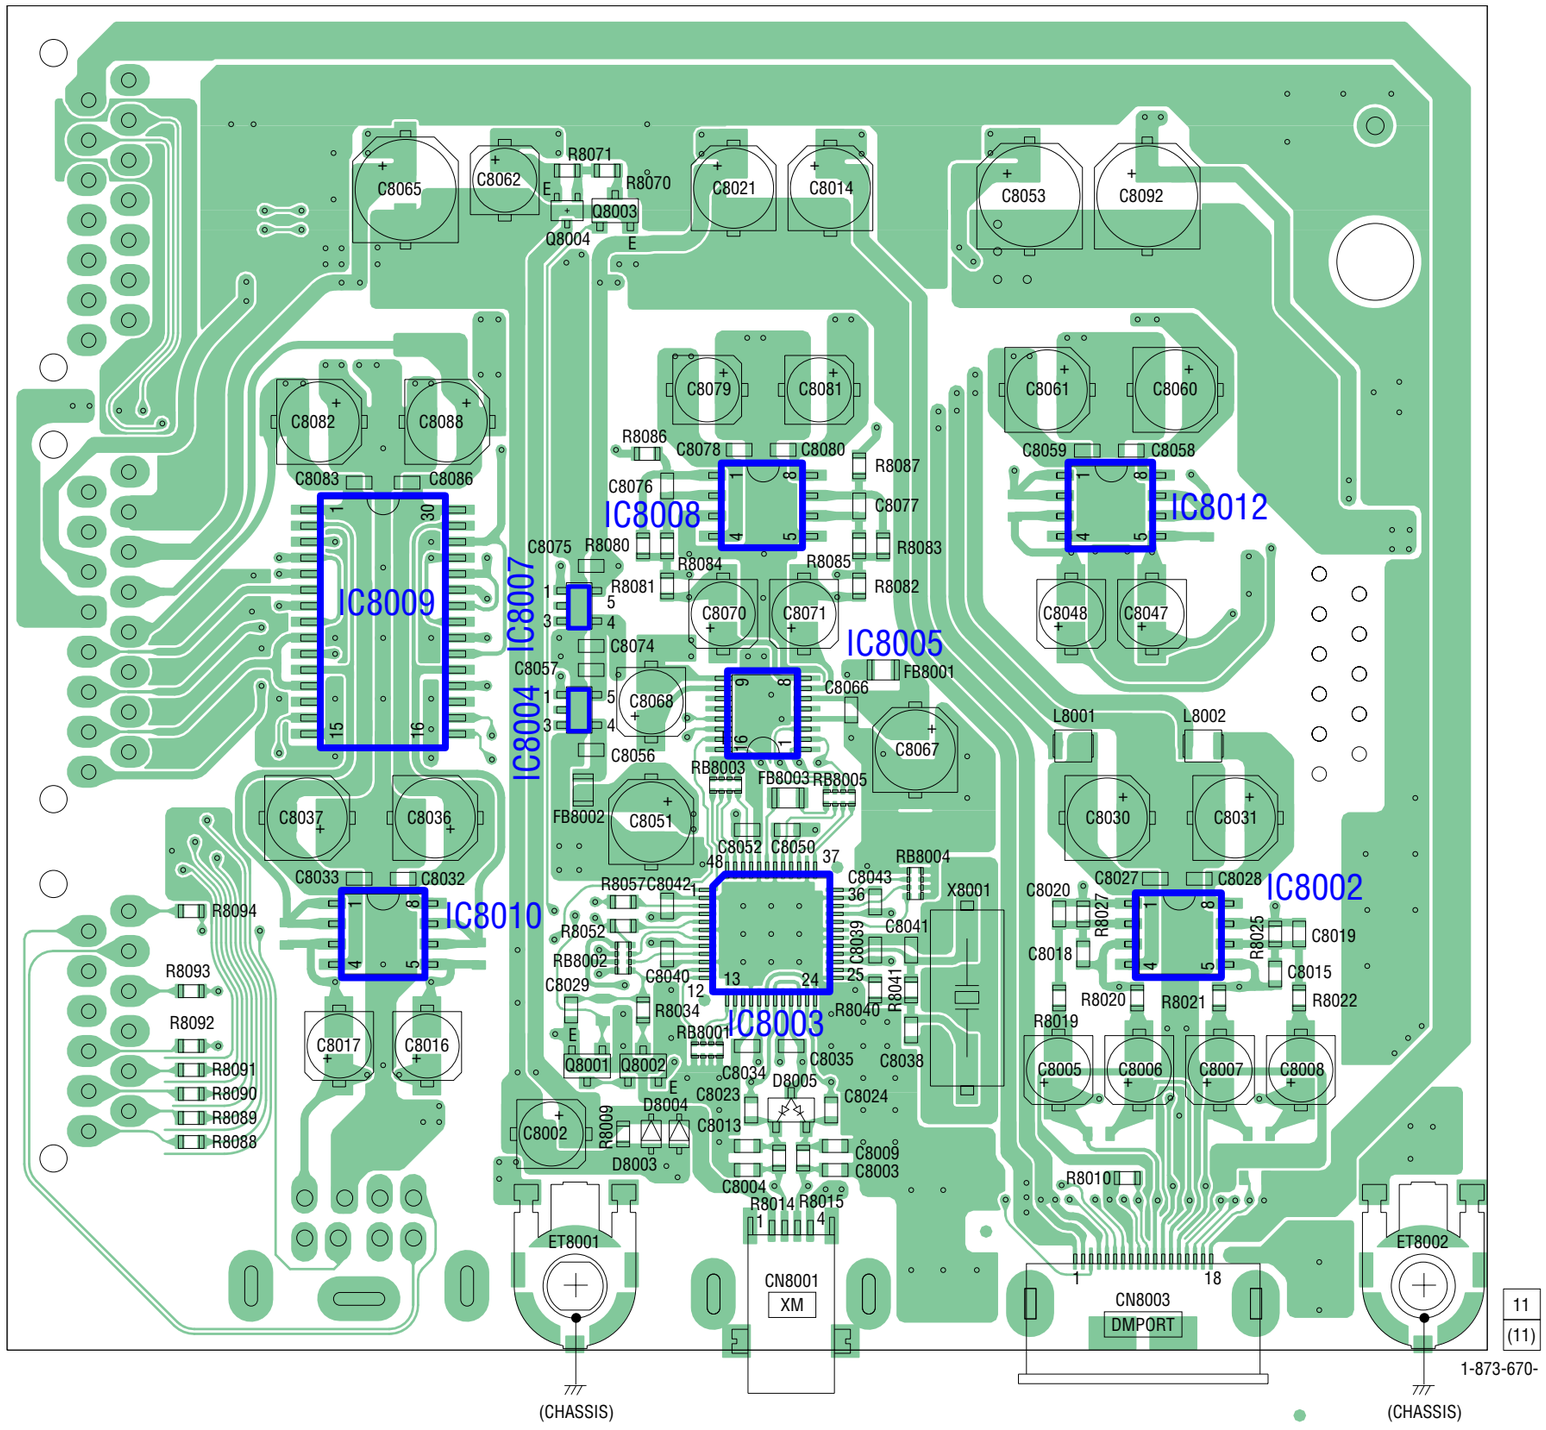

6-24. PRINTED WIRING BOARD – TUNER Board (Conductor Side) –

• See page 35 for Circuit Boards Location. : Uses unleaded solder.

• Semiconductor Location

Ref. No.	Location
D8001	E-5
D8002	E-5
D8006	B-3
IC8001	B-4
IC8006	B-5
IC8011	B-3

【TUNER BOARD】(CONDUCTOR SIDE)

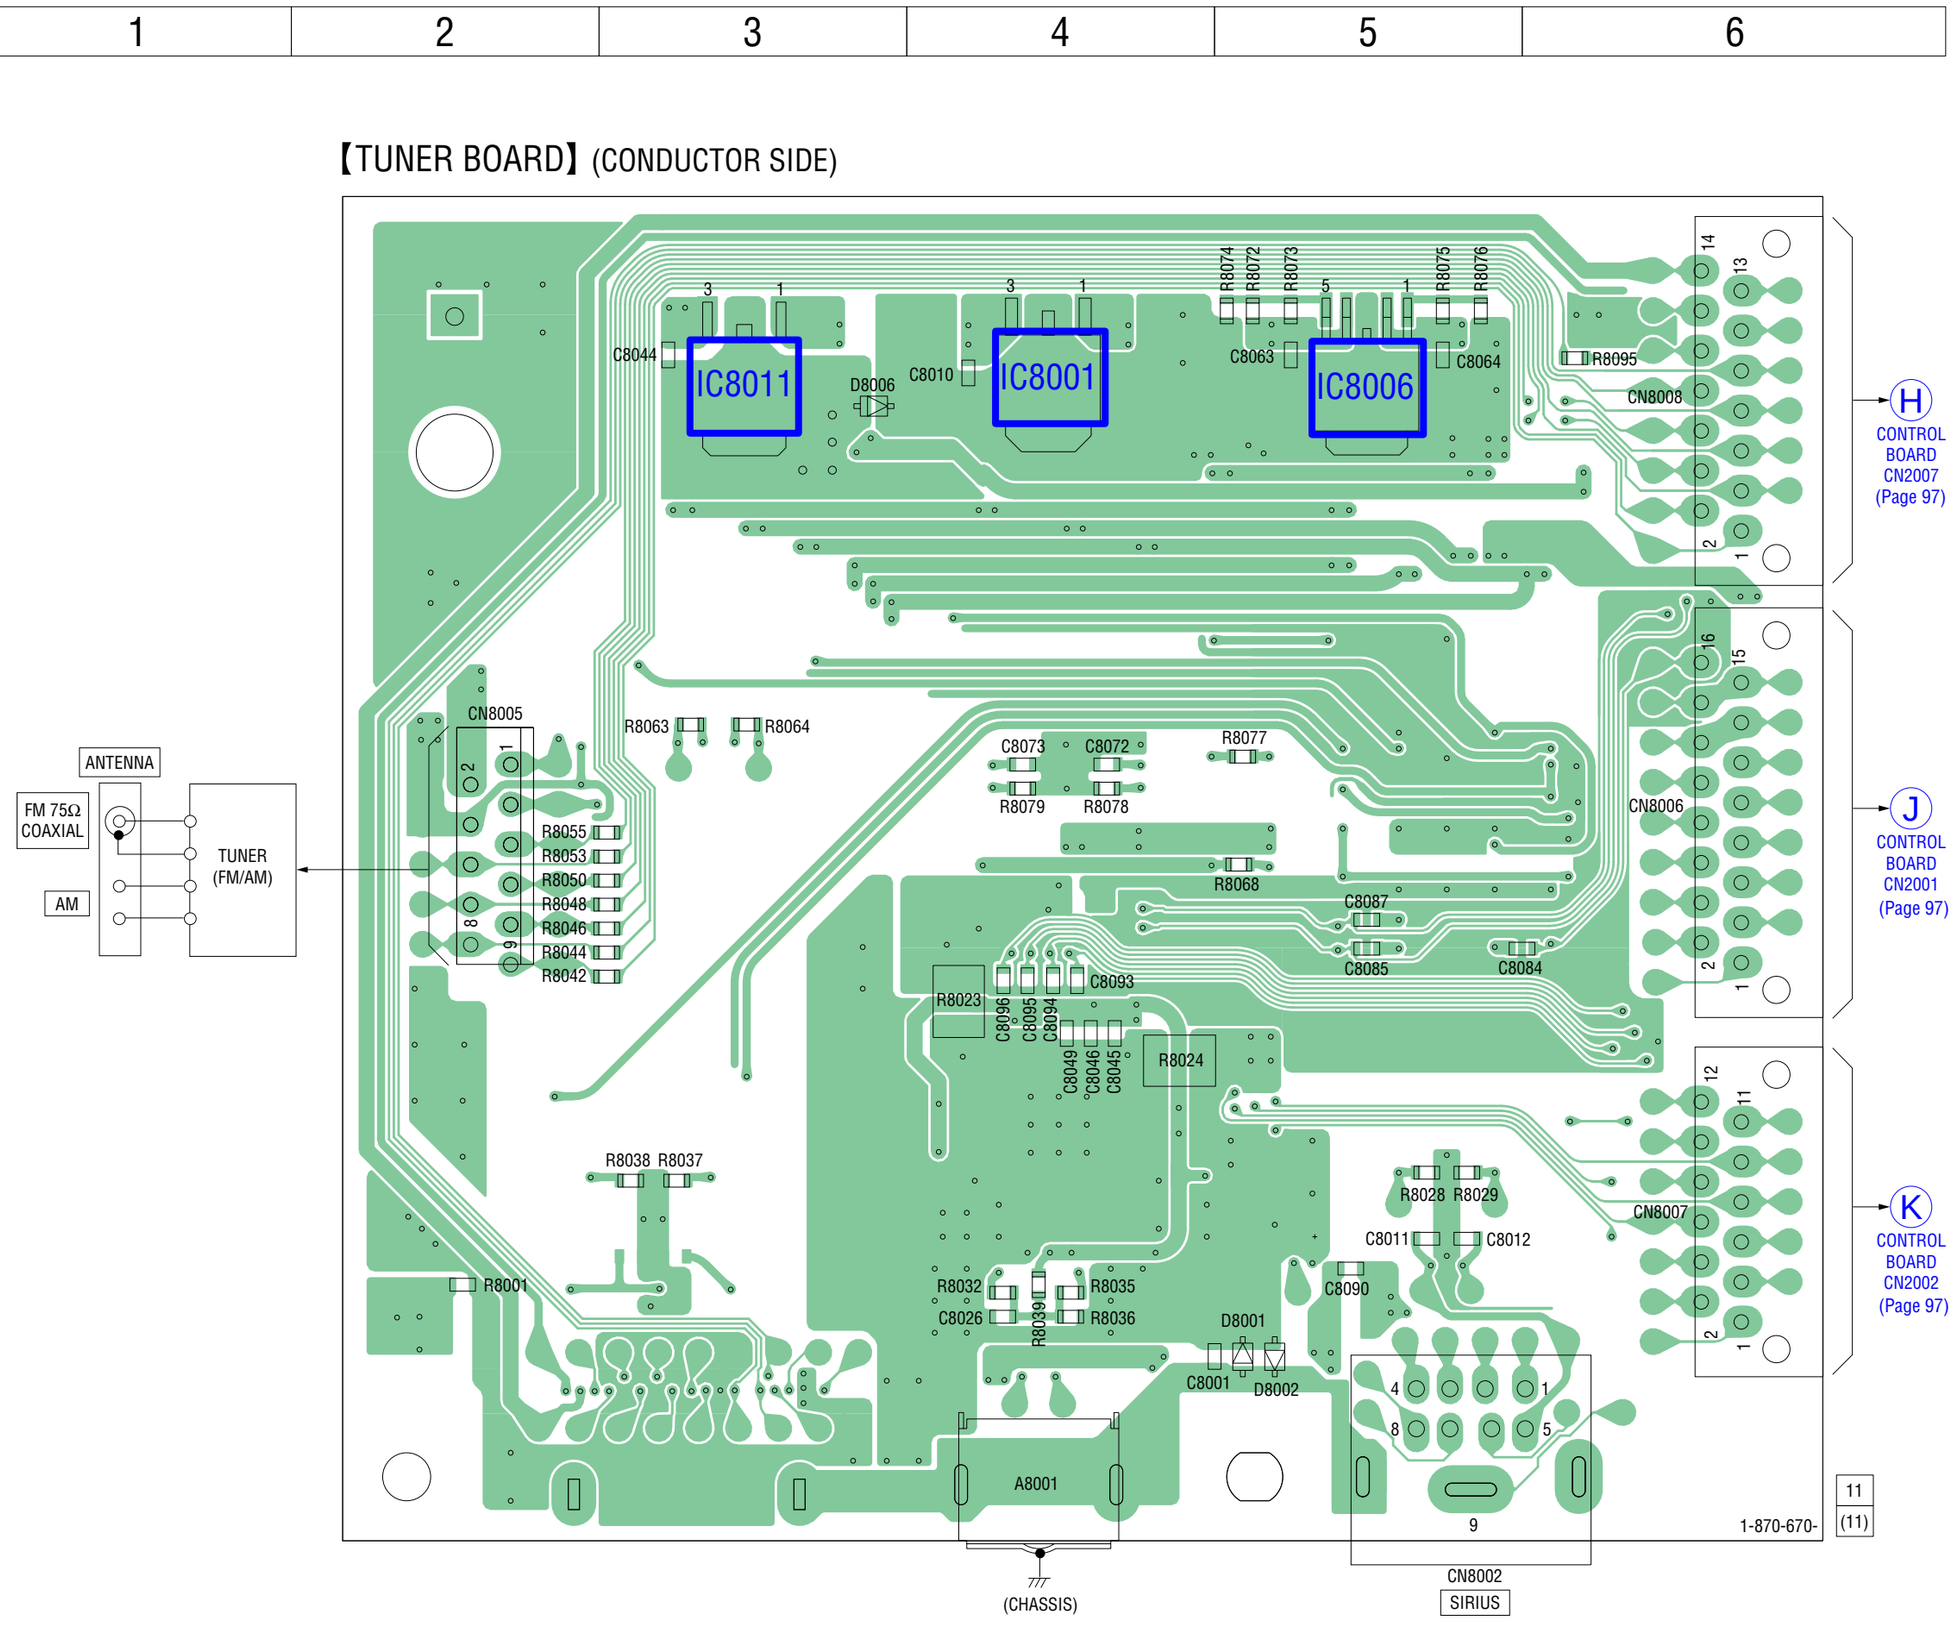

6-25. SCHEMATIC DIAGRAM – TUNER Board (1/2) –

• See page 110 for Waveforms. • See page 110 for IC Block Diagrams. • See page 123 for IC Pin Function Description.

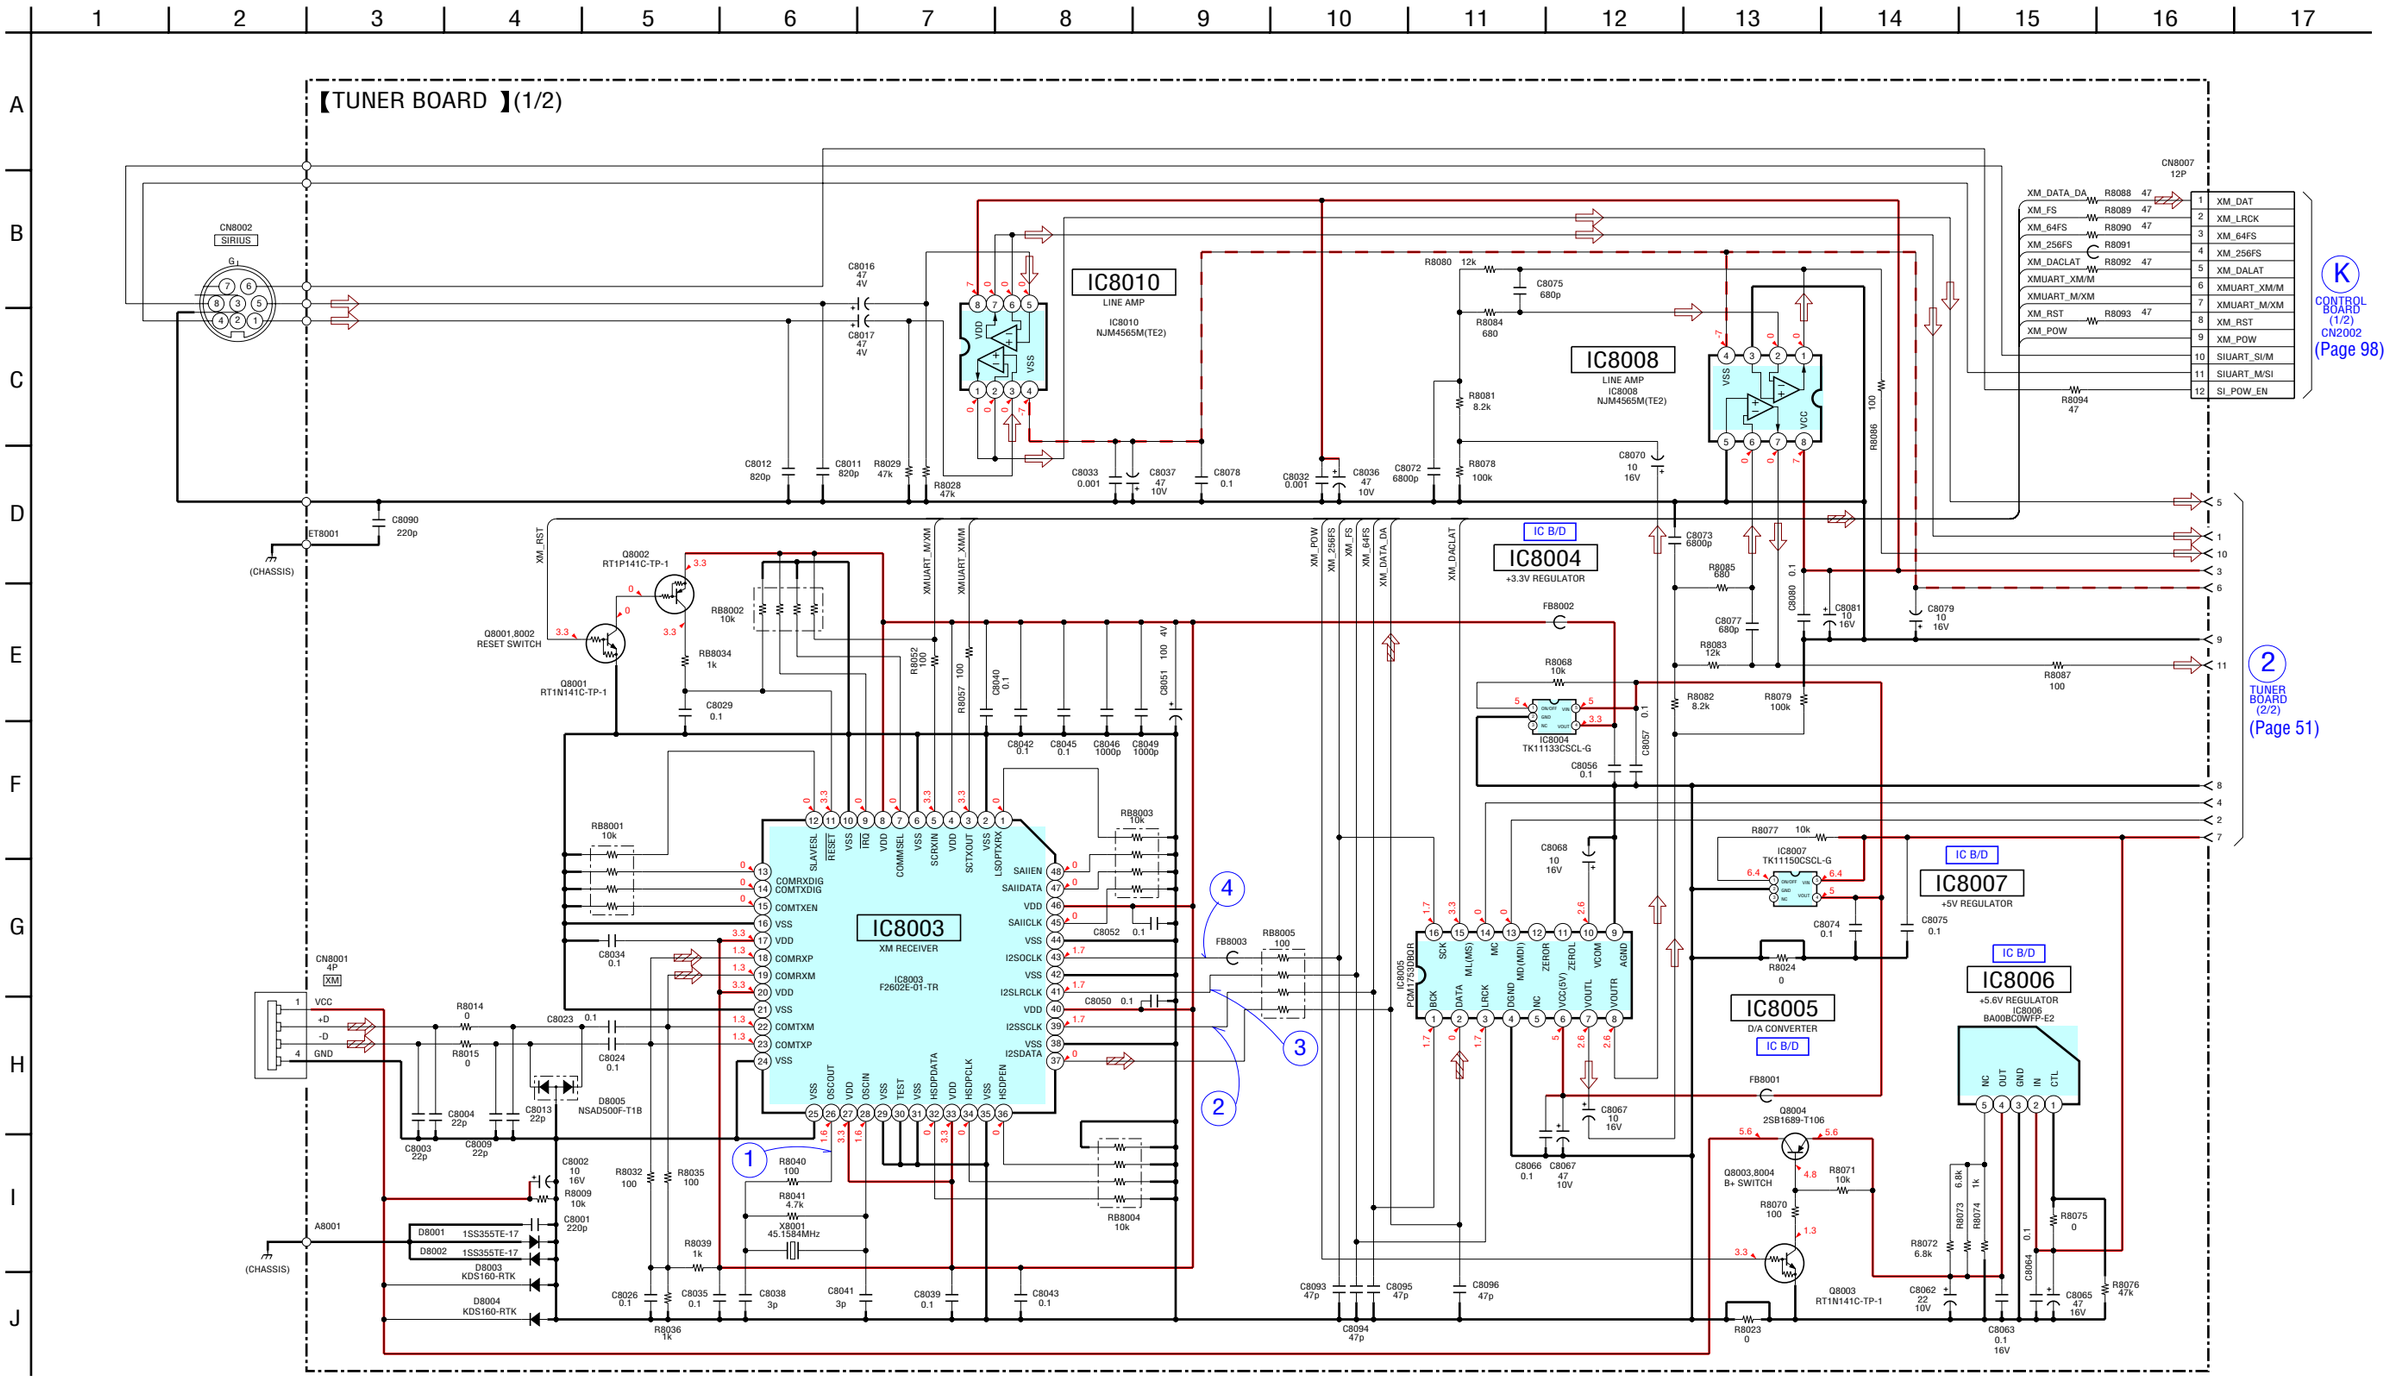

6-26. SCHEMATIC DIAGRAM – TUNER Board (2/2) –

• See page 110 for IC Block Diagrams.

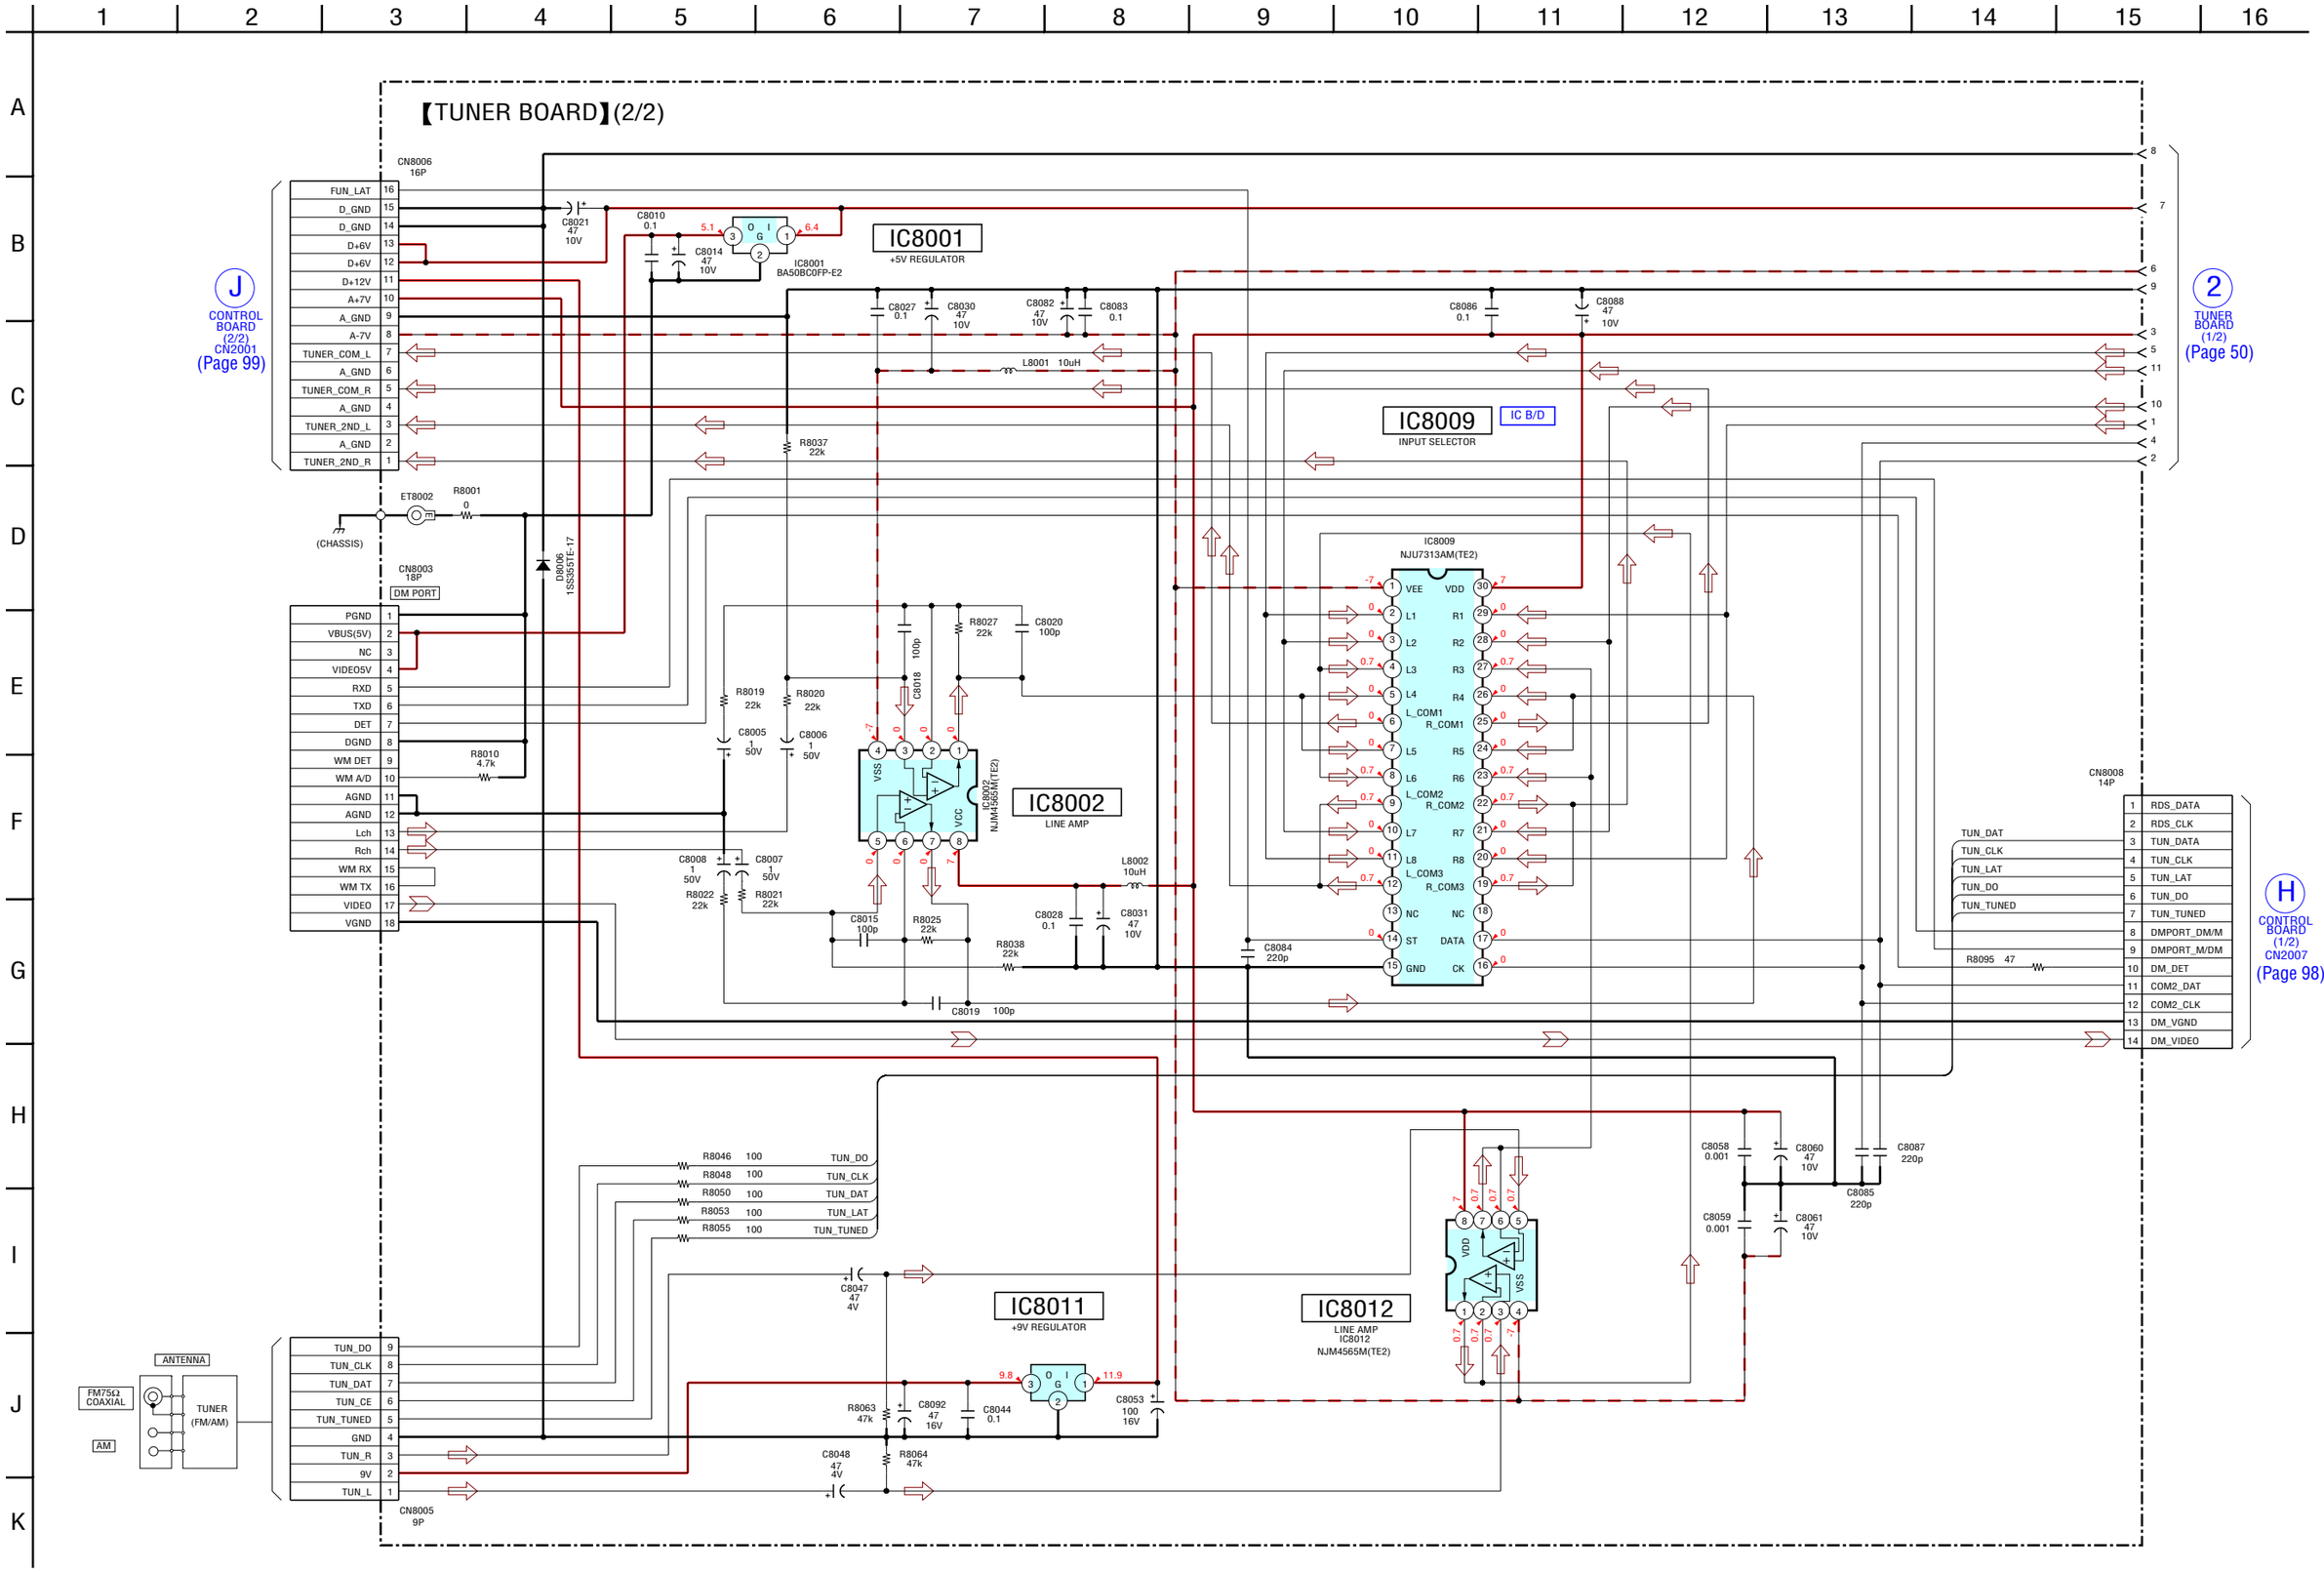

- **Semiconductor Location**

Ref. No.	Location
IC5001	B-3
IC5002	C-2
IC5006	D-2
IC5009	D-2
IC5010	D-3
IC5013	C-1
IC5201	B-4
IC5202	C-4
IC5208	B-2
IC5209	D-4
IC5210	D-5
IC5211	D-3
IC5212	D-3
IC5213	D-3

6-27. PRINTED WIRING BOARD – DSP Board (Side A) –

• See page 35 for Circuit Boards Location.

: Uses unleaded solder.

【DSP BOARD】(SIDE A)

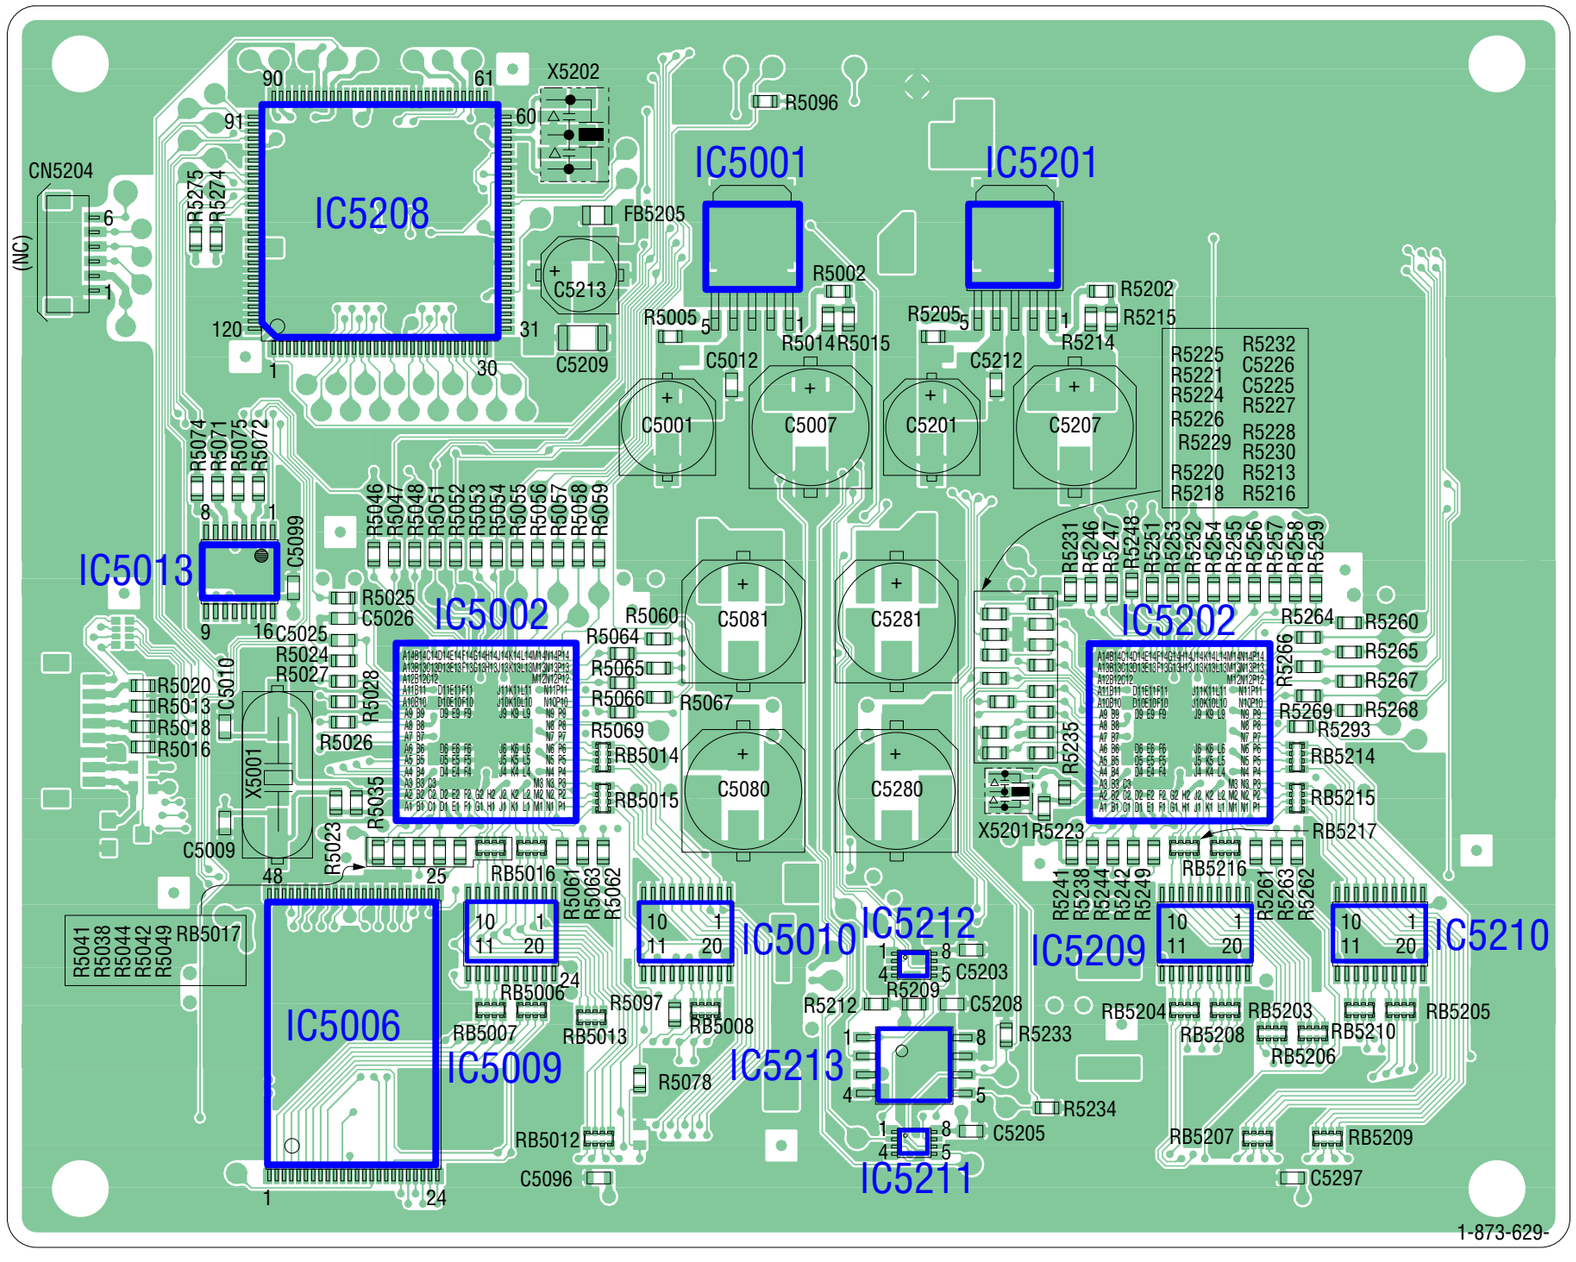

Note: IC5002 and IC5202 cannot exchange with single. When IC5002 and IC5202 are damaged, exchange the entire mounted board.

6-28. PRINTED WIRING BOARD – DSP Board (Side B) –

• See page 35 for Circuit Boards Location.

: Uses unleaded solder.

- Semiconductor Location

Ref. No.	Location
D5001	B-3
IC5007	D-4
IC5012	D-3
IC5207	D-2

【DSP BOARD】(SIDE B)

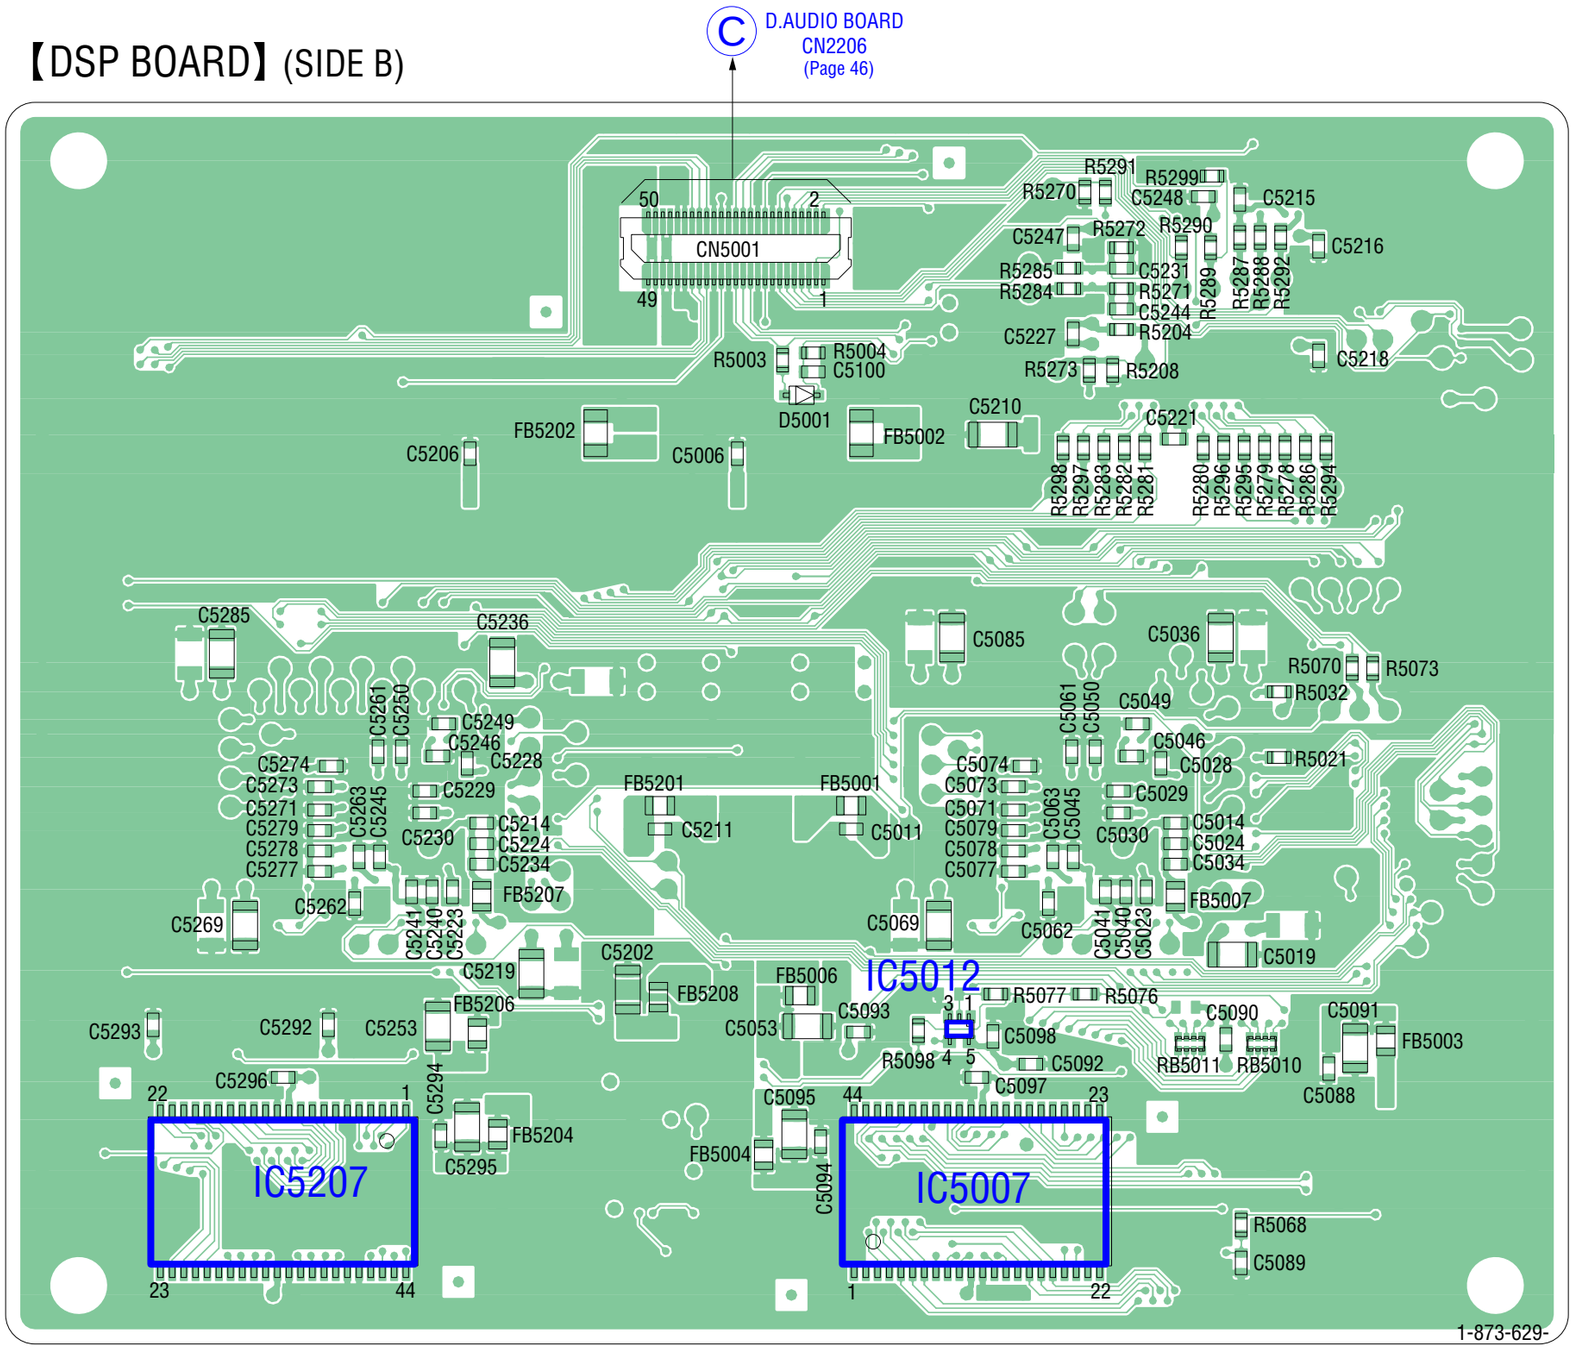

11
(11)

6-29. SCHEMATIC DIAGRAM – DSP Board (1/4) –

• See page 110 for Waveforms. • See page 110 for IC Block Diagrams. • See page 123 for IC Pin Function Description.

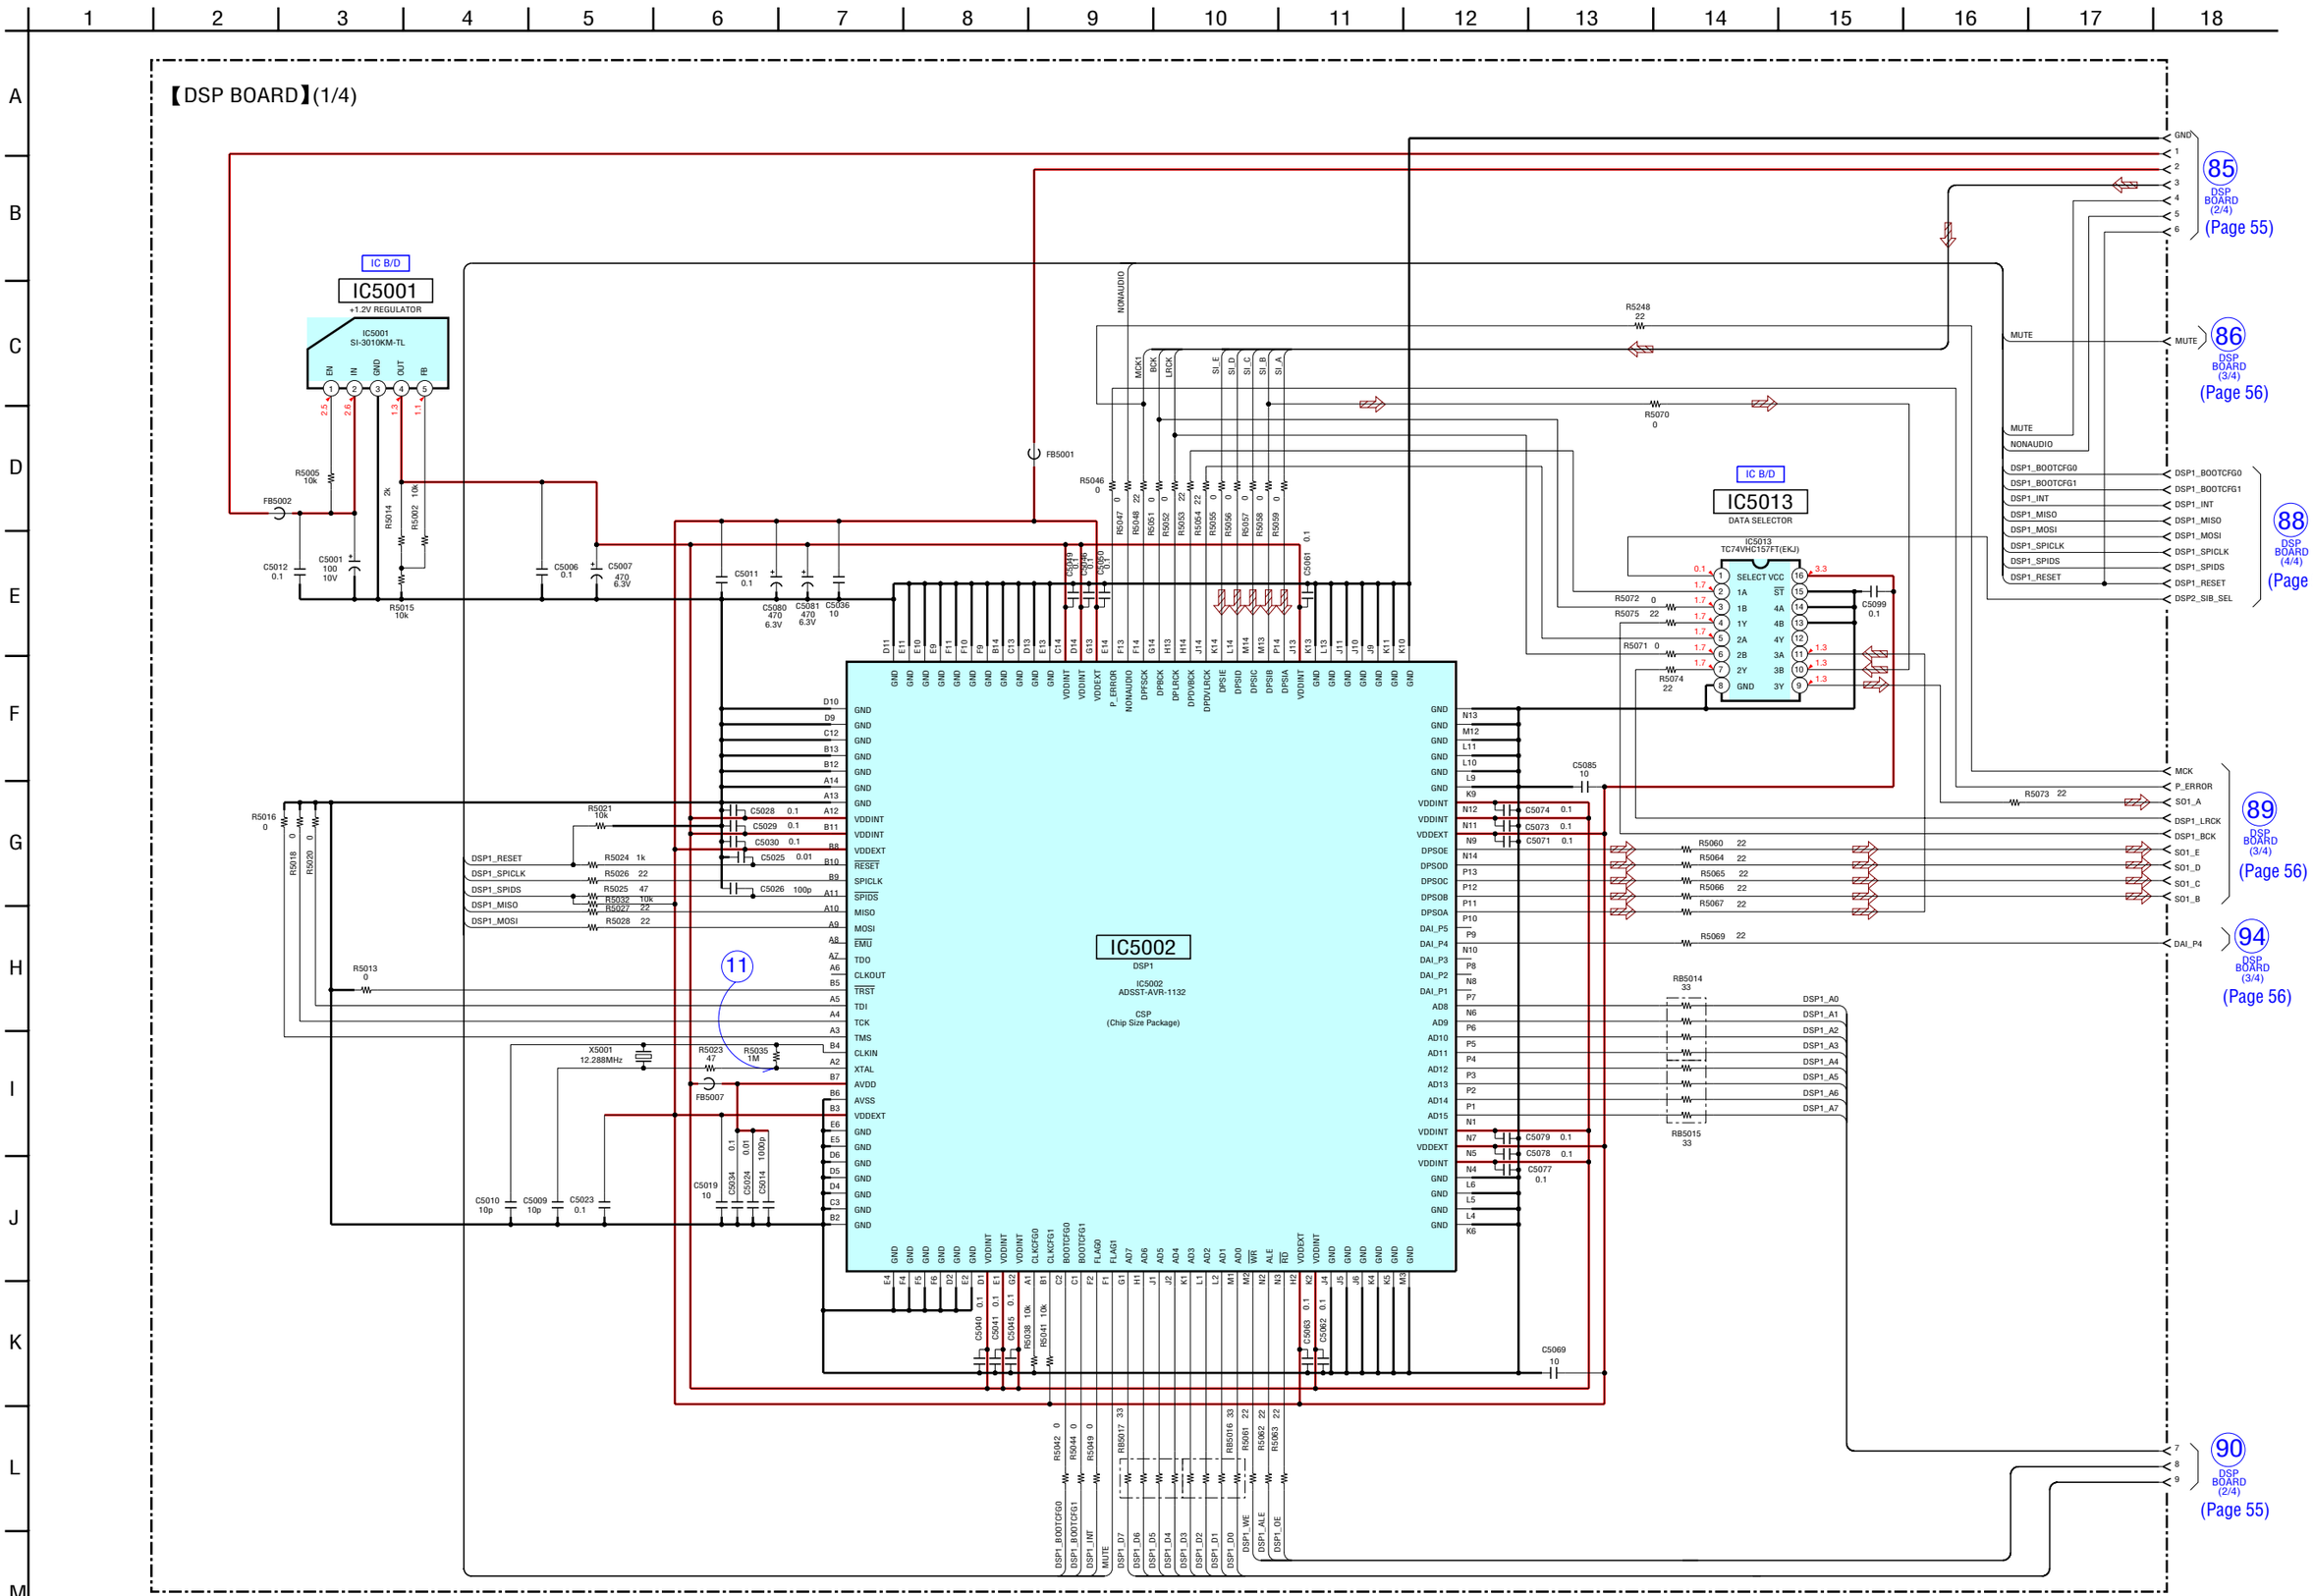

Note: IC5002 cannot exchange with single. When IC5002 is damaged, exchange the entire mounted board.

6-30. SCHEMATIC DIAGRAM – DSP Board (2/4) – • See page 110 for IC Block Diagrams.

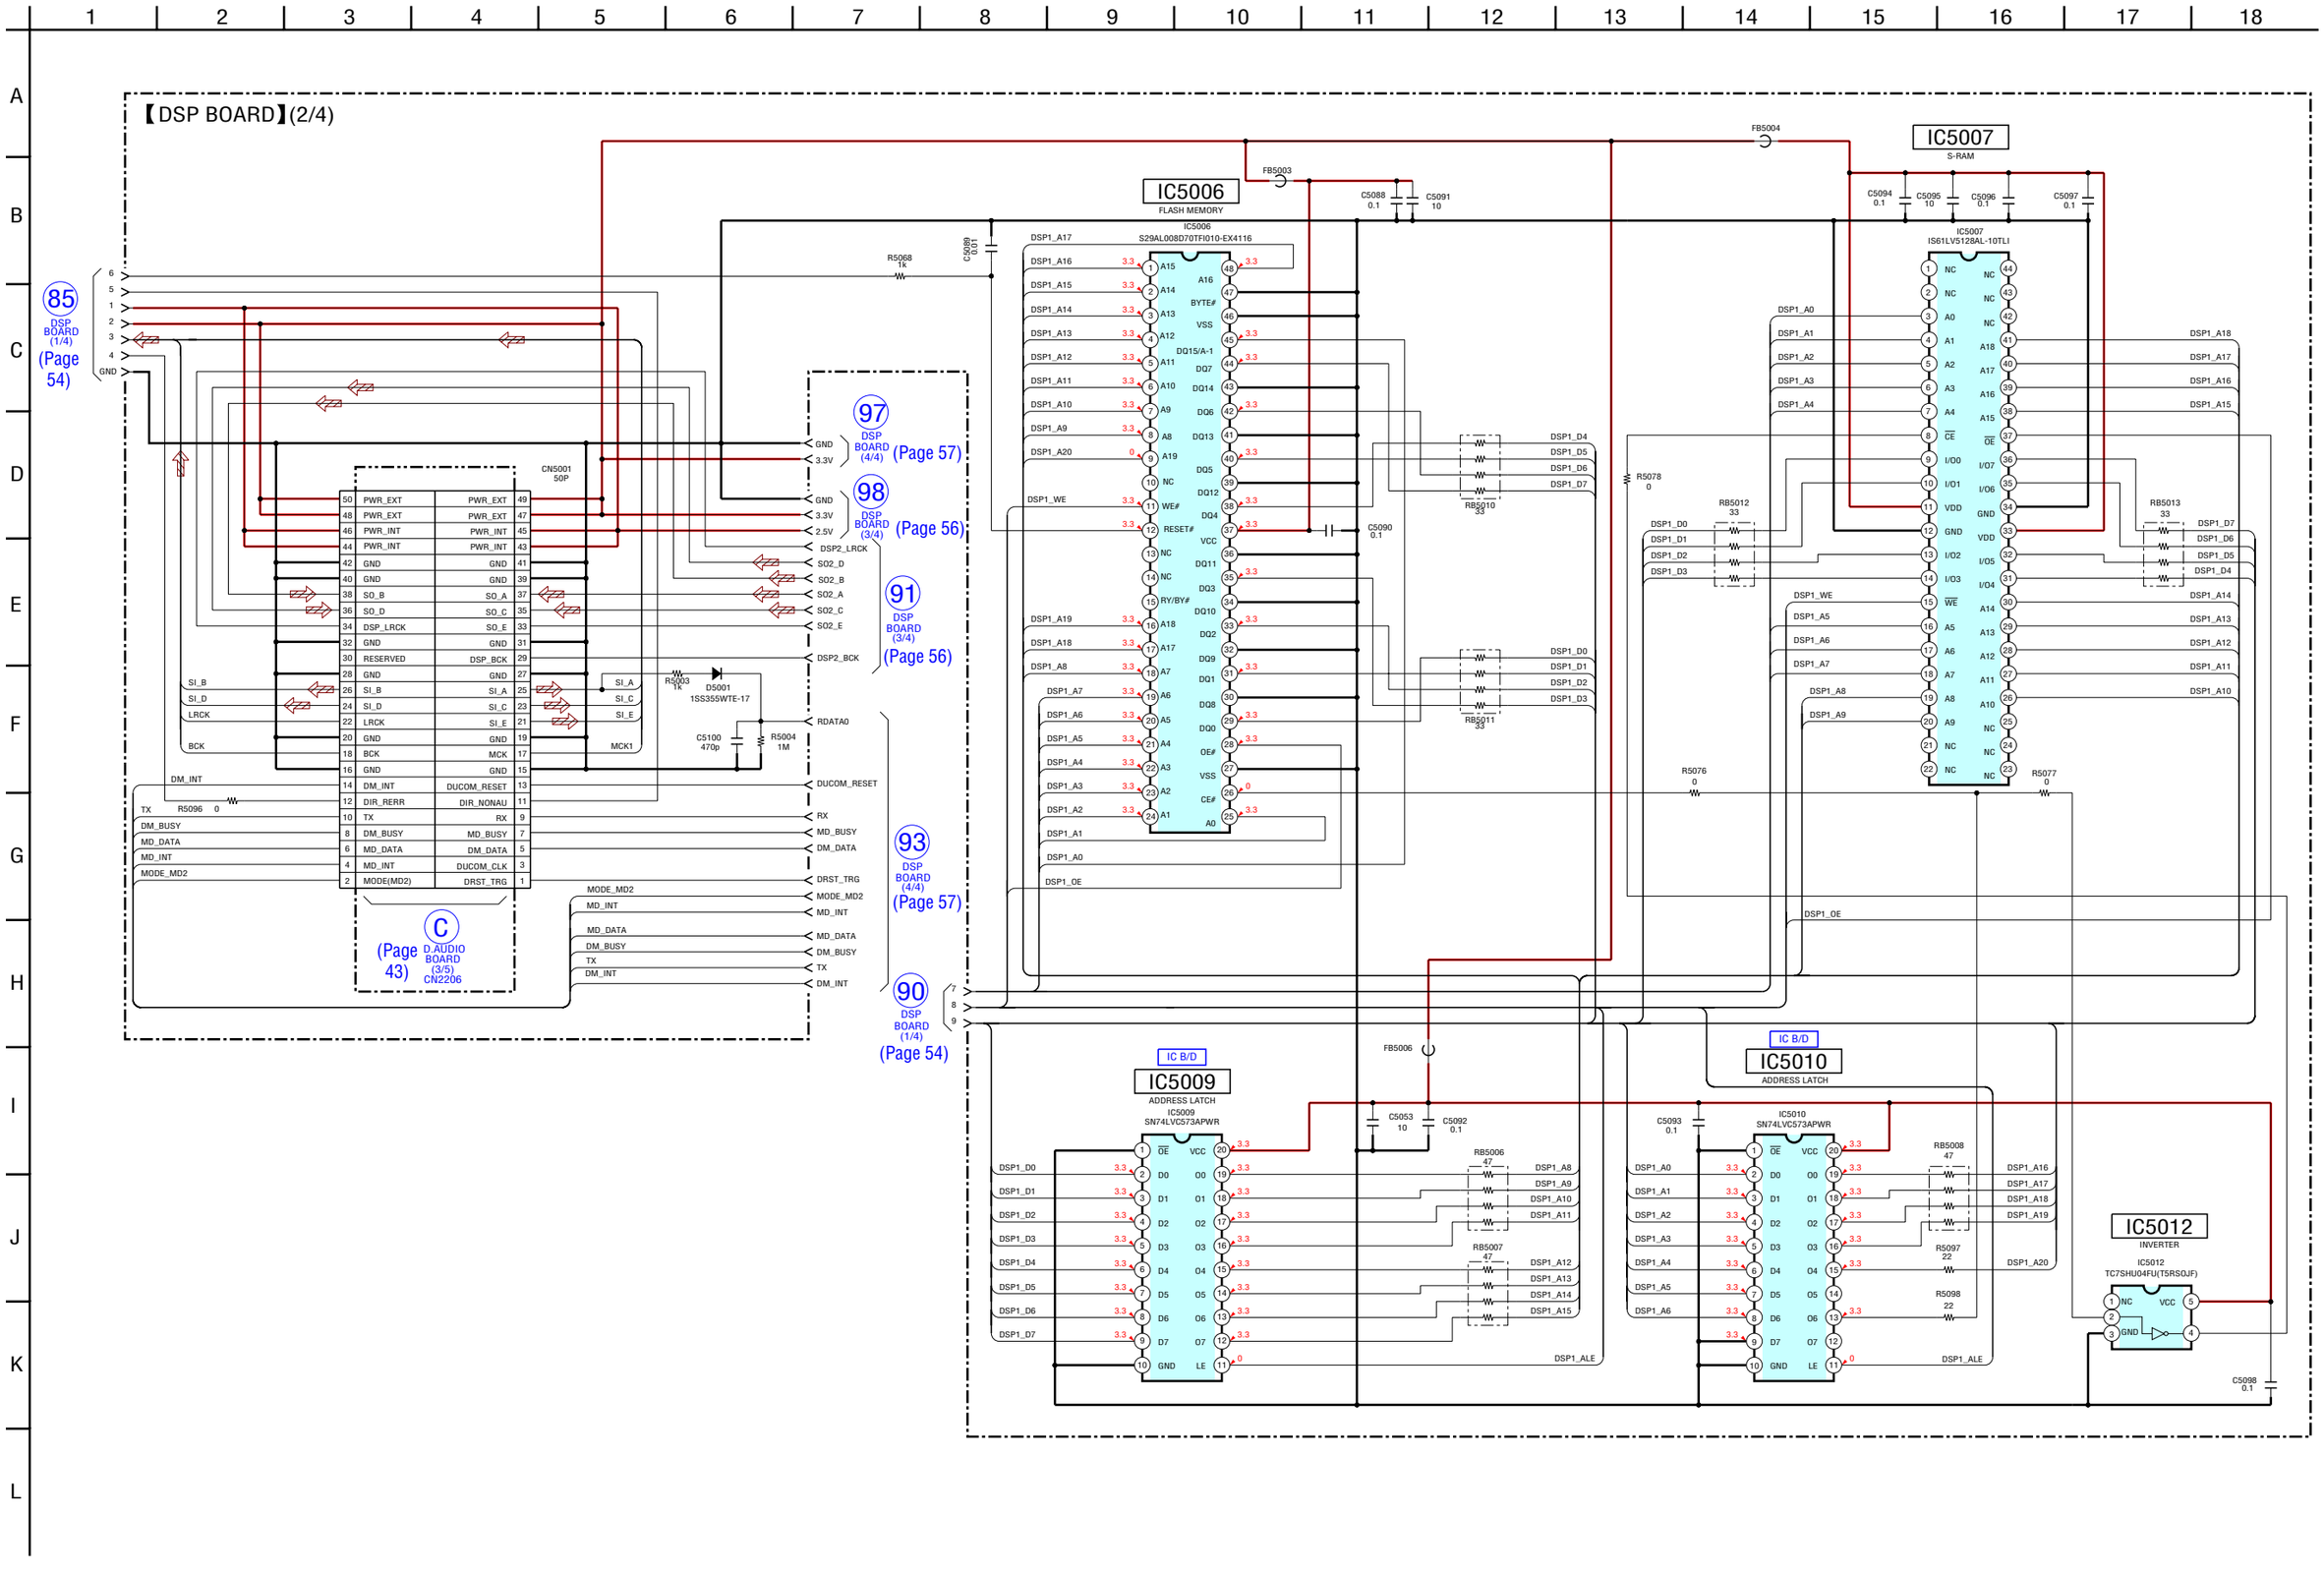

6-31. SCHEMATIC DIAGRAM – DSP Board (3/4) –

• See page 110 for Waveforms. • See page 110 for IC Block Diagrams. • See page 123 for IC Pin Function Description.

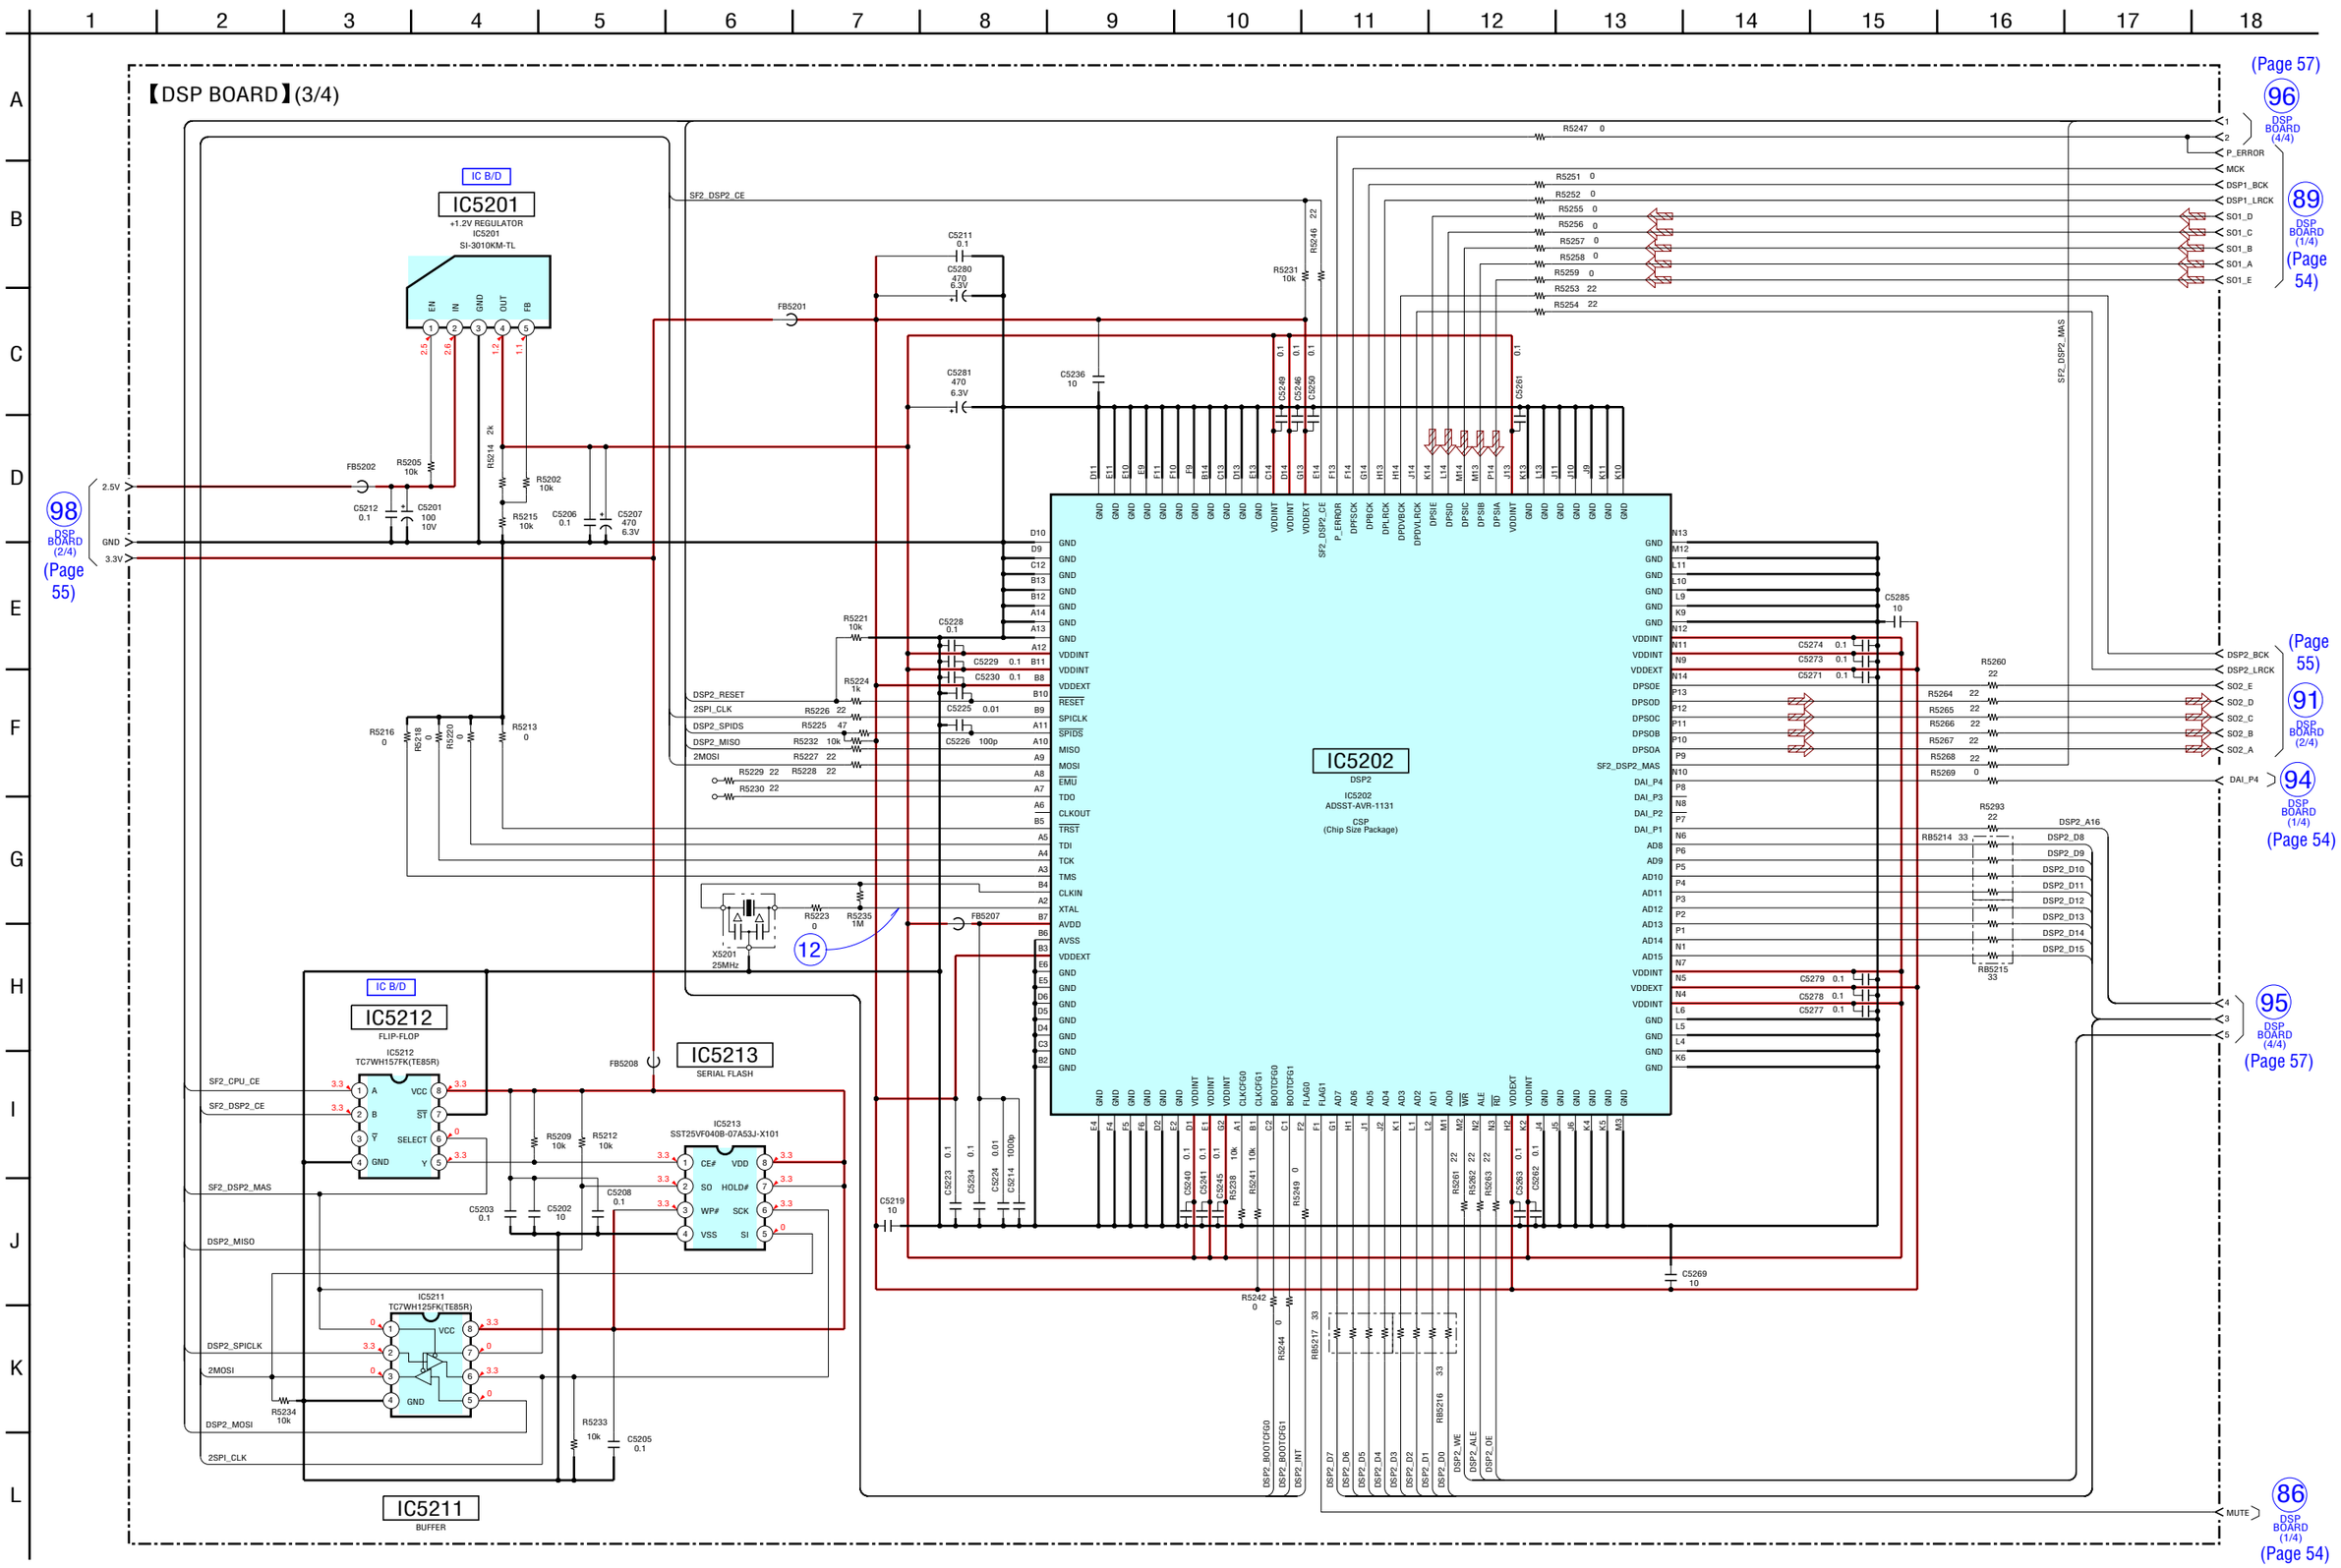

Note: IC5202 cannot exchange with single. When IC5202 is damaged, exchange the entire mounted board.

6-32. SCHEMATIC DIAGRAM – DSP Board (4/4) –

• See page 110 for Waveforms. • See page 110 for IC Block Diagrams. • See page 123 for IC Pin Function Description.

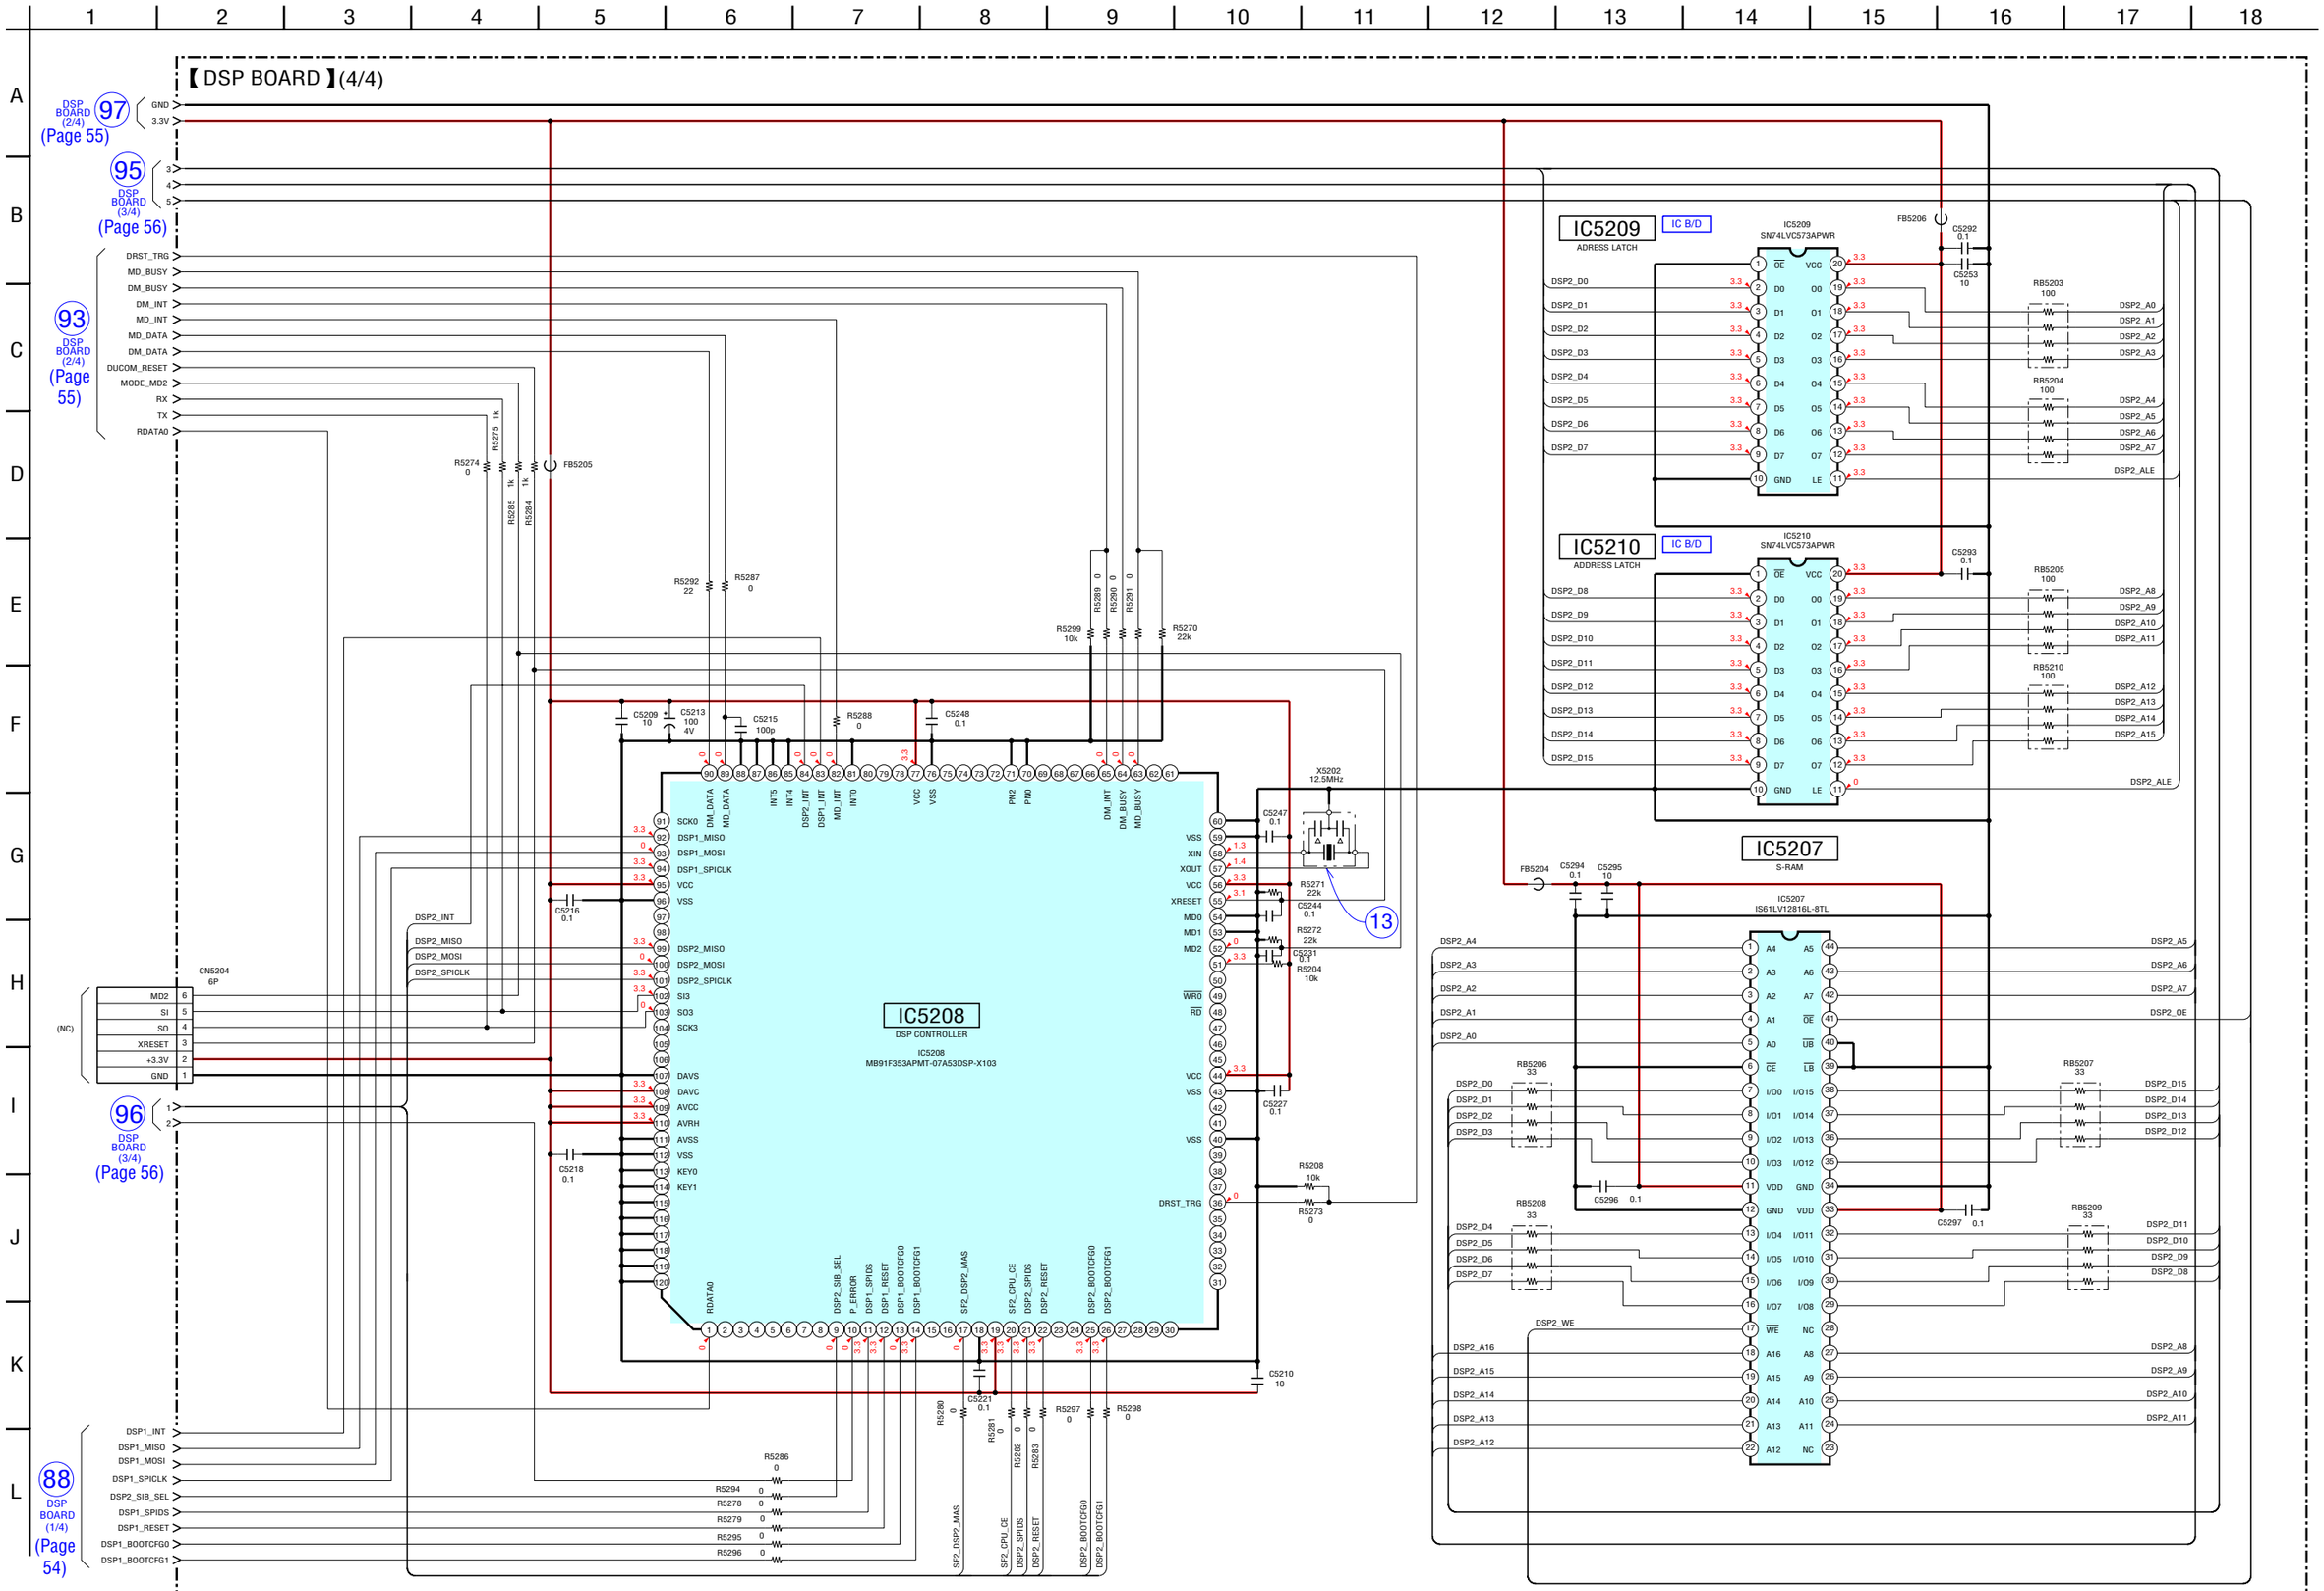

6-33. PRINTED WIRING BOARDS – CONNECTOR Section –

• See page 35 for Circuit Boards Location.

: Uses unleaded solder.

【CONNECTOR 3 BOARD】

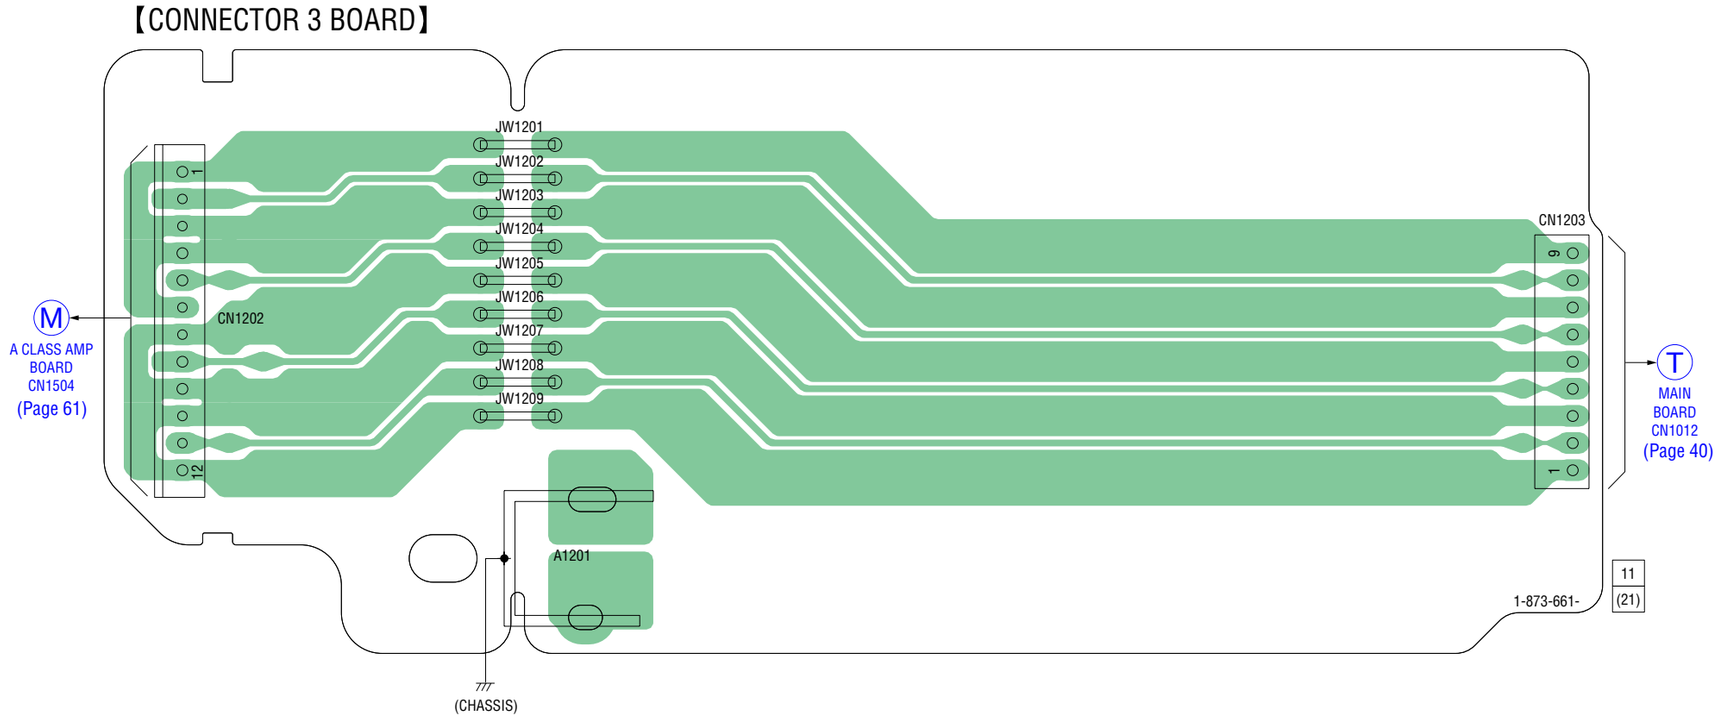

【CONNECTOR 4 BOARD】

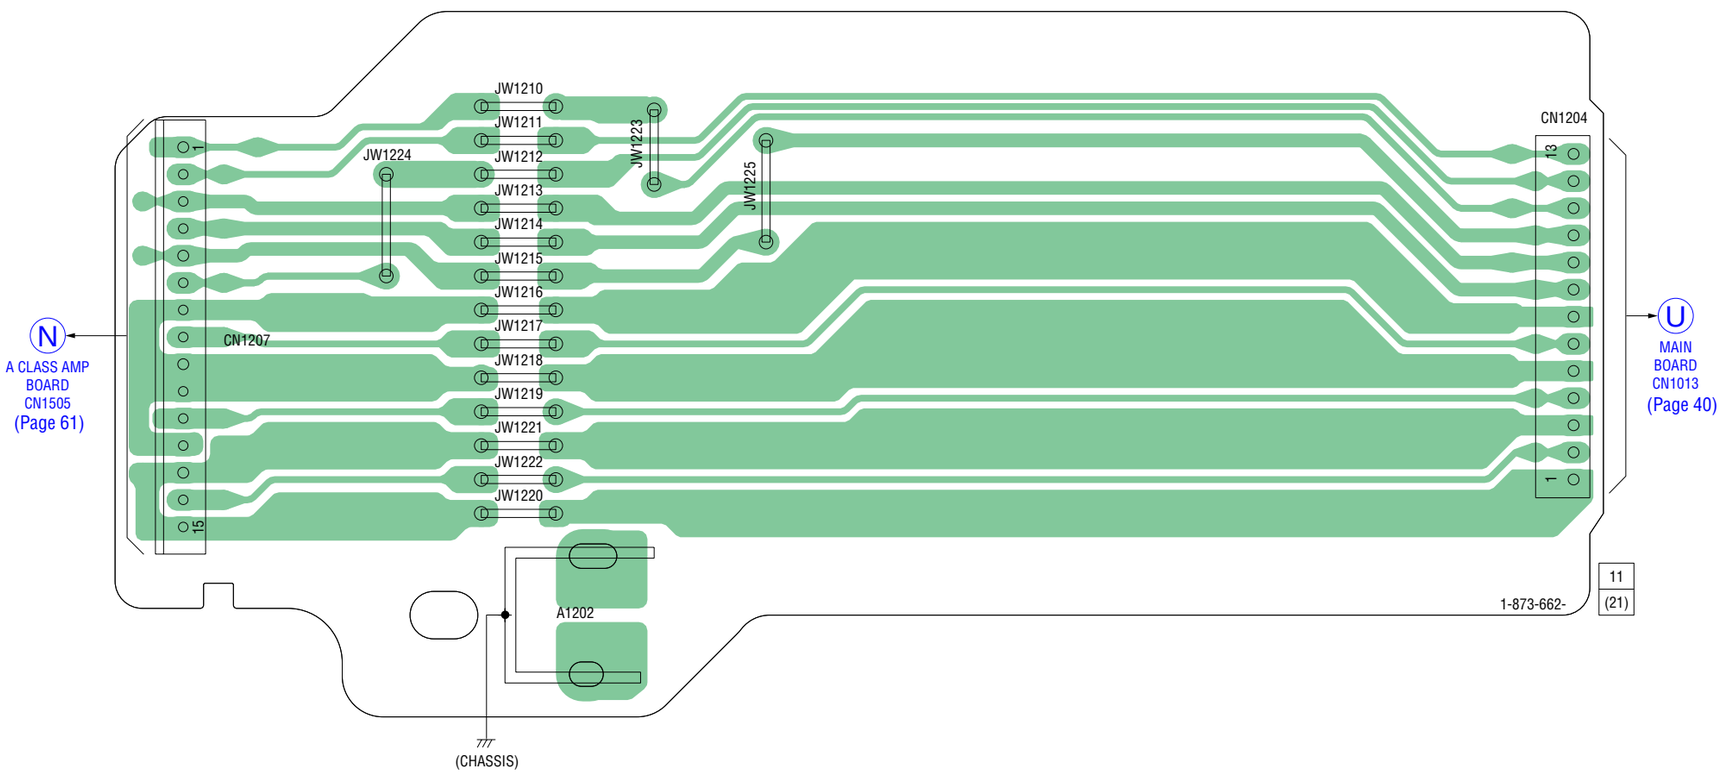

6-34. SCHEMATIC DIAGRAM – CONNECTOR Section –

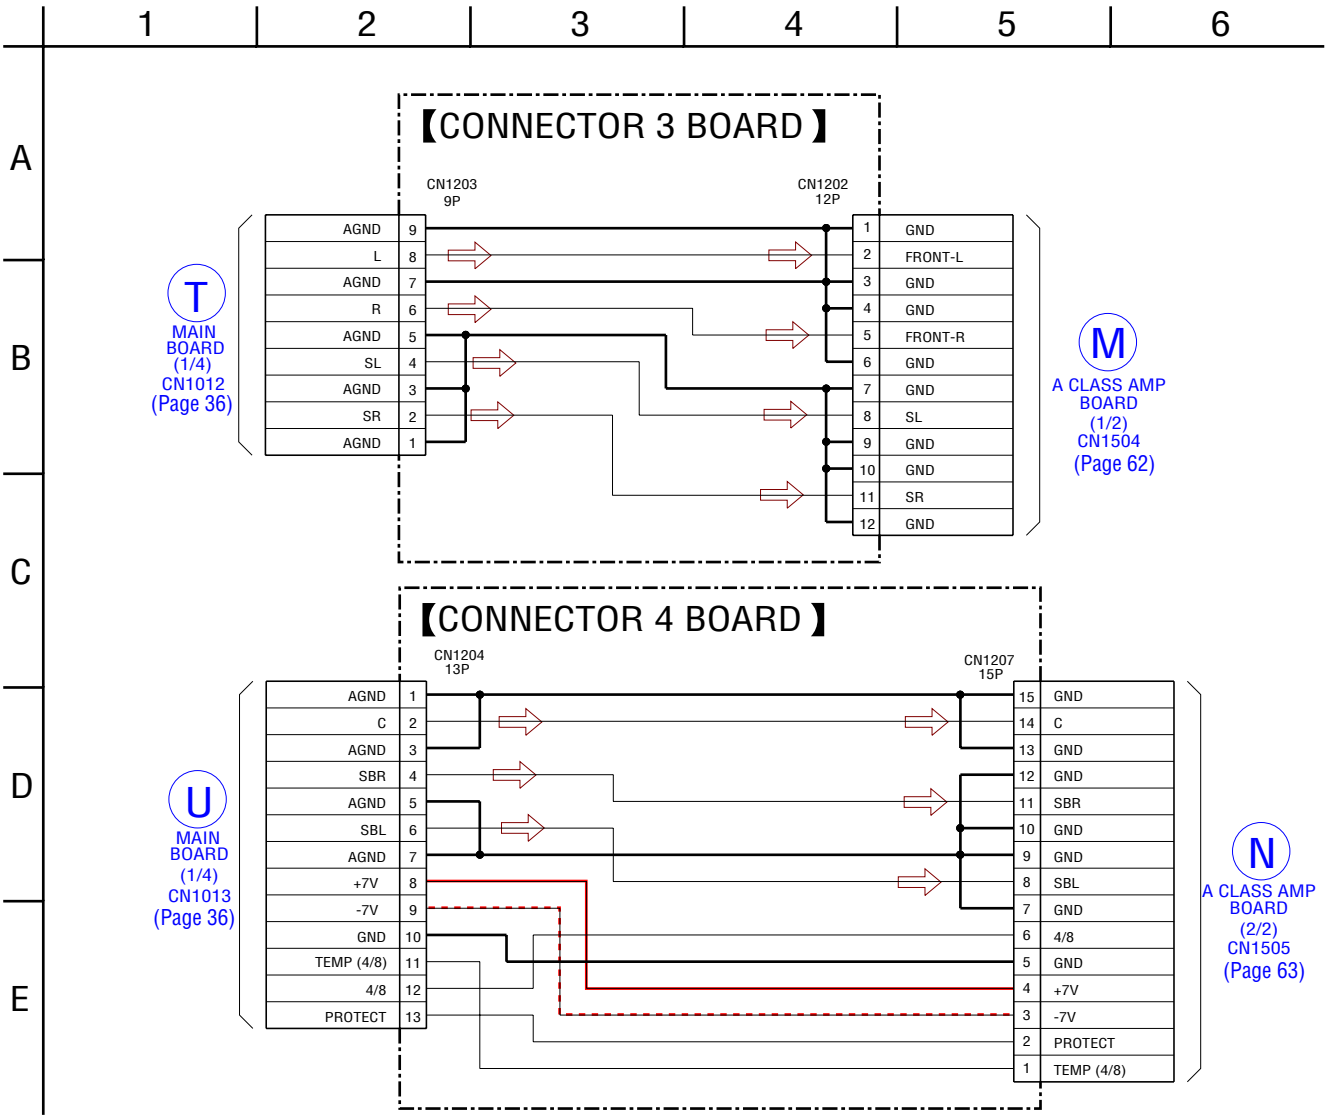

6-35. PRINTED WIRING BOARD – TEMPERATURE DETECTION Board –

• See page 35 for Circuit Boards Location. : Uses unleaded solder.

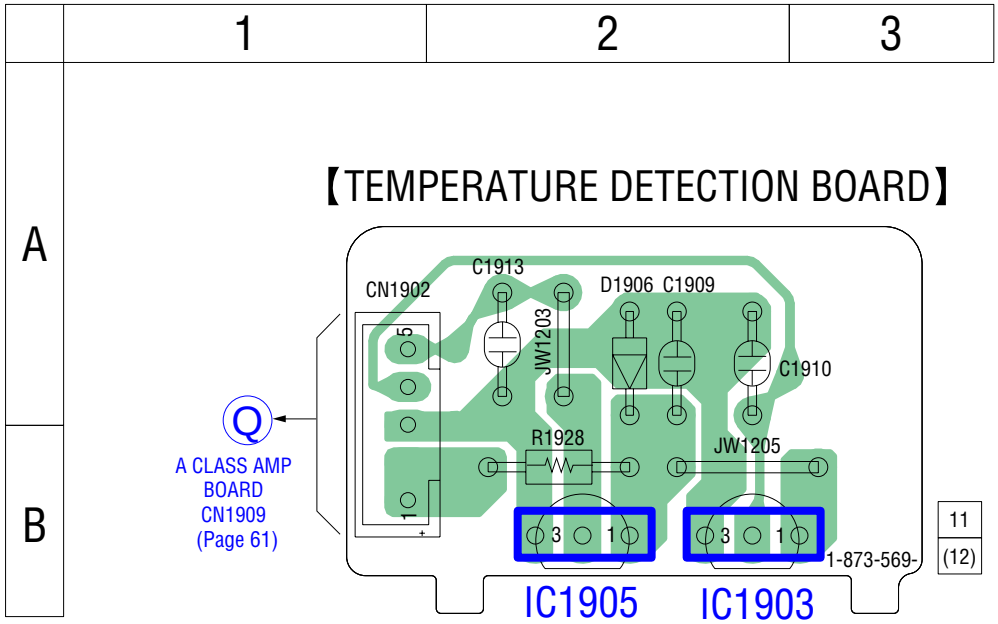

6-36. SCHEMATIC DIAGRAM – TEMPERATURE DETECTION Board –

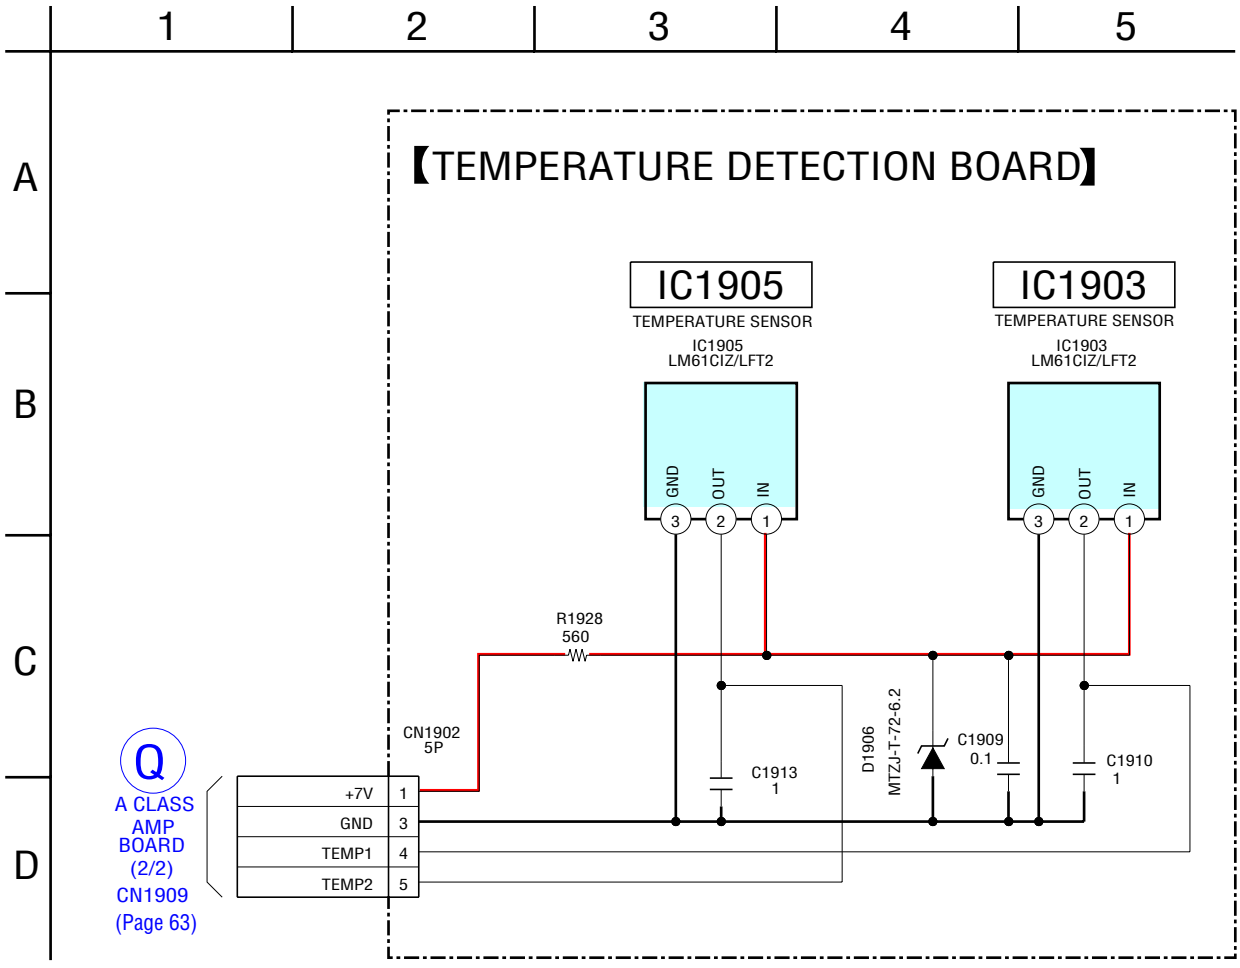

6-37. PRINTED WIRING BOARD – A CLASS AMP Board –

• See page 35 for Circuit Boards Location. : Uses unleaded solder.

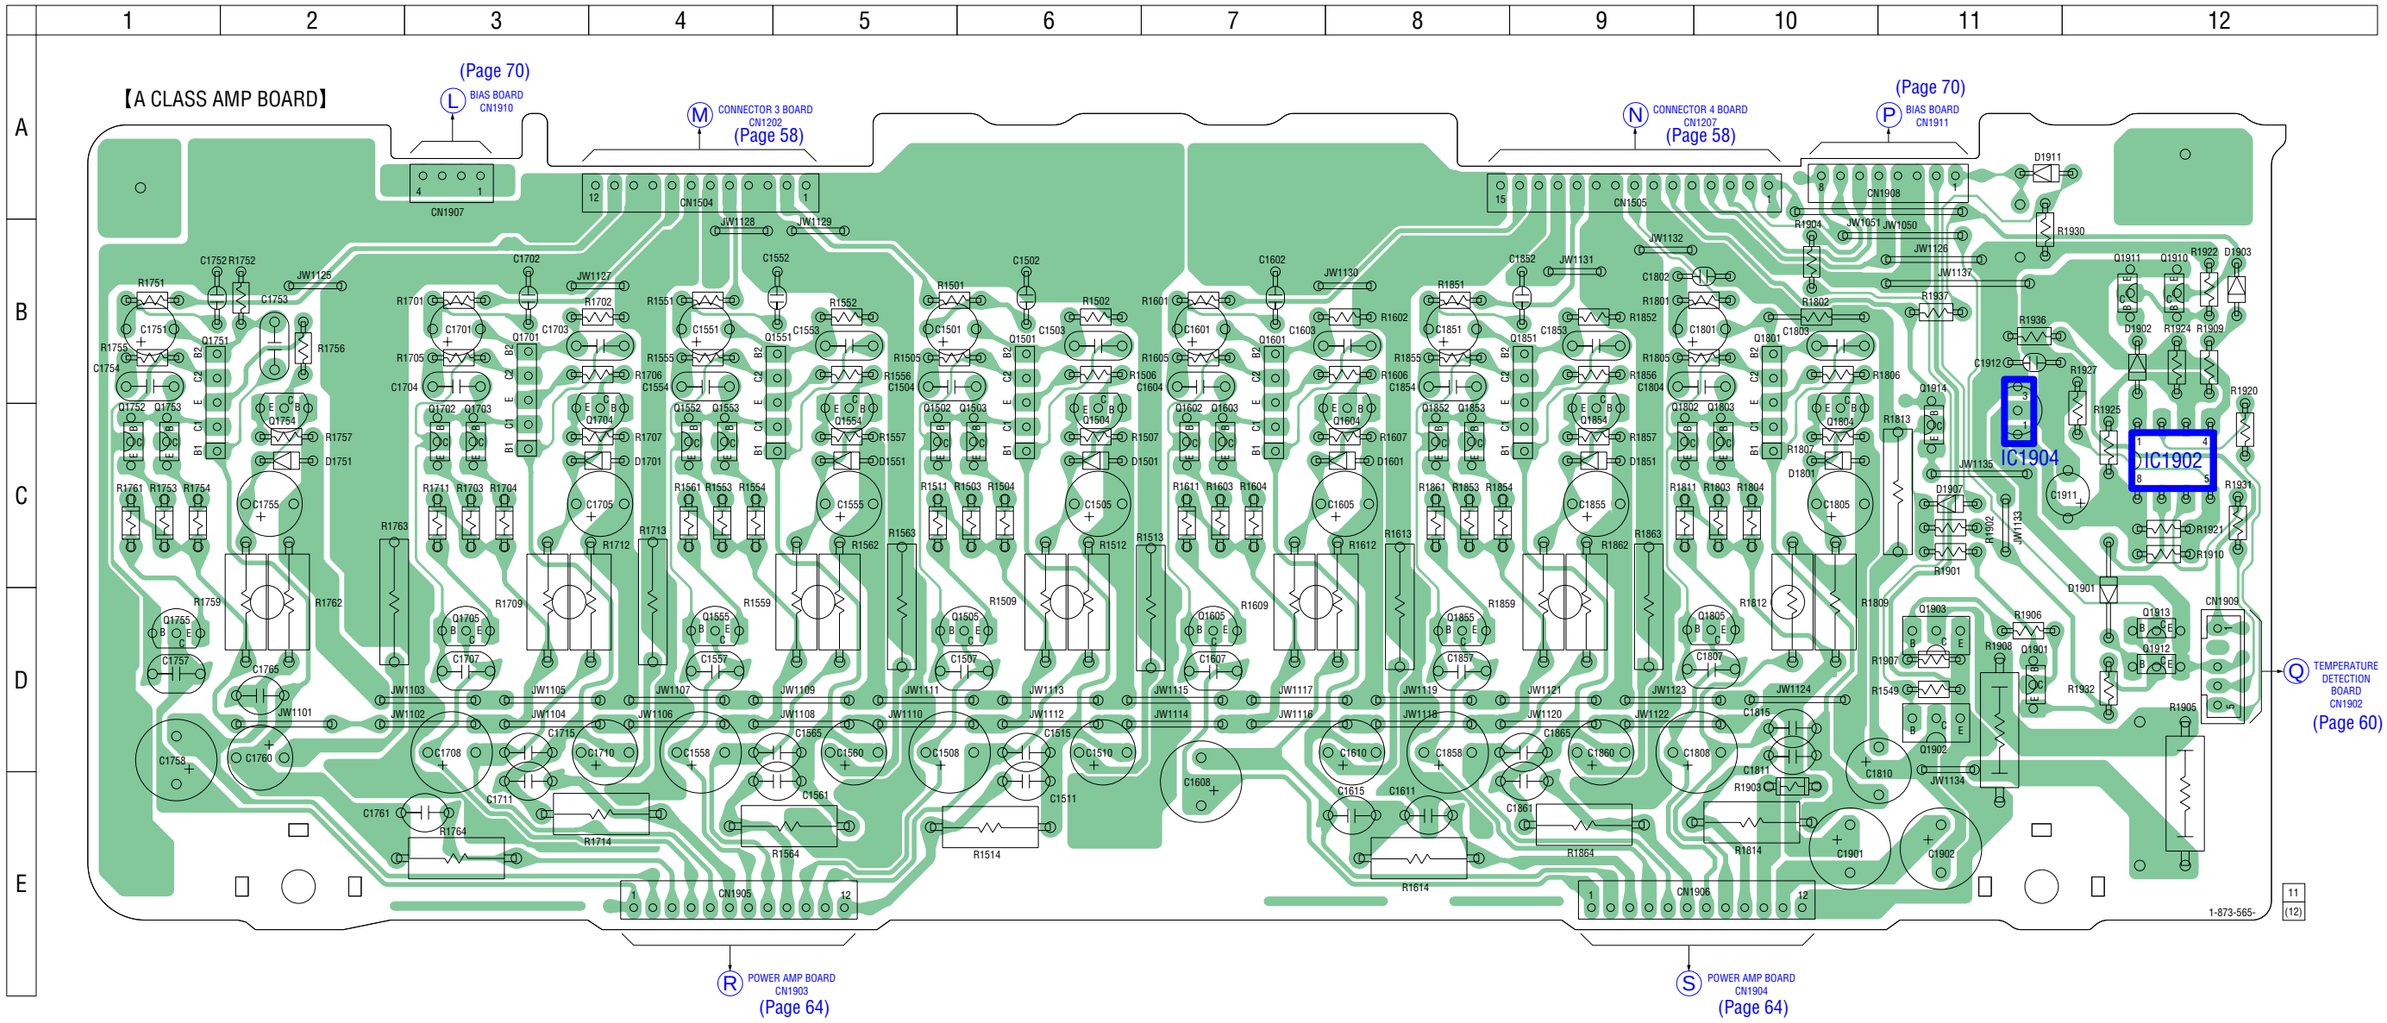

• **Semiconductor Location**

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D1501	C-6	Q1501	B-6	Q1701	B-3	Q1851	B-9
D1551	C-5	Q1502	C-5	Q1702	C-3	Q1852	C-8
D1601	C-8	Q1503	C-6	Q1703	C-3	Q1853	C-8
D1701	C-4	Q1504	C-6	Q1704	C-4	Q1854	C-9
D1751	C-2	Q1505	D-6	Q1705	D-3	Q1855	D-8
D1801	C-10	Q1551	B-5	Q1751	B-1	Q1901	D-11
D1851	C-9	Q1552	C-4	Q1752	C-1	Q1902	D-11
D1901	D-12	Q1553	C-4	Q1753	C-1	Q1903	D-11
D1902	B-12	Q1554	C-5	Q1754	C-2	Q1910	B-12
D1903	B-12	Q1555	D-4	Q1755	D-1	Q1911	B-12
D1907	C-11	Q1601	B-7	Q1801	B-10	Q1912	D-12
D1911	A-11	Q1602	C-7	Q1802	C-9	Q1913	D-12
		Q1603	C-7	Q1803	C-10	Q1914	C-11
IC1902	C-12	Q1604	C-8	Q1804	C-10		
IC1904	C-11	Q1605	D-7	Q1805	D-10		

6-38. SCHEMATIC DIAGRAM – A CLASS AMP Board (1/2) –

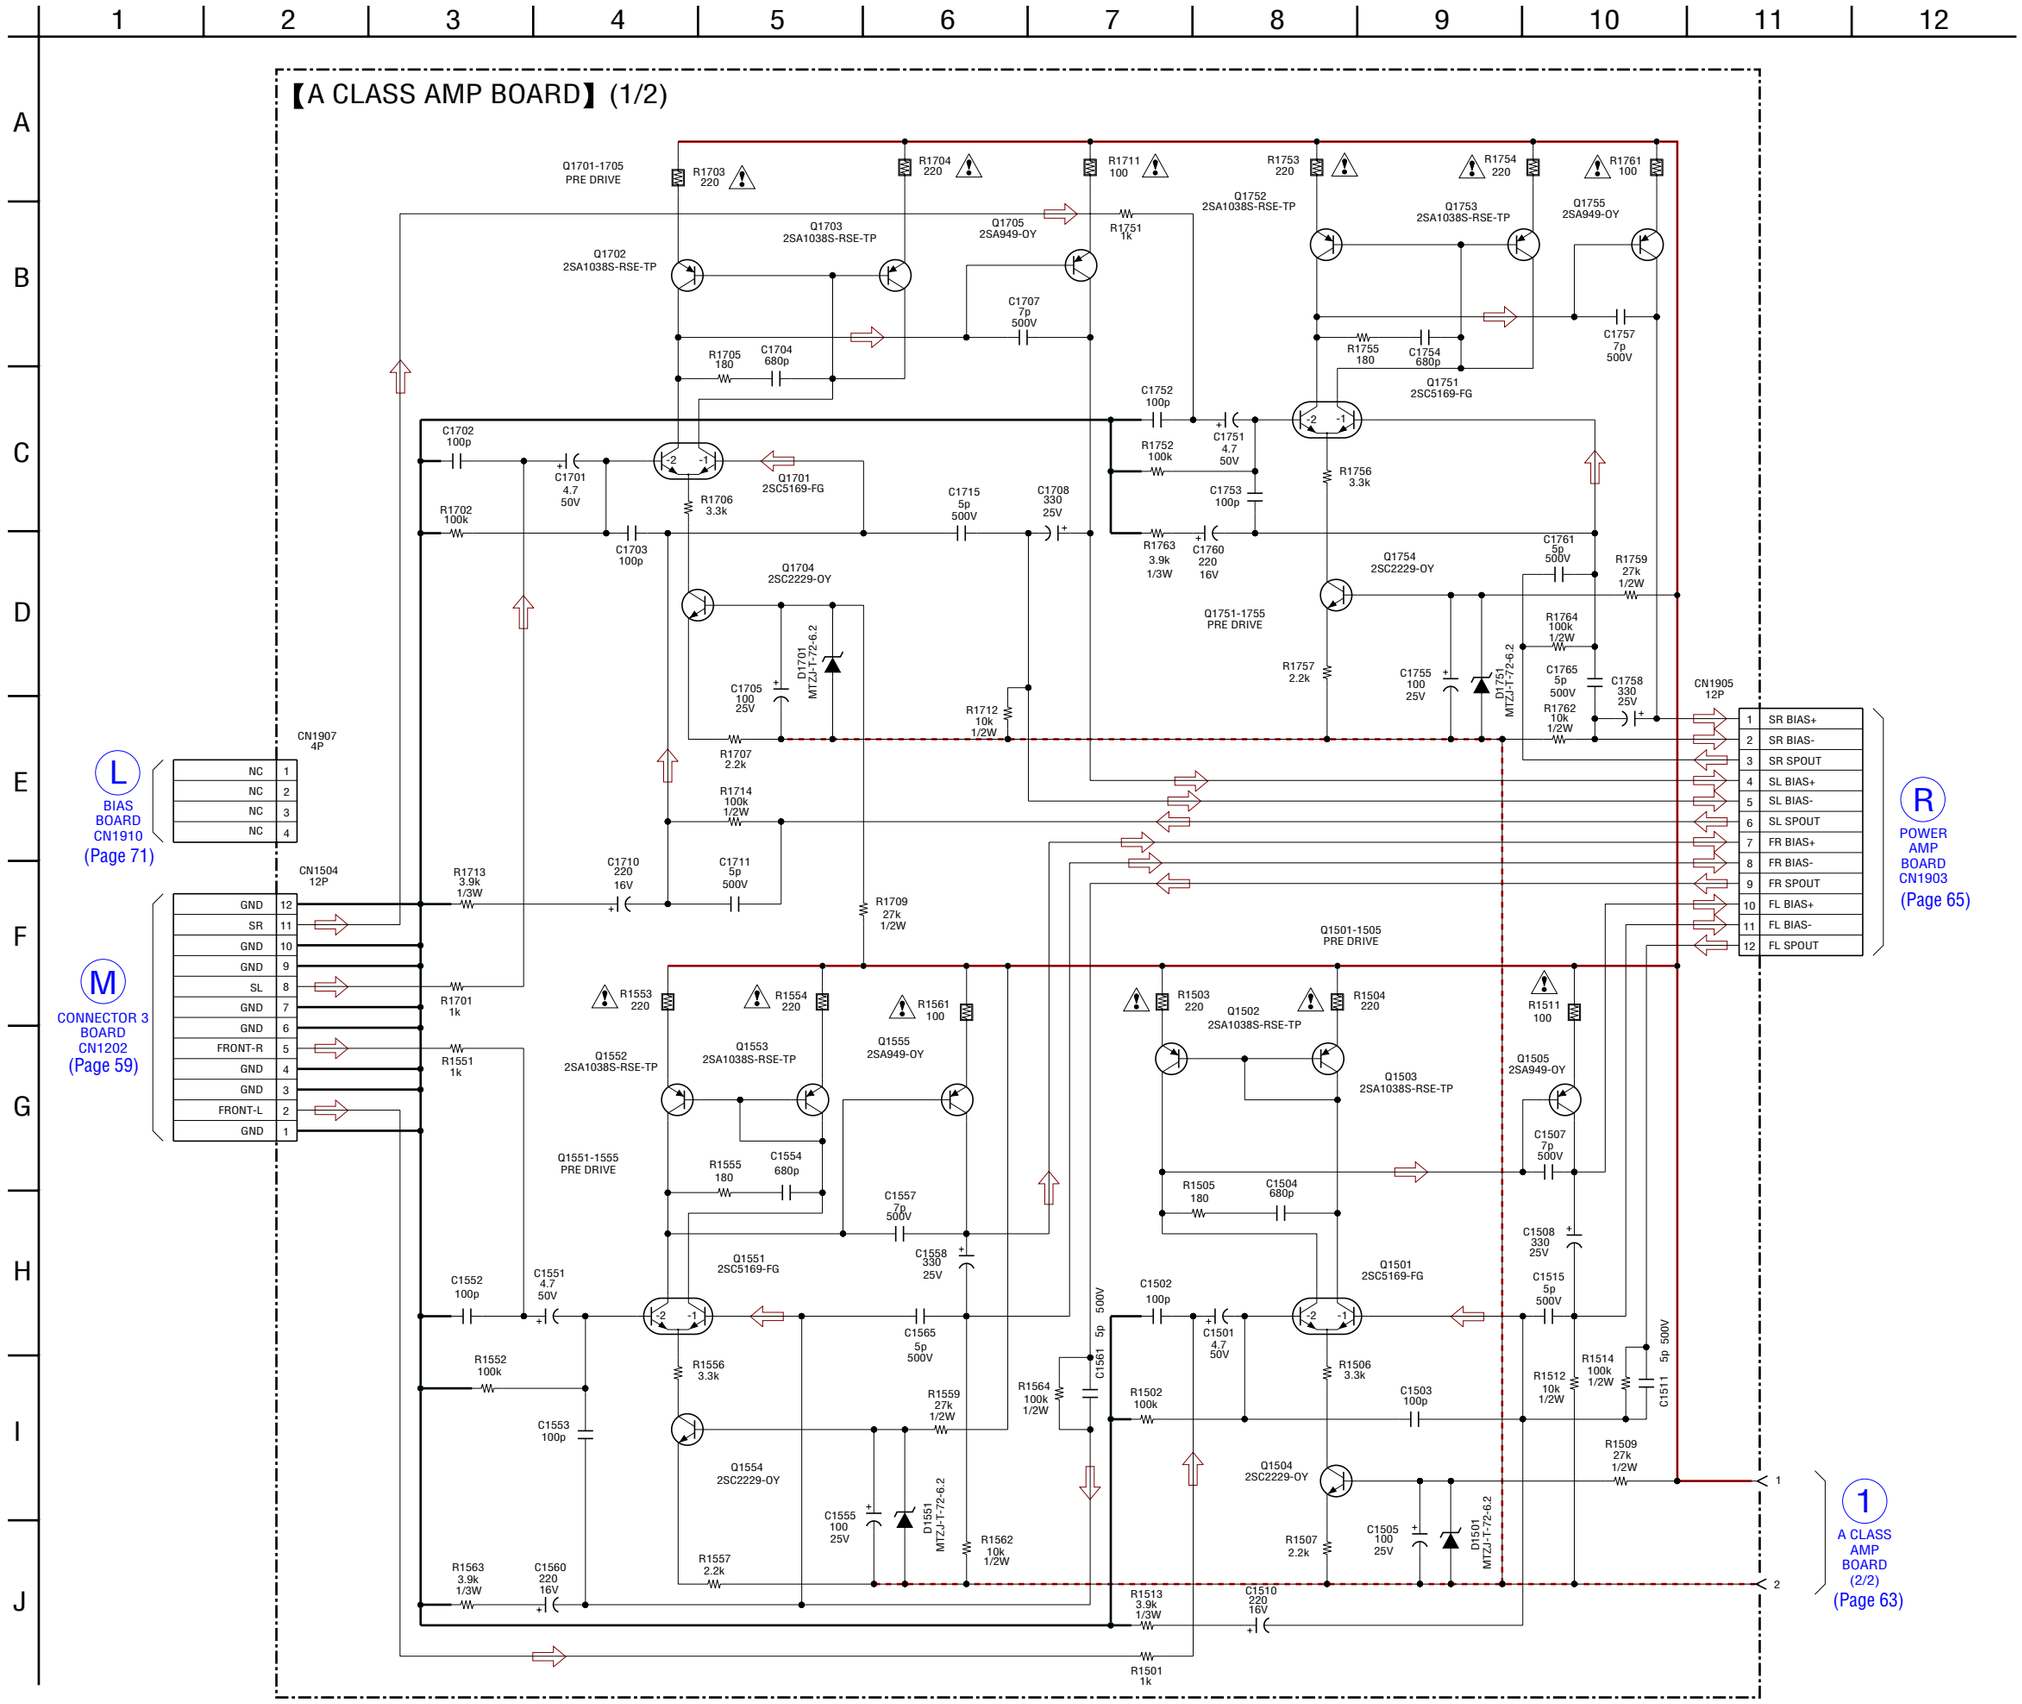

6-39. SCHEMATIC DIAGRAM – A CLASS AMP Board (2/2) –

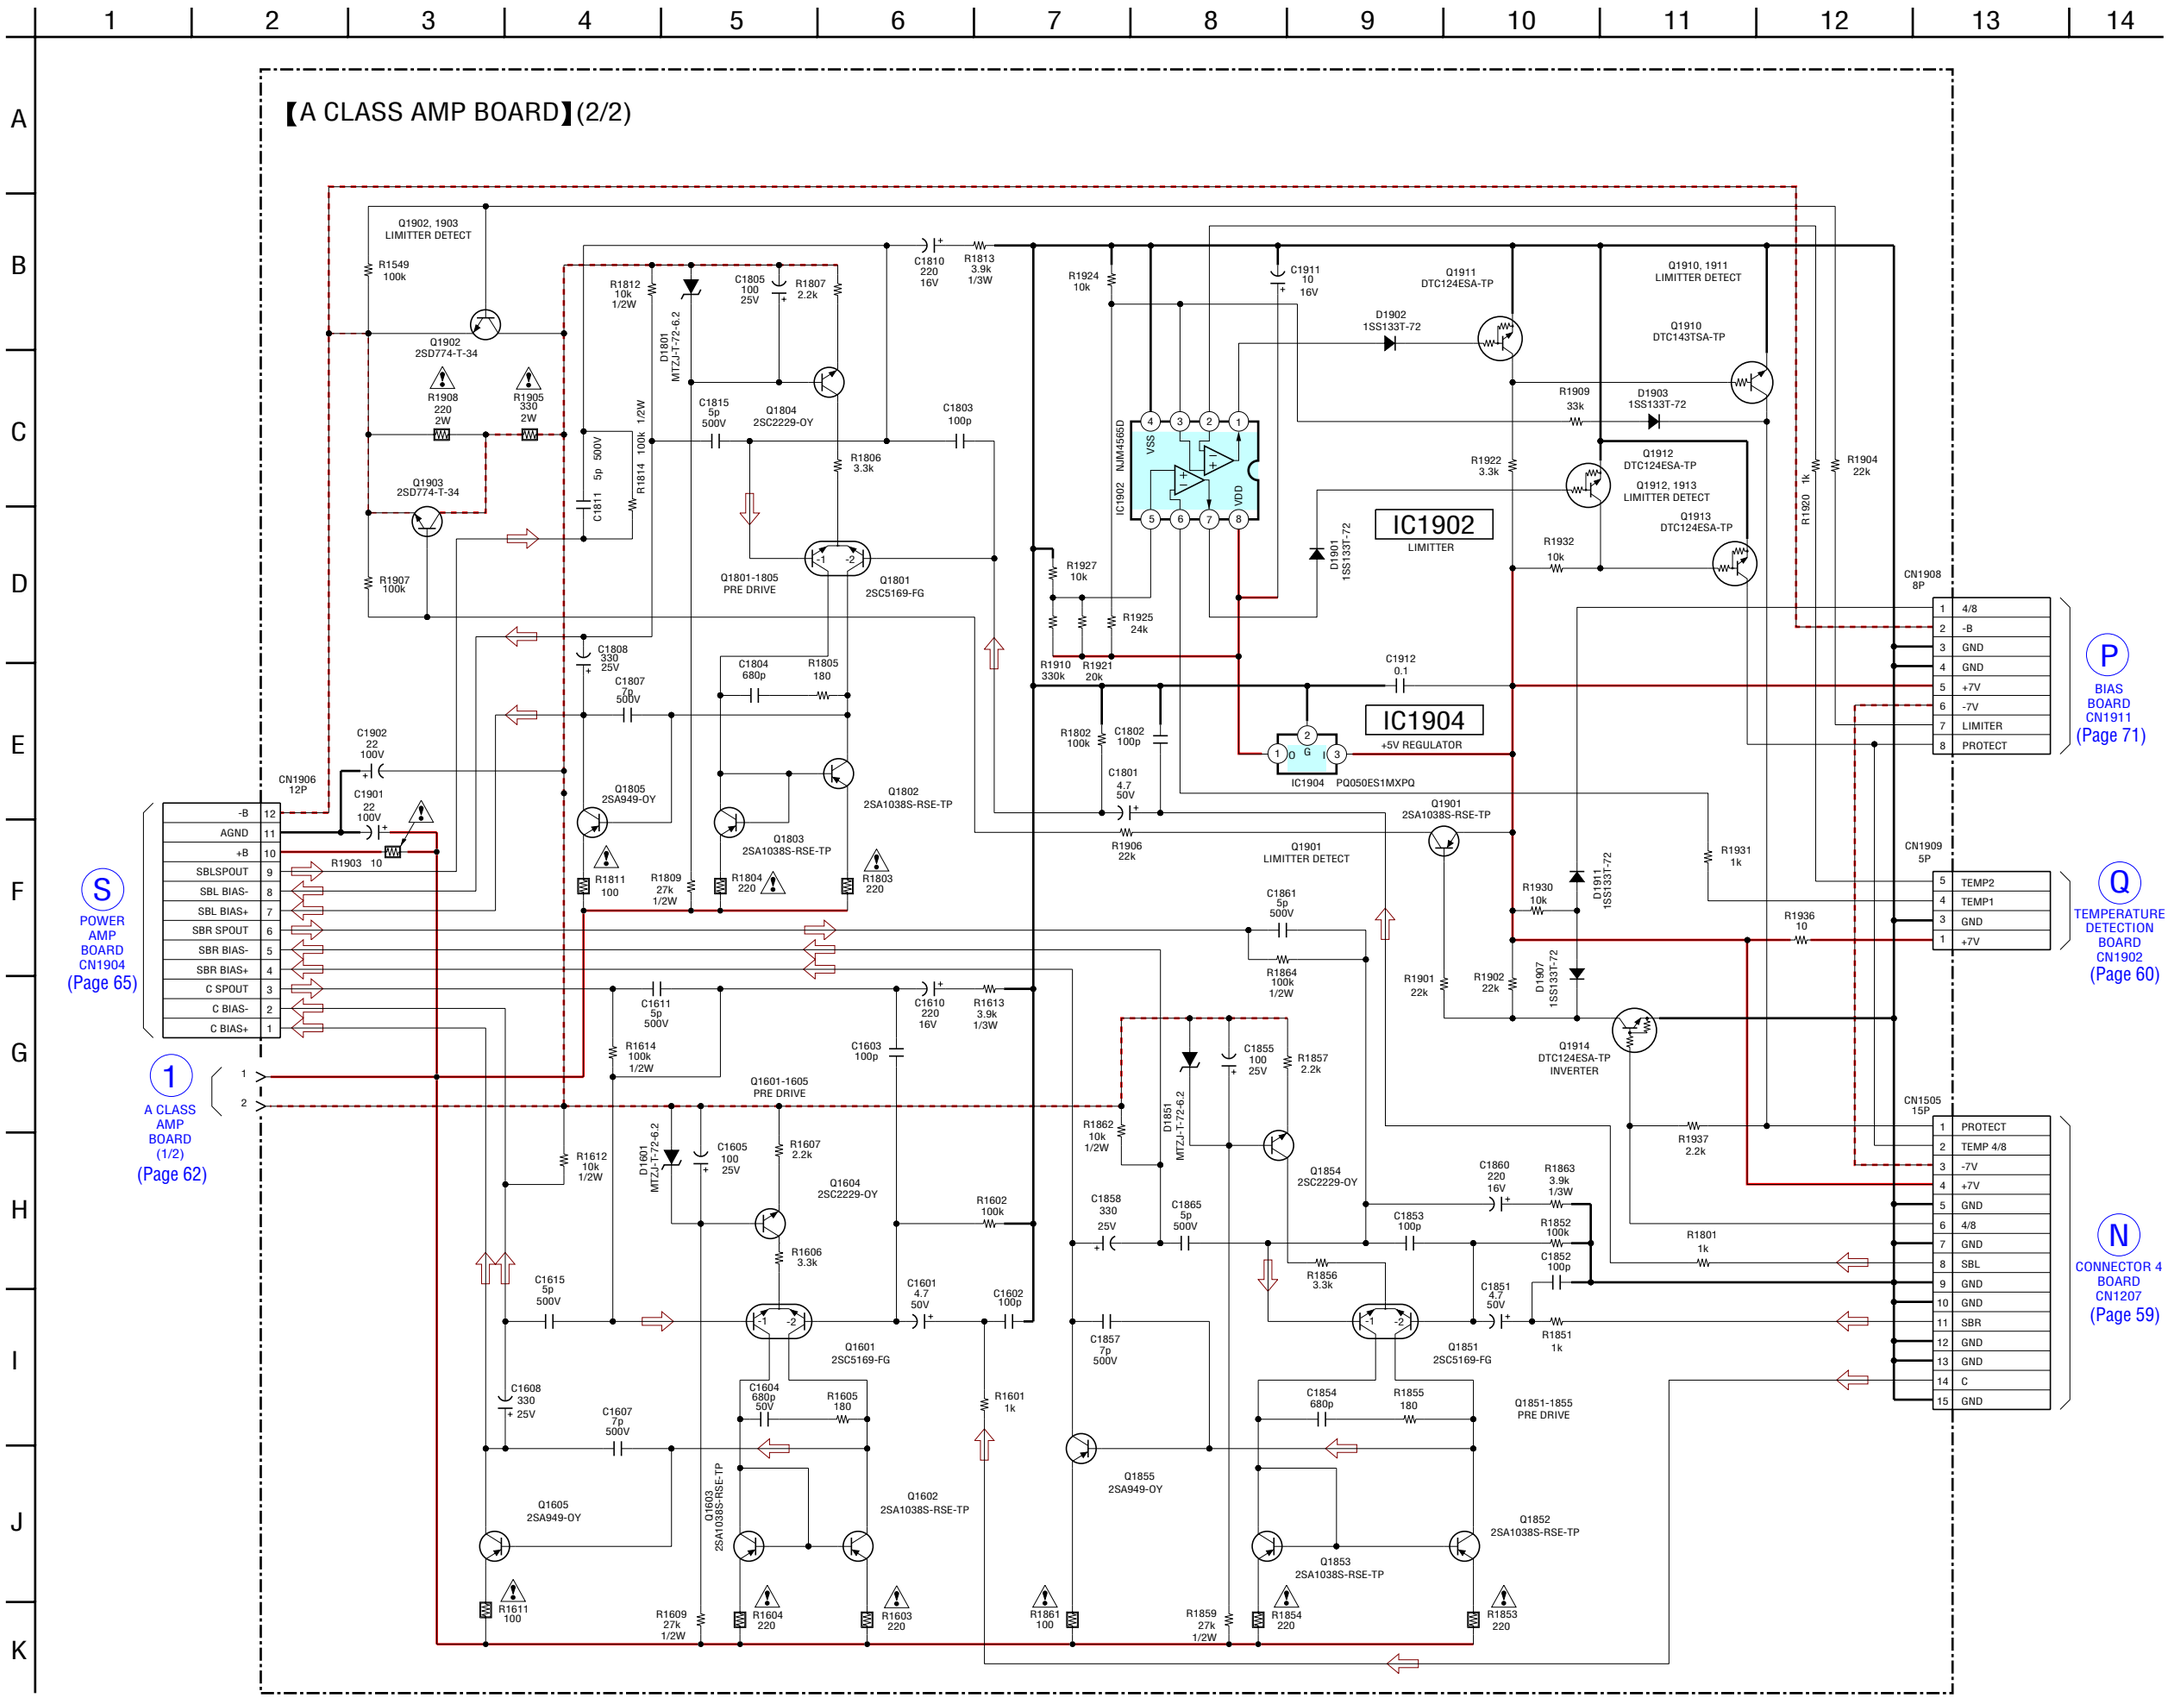

6-40. PRINTED WIRING BOARD – POWER AMP Board –

• See page 35 for Circuit Boards Location. : Uses unleaded solder.

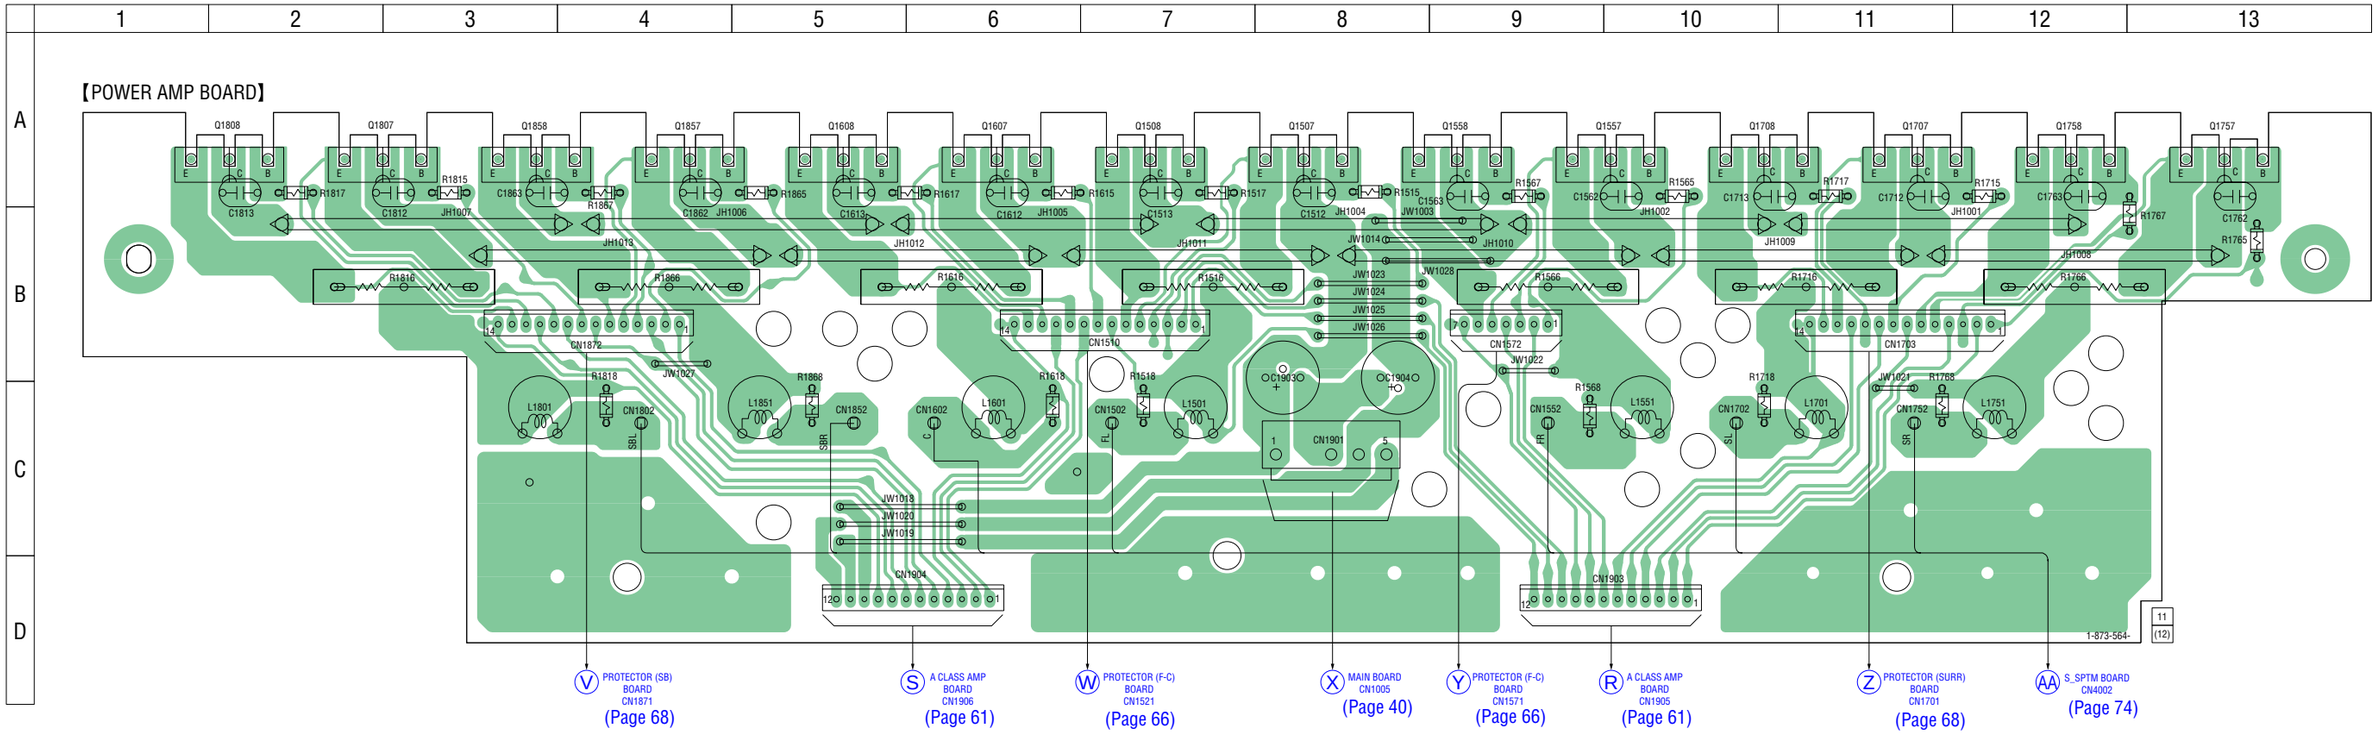
【POWER AMP BOARD】
1-873-564-11 (12)
V PROTECTOR (SB) BOARD CN1871 (Page 68)
S A CLASS AMP BOARD CN1906 (Page 61)
W PROTECTOR (F-C) BOARD CN1521 (Page 66)
X MAIN BOARD CN1005 (Page 40)
Y PROTECTOR (F-C) BOARD CN1571 (Page 66)
R A CLASS AMP BOARD CN1905 (Page 61)
Z PROTECTOR (SURR) BOARD CN1701 (Page 68)
AA S_SPTM BOARD CN4002 (Page 74)

• **Semiconductor Location**

Ref. No.	Location
Q1507	A-8
Q1508	A-7
Q1557	A-10
Q1558	A-9
Q1607	A-6
Q1608	A-5
Q1707	A-11
Q1708	A-10
Q1757	A-13
Q1758	A-12
Q1807	A-2
Q1808	A-2
Q1857	A-4
Q1858	A-3

6-41. SCHEMATIC DIAGRAM – POWER AMP Board –

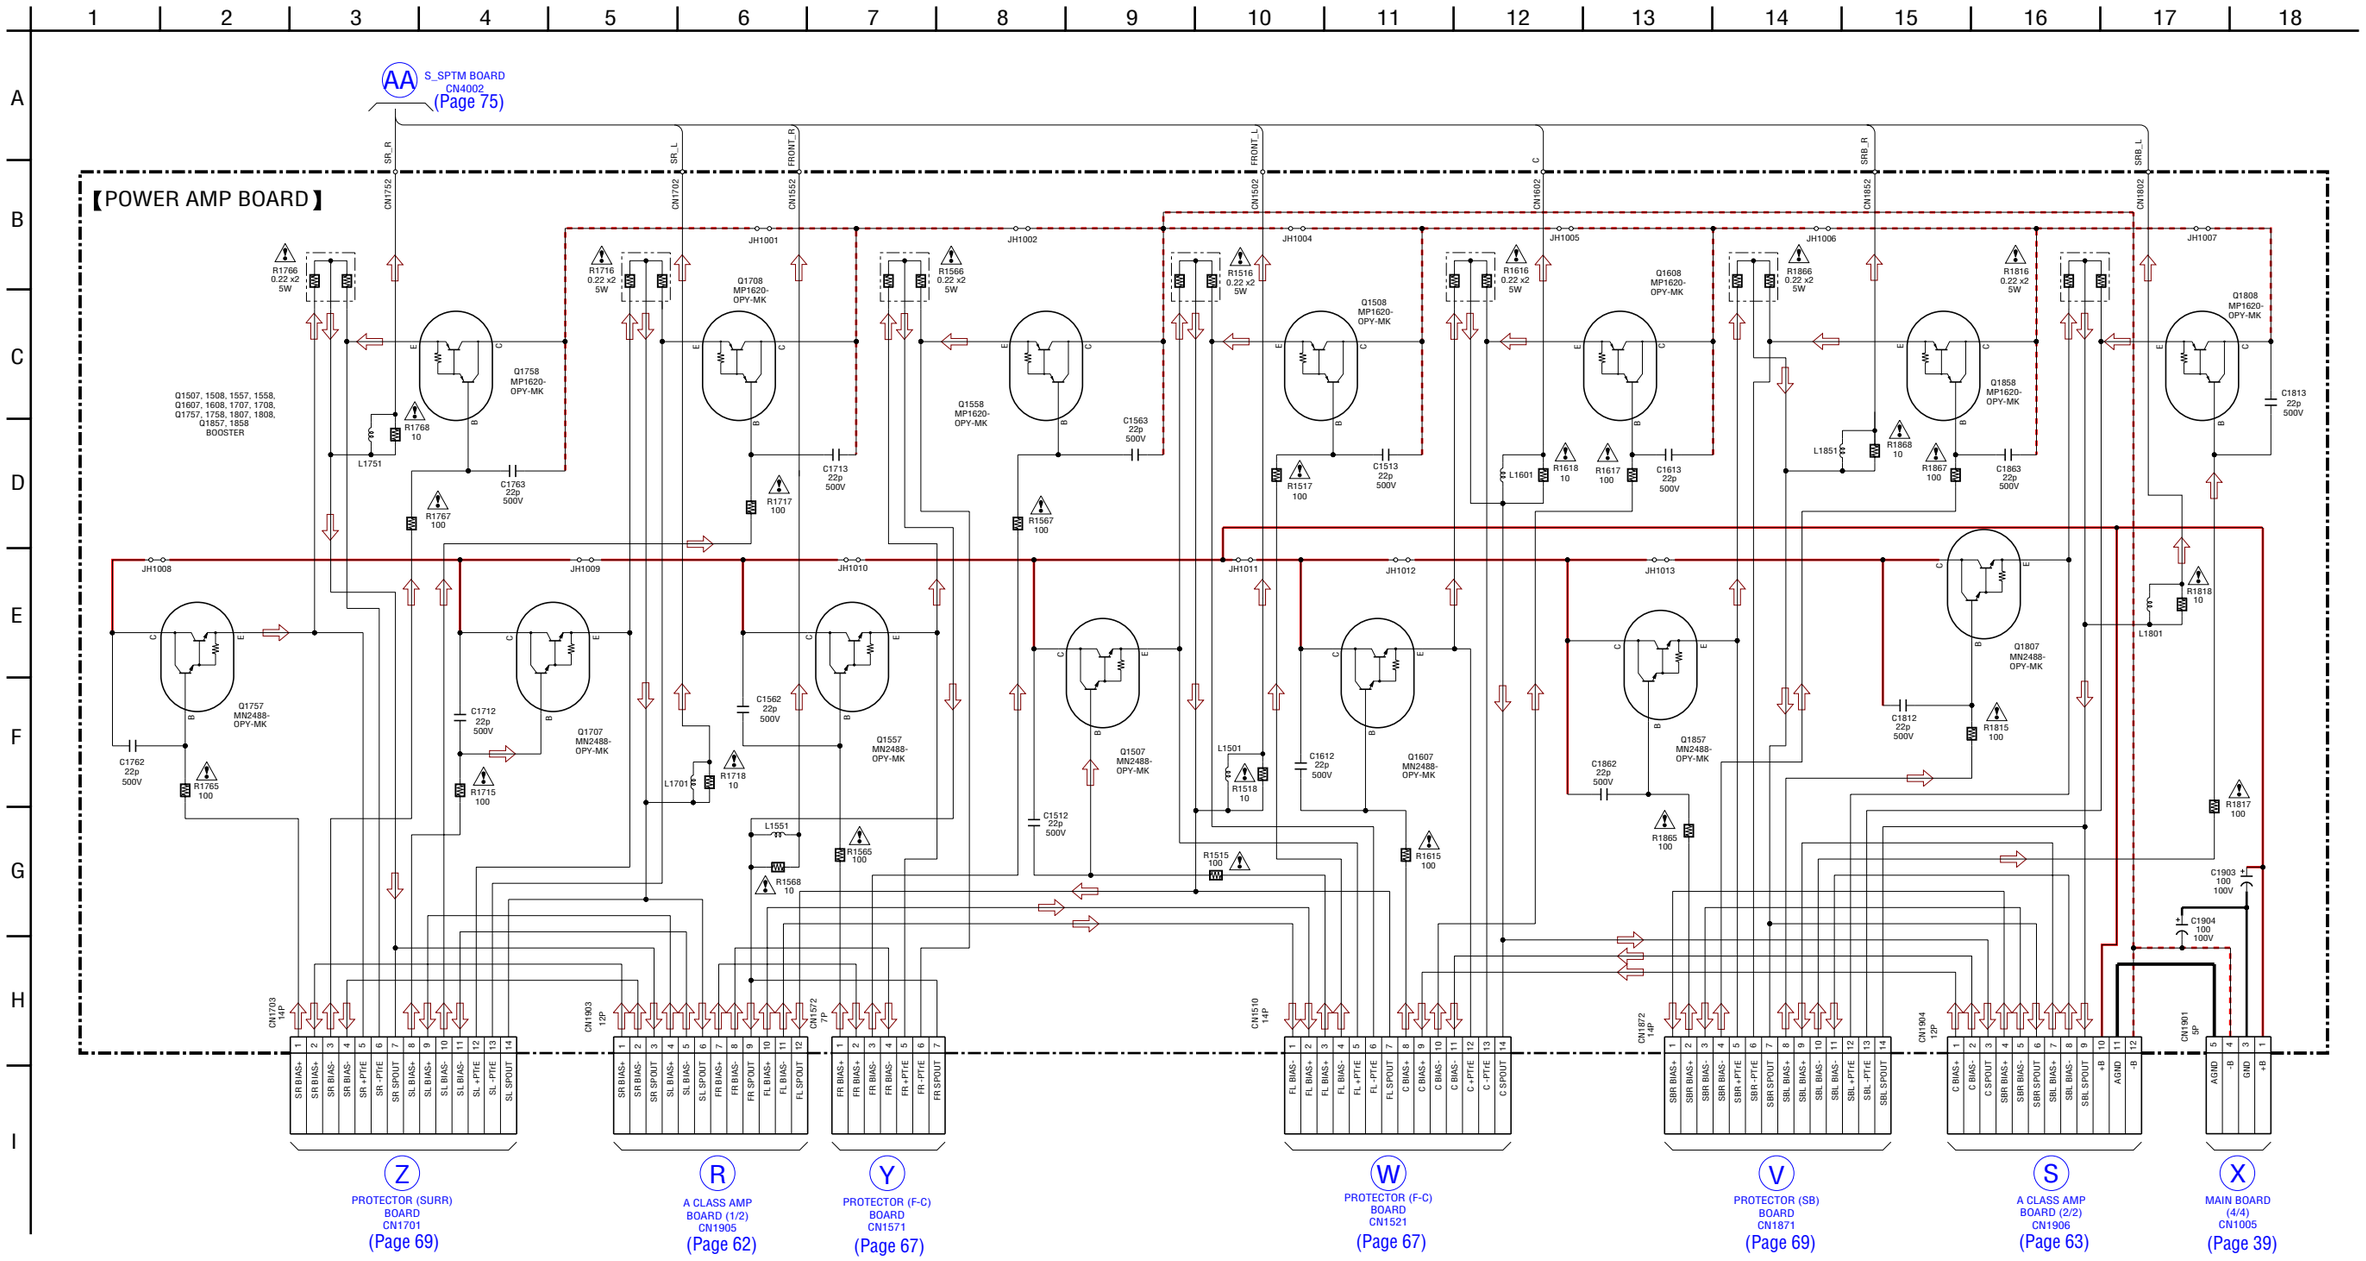

6-42. PRINTED WIRING BOARD – PROTECTOR (F-C) Board –

• See page 35 for Circuit Boards Location.

: Uses unleaded solder.

- **Semiconductor Location**

Ref. No.	Location
D1521	C-4
D1522	C-4
D1571	D-5
D1572	D-4
D1621	B-4
D1622	B-4
Q1522	C-3
Q1523	C-4
Q1524	C-3
Q1572	D-4
Q1573	D-4
Q1574	D-3
Q1622	B-3
Q1623	B-4
Q1624	B-3

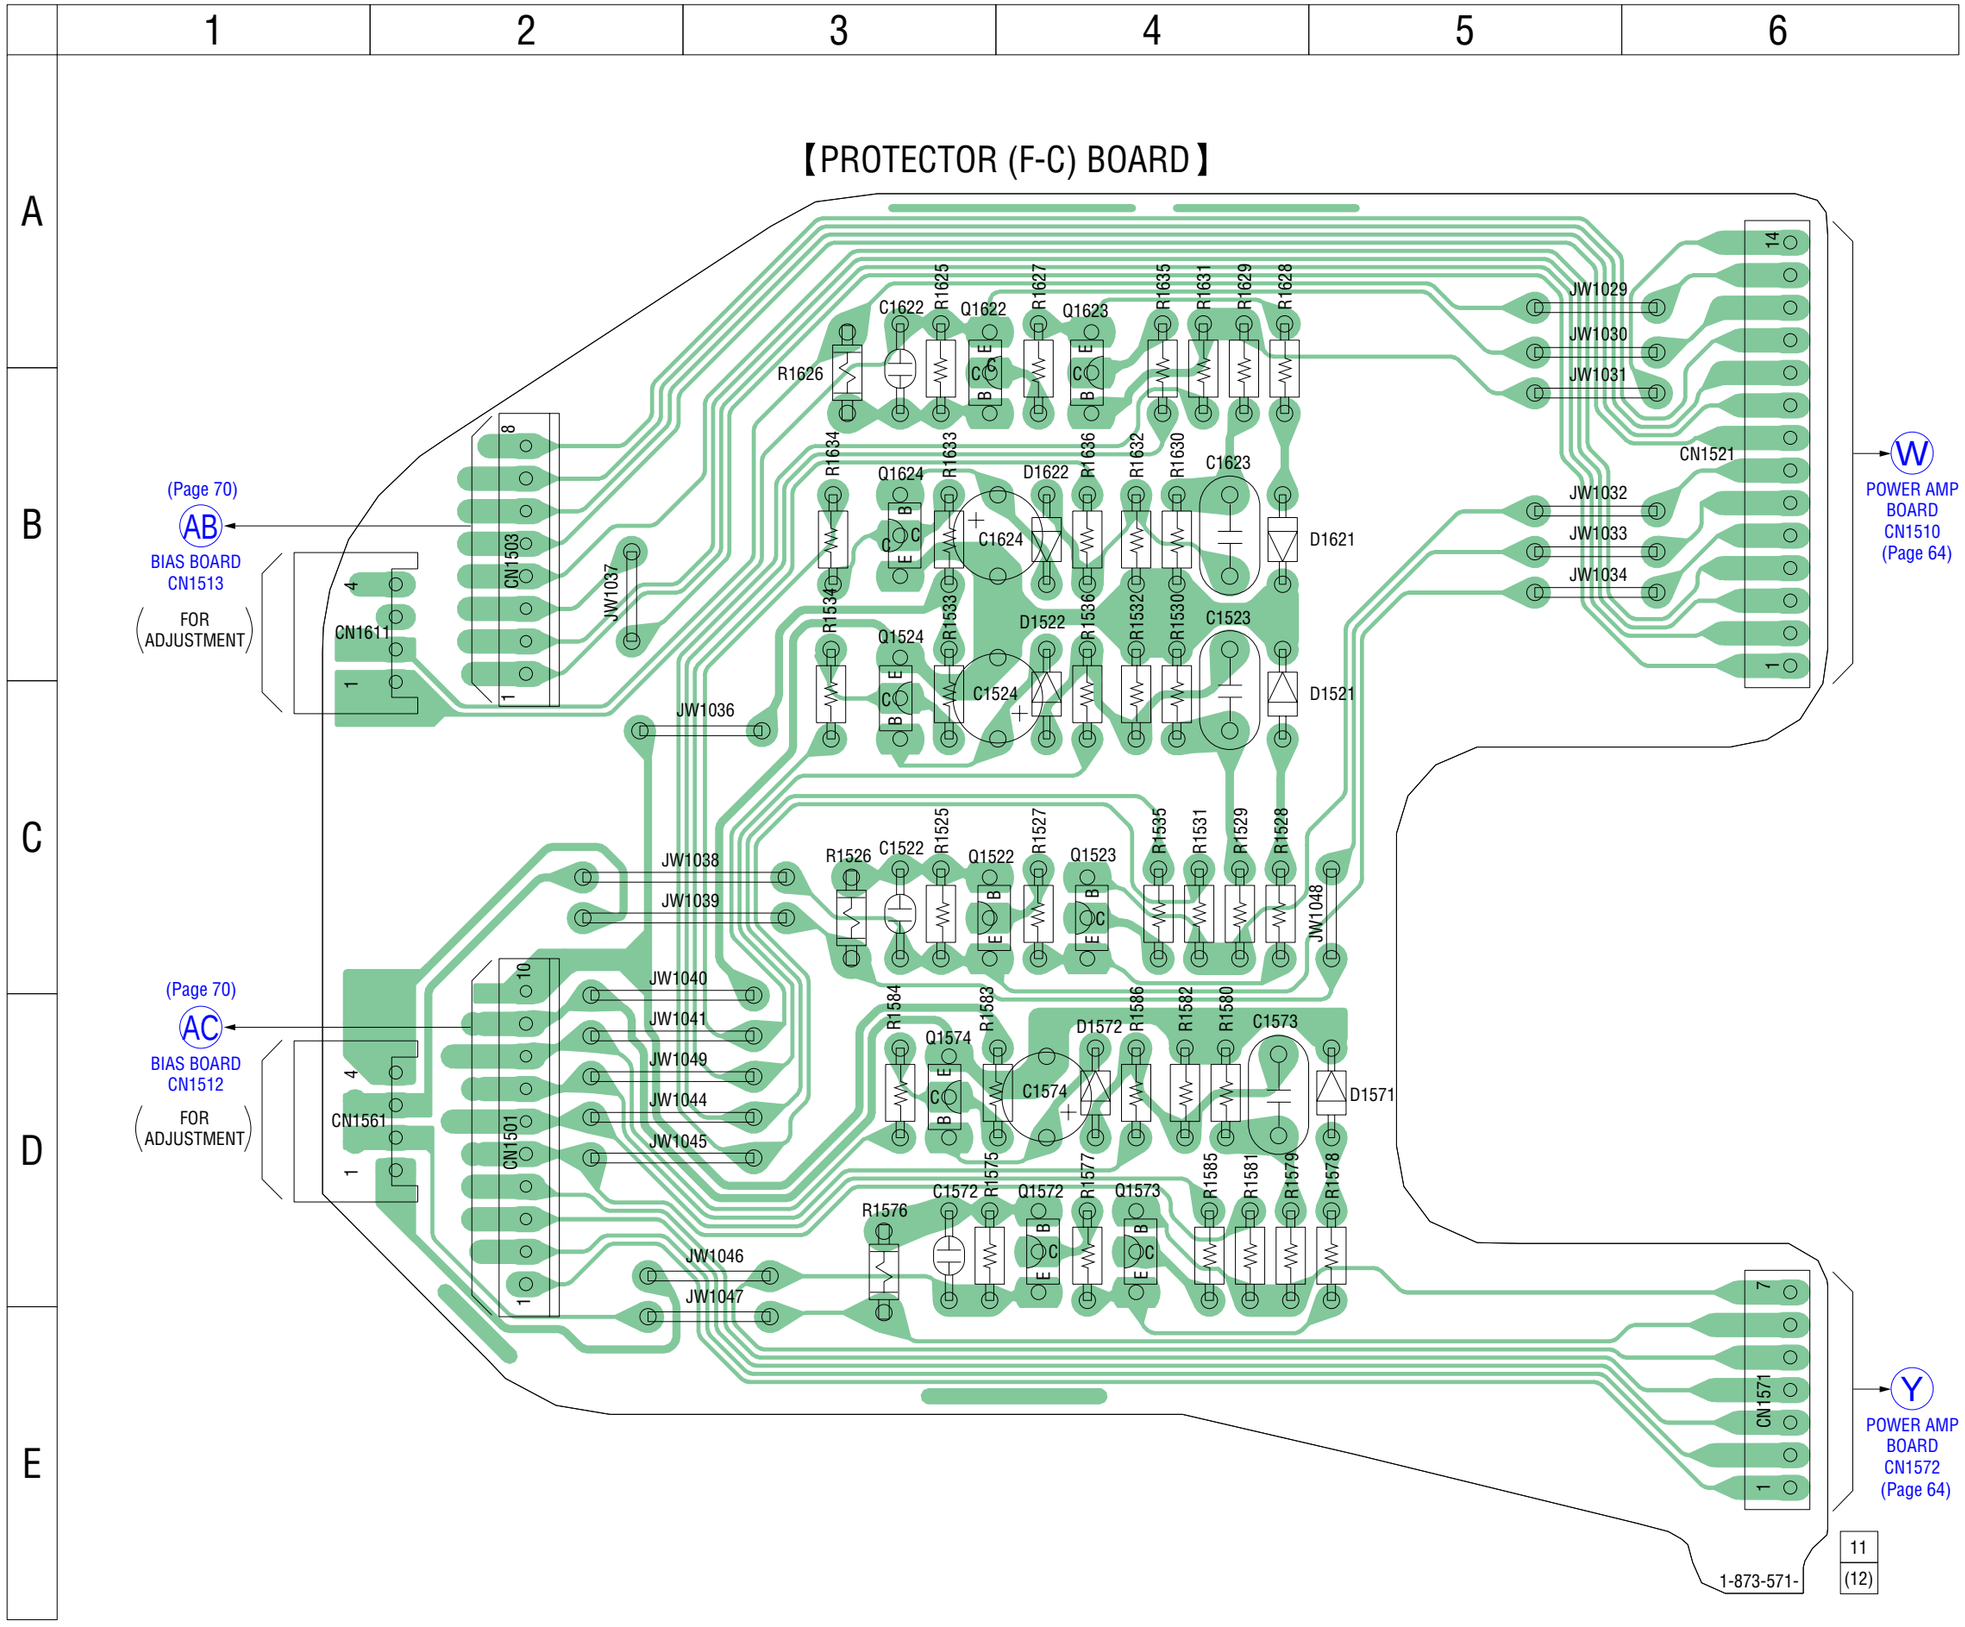

6-43. SCHEMATIC DIAGRAM – PROTECTOR (F-C) Board –

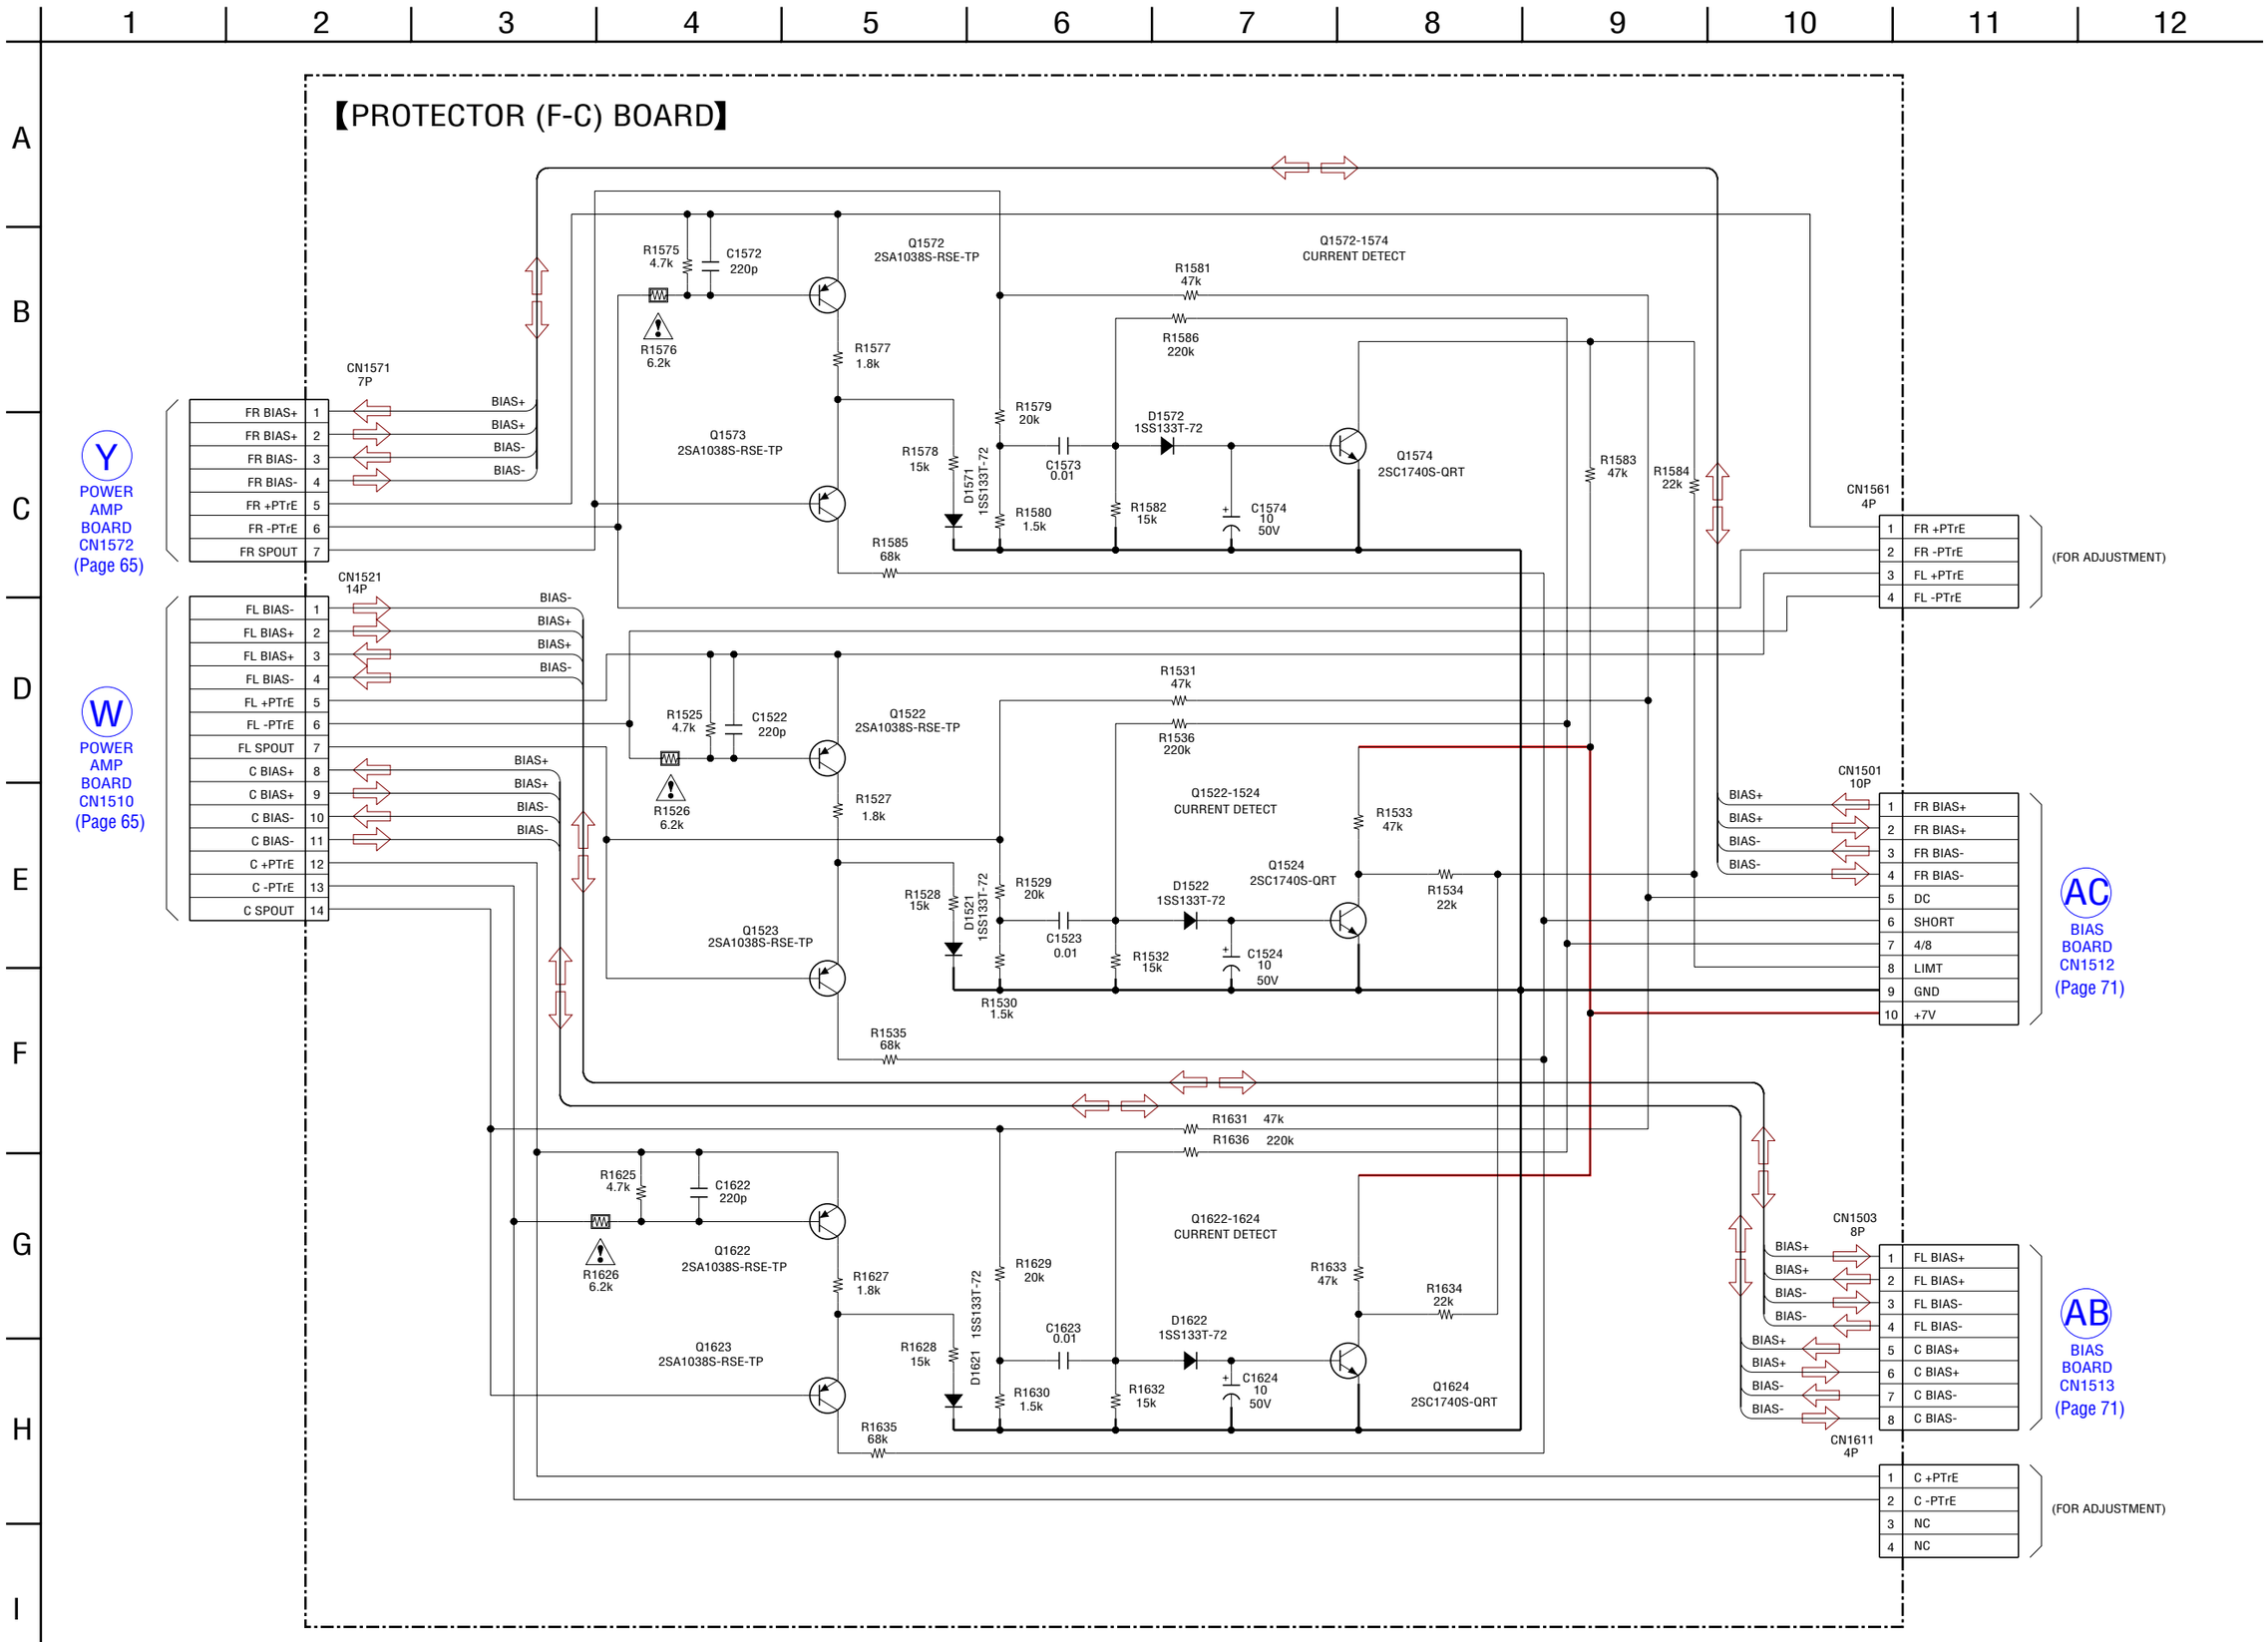

6-44. PRINTED WIRING BOARDS – PROTECTOR (SB/SURR) Section –

• See page 35 for Circuit Boards Location.

: Uses unleaded solder.

• **Semiconductor Location**

Ref. No.	Location
D1721	B-4
D1722	B-3
D1771	B-4
D1772	B-3
D1821	E-3
D1822	E-4
D1871	E-3
D1872	E-4
Q1722	A-3
Q1723	A-4
Q1724	B-3
Q1772	C-3
Q1773	C-4
Q1774	B-3
Q1822	F-4
Q1823	F-4
Q1824	E-4
Q1872	D-4
Q1873	D-4
Q1874	E-4

【PROTECTOR (SURR) BOARD】

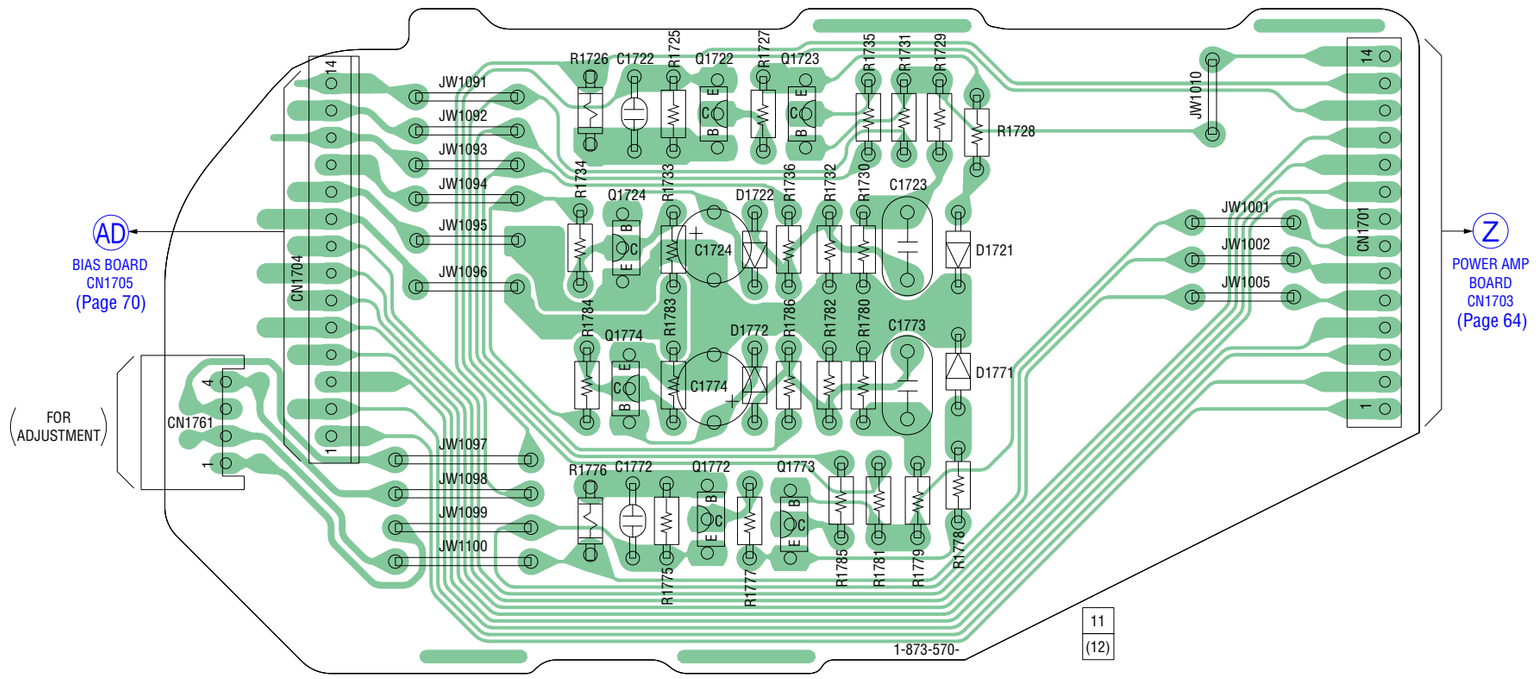

【PROTECTOR (SB) BOARD】

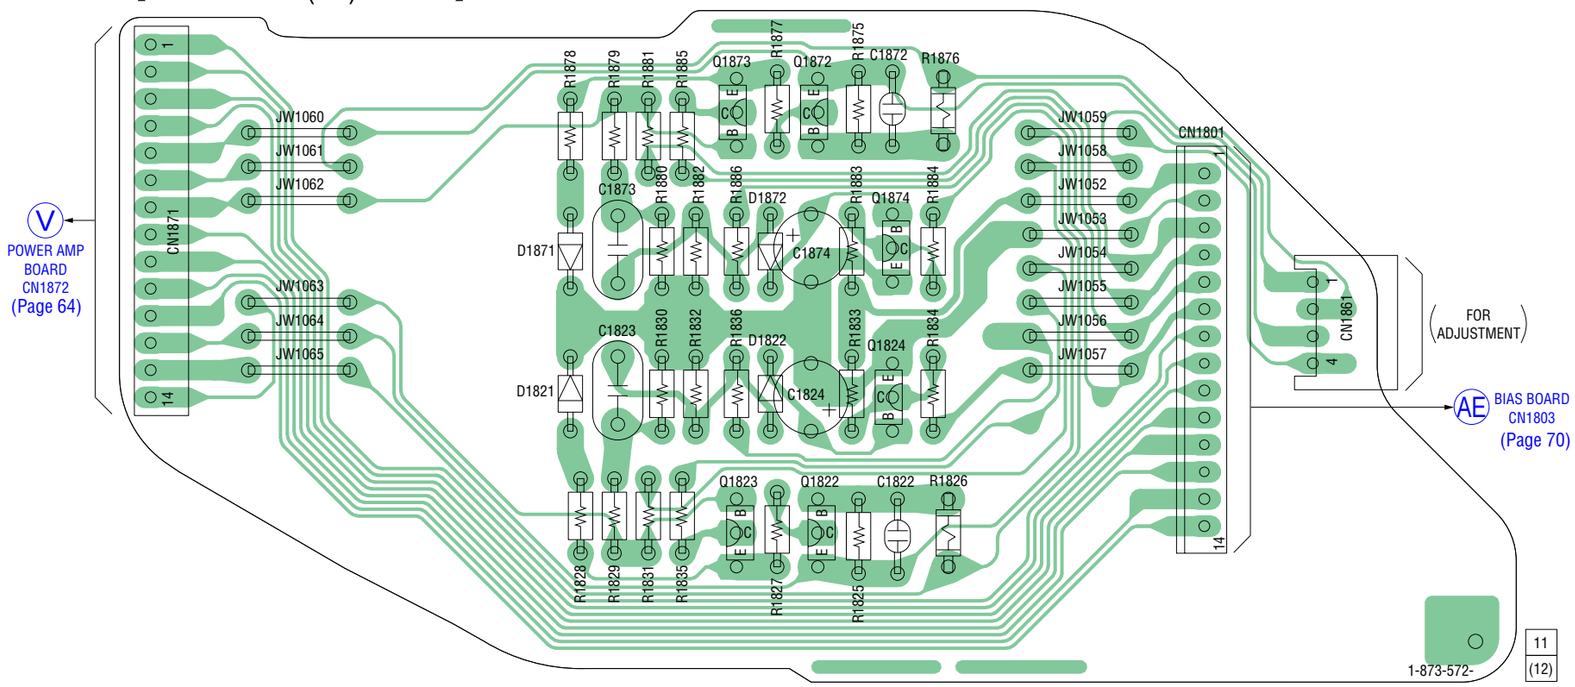

6-45. SCHEMATIC DIAGRAM – PROTECTOR (SB/SURR) Section –

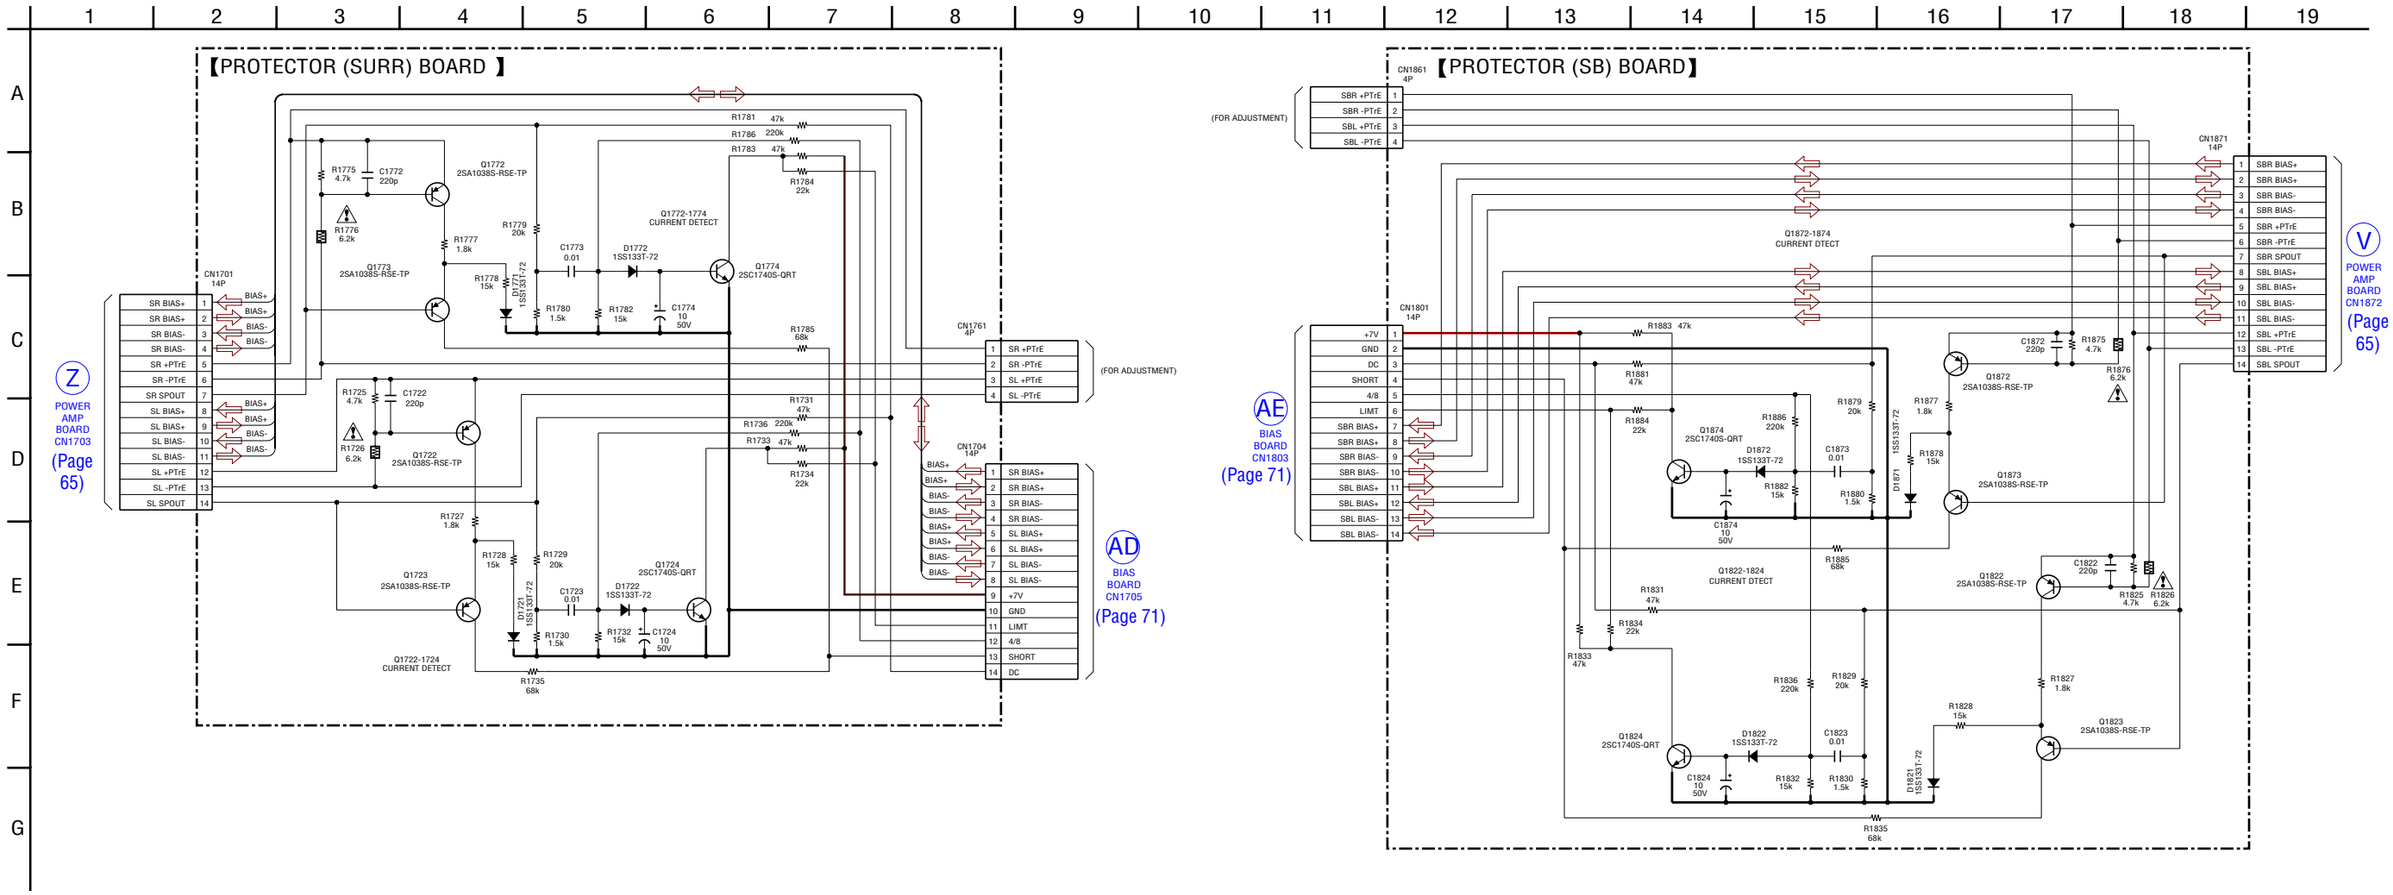

6-46. PRINTED WIRING BOARD – BIAS Board –

• See page 35 for Circuit Boards Location. : Uses unleaded solder.

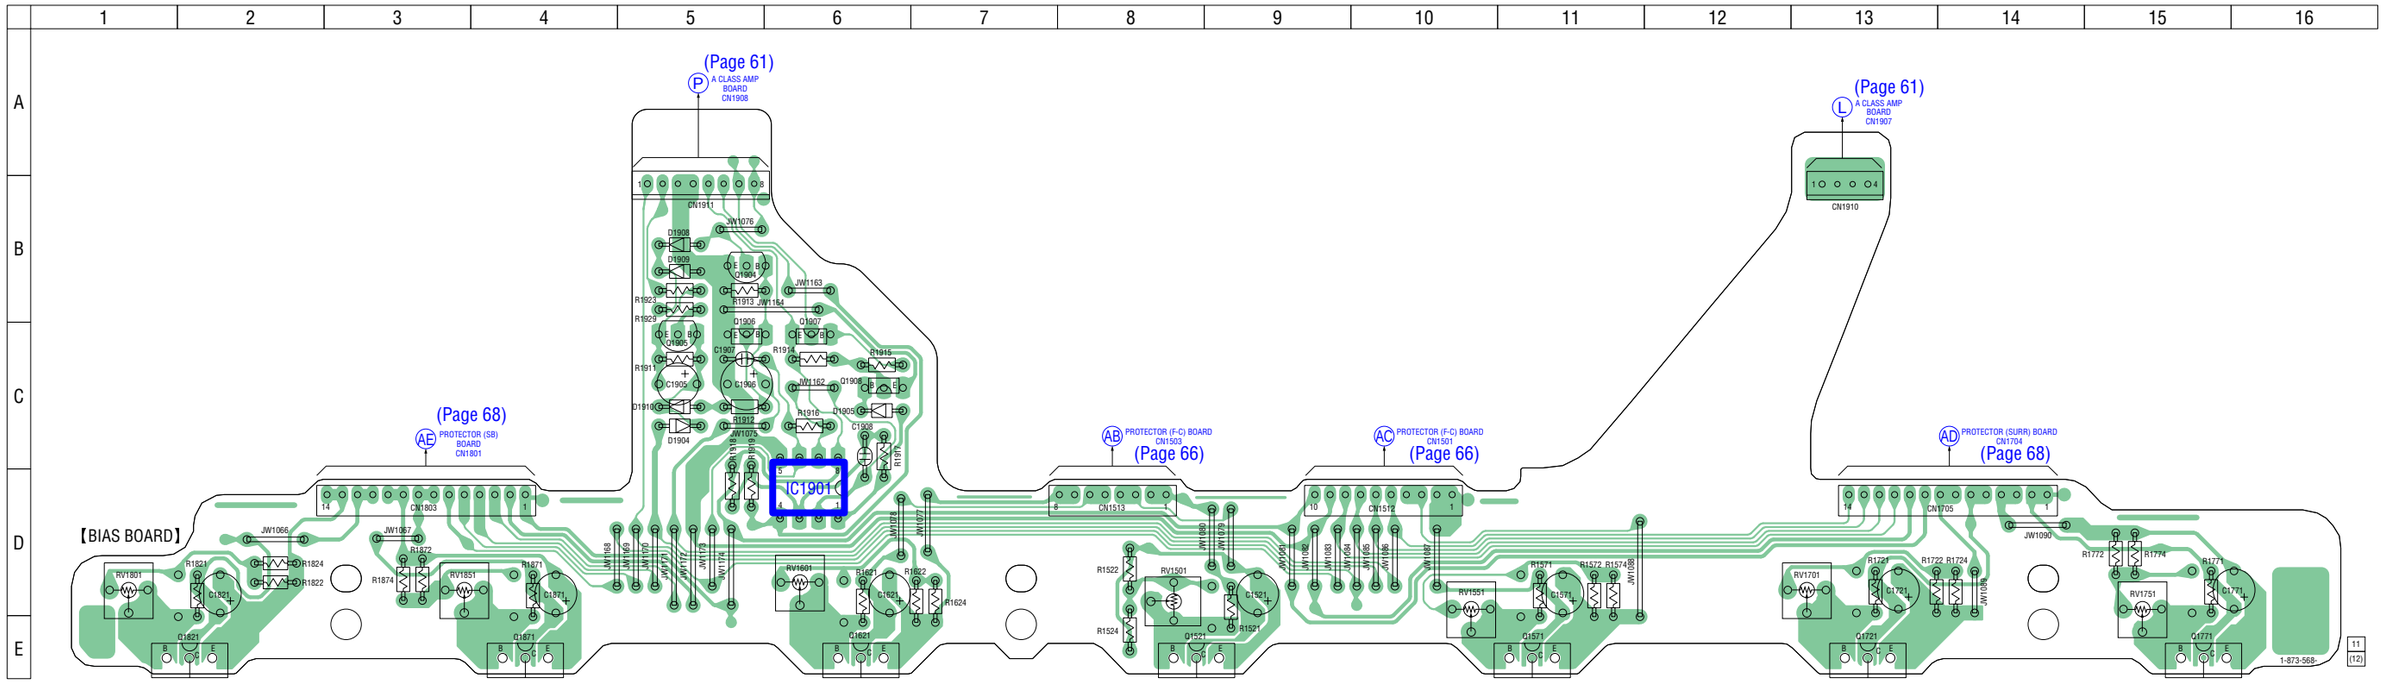

• **Semiconductor Location**

Ref. No.	Location
D1904	C-5
D1905	C-6
D1908	B-5
D1909	B-5
D1910	C-5
IC1901	D-6
Q1521	E-8
Q1571	E-11
Q1621	E-6
Q1721	E-13
Q1771	E-15
Q1821	E-2
Q1871	E-4
Q1904	B-5
Q1905	C-5
Q1906	C-5
Q1907	C-6
Q1908	C-6

6-47. SCHEMATIC DIAGRAM – BIAS Board –

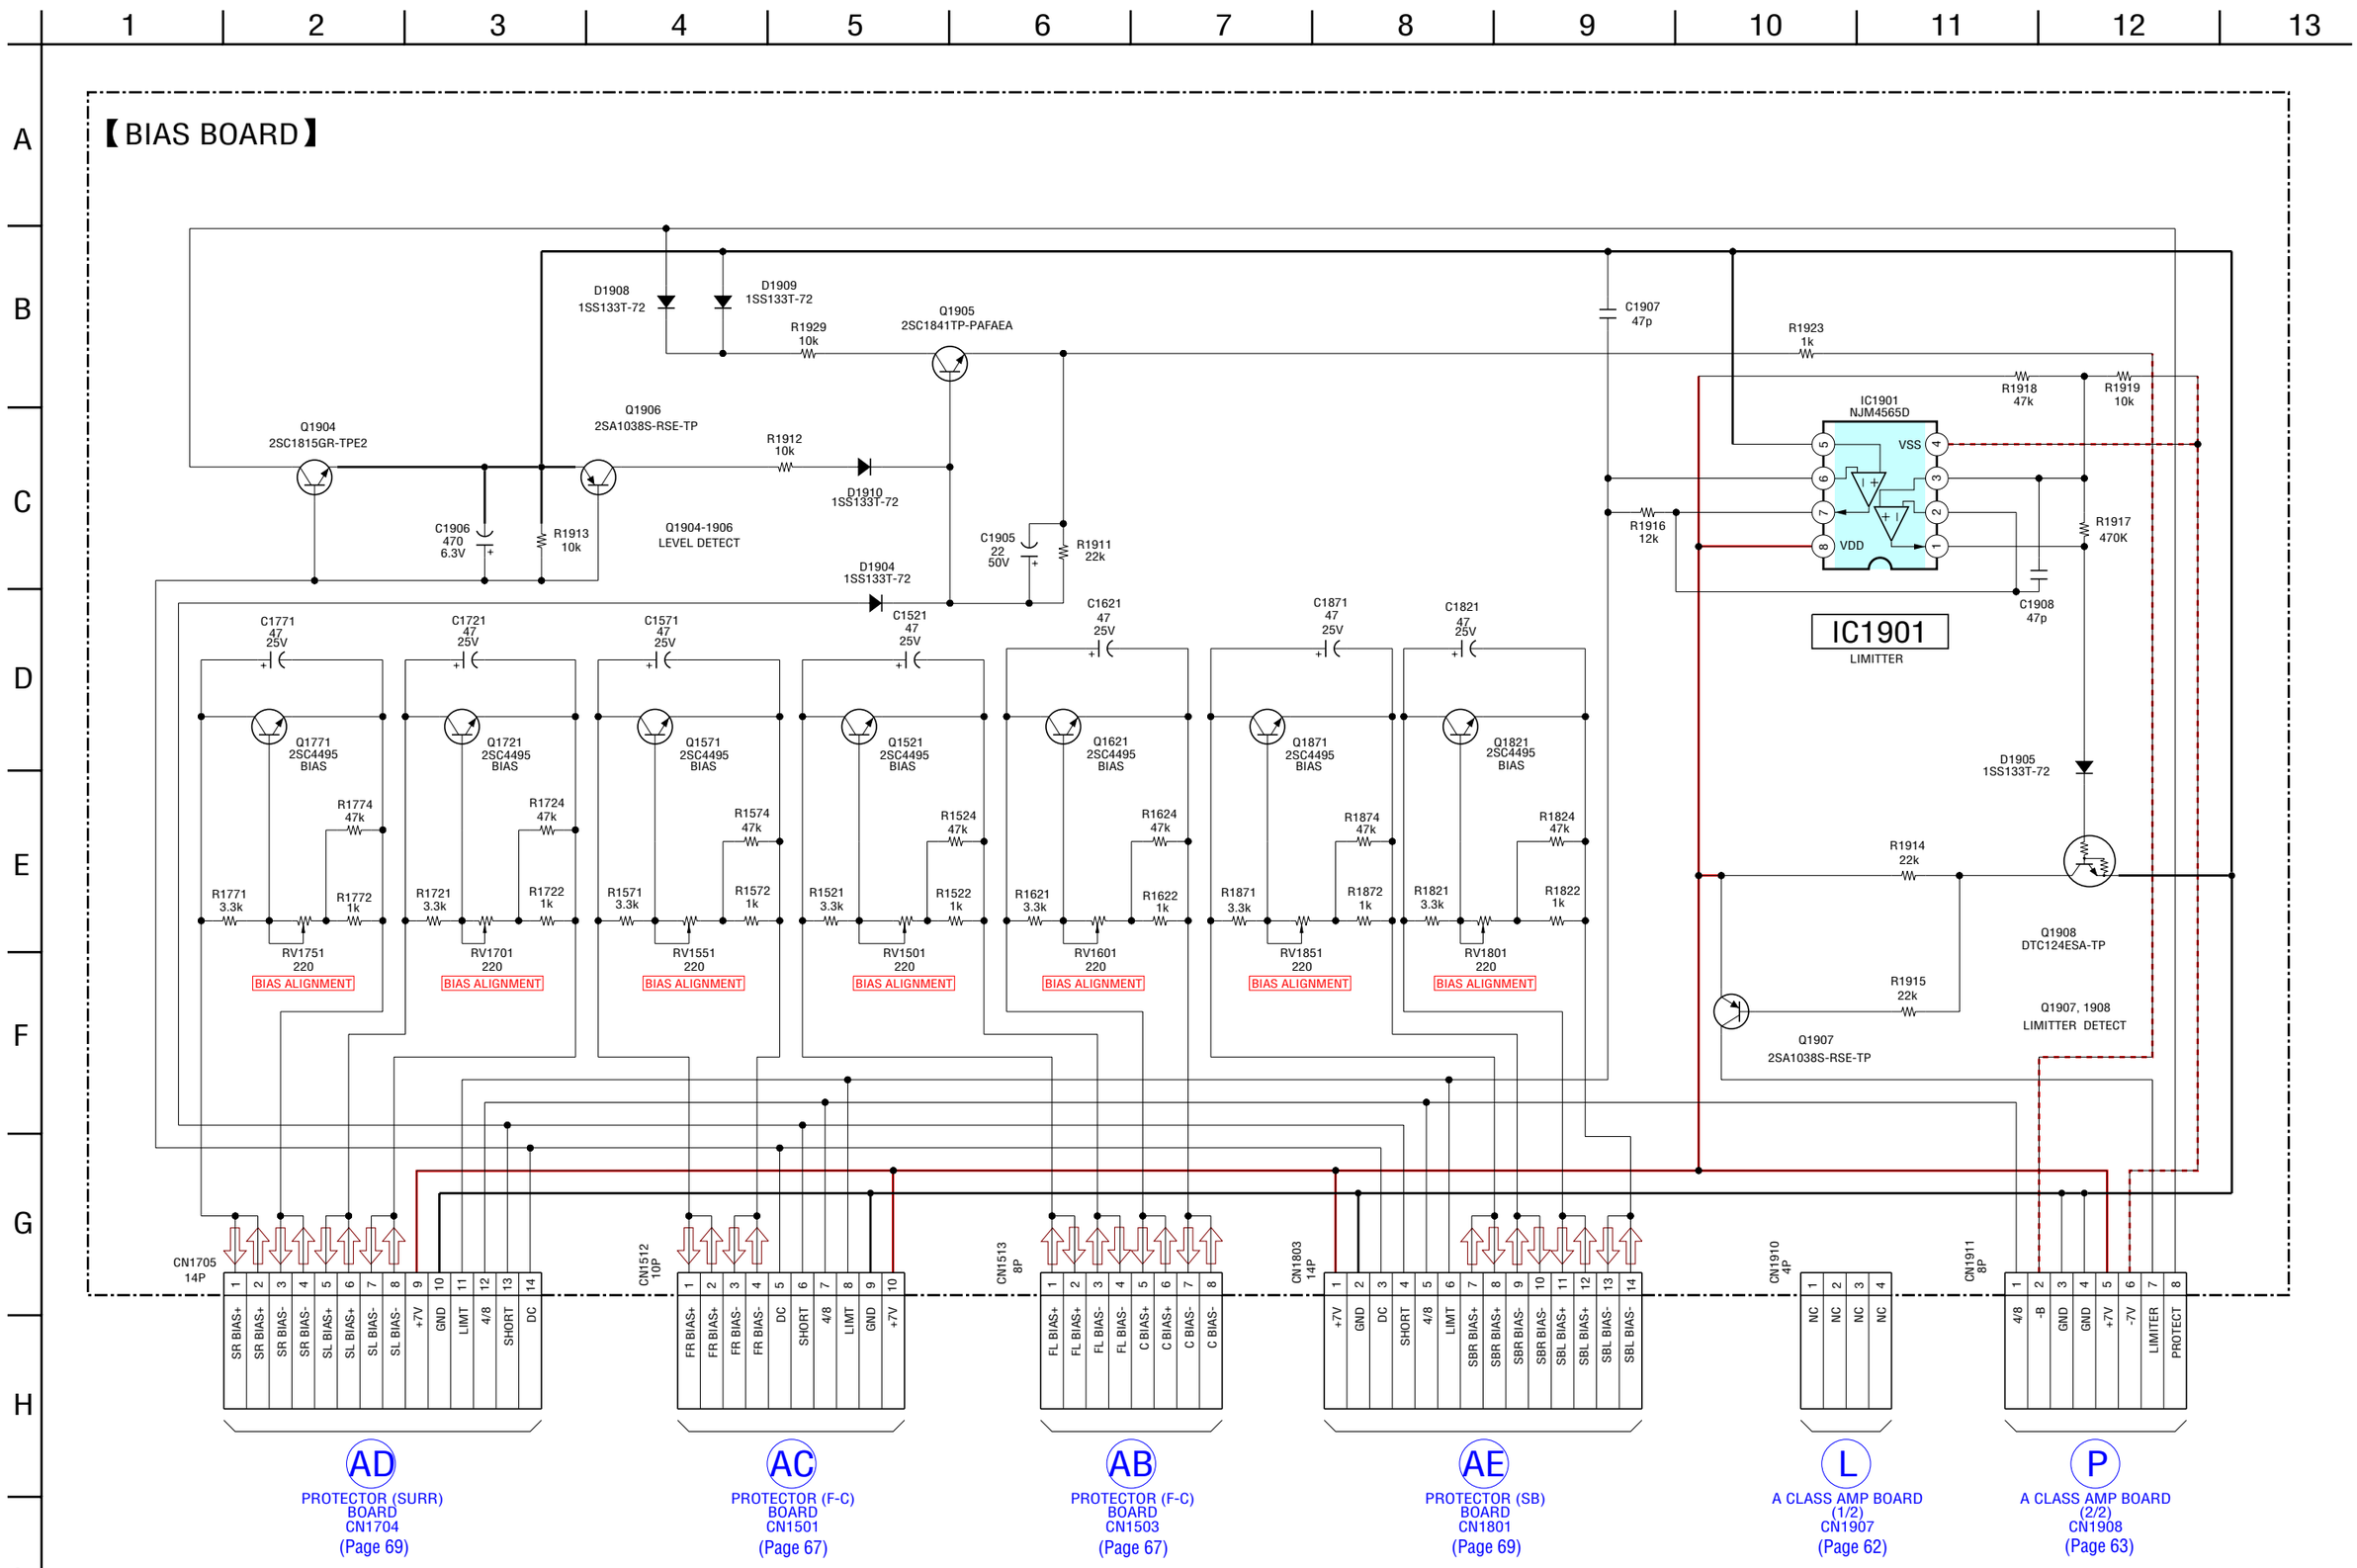

6-48. PRINTED WIRING BOARD – PREOUT Board –

• See page 35 for Circuit Boards Location. : Uses unleaded solder.

• **Semiconductor Location**

Ref. No.	Location
D4051	A-2
D4052	B-2
D4053	C-2
D4054	D-2
D4055	D-3
D4056	D-3
Q4051	B-3
Q4052	B-3
Q4053	C-3
Q4054	D-3

【PREOUT BOARD】

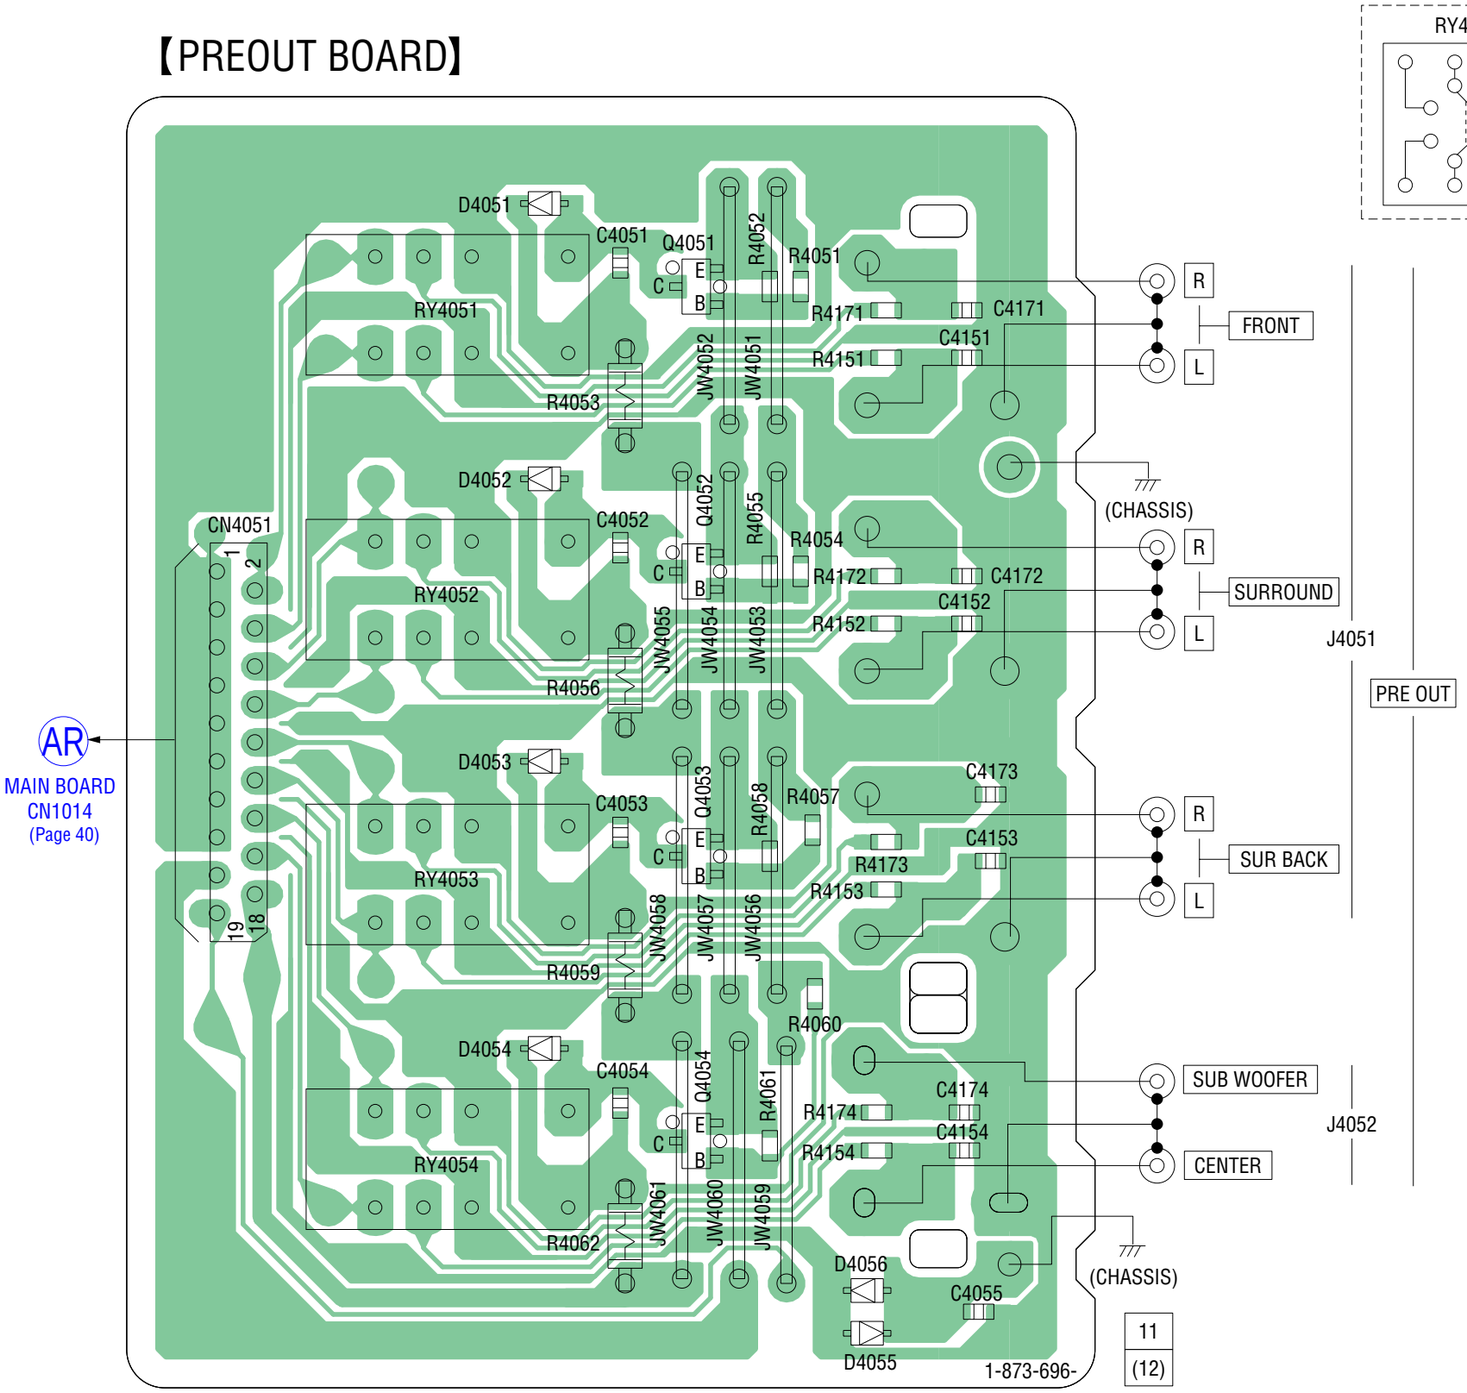

6-49. SCHEMATIC DIAGRAM – PREOUT Board –

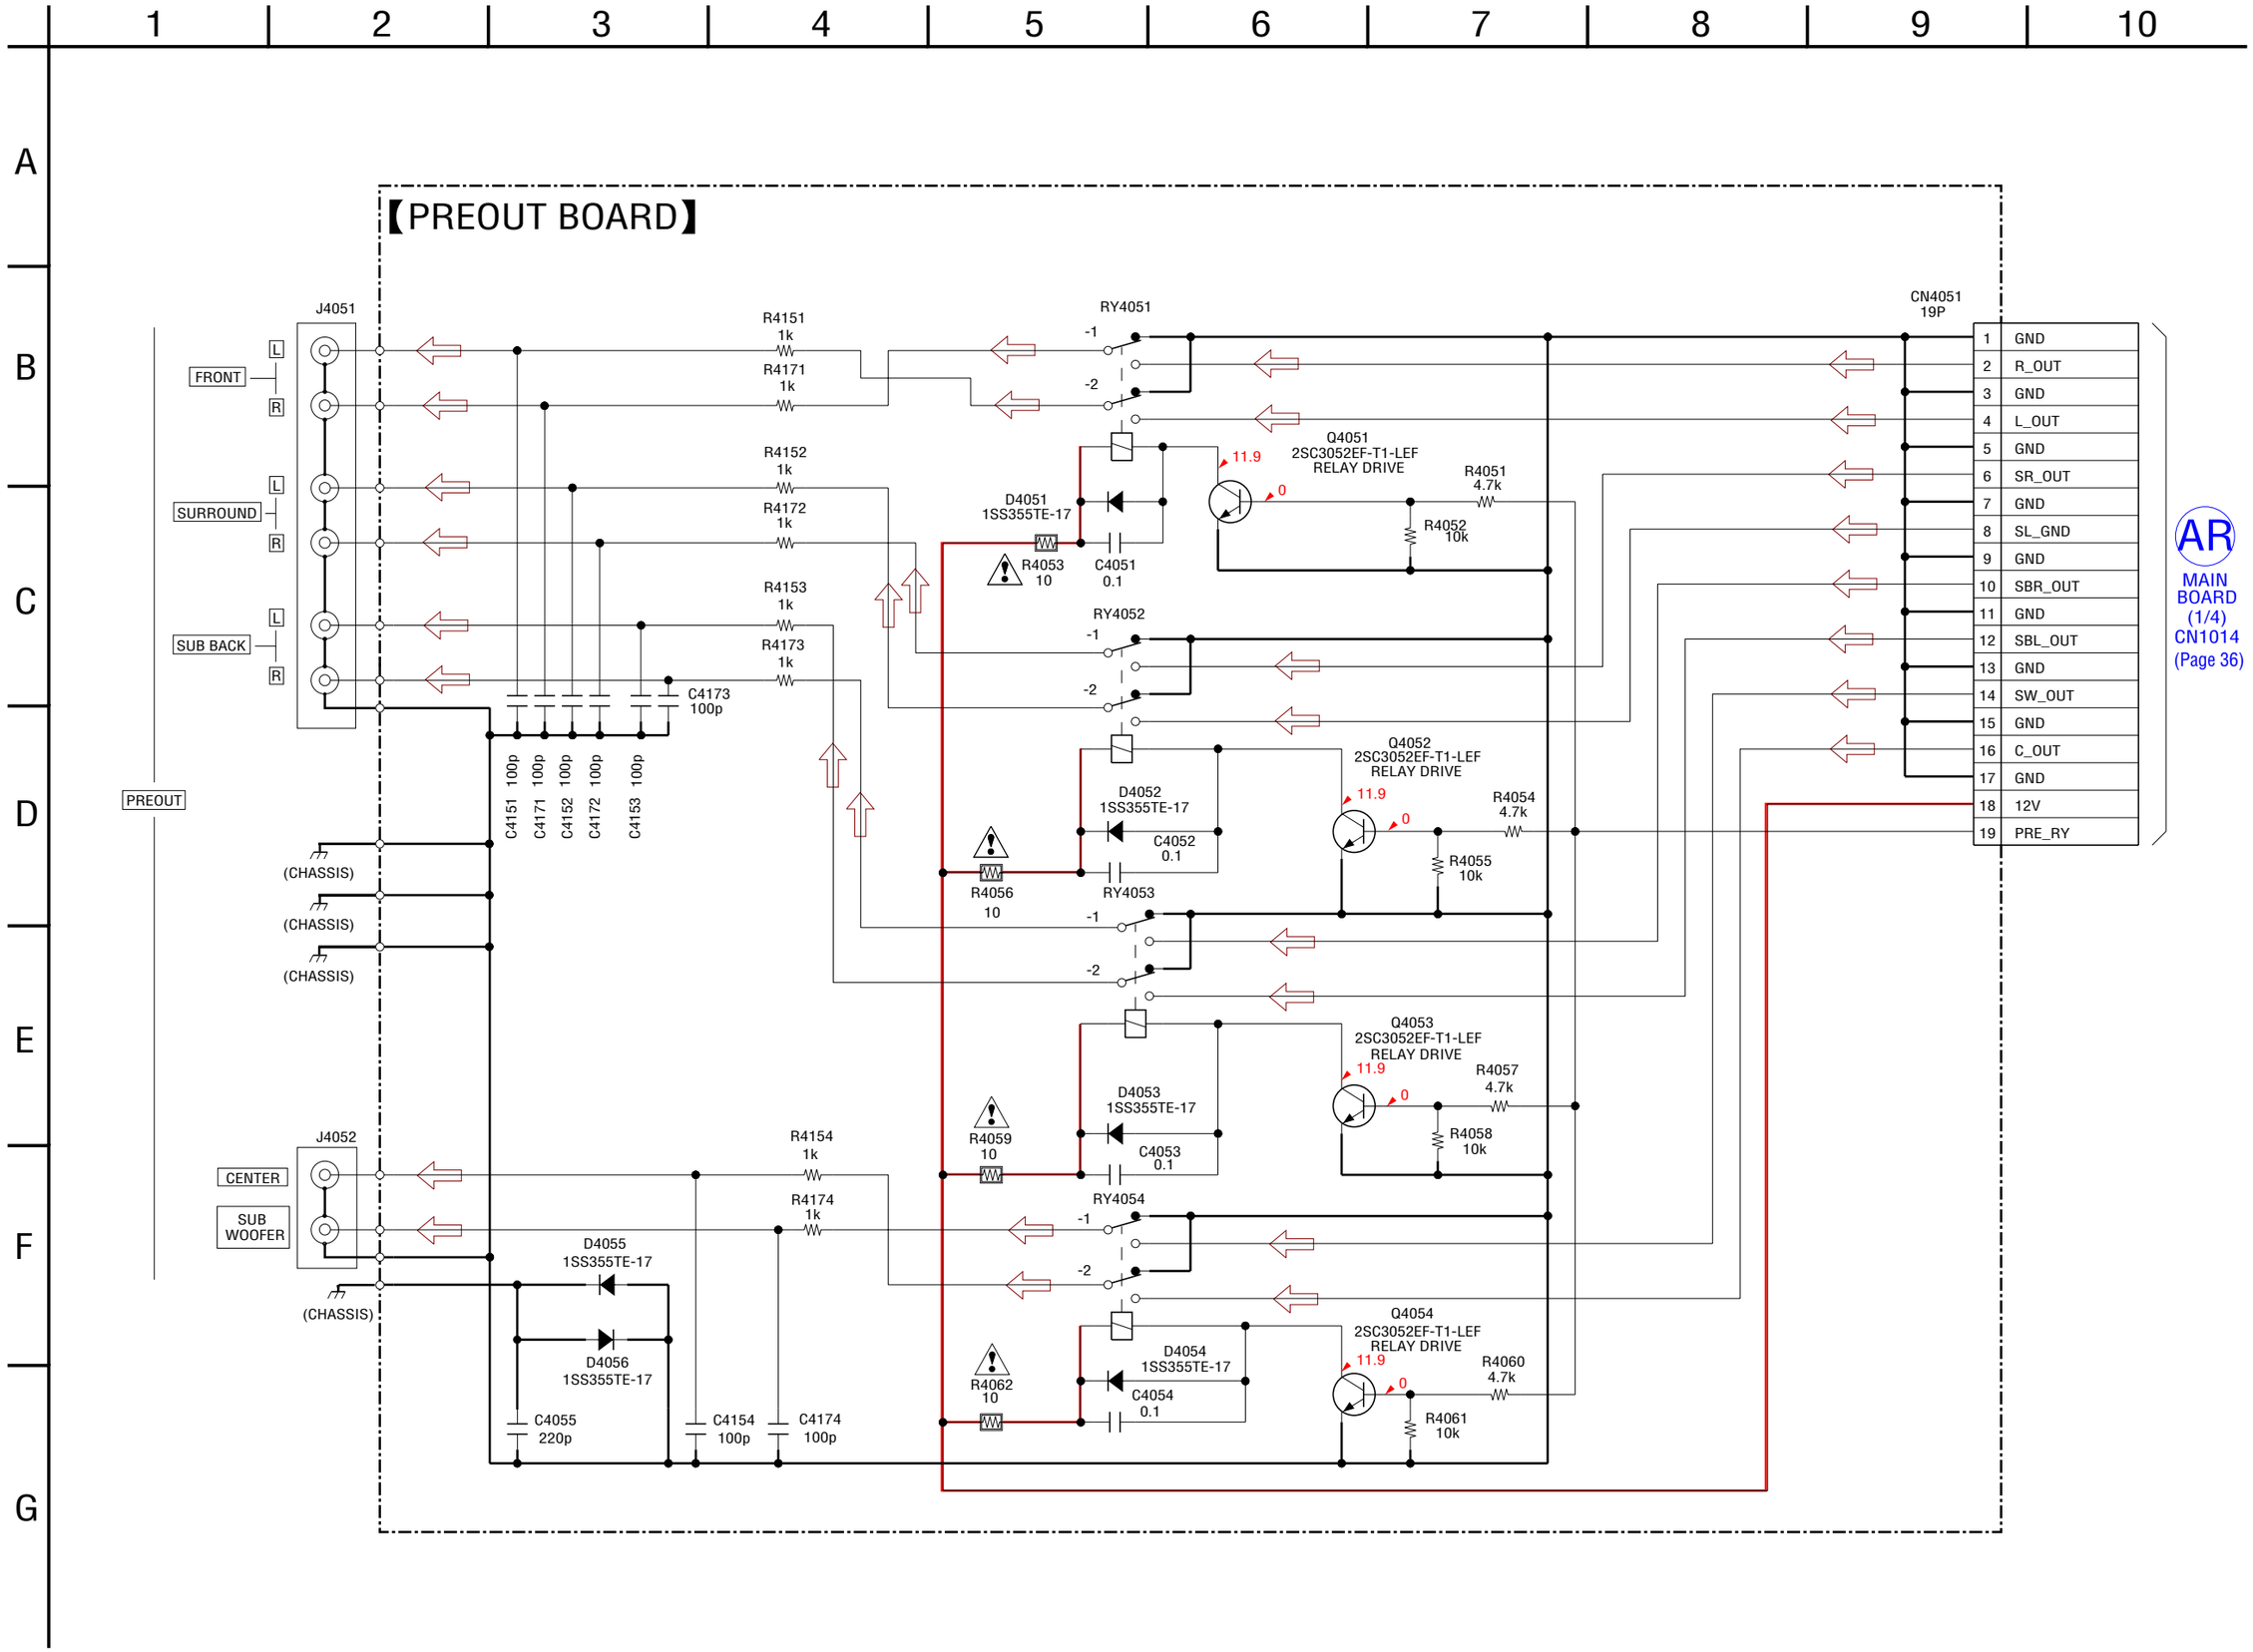

6-50. PRINTED WIRING BOARDS – SPEAKER Section –

• See page 35 for Circuit Boards Location. : Uses unleaded solder.

【C_SPTM BOARD】

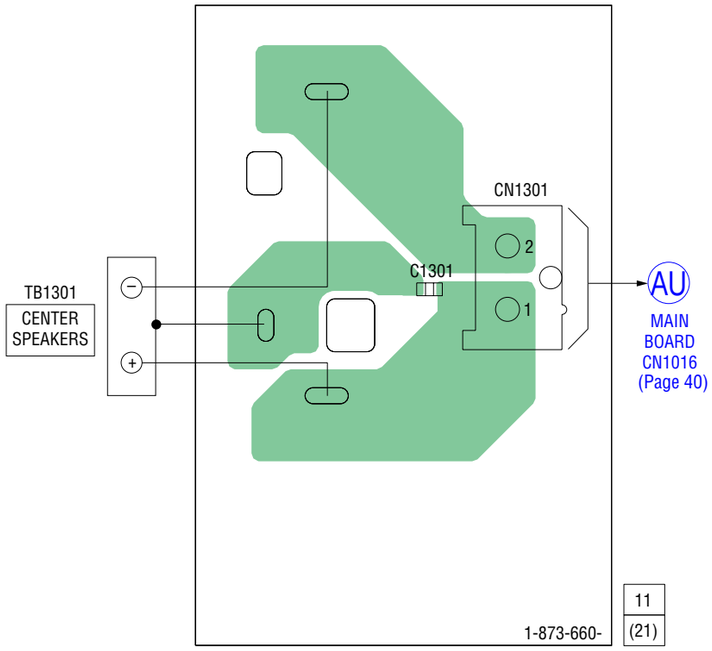

【S_SPTM BOARD】

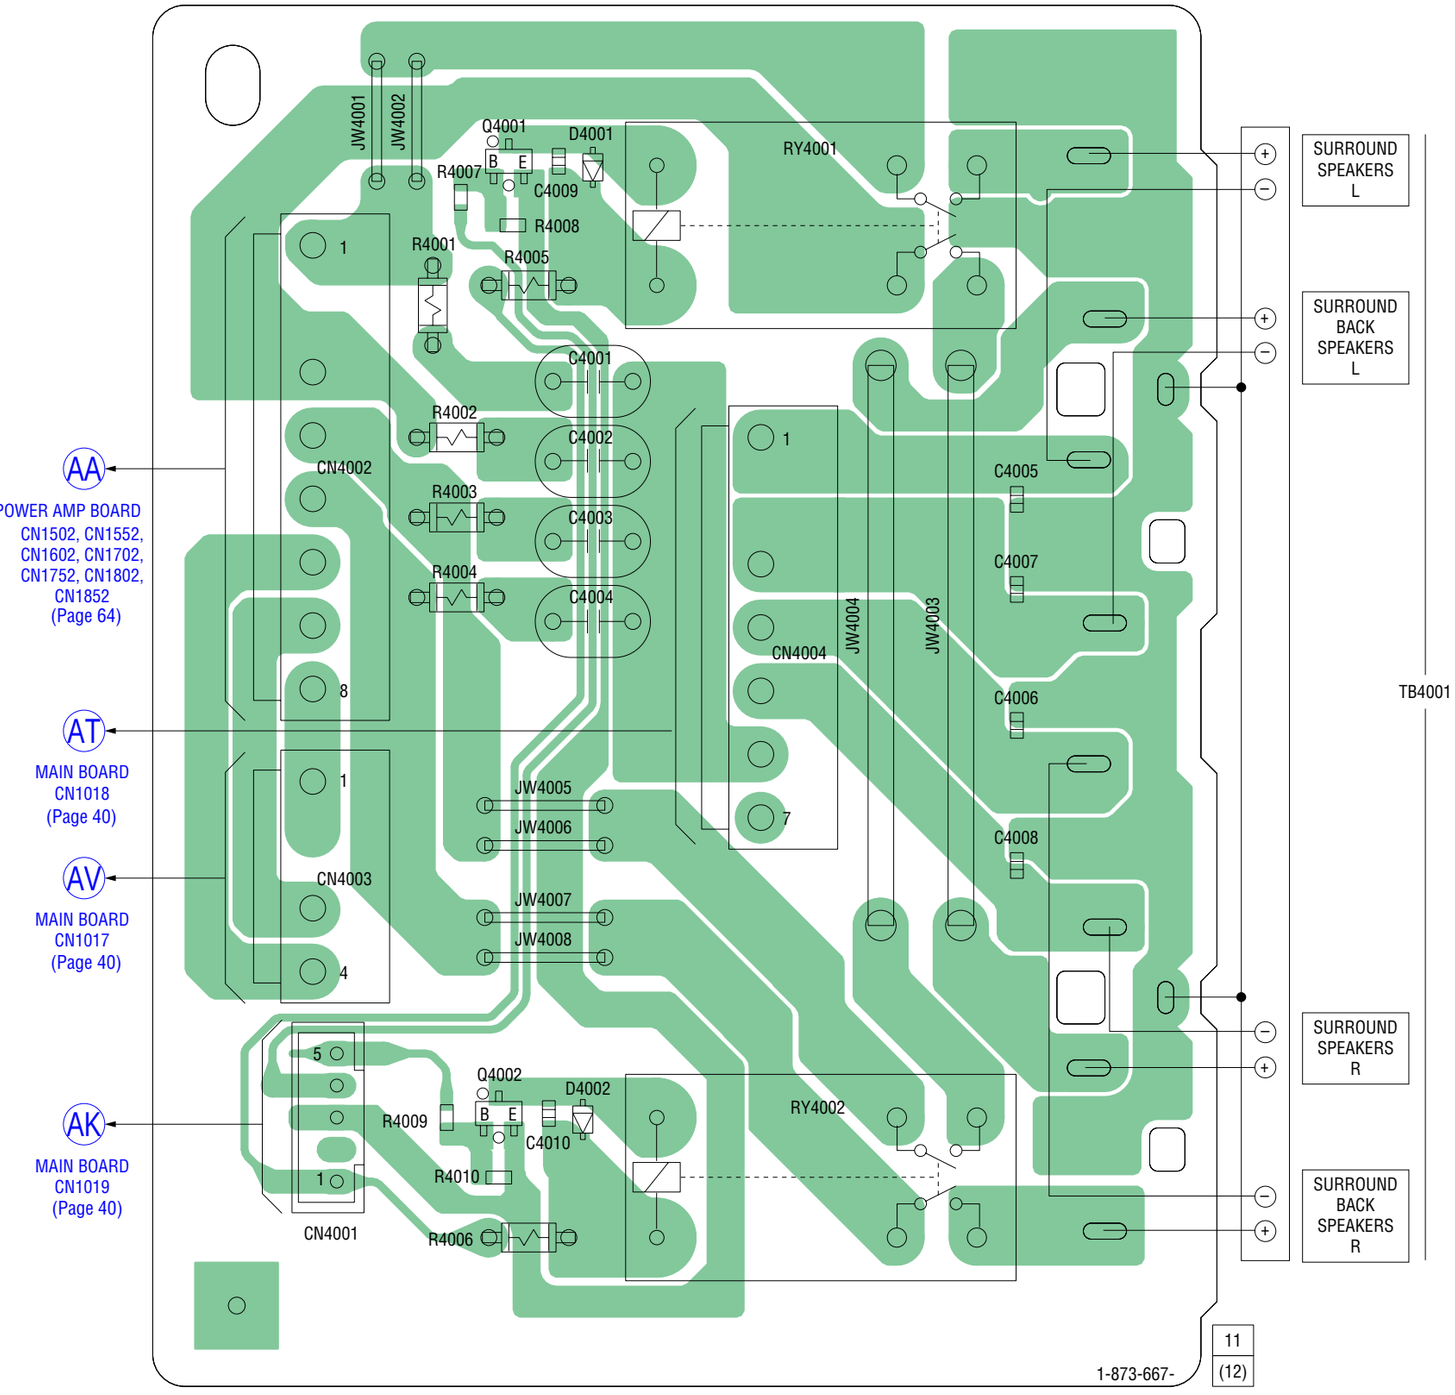

6-51. SCHEMATIC DIAGRAM – SPEAKER Section –

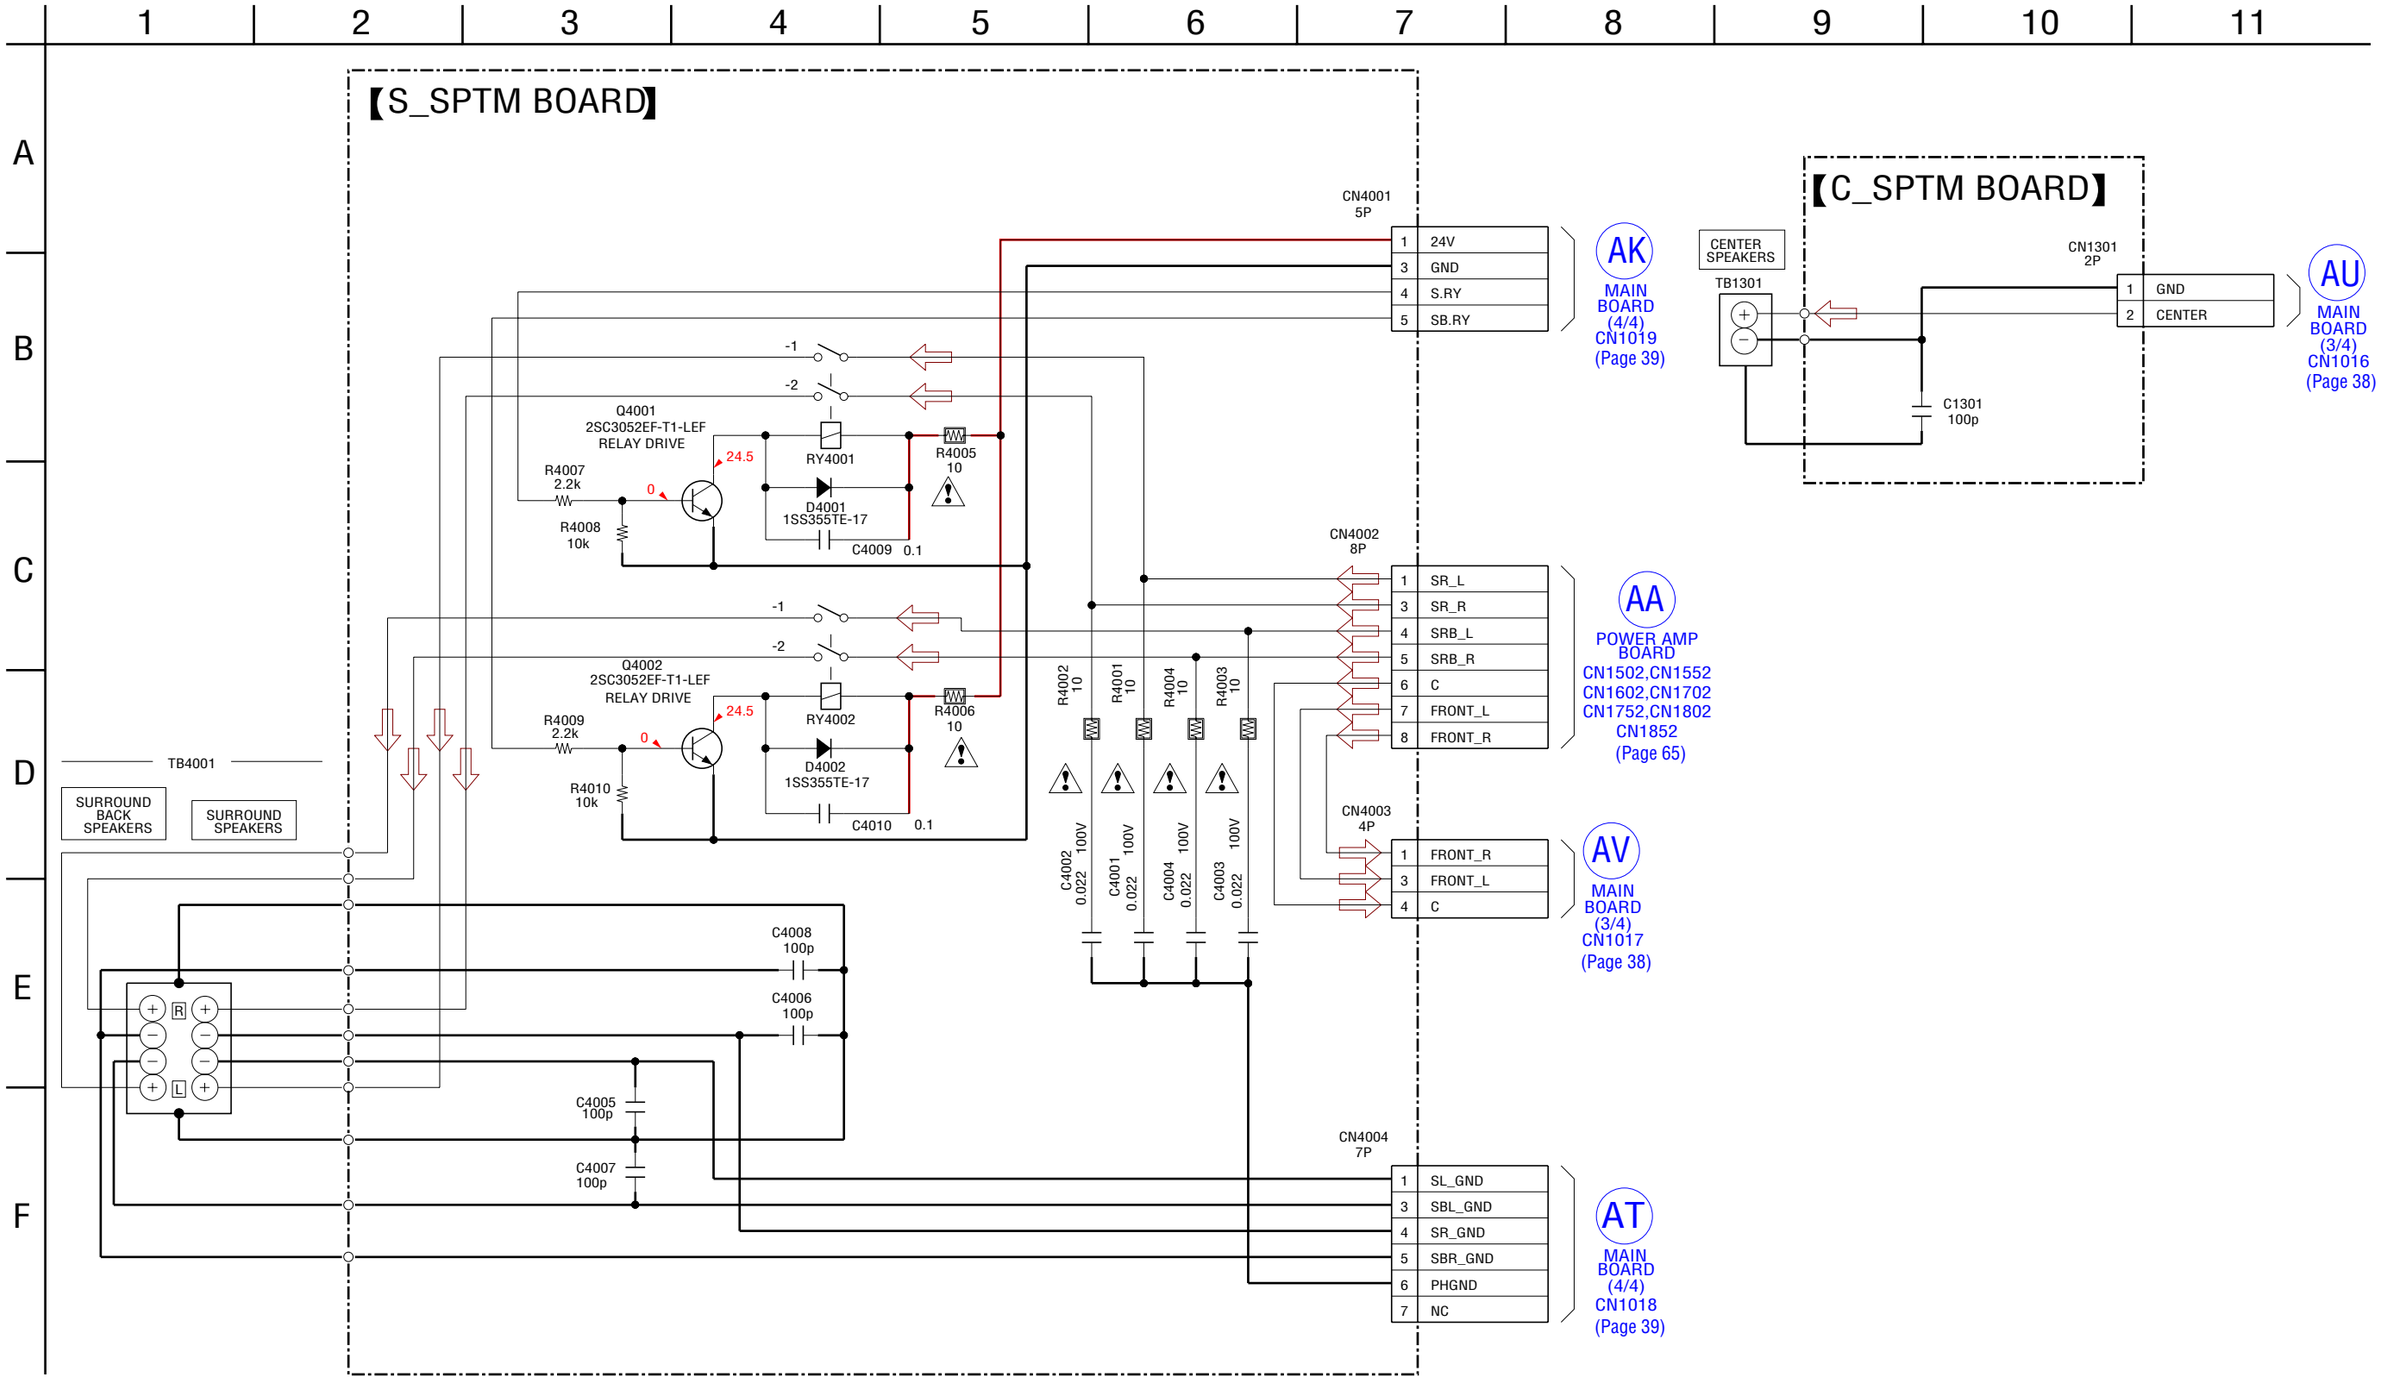

- **Semiconductor Location**

Ref. No.	Location
D3501	D-2
D3502	D-2
D3617	D-4
D3805	G-5
D3808	G-5
IC3503	G-3
IC3508	D-2
IC3509	E-2
IC3511	E-4
IC3513	F-6
IC3524	F-2
IC3601	C-6
IC3602	C-9
IC3603	B-5
IC3604	B-6
IC3605	B-7
IC3609	C-3
IC3612	B-9
IC3614	B-8
IC3618	D-9
IC3850	E-7

6-52. PRINTED WIRING BOARD – D_VIDEO Board (Component Side) –

• See page 35 for Circuit Boards Location. : Uses unleaded solder.

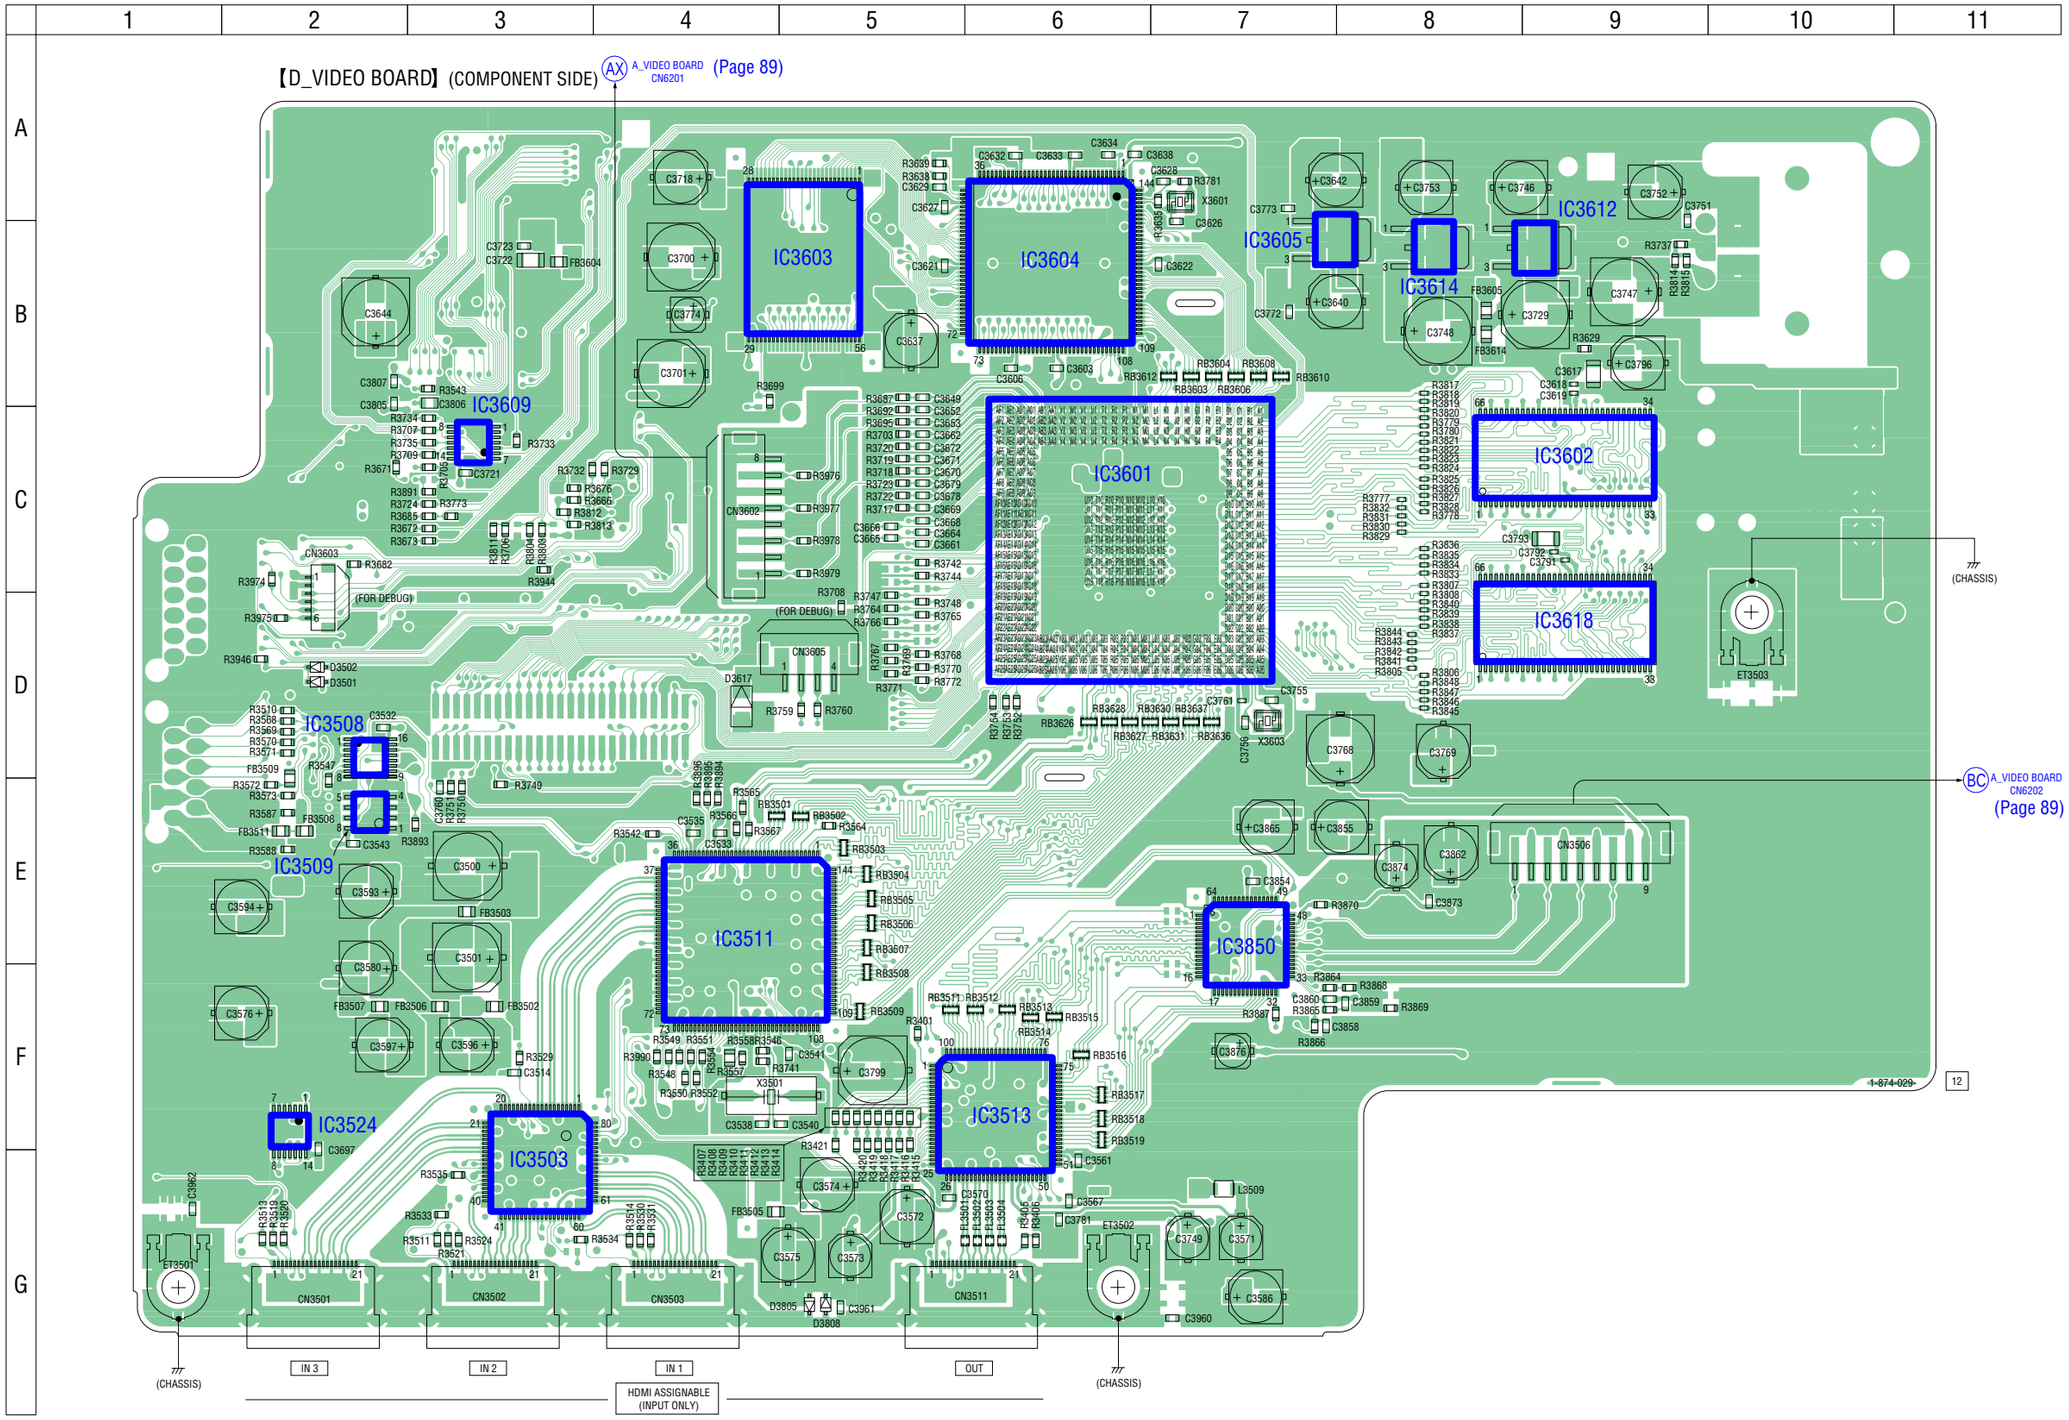

Note: IC3511 and IC3513 cannot exchange with single. When IC3511 and IC3513 are damaged, exchange the entire mounted board.

6-53. PRINTED WIRING BOARD – D_VIDEO Board (Conductor Side) –

• See page 35 for Circuit Boards Location. : Uses unleaded solder.

【D_VIDEO BOARD】(CONDUCTOR SIDE)

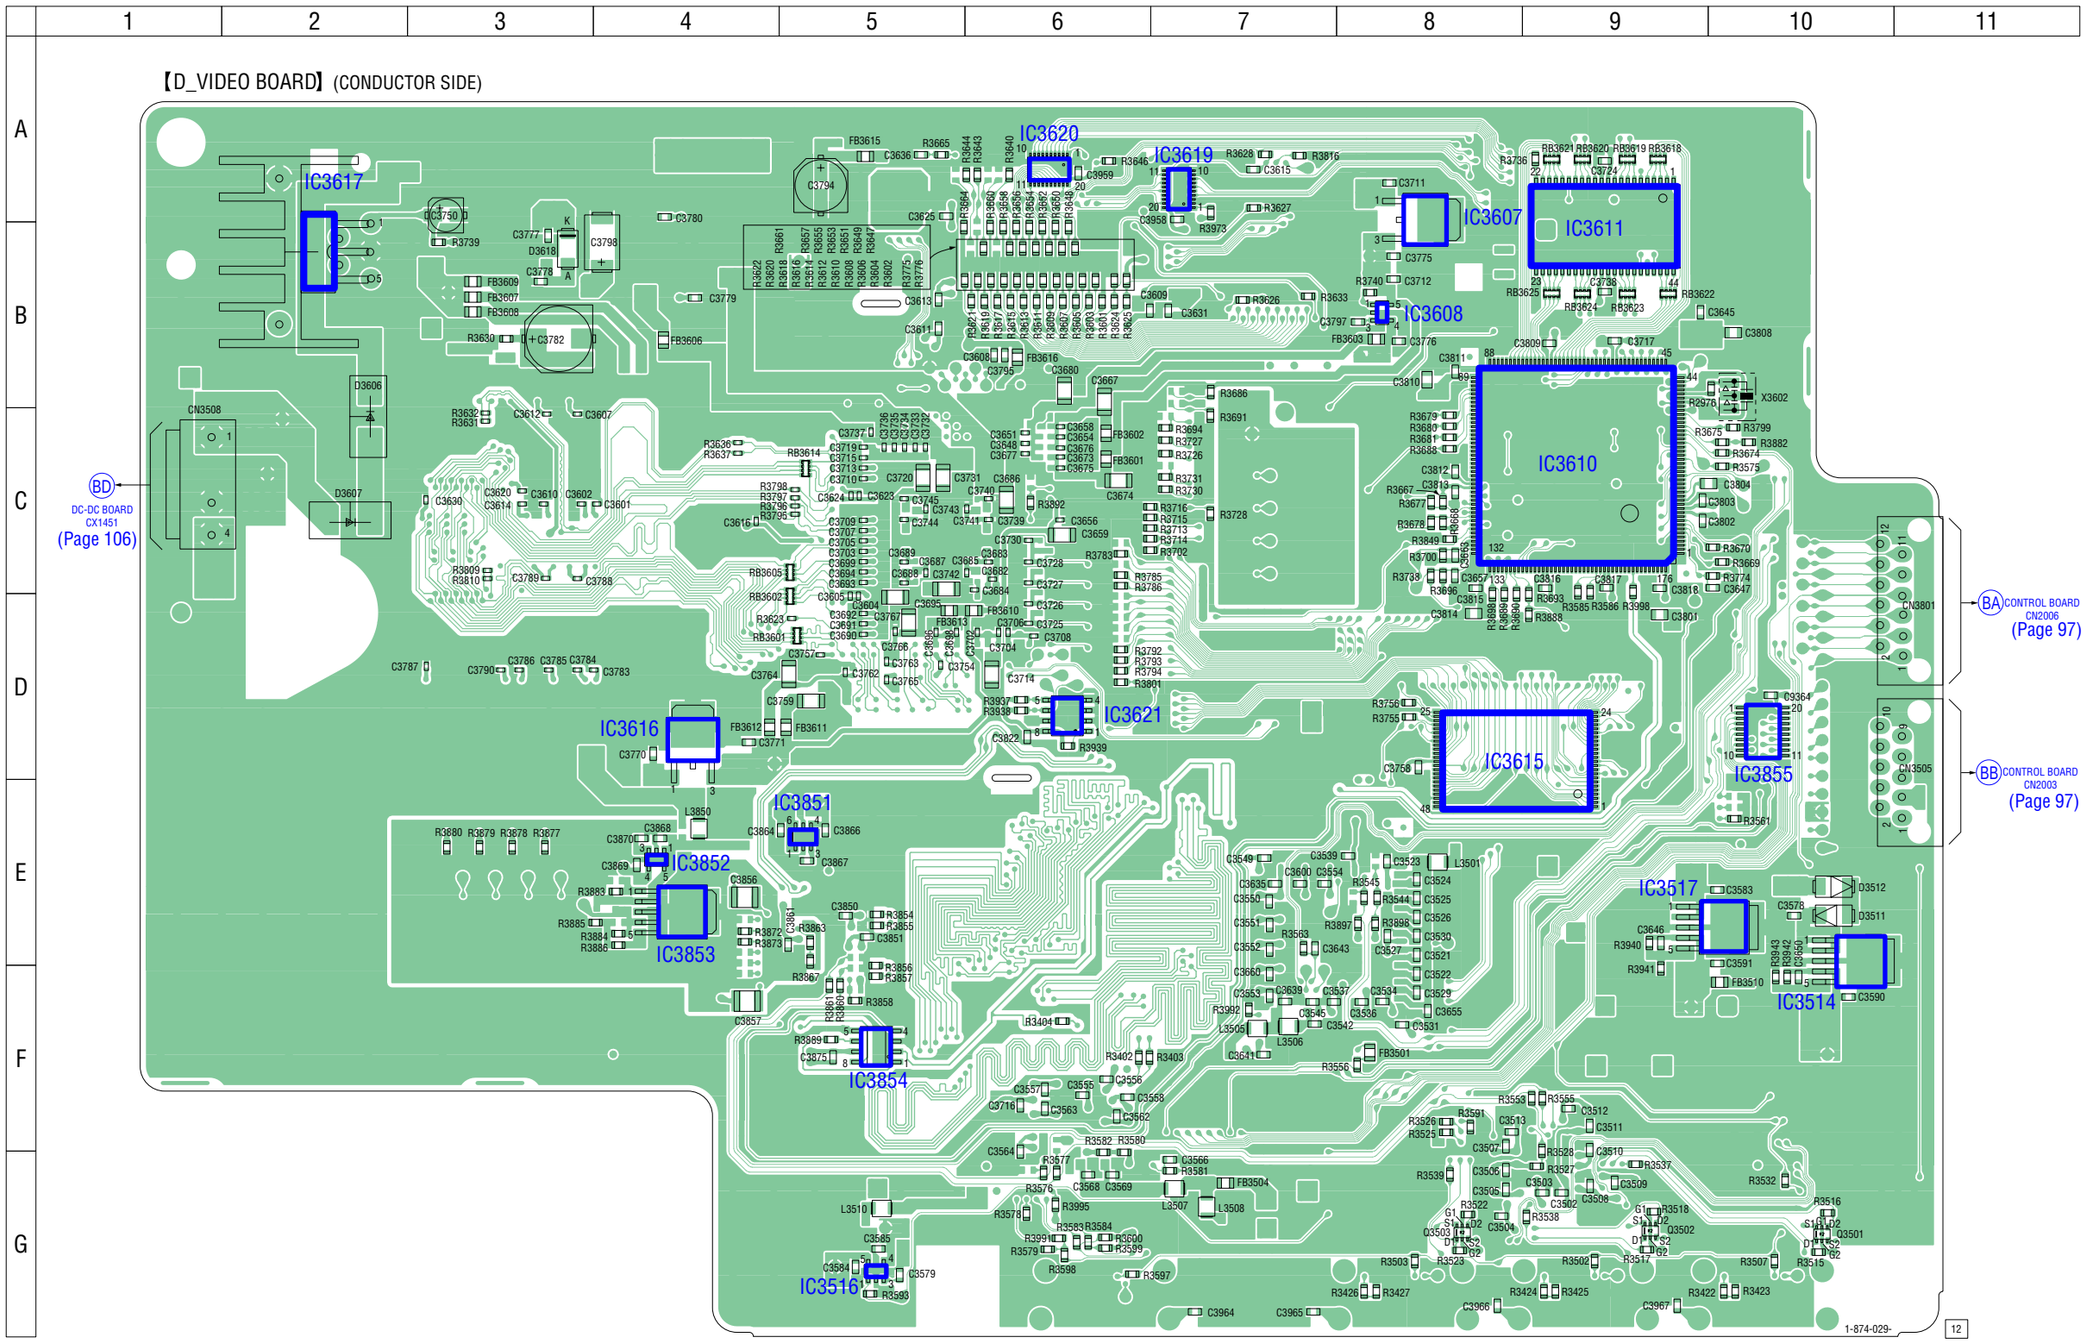

• **Semiconductor Location**

Ref. No.	Location
D3511	E-10
D3512	E-10
D3606	C-2
D3607	C-2
D3618	B-3
IC3514	E-10
IC3516	G-5
IC3517	E-10
IC3607	A-8
IC3608	B-8
IC3610	C-9
IC3611	B-9
IC3615	D-8
IC3616	D-4
IC3617	B-2
IC3619	A-7
IC3620	A-6
IC3621	D-6
IC3851	E-5
IC3852	E-4
IC3853	E-4
IC3854	F-5
IC3855	D-10
Q3501	G-10
Q3502	G-9
Q3503	G-8

6-54. SCHEMATIC DIAGRAM – D_VIDEO Board (1/10) –

• See page 123 for IC Pin Function Description.

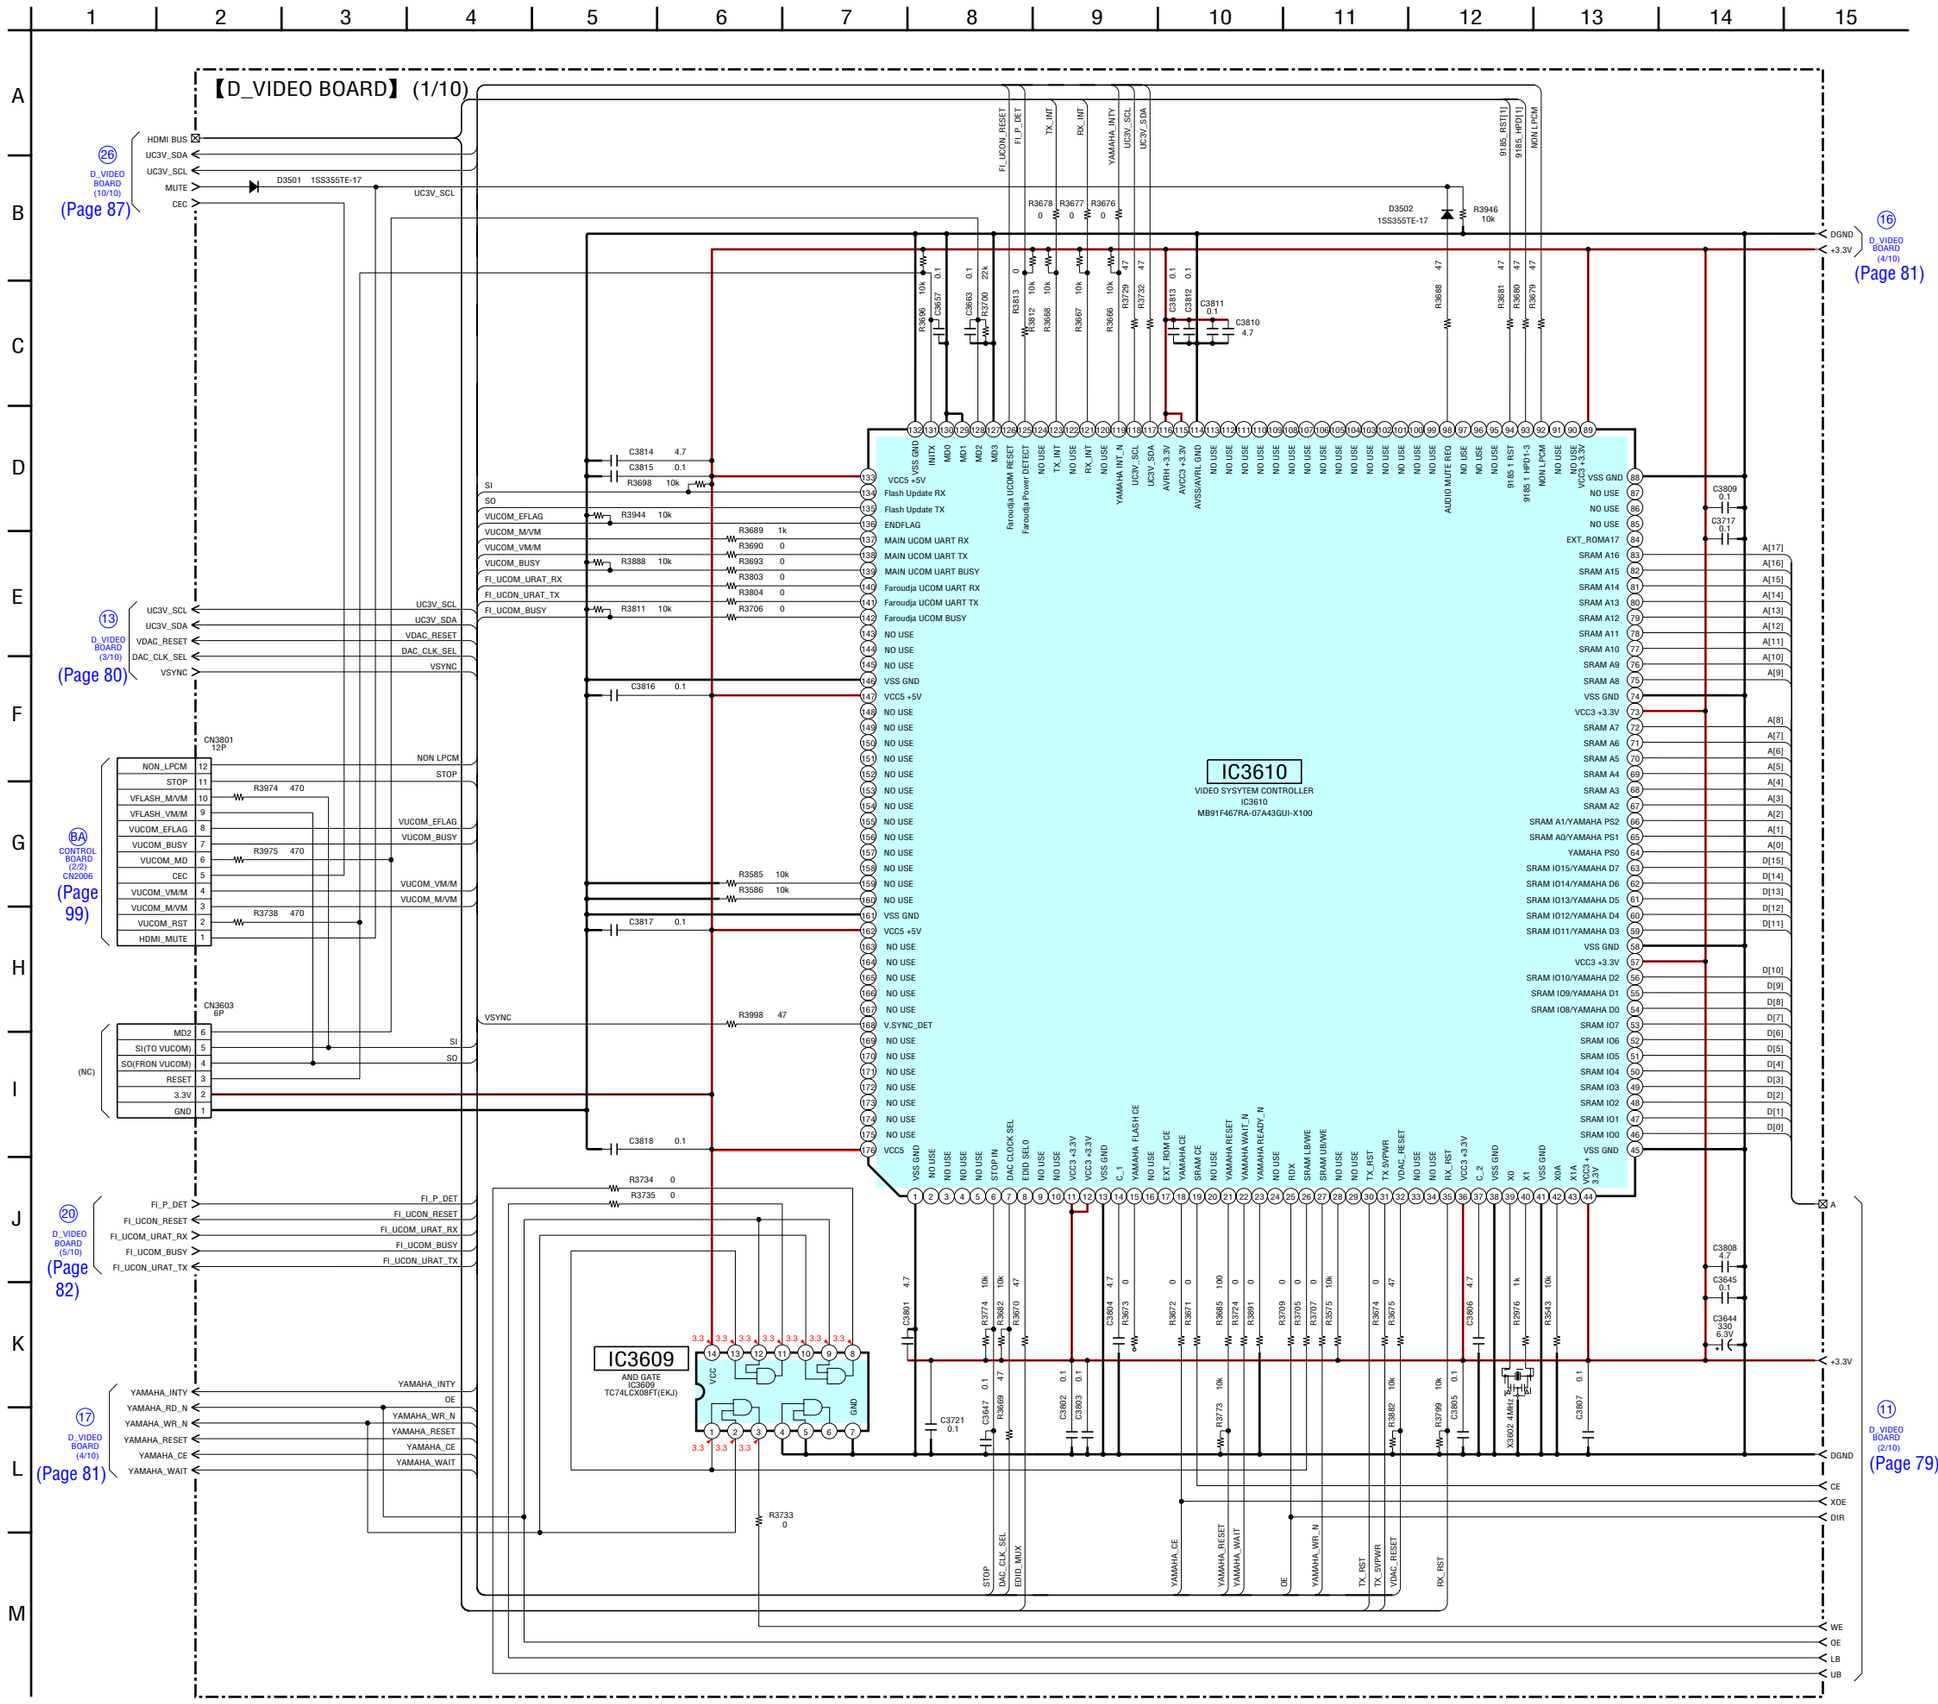

6-55. SCHEMATIC DIAGRAM – D_VIDEO Board (2/10) – • See page 110 for IC Block Diagrams.

【D_VIDEO BOARD】(2/10)

IC3611
S-RAM
IC3611
IS61LV12816L

IC3619
BUFFER
IC3619
TC74LCX245FK(EL)

IC3620
BUFFER
IC3620
TC74LCX245FK(EL)

IC B/D

R3973 10k

RB3618 33 (A[4] A[3] A[2] A[1])
RB3619 33 (D[0] D[1] D[2] D[3])
RB3620 33 (D[4] D[5] D[6] D[7])
RB3621 33 (A[17] A[16] A[15] A[14])
R3736 33 (A[13])
RB3622 33 (A[5] A[6] A[7] A[8])
RB3623 33 (D[15] D[14] D[13] D[12])
RB3624 33 (D[11] D[10] D[9] D[8])
RB3625 33 (A[9] A[10] A[11] A[12])

C3724 0.1
C3738 0.1
C3722 10
C3723 0.1
C3958 0.1
C3959 0.1
FB3604

CE
WE
DGND
A
+3.3V
LB
UB
OE
DIR
XOE

(11) D_VIDEO BOARD (1/10) (Page 78)

(Page 81) (12) D_VIDEO BOARD (4/10)
YAMAHA_A[0-2],YAMAHA_D[0-7]

6-56. SCHEMATIC DIAGRAM – D_VIDEO Board (3/10) –

• See page 110 for Waveforms. • See page 110 for IC Block Diagrams.

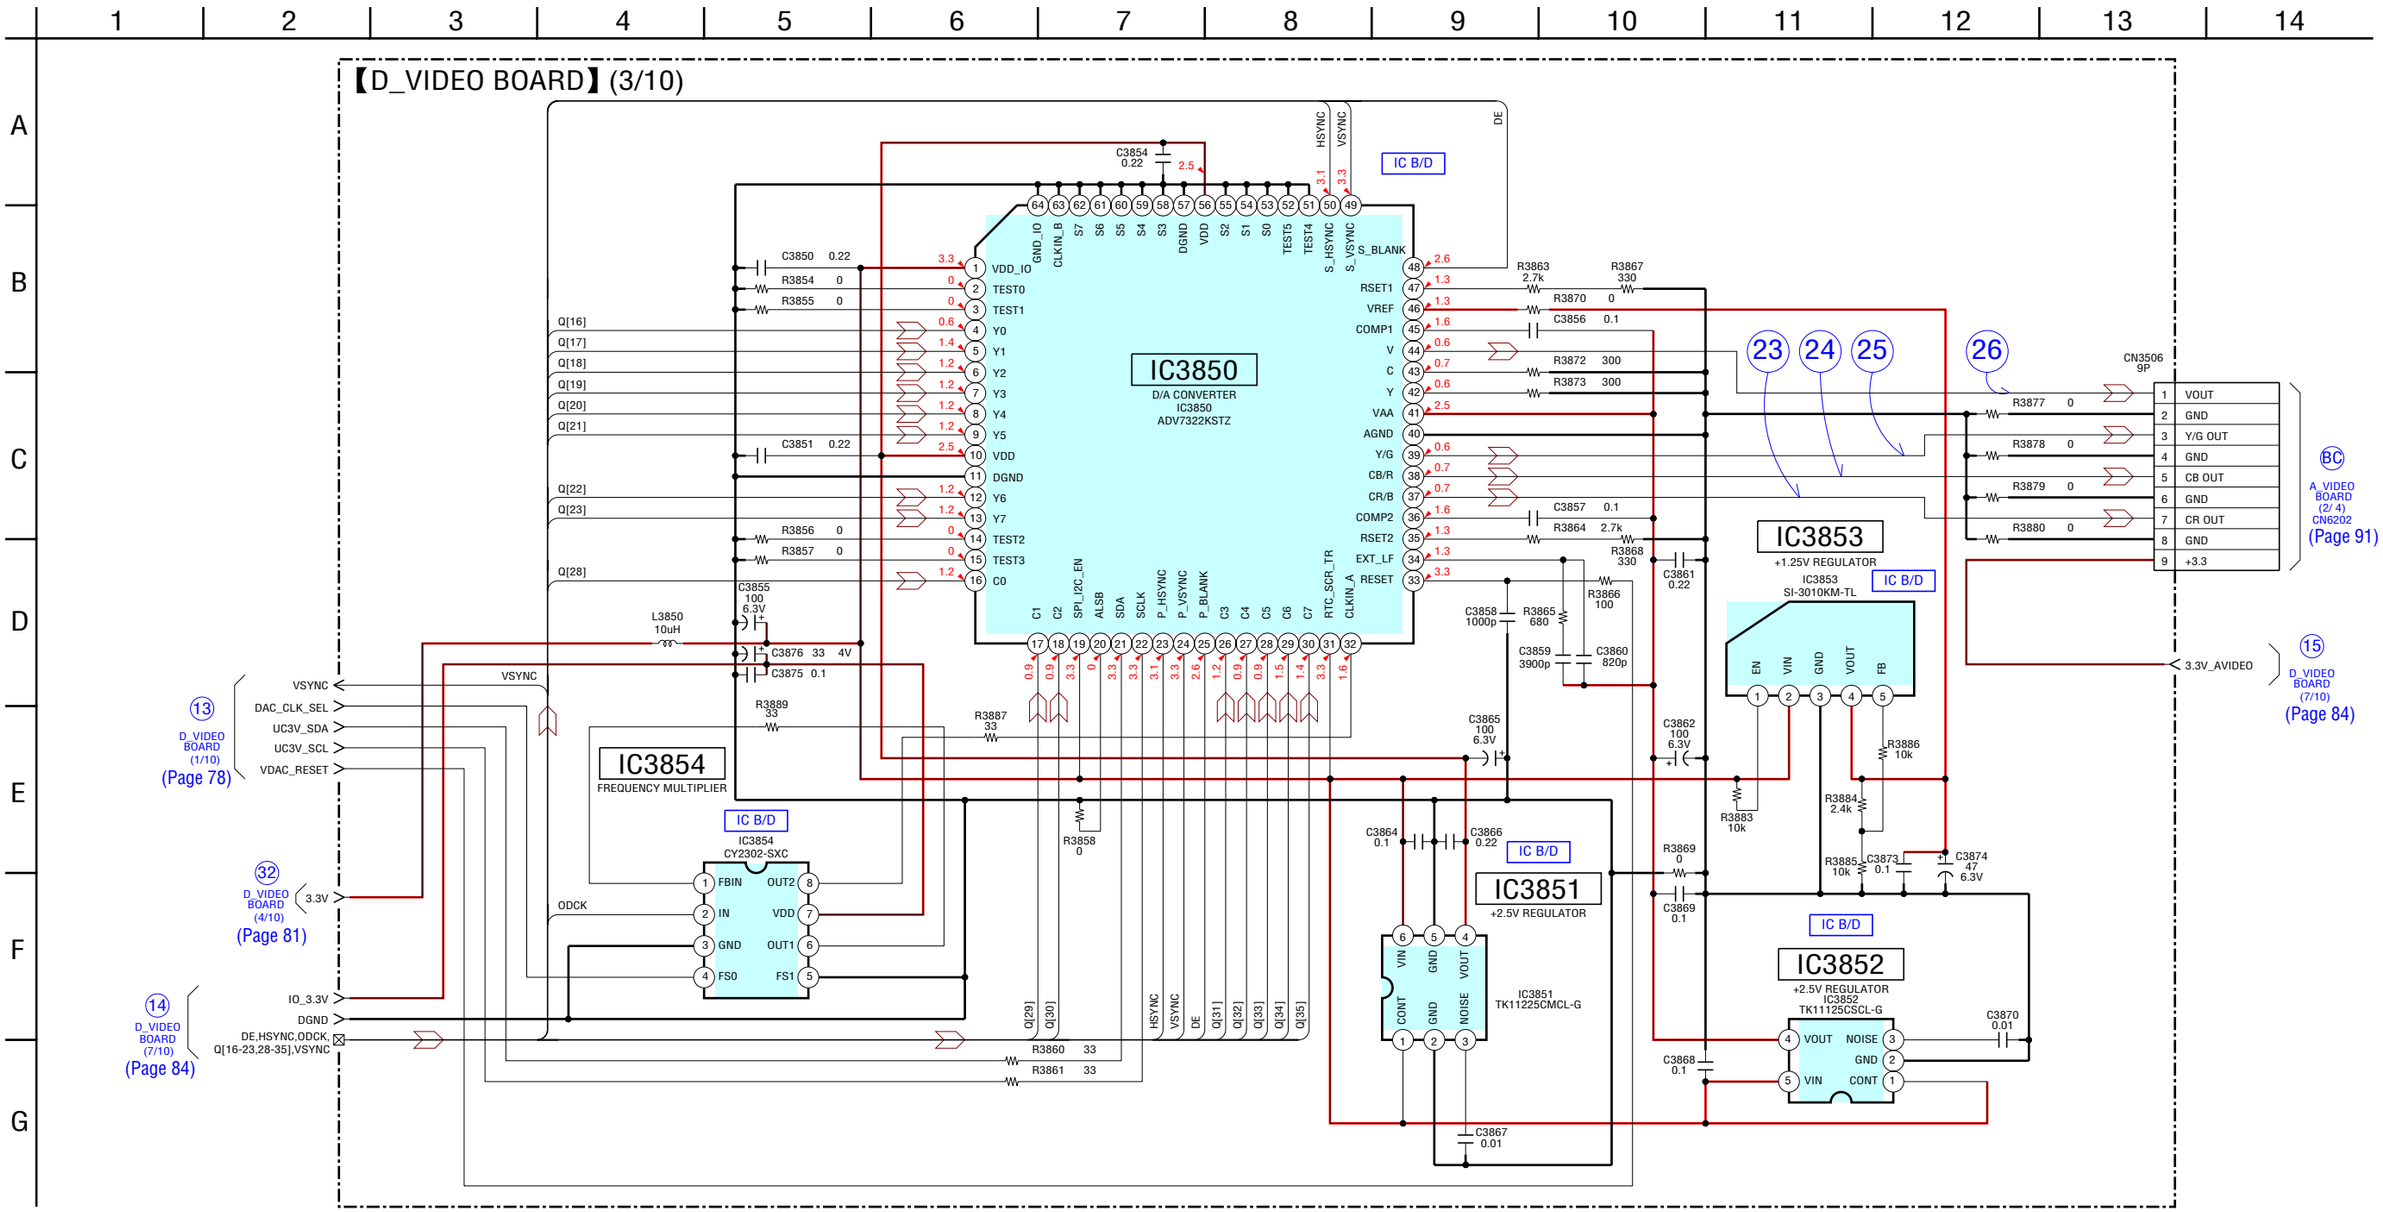

6-57. SCHEMATIC DIAGRAM – D_VIDEO Board (4/10) –

• See page 110 for Waveforms. • See page 123 for IC Pin Function Description.

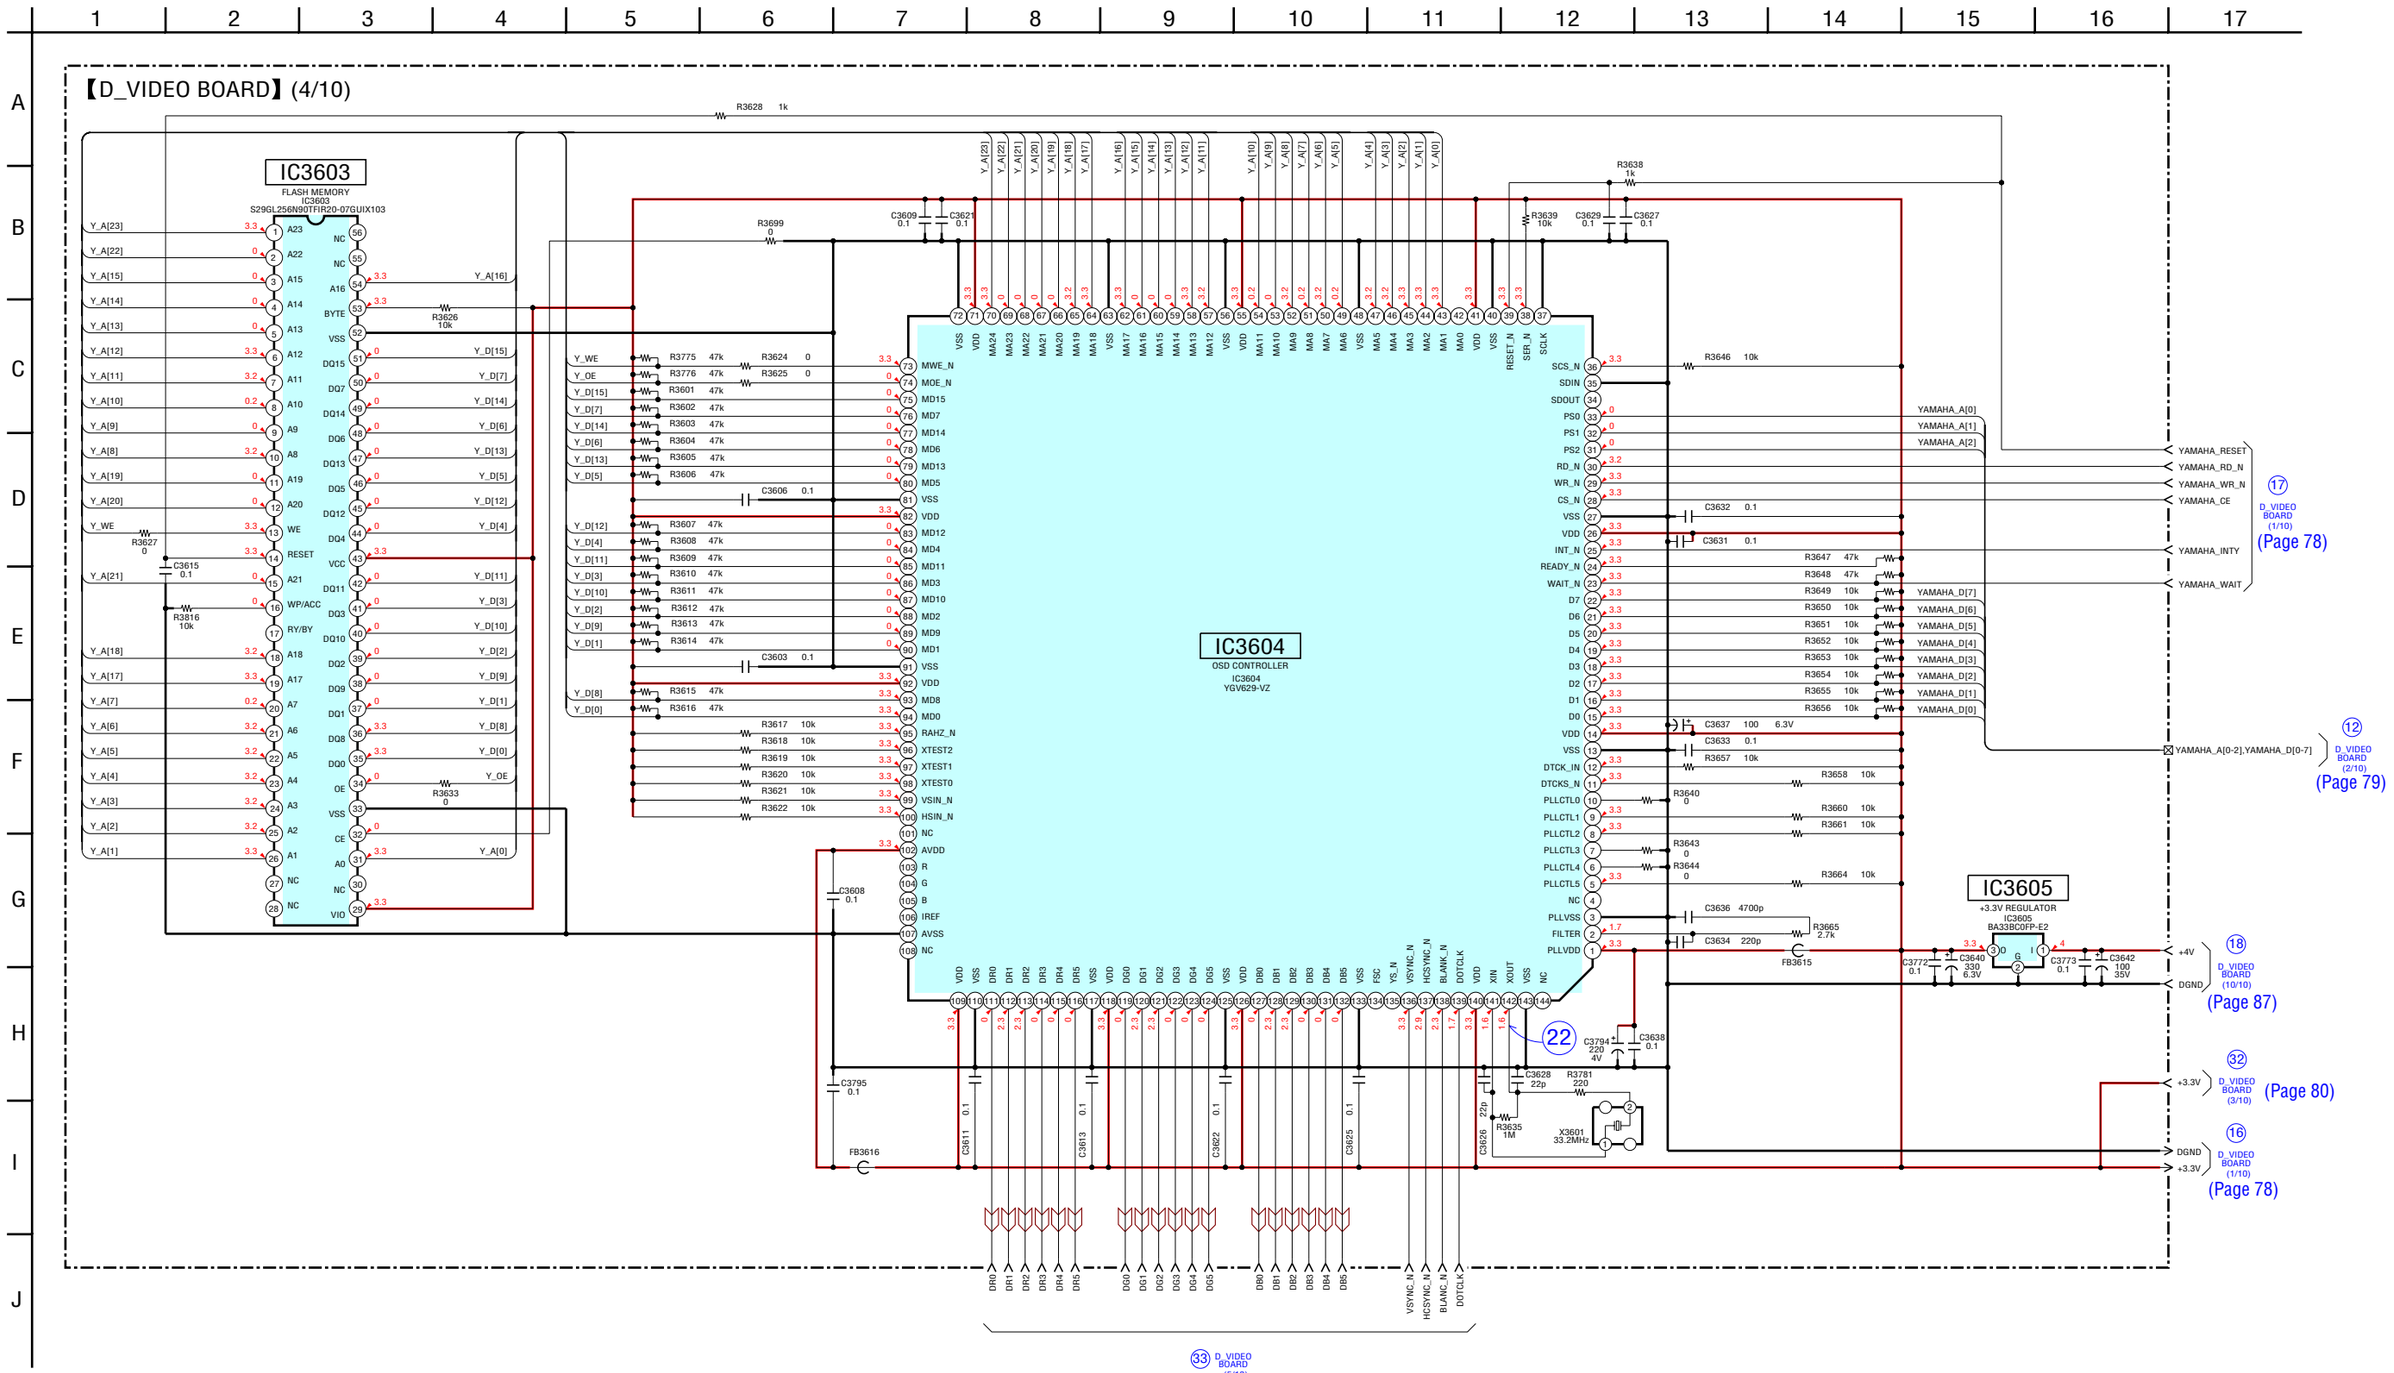

6-58. SCHEMATIC DIAGRAM – D_VIDEO Board (5/10) –

• See page 110 for IC Block Diagrams. • See page 123 for IC Pin Function Description.

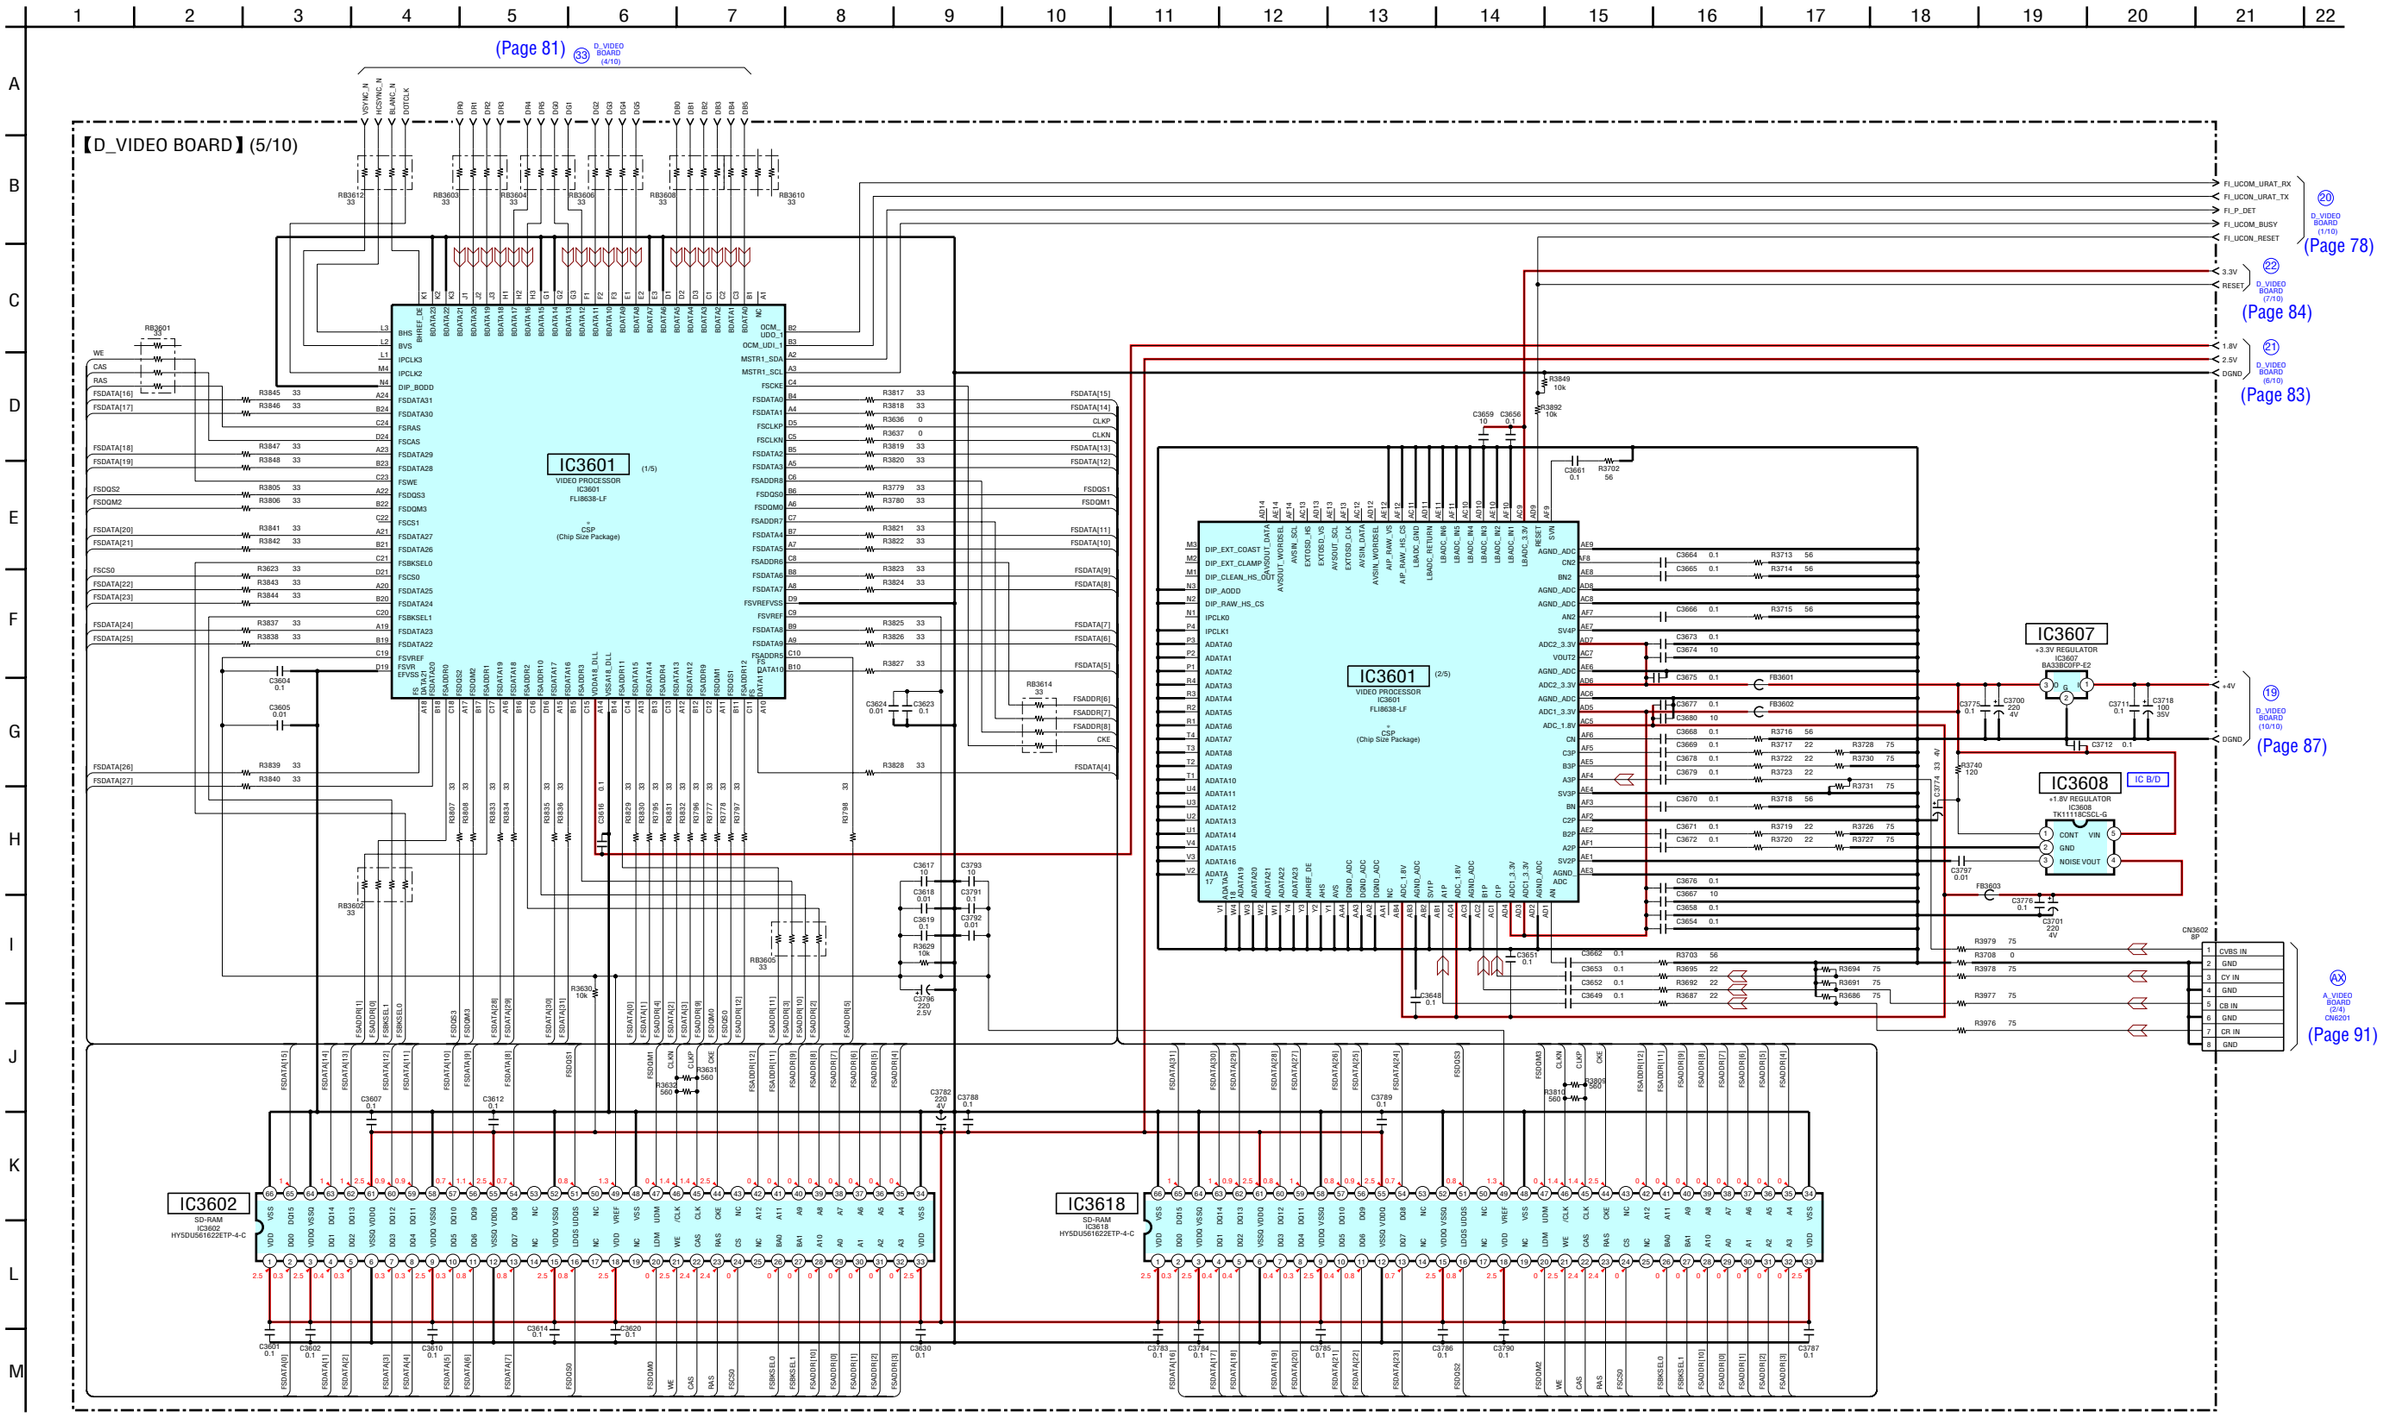

6-59. SCHEMATIC DIAGRAM – D_VIDEO Board (6/10) – • See page 110 for IC Block Diagrams. • See page 123 for IC Pin Function Description.

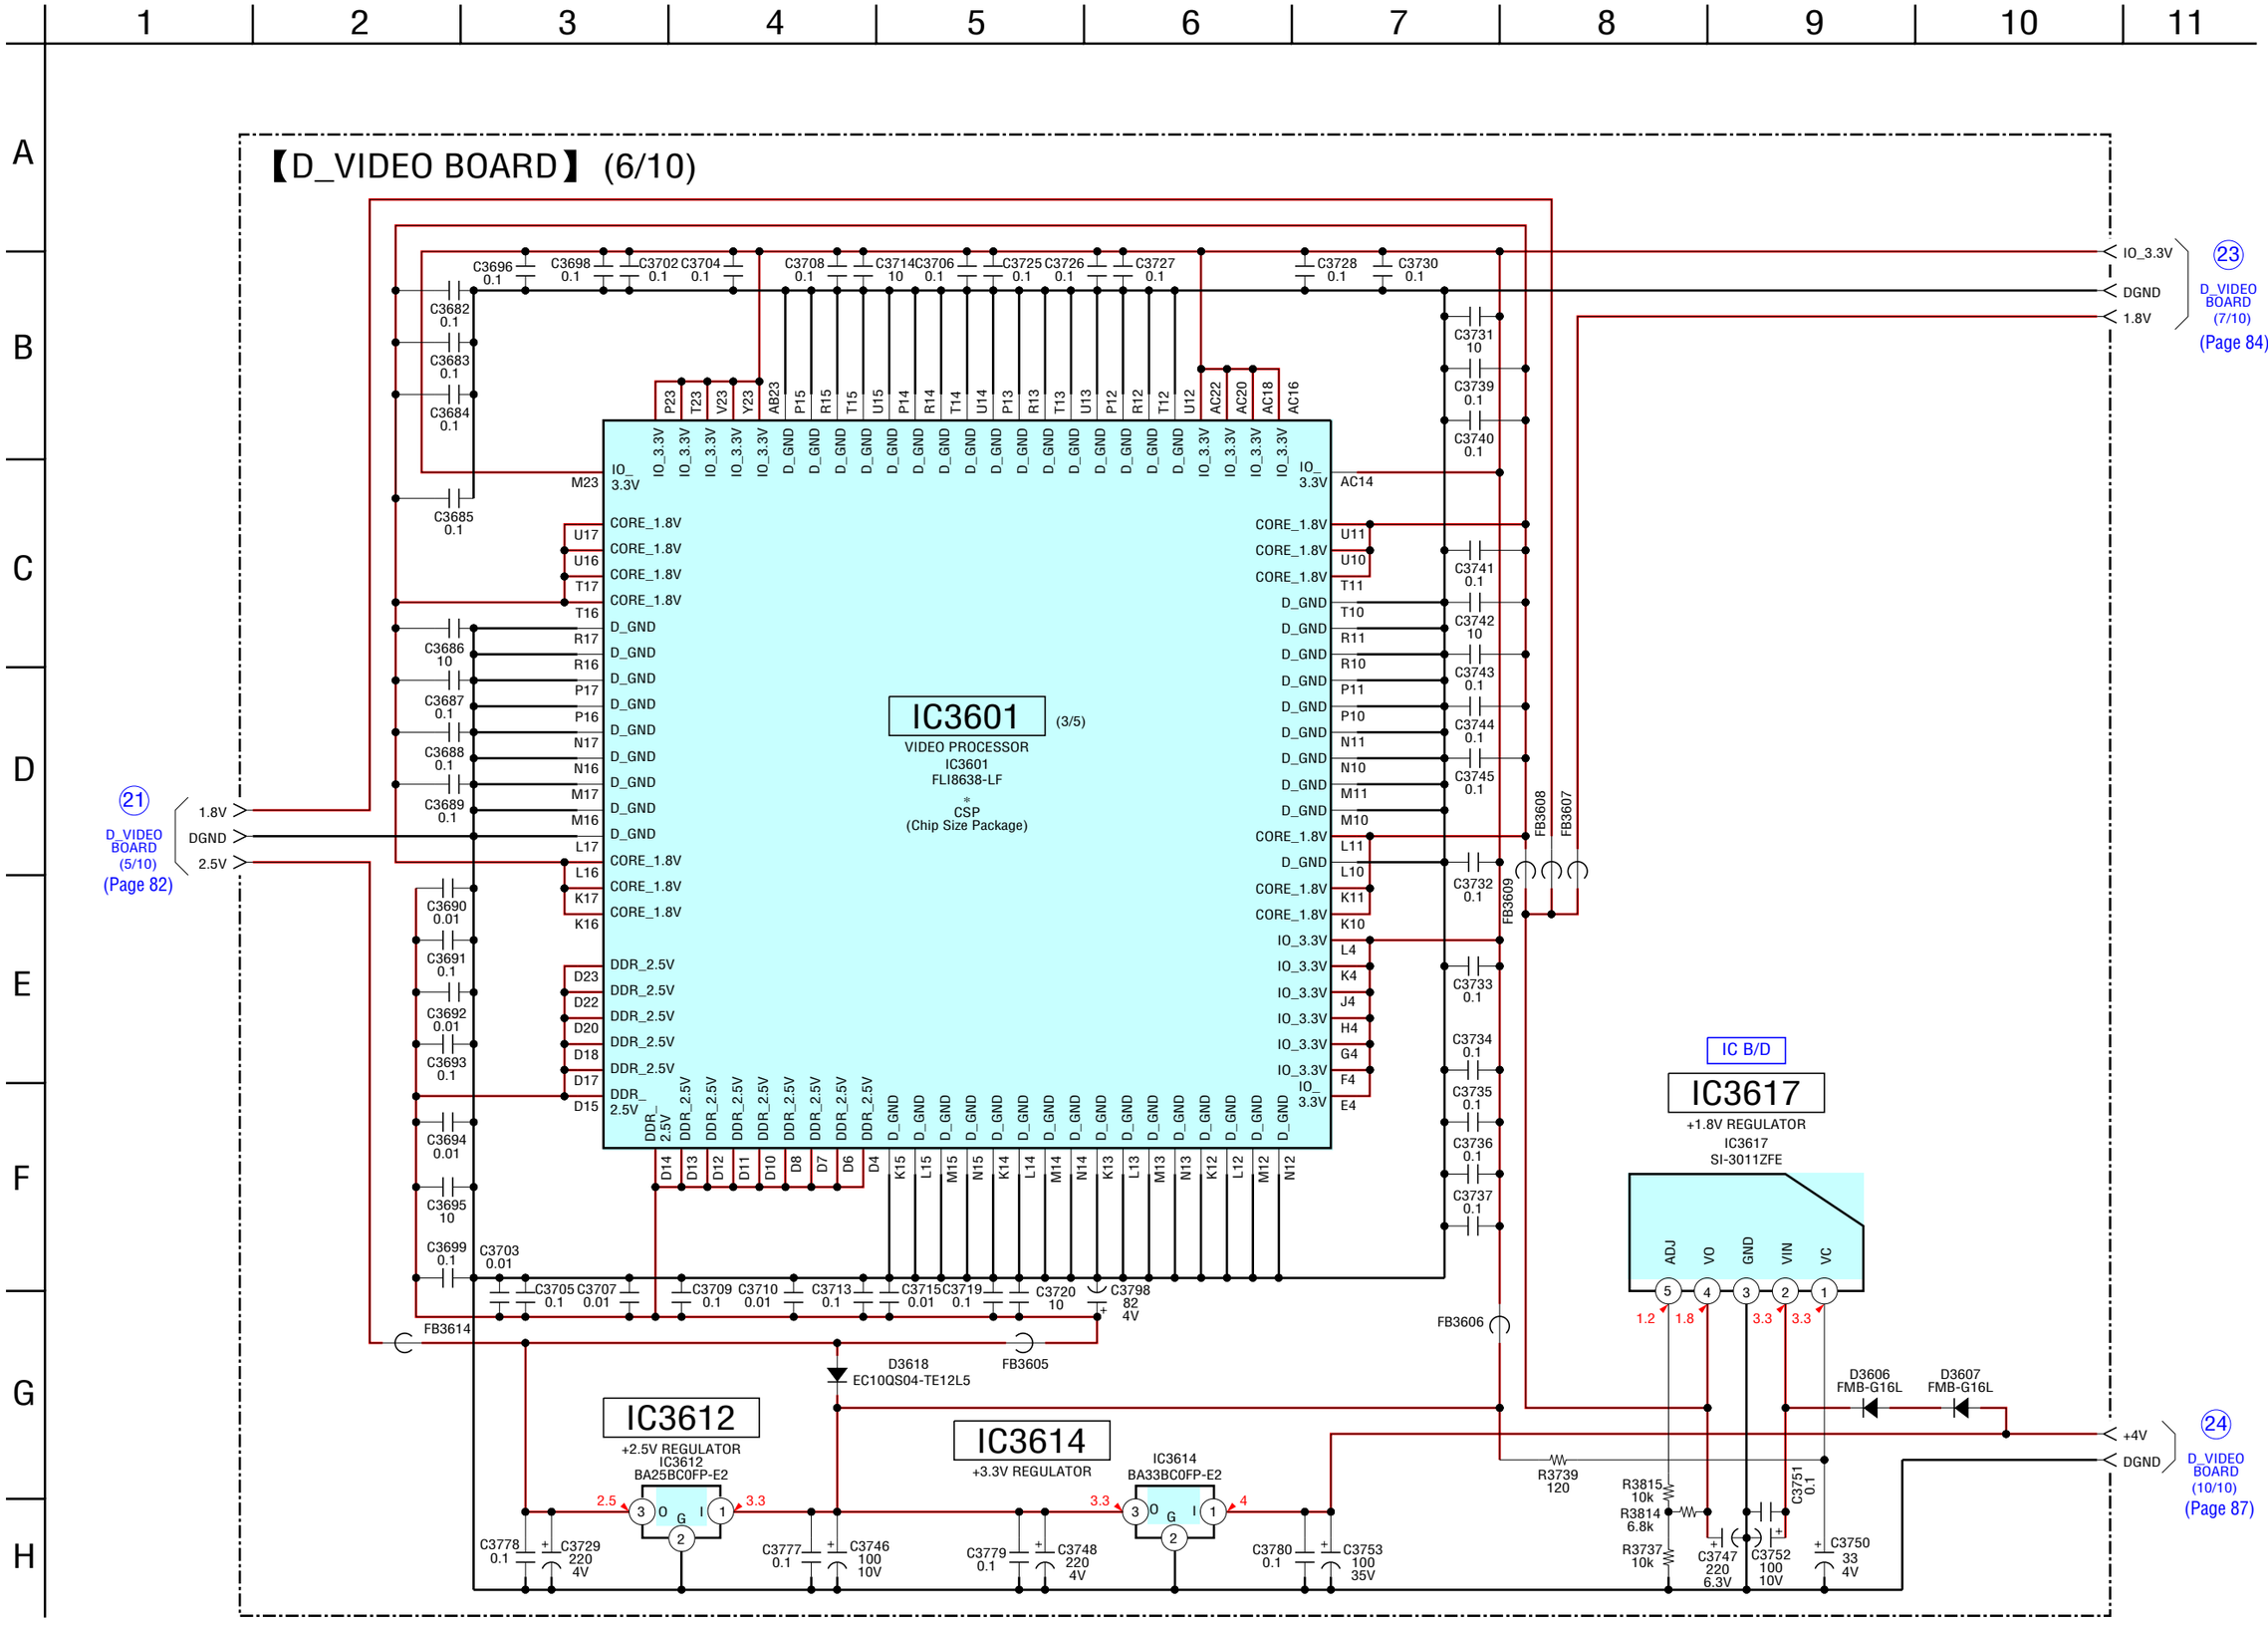

6-60. SCHEMATIC DIAGRAM – D_VIDEO Board (7/10) –

• See page 123 for IC Pin Function Description.

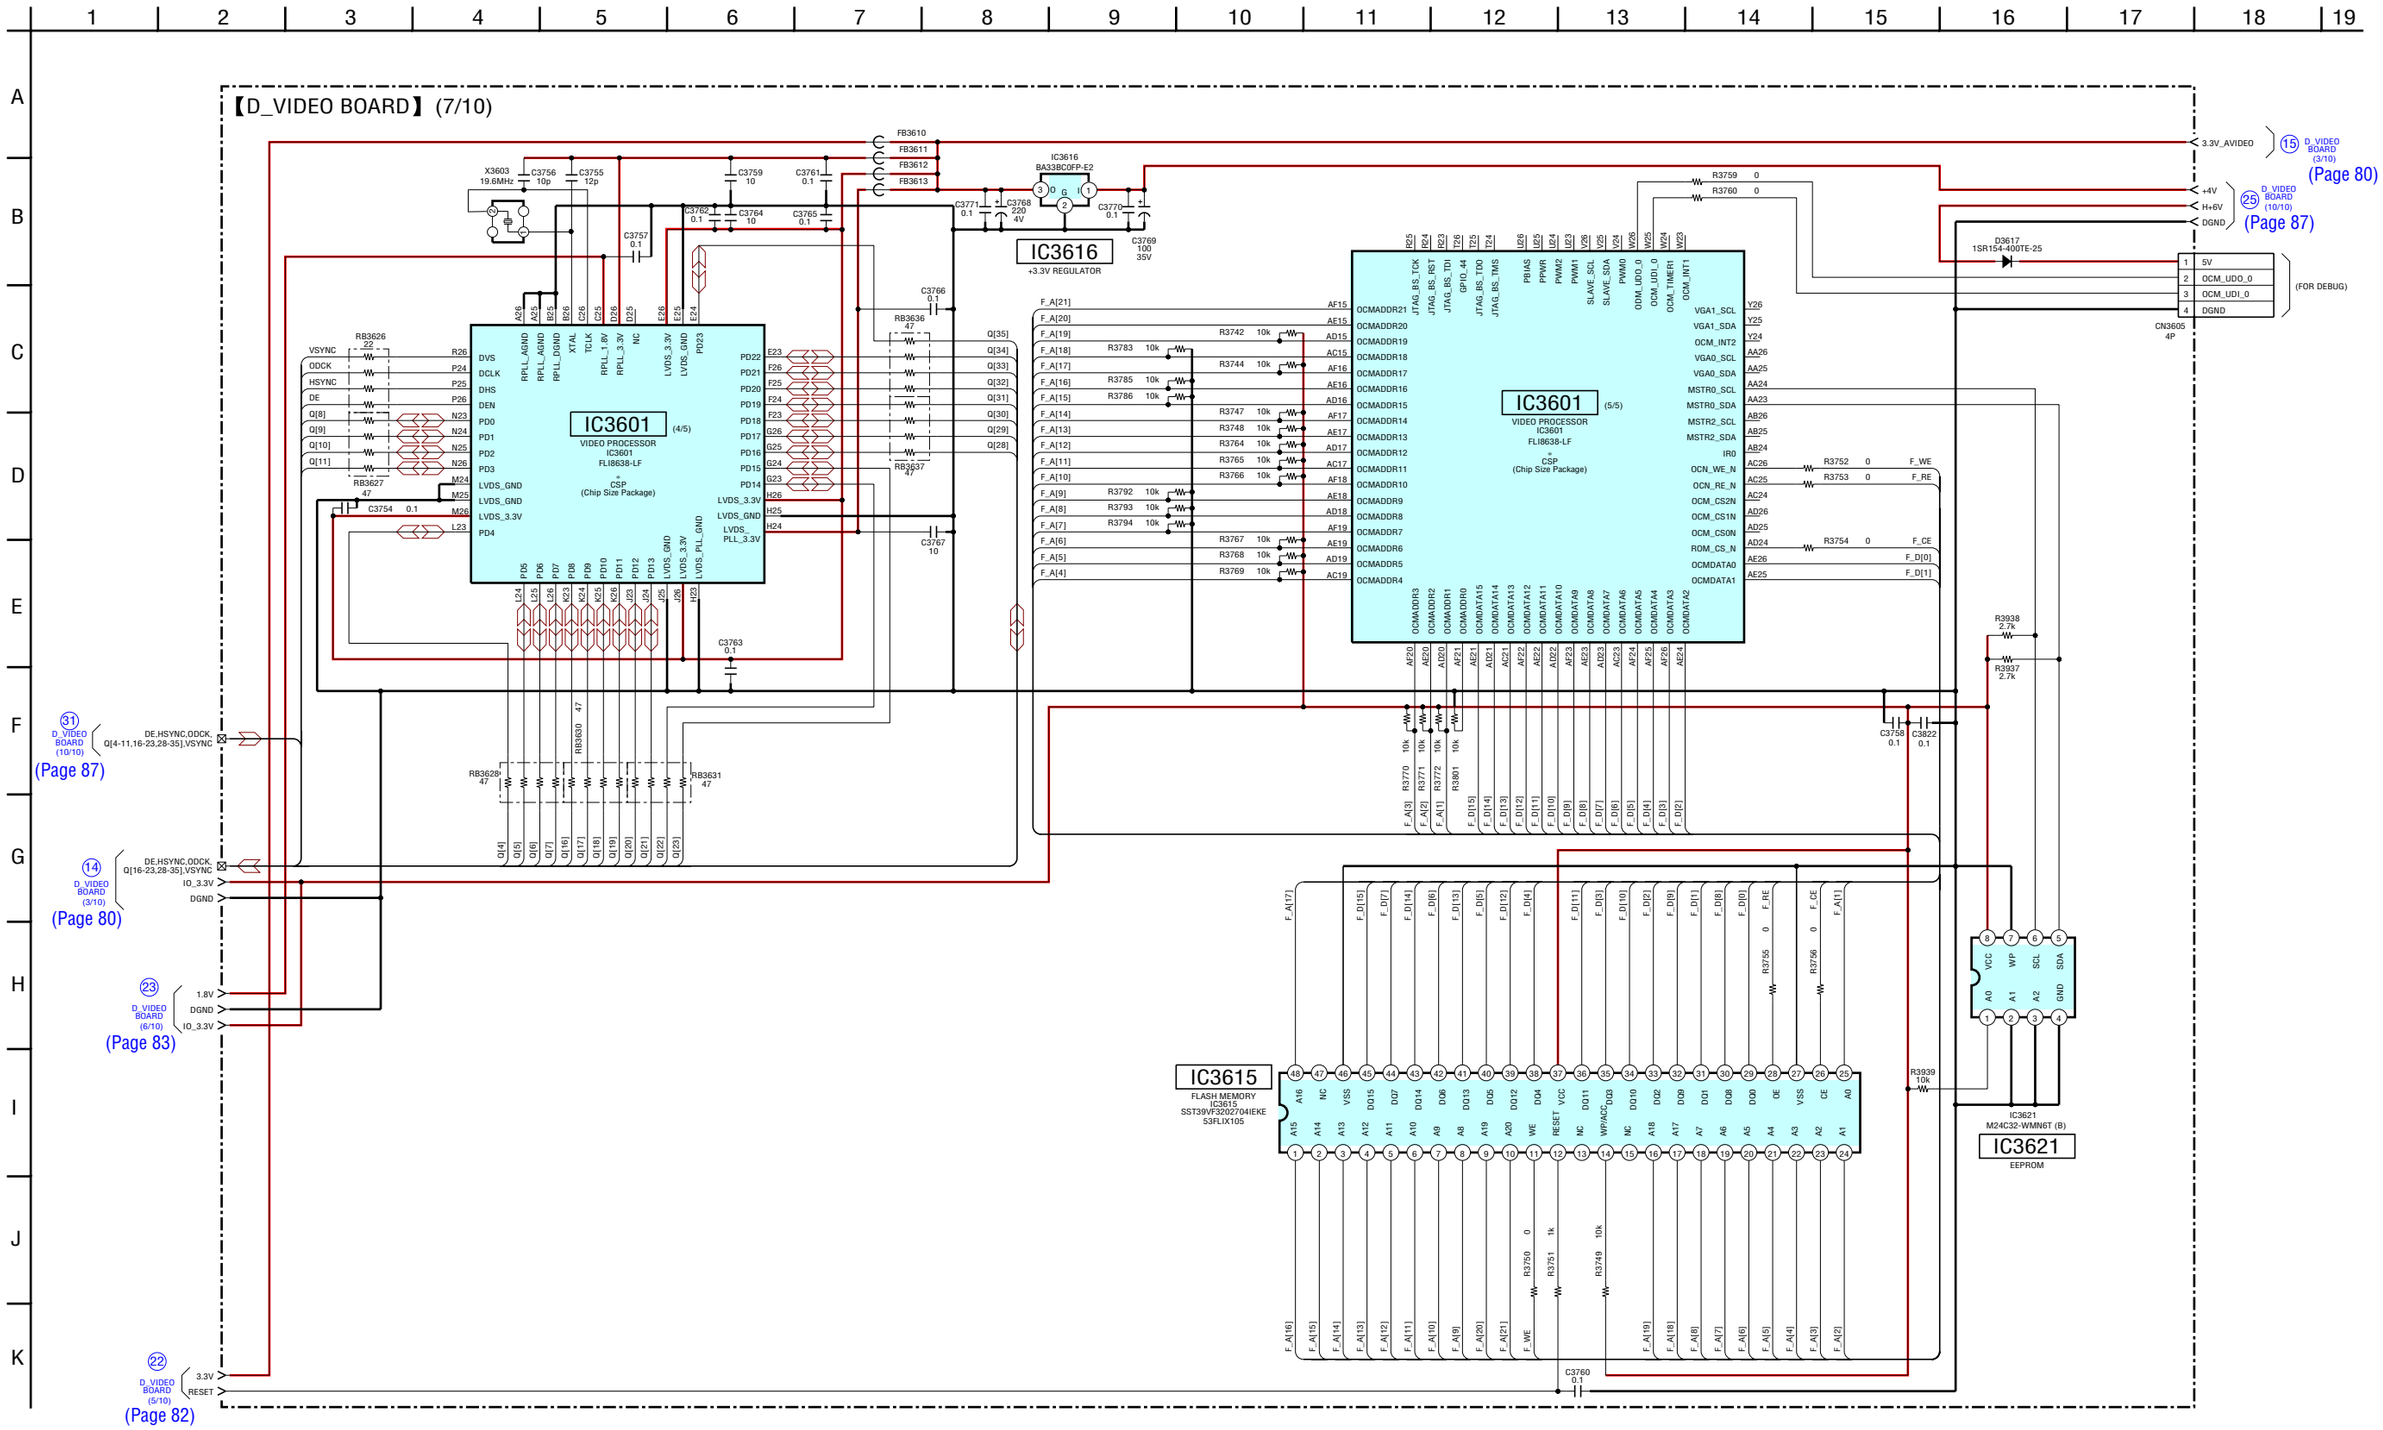

6-61. SCHEMATIC DIAGRAM – D_VIDEO Board (8/10) –

• See page 123 for IC Pin Function Description.

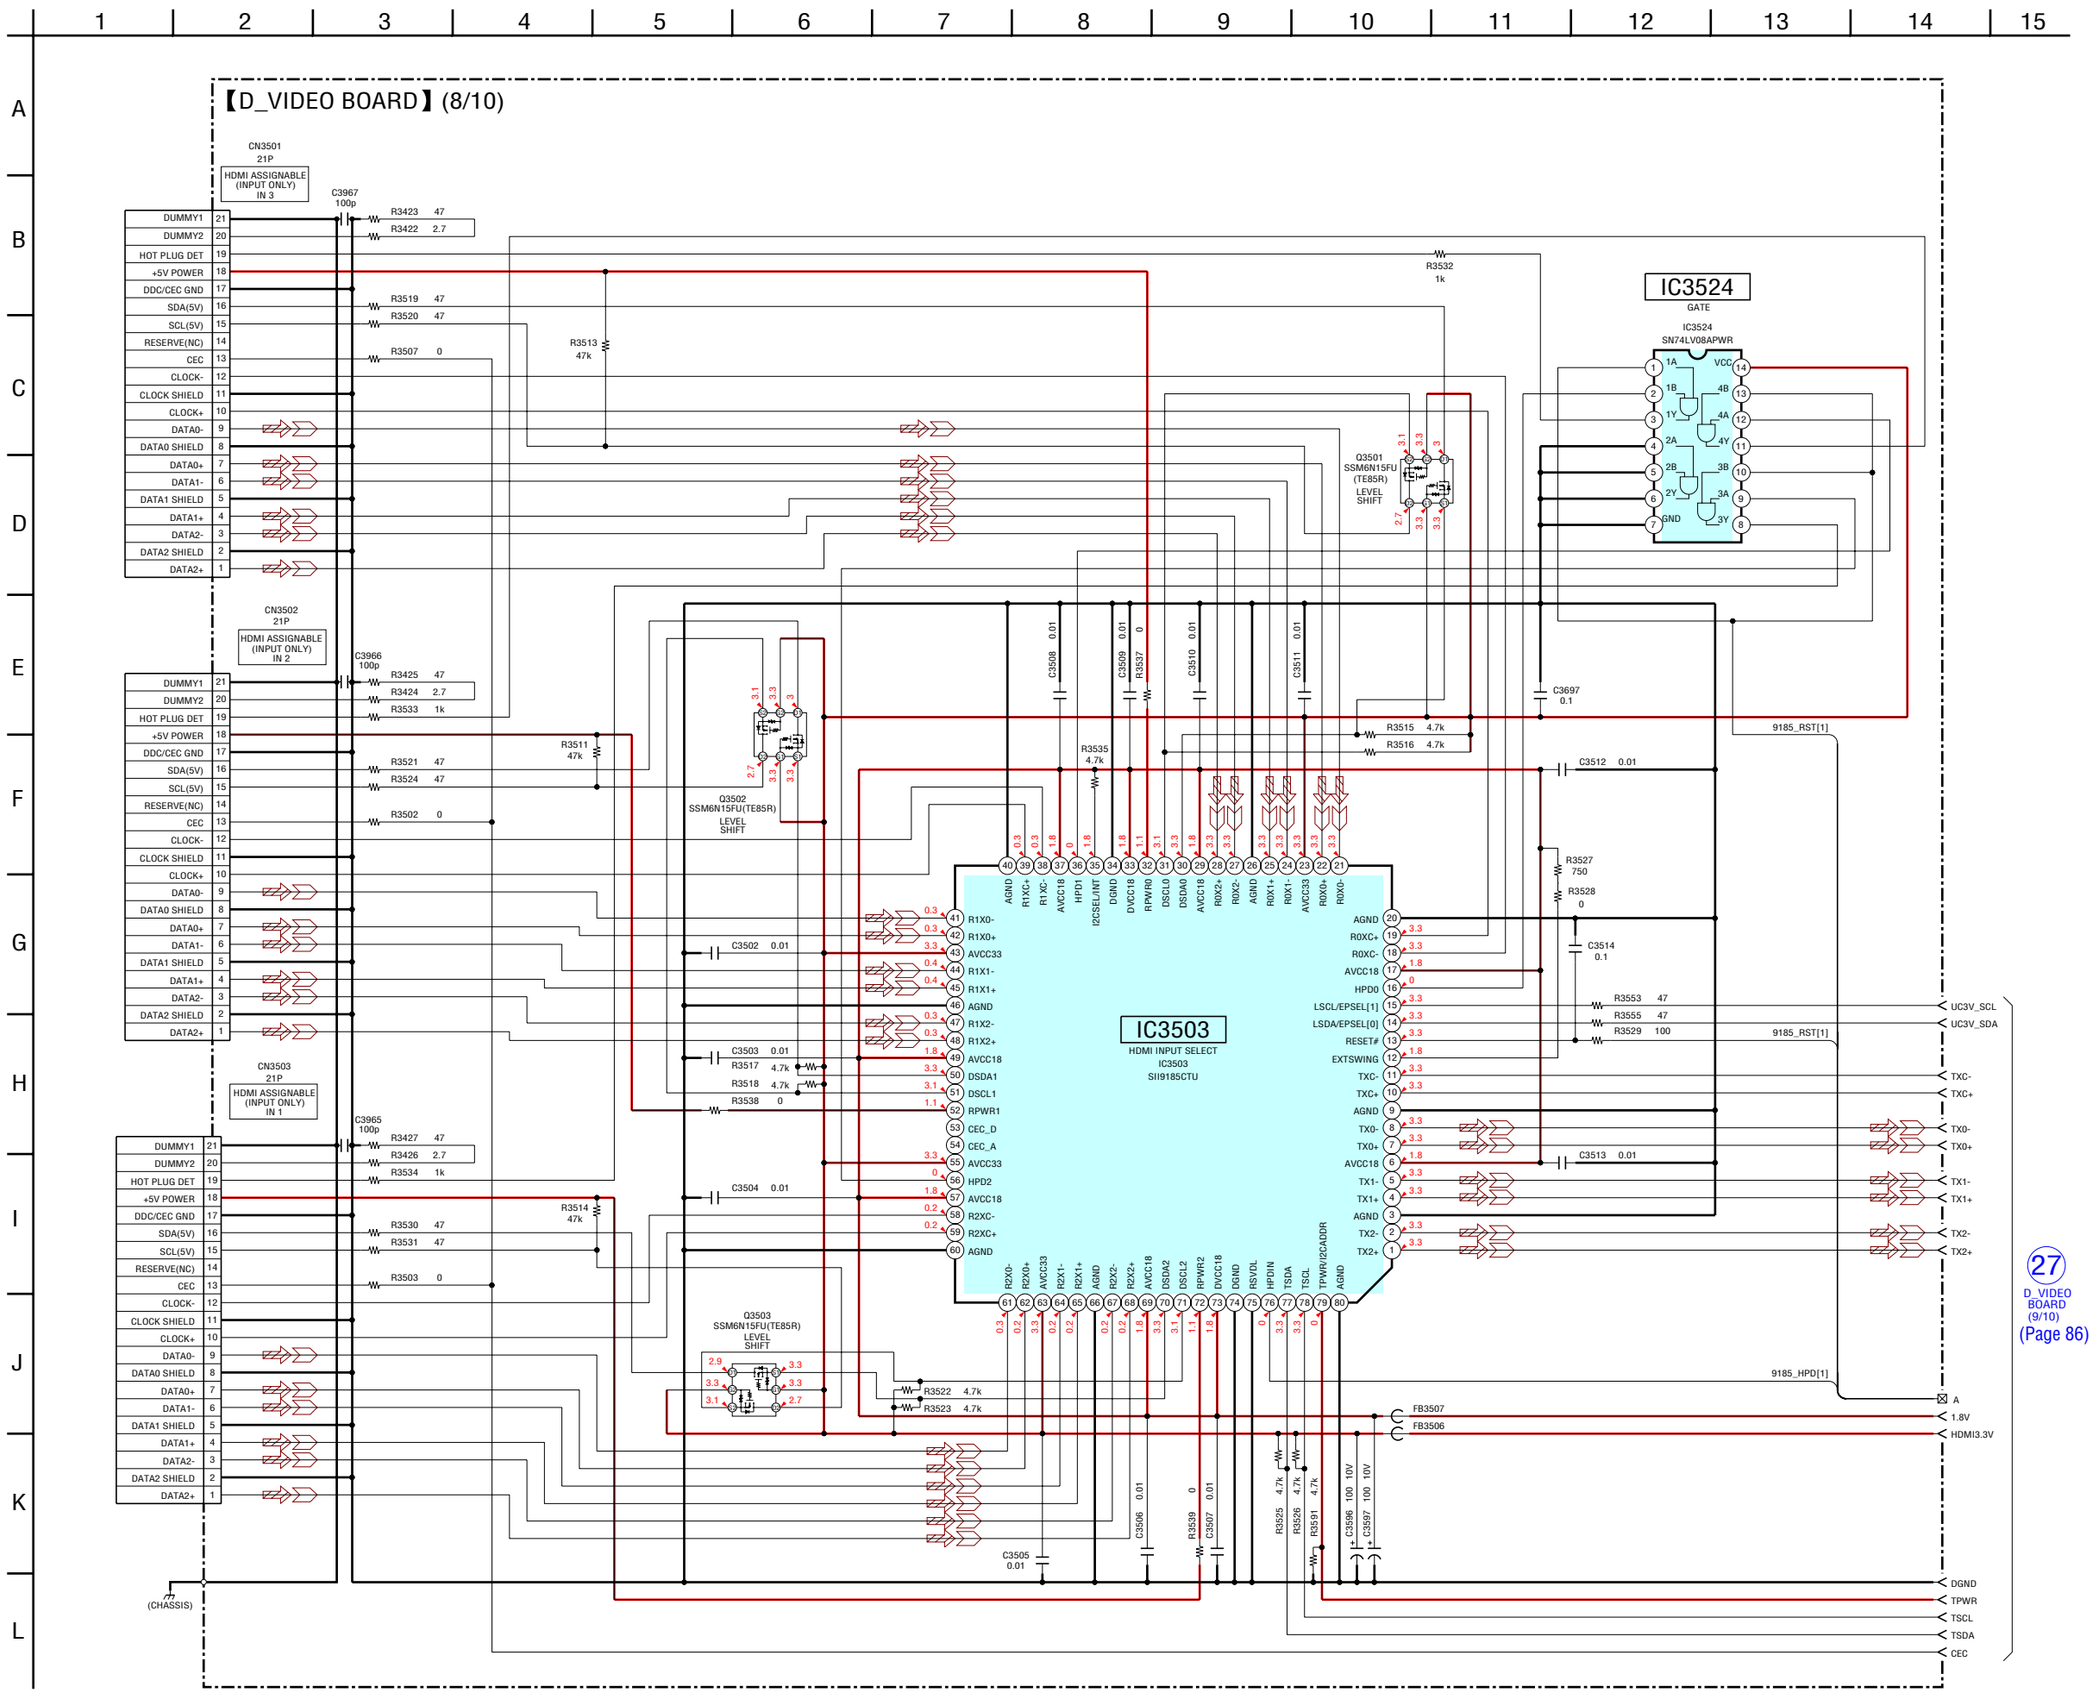

6-62. SCHEMATIC DIAGRAM – D_VIDEO Board (9/10) –

• See page 110 for Waveforms. • See page 110 for IC Block Diagrams. • See page 123 for IC Pin Function Description.

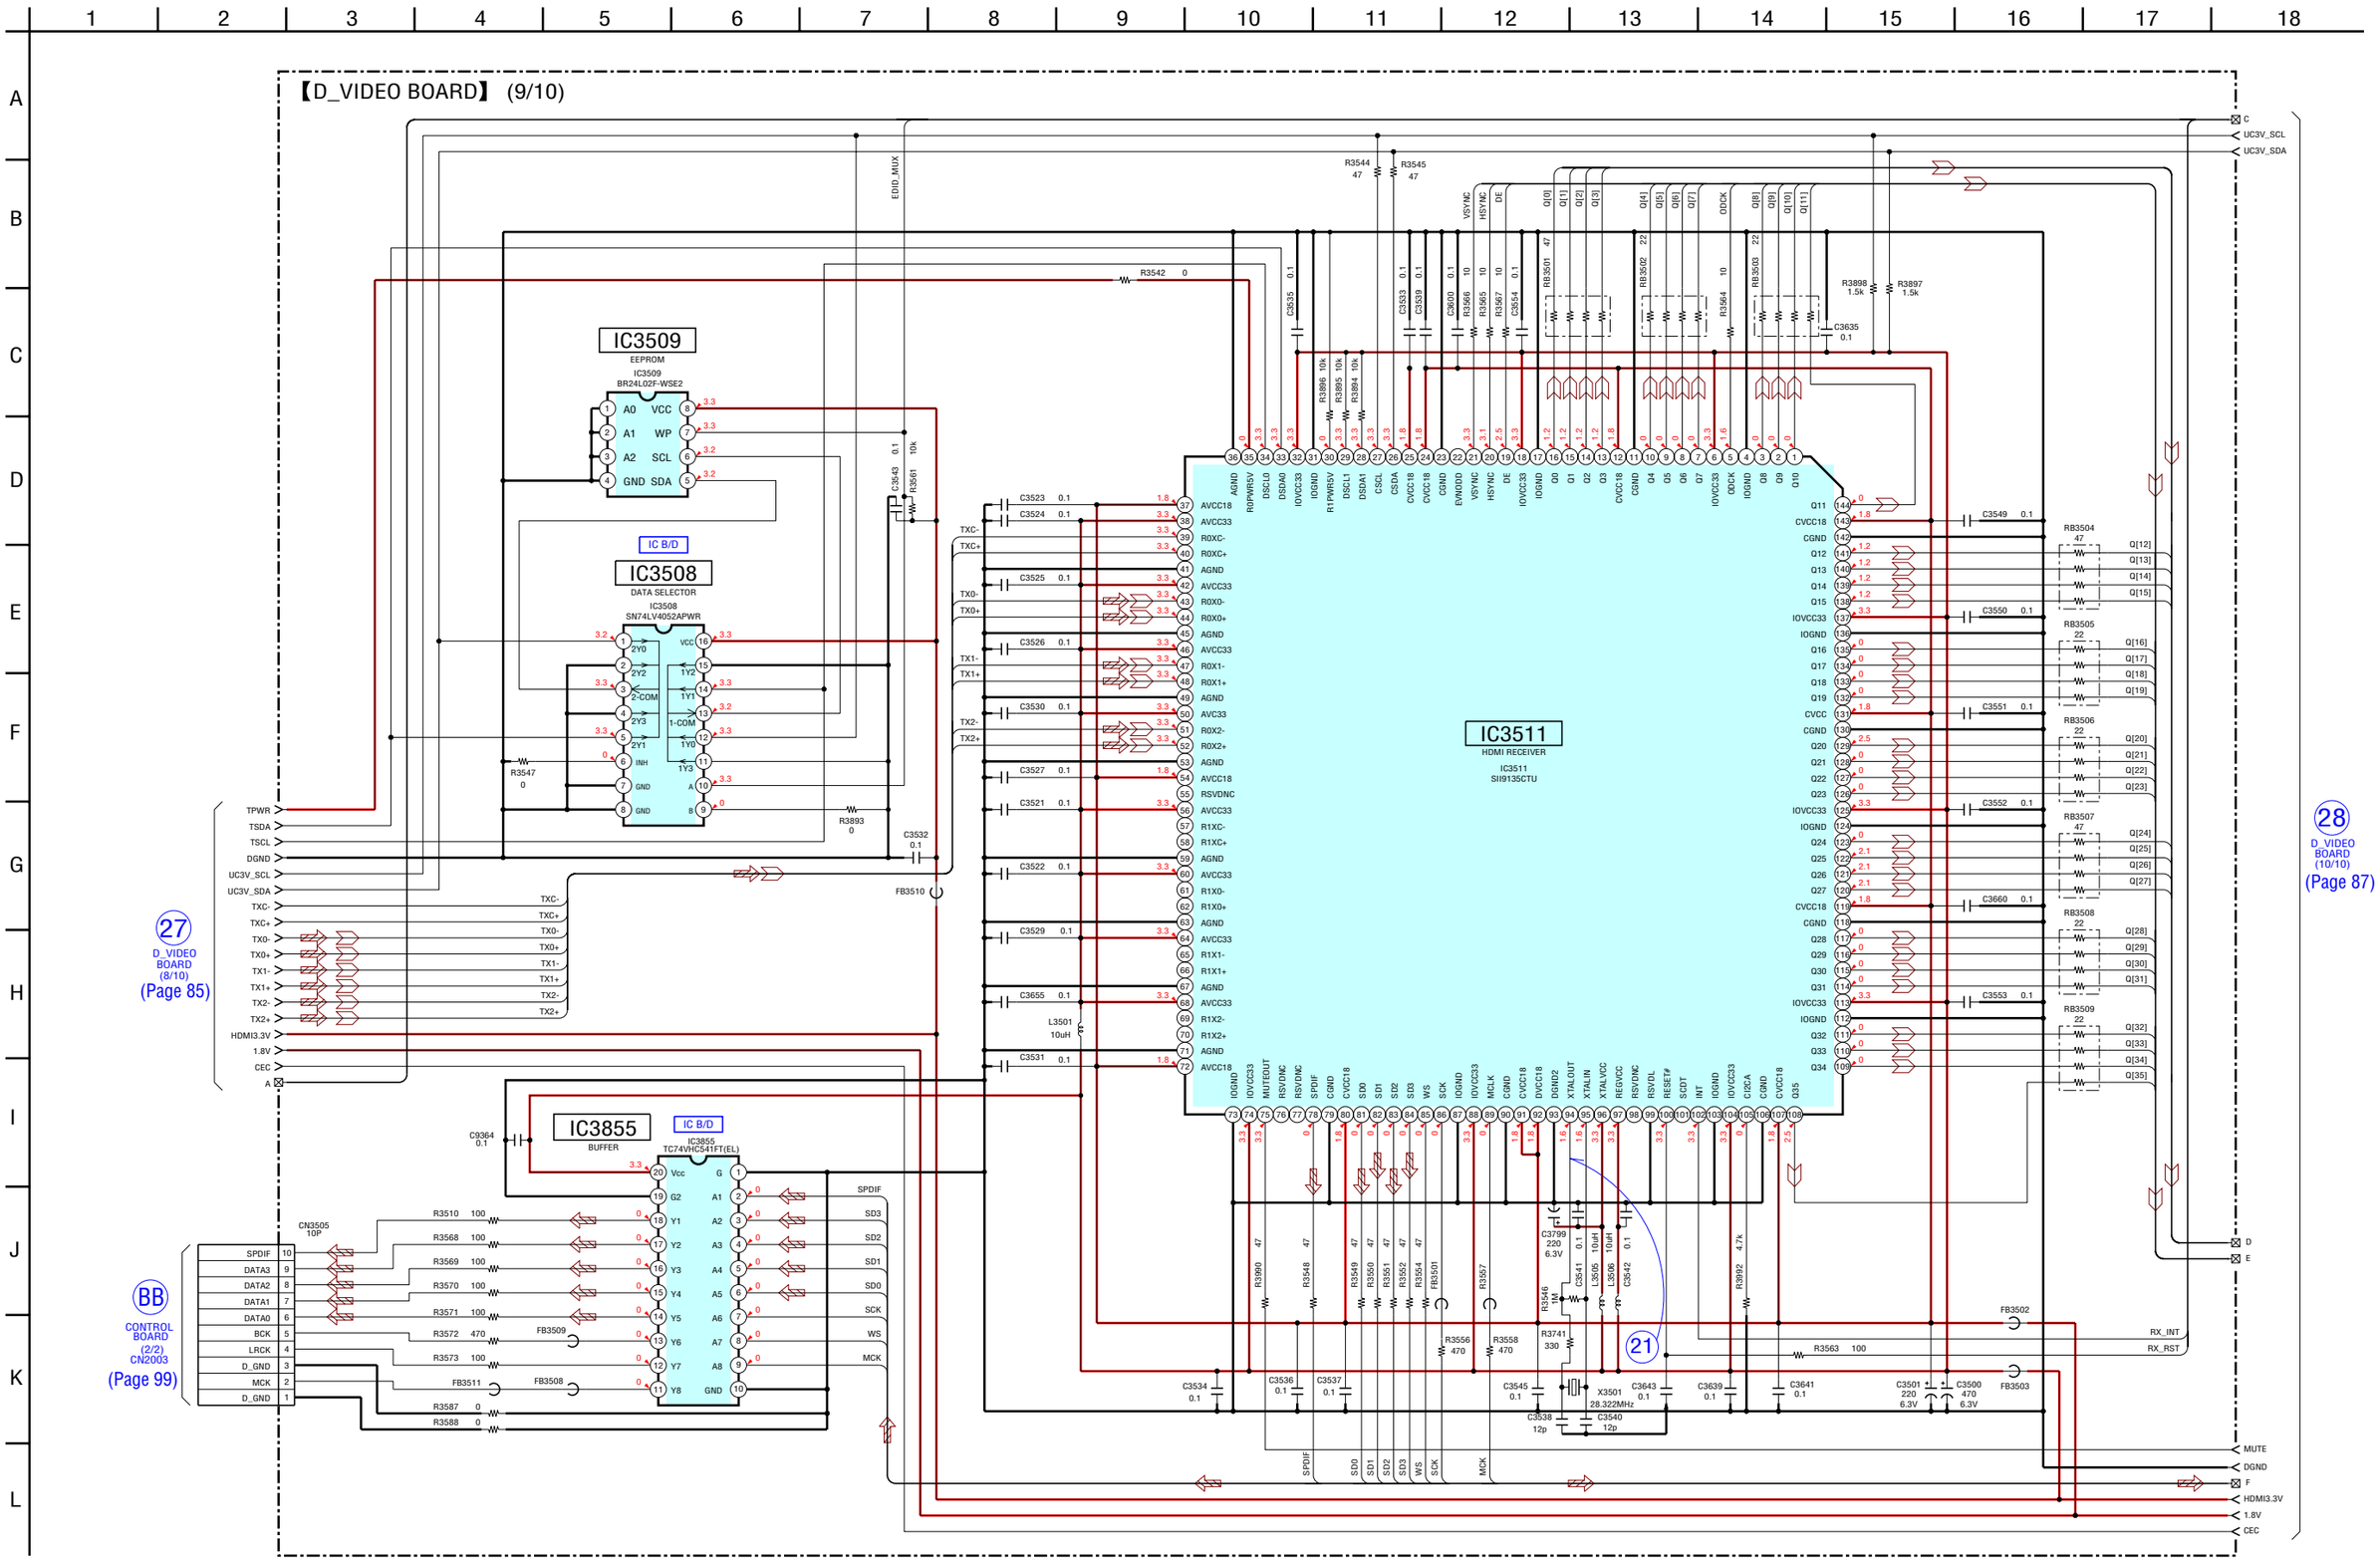

Note: IC3511 cannot exchange with single. When IC3511 is damaged, exchange the entire mounted board.

6-63. SCHEMATIC DIAGRAM – D_VIDEO Board (10/10) –

• See page 110 for IC Block Diagrams. • See page 123 for IC Pin Function Description.

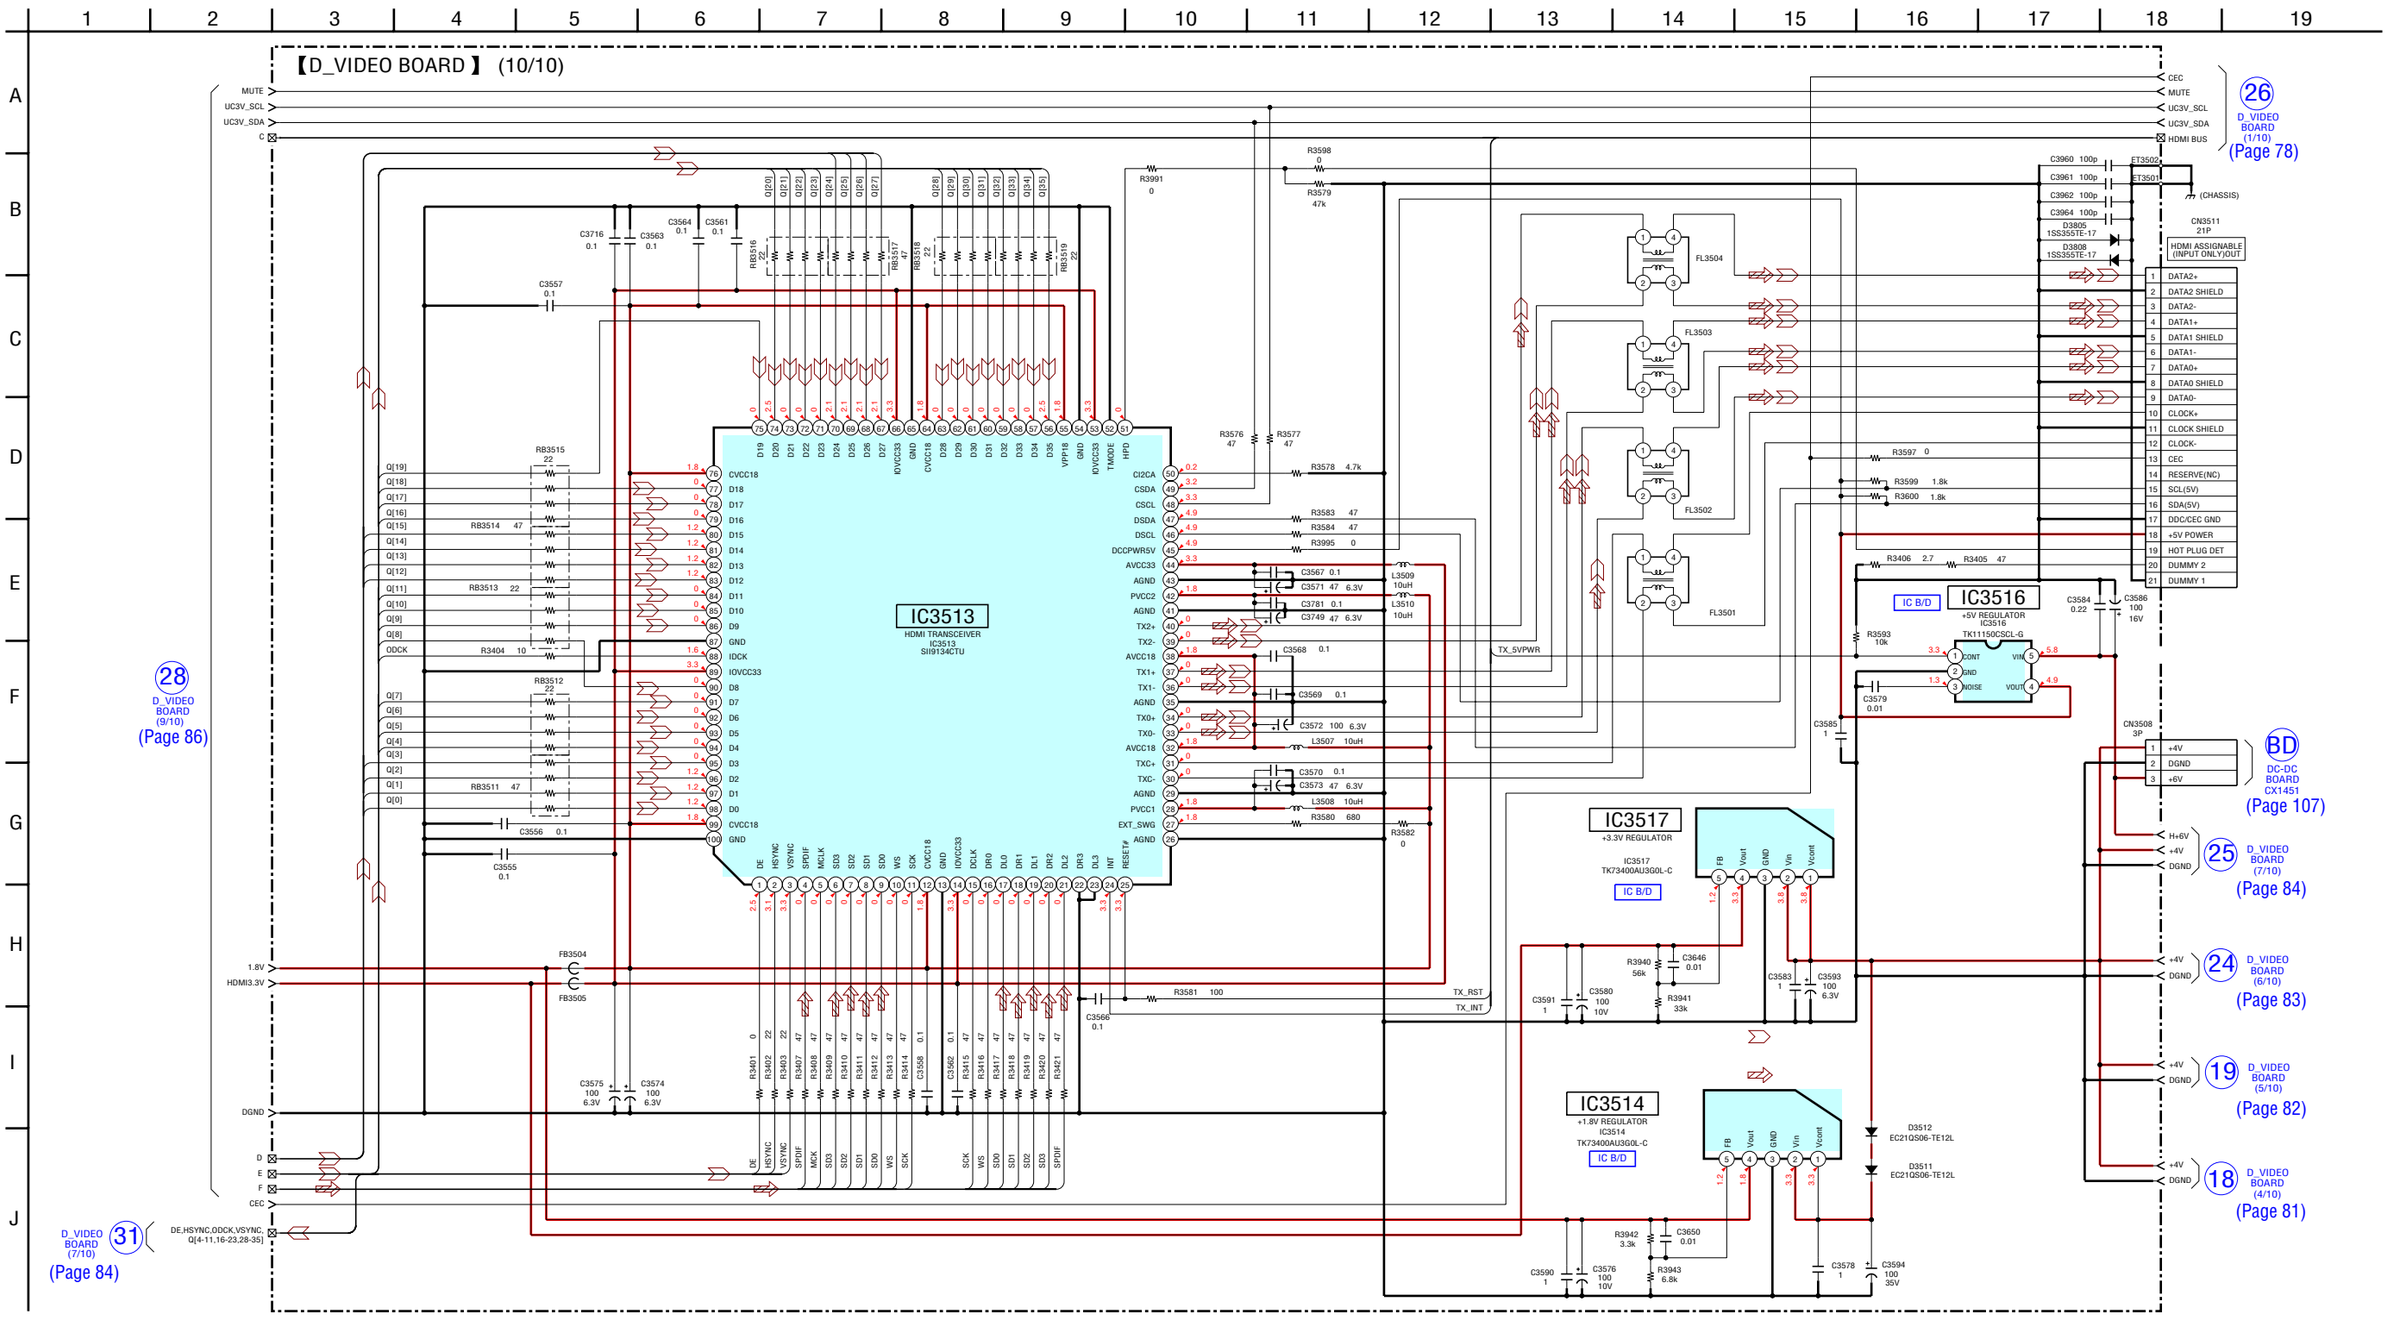

Note: IC3513 cannot exchange with single. When IC3513 is damaged, exchange the entire mounted board.

6-64. PRINTED WIRING BOARD – A_VIDEO Board (Component Side) –

• See page 35 for Circuit Boards Location. : Uses unleaded solder.

【A_VIDEO BOARD】(COMPONENT SIDE)

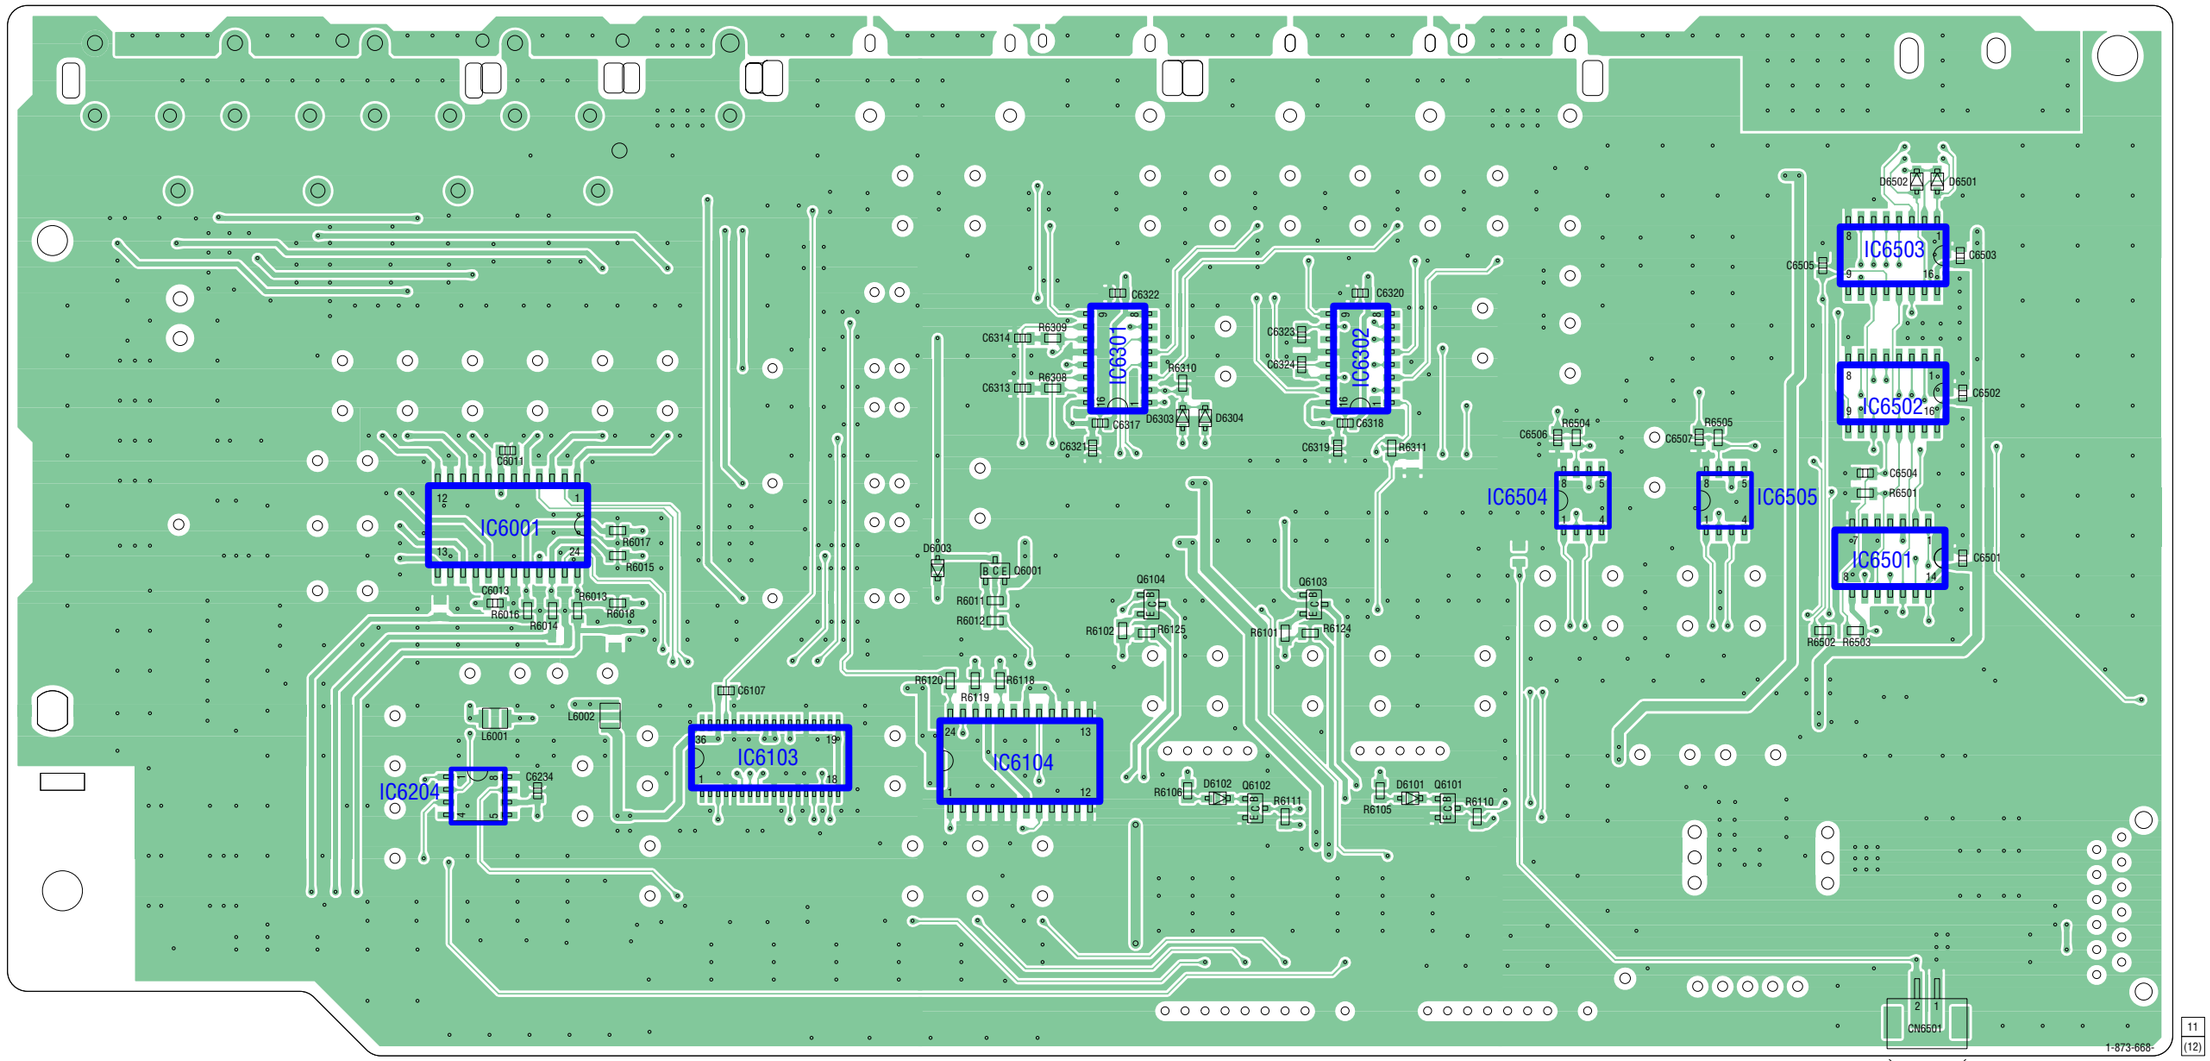

• **Semiconductor Location**

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D6003	E-6	IC6103	F-5	IC6505	D-10
D6101	F-8	IC6104	F-6		
D6102	F-7	IC6204	F-4	Q6001	E-6
D6303	D-7	IC6301	D-7	Q6101	F-9
D6304	D-7	IC6302	D-8	Q6102	F-8
D6501	C-11	IC6501	E-11	Q6103	E-8
D6502	C-11	IC6502	D-11	Q6104	E-7
		IC6503	C-11		
IC6001	E-4	IC6504	D-9		

6-65. PRINTED WIRING BOARD – A_VIDEO Board (Conductor Side) –

• See page 35 for Circuit Boards Location.

: Uses unleaded solder.

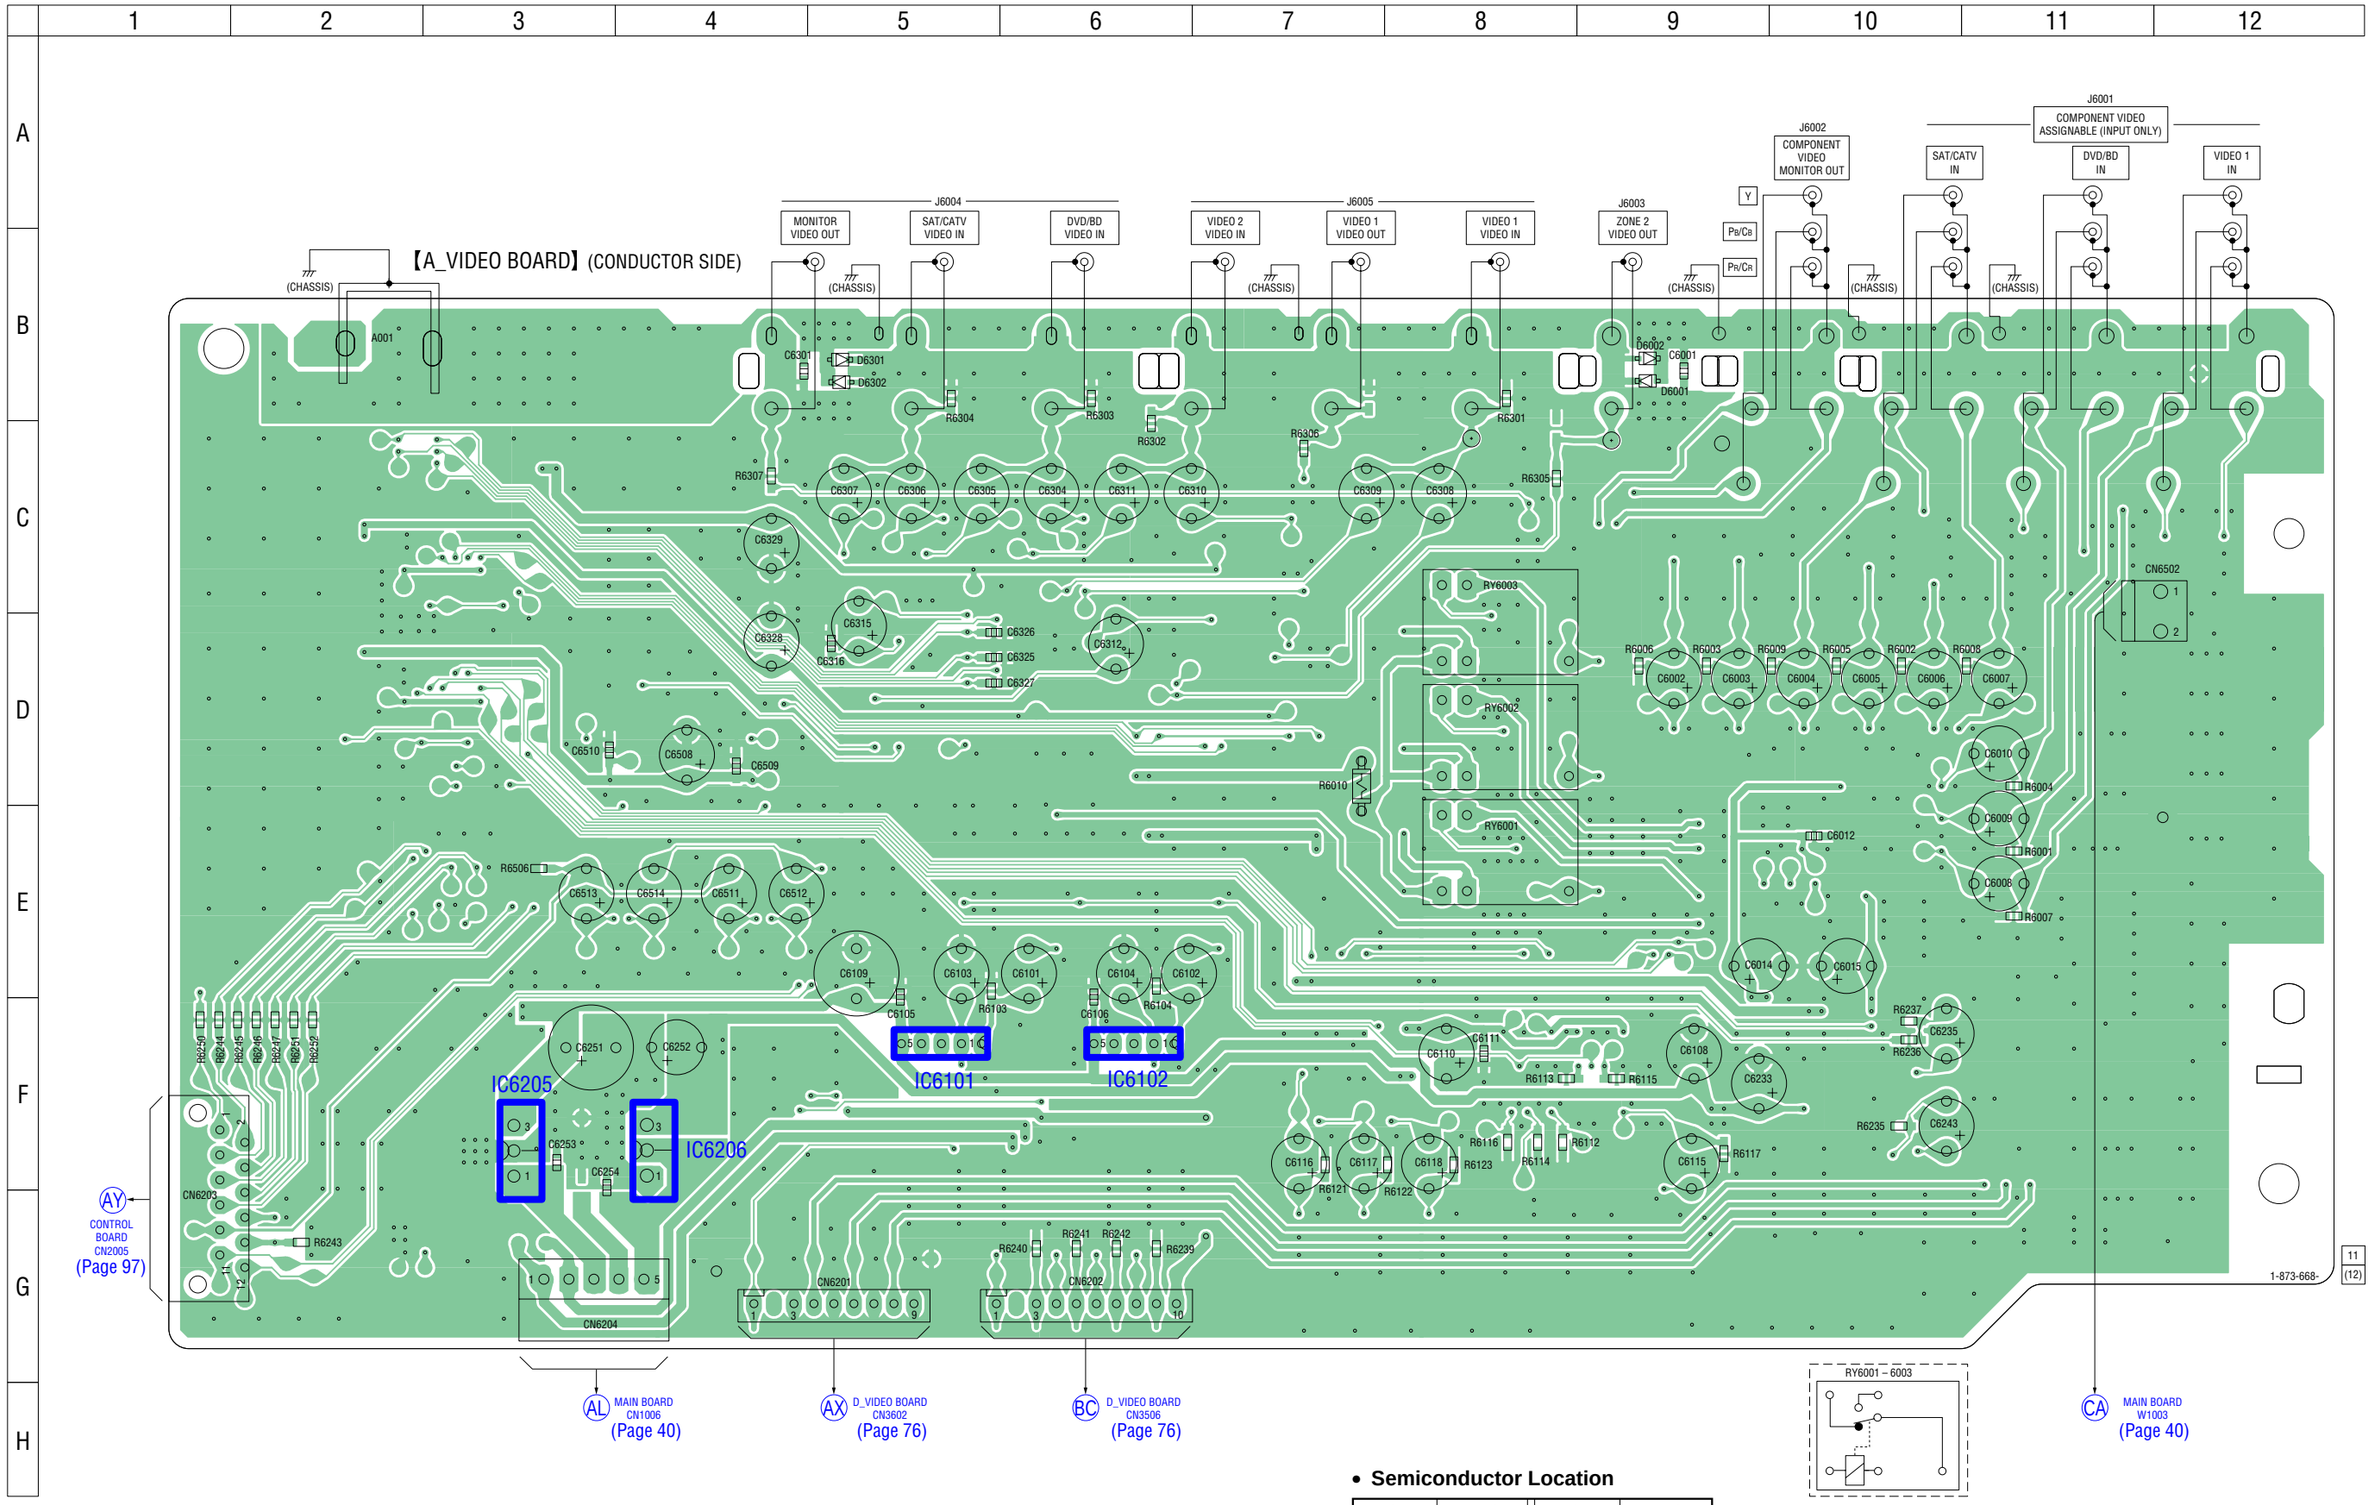

• **Semiconductor Location**

Ref. No.	Location	Ref. No.	Location
D6001	B-9	IC6101	F-5
D6002	B-9	IC6102	F-6
D6301	B-5	IC6205	F-3
D6302	B-5	IC6206	F-4

6-66. SCHEMATIC DIAGRAM – A_VIDEO Board (1/4) – • See page 110 for IC Block Diagrams.

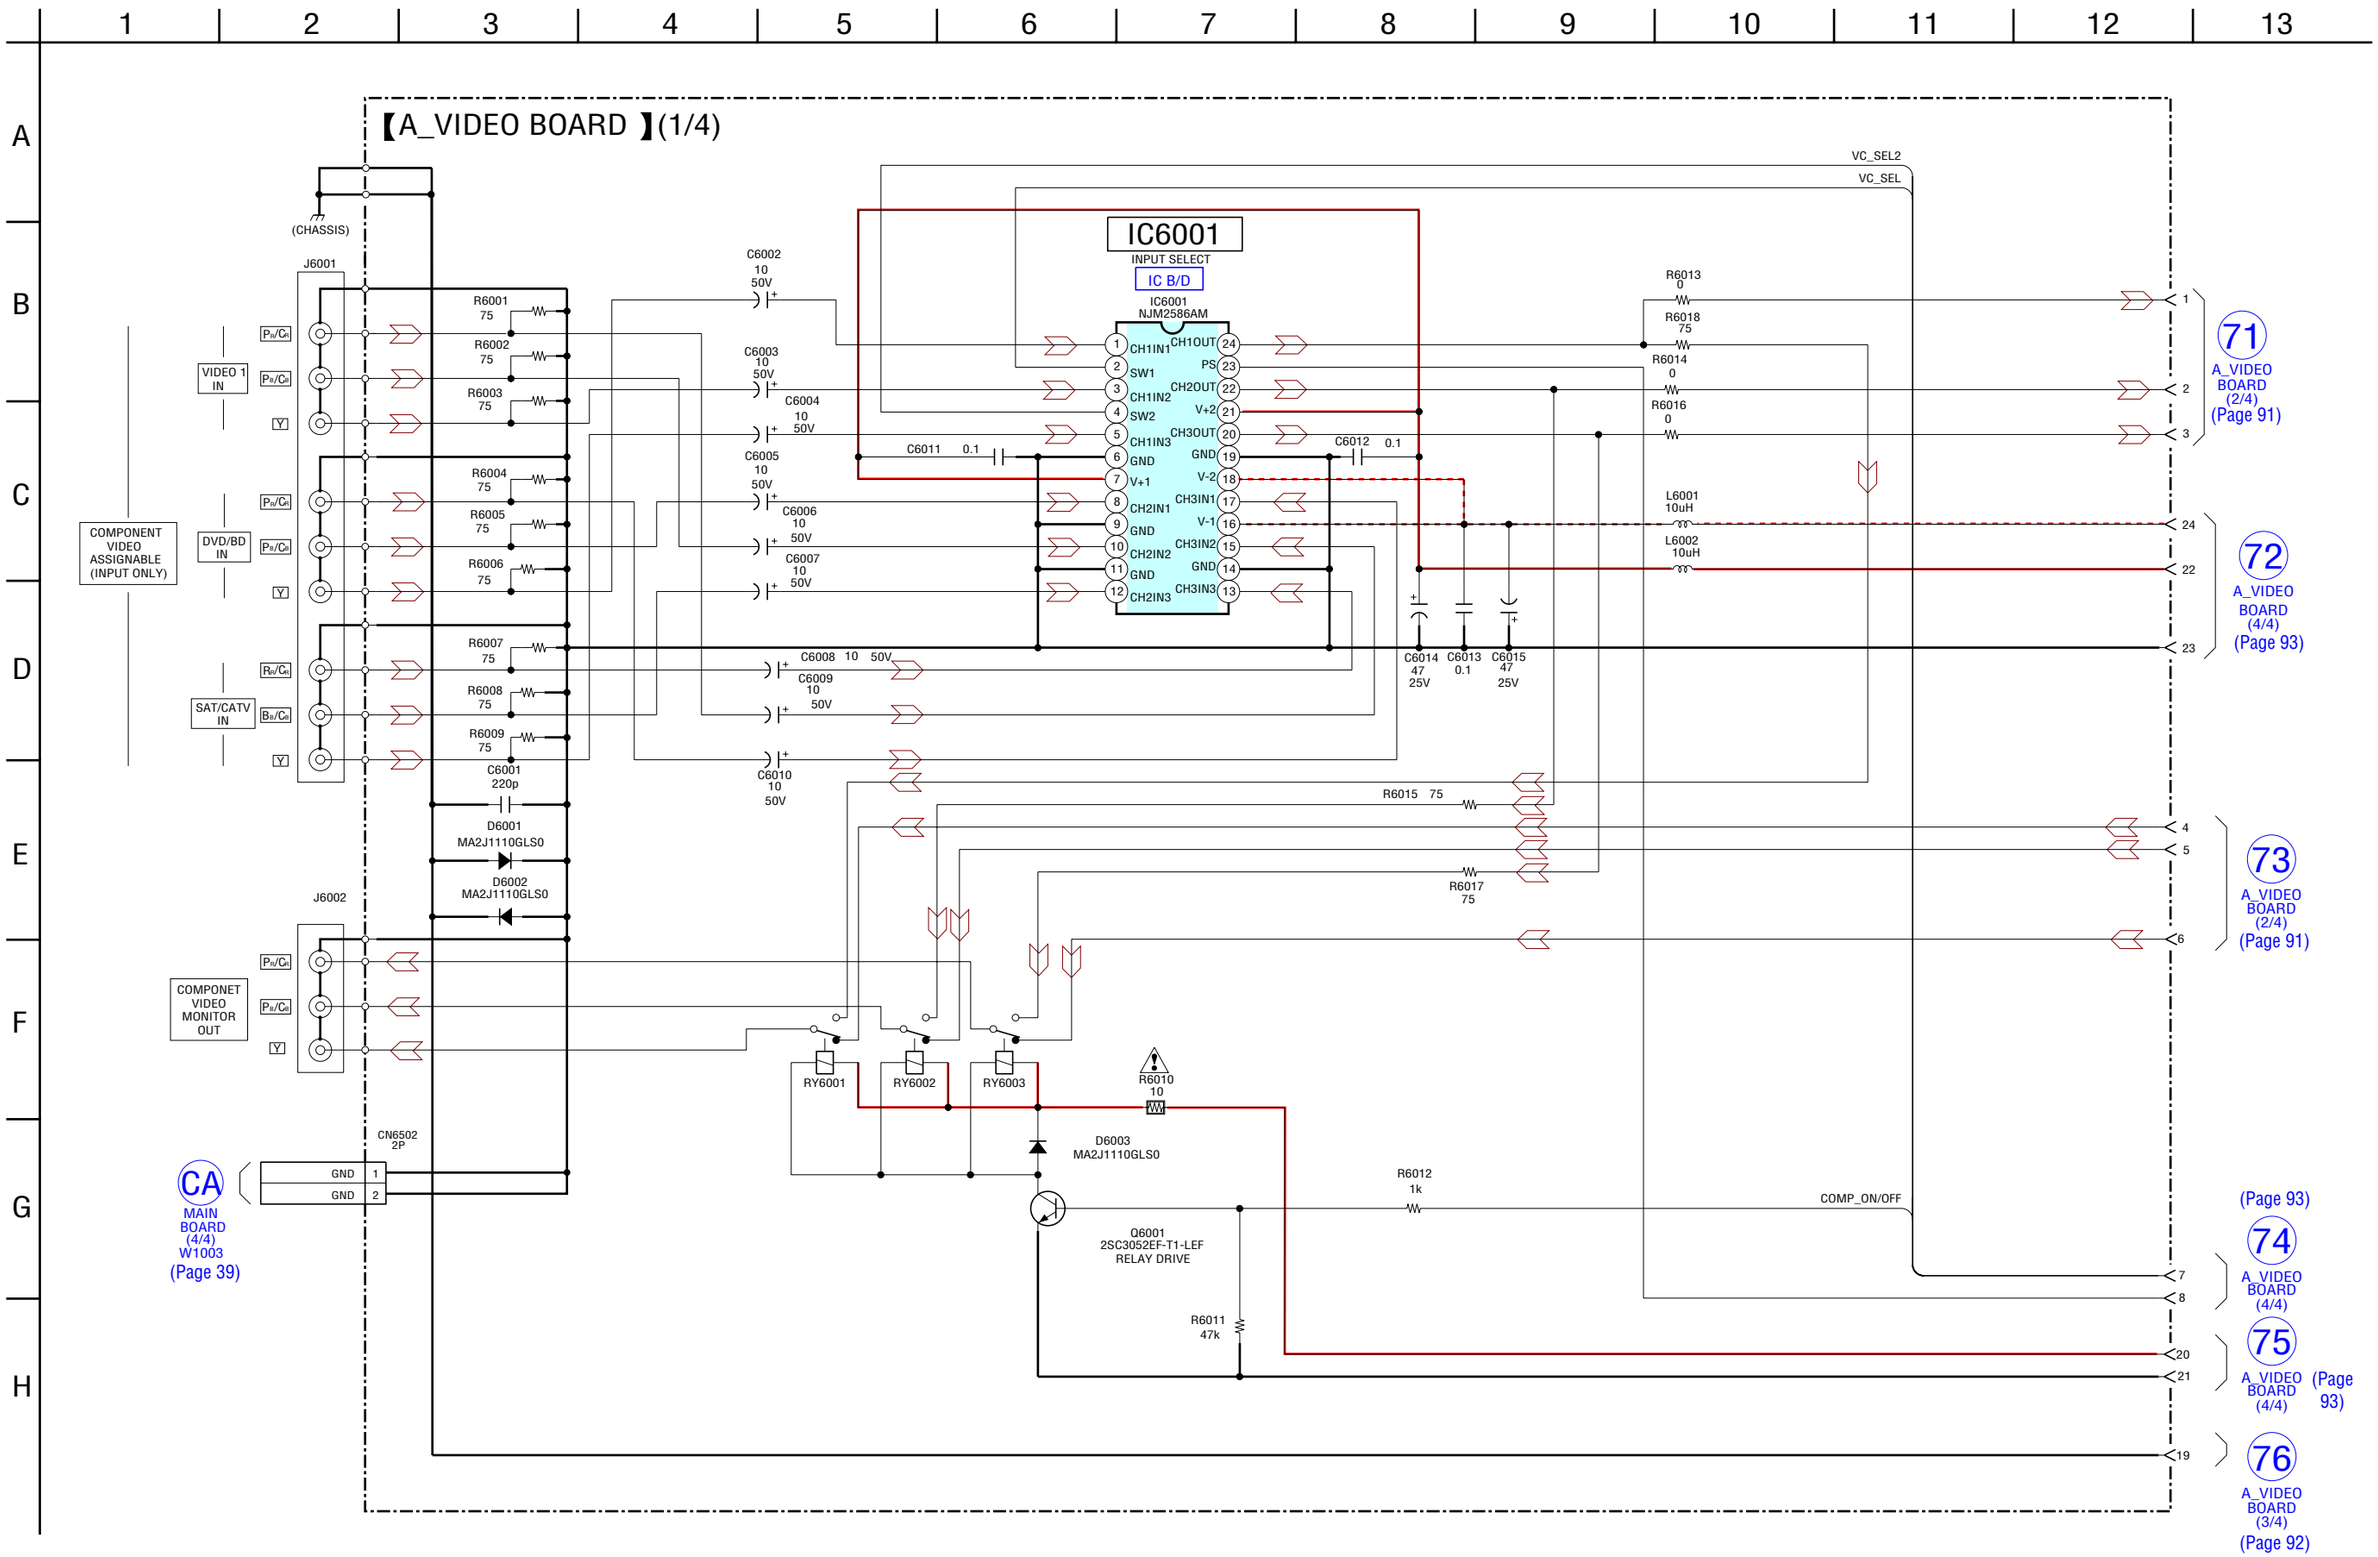

6-67. SCHEMATIC DIAGRAM – A_VIDEO Board (2/4) –

• See page 110 for IC Block Diagrams.

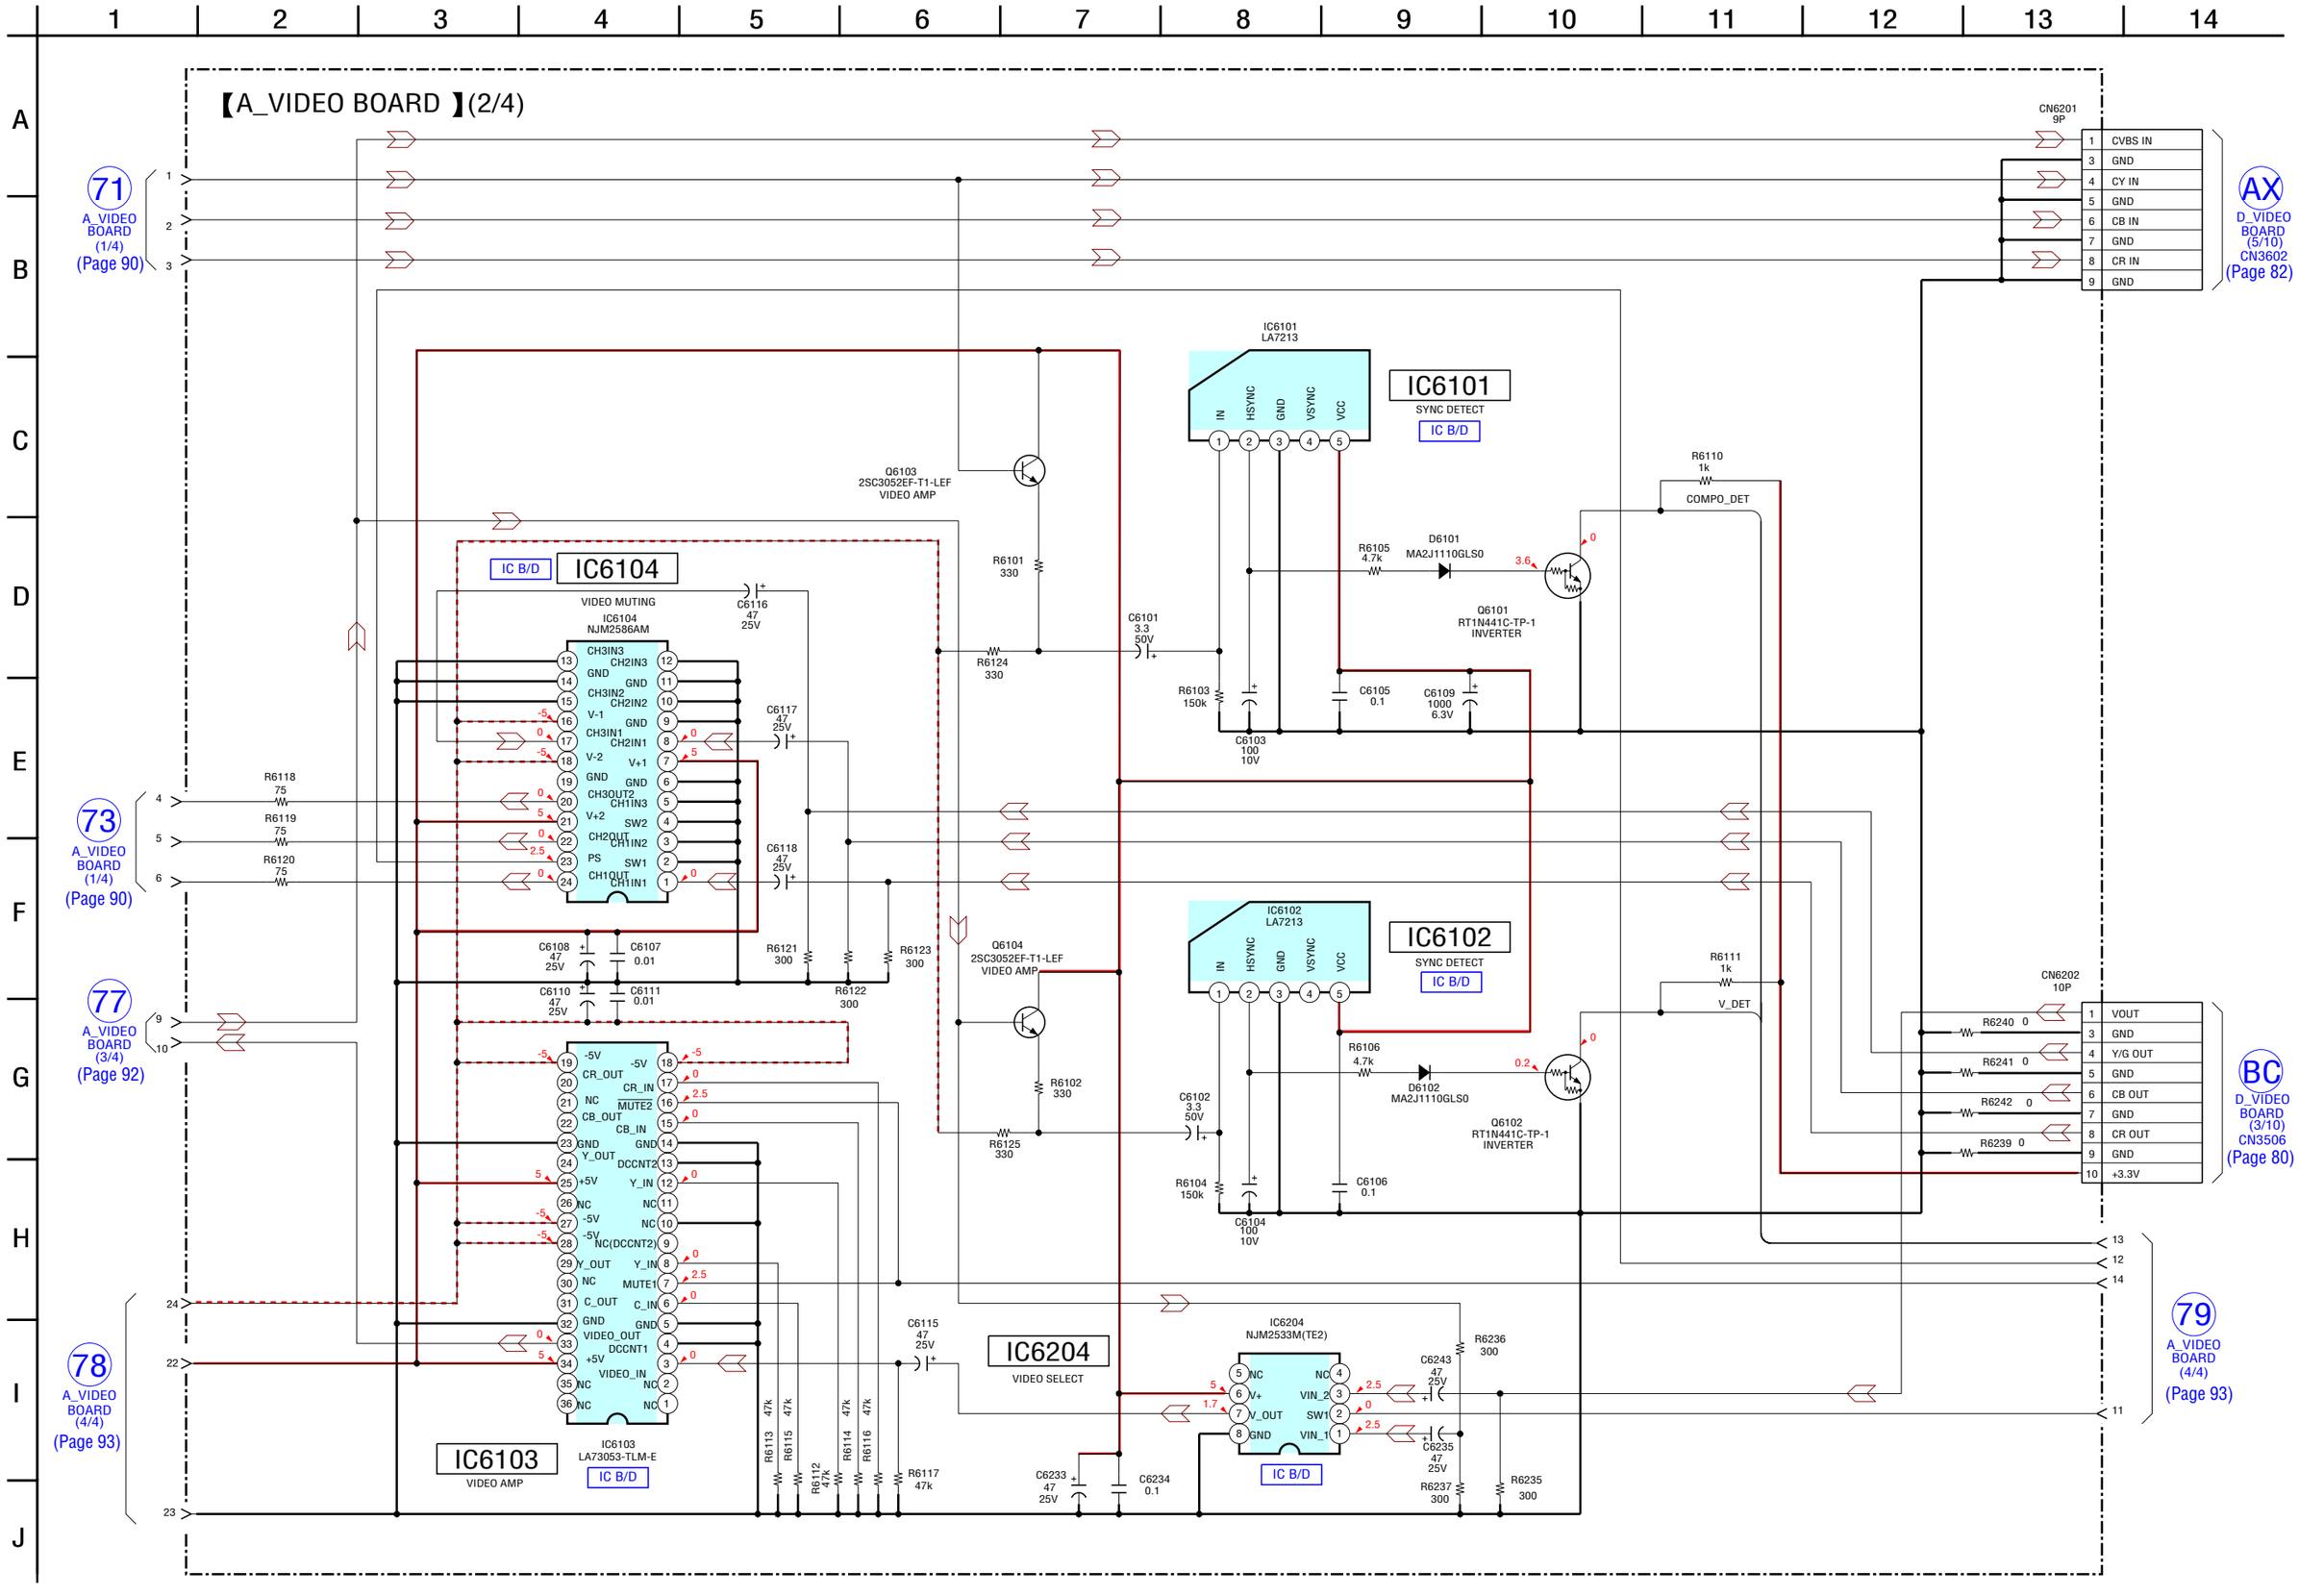

6-68. SCHEMATIC DIAGRAM – A_VIDEO Board (3/4) –

• See page 110 for IC Block Diagrams.

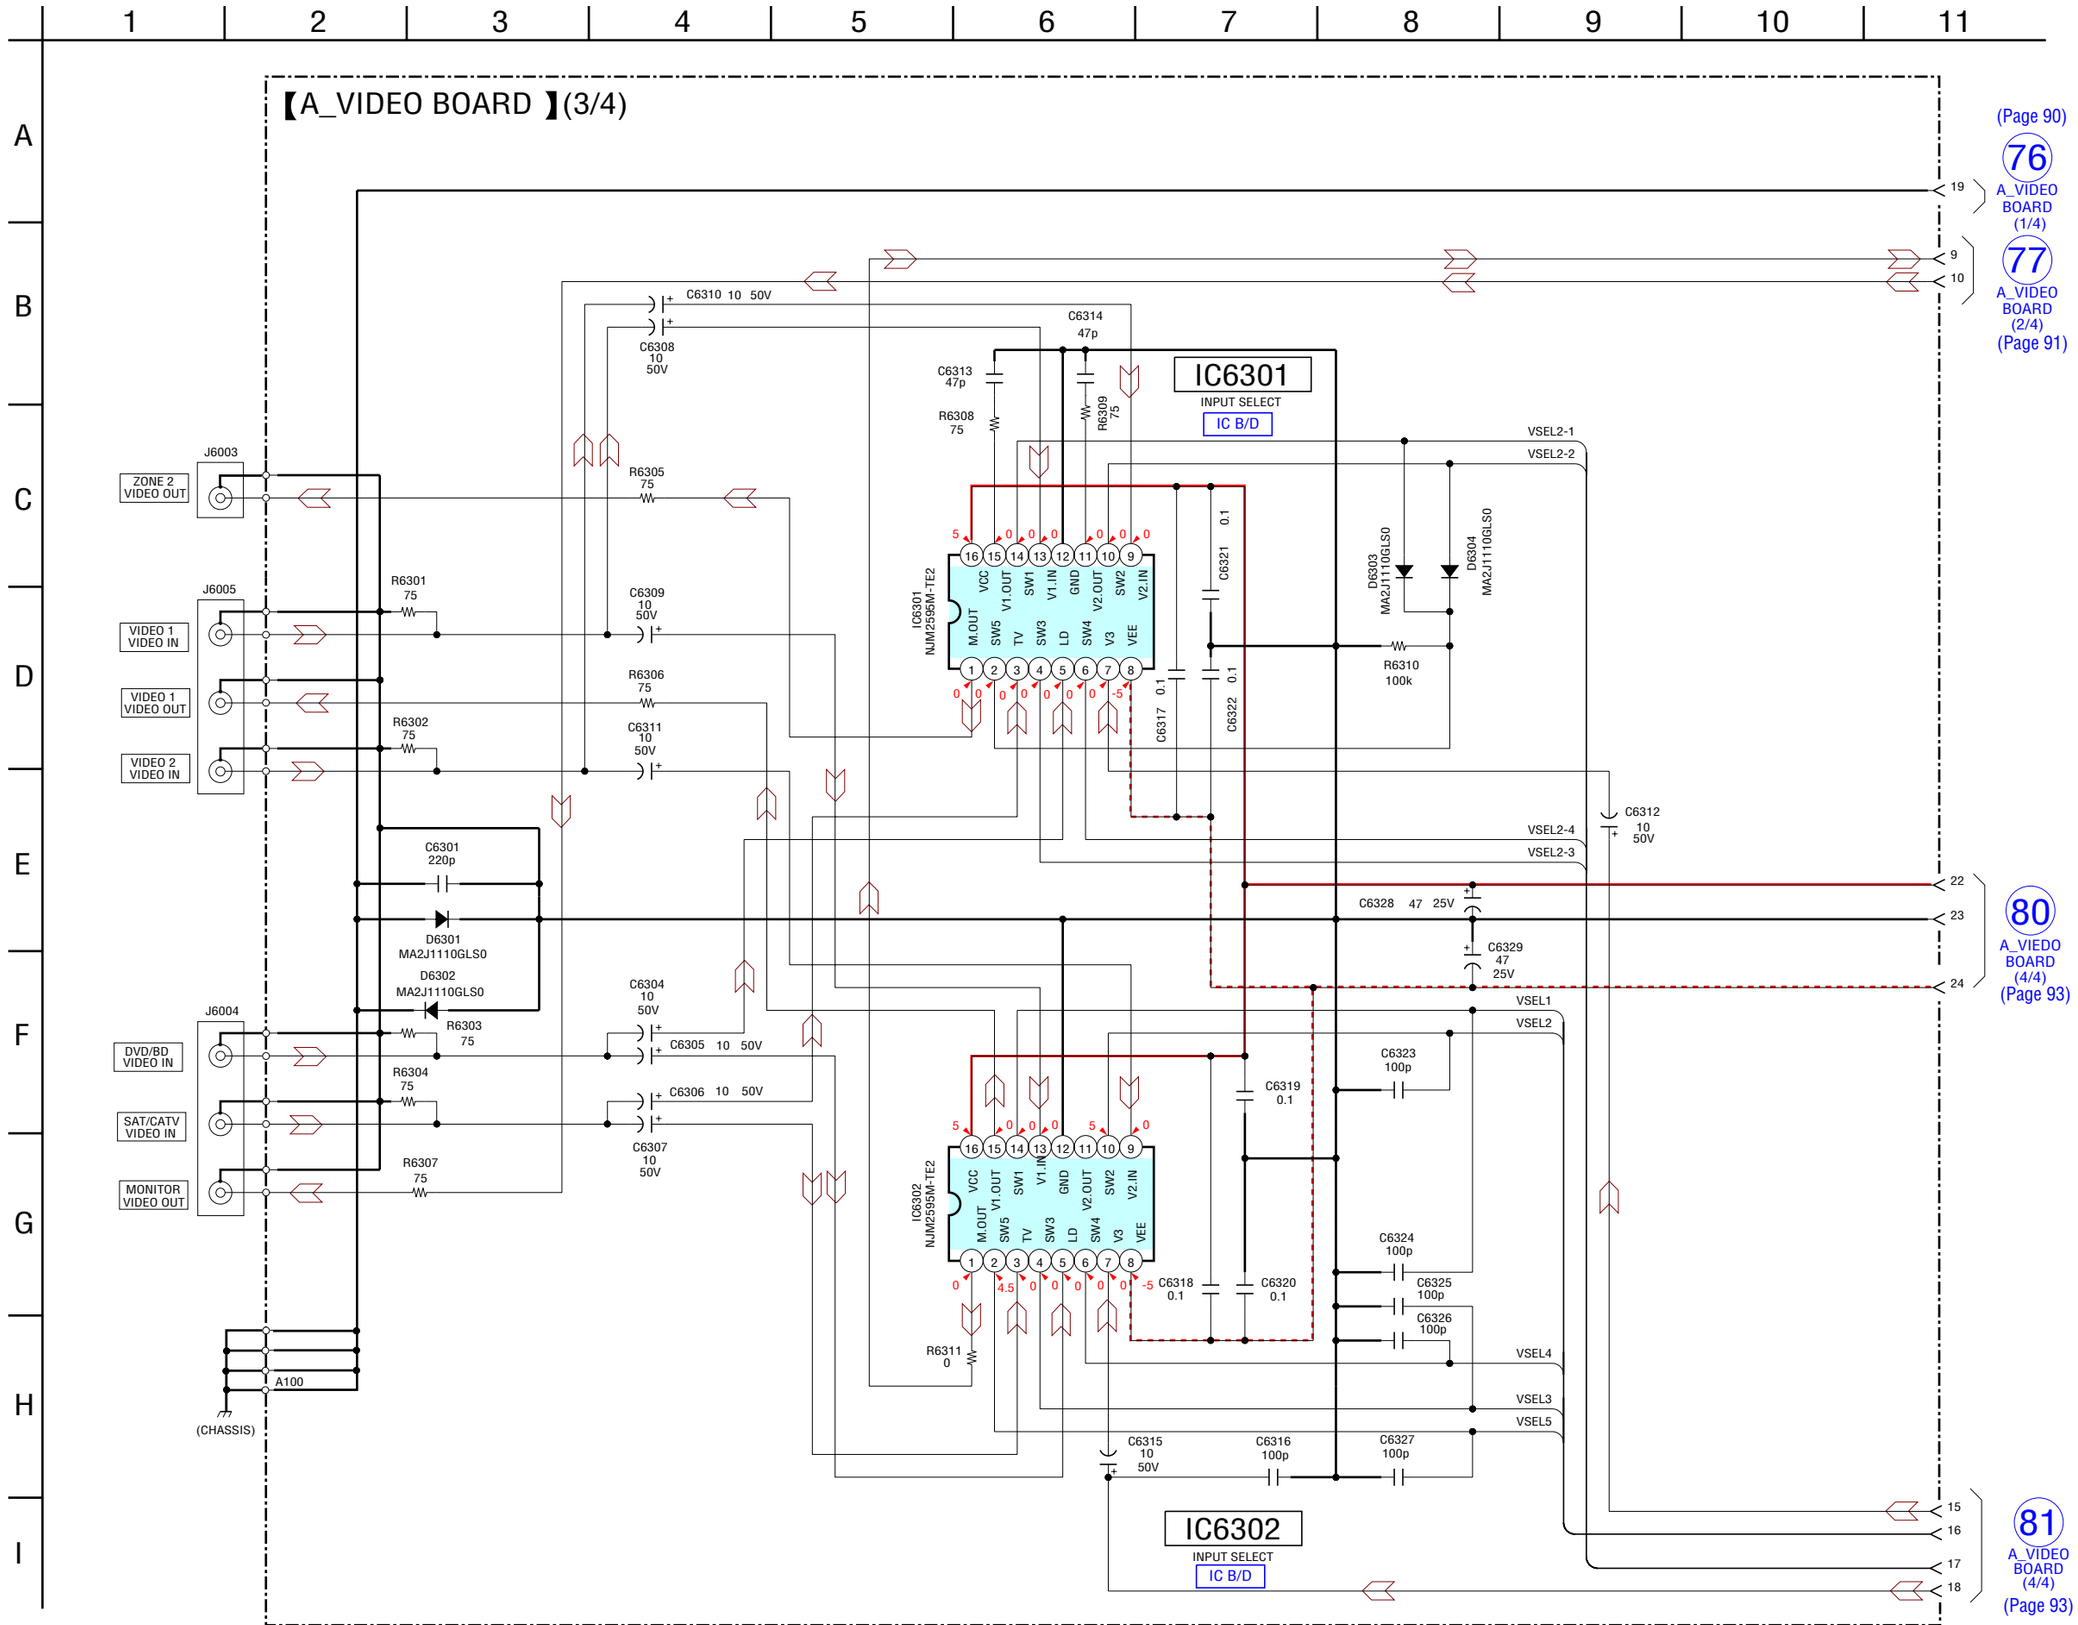

6-69. SCHEMATIC DIAGRAM – A_VIDEO Board (4/4) –

• See page 110 for IC Block Diagrams.

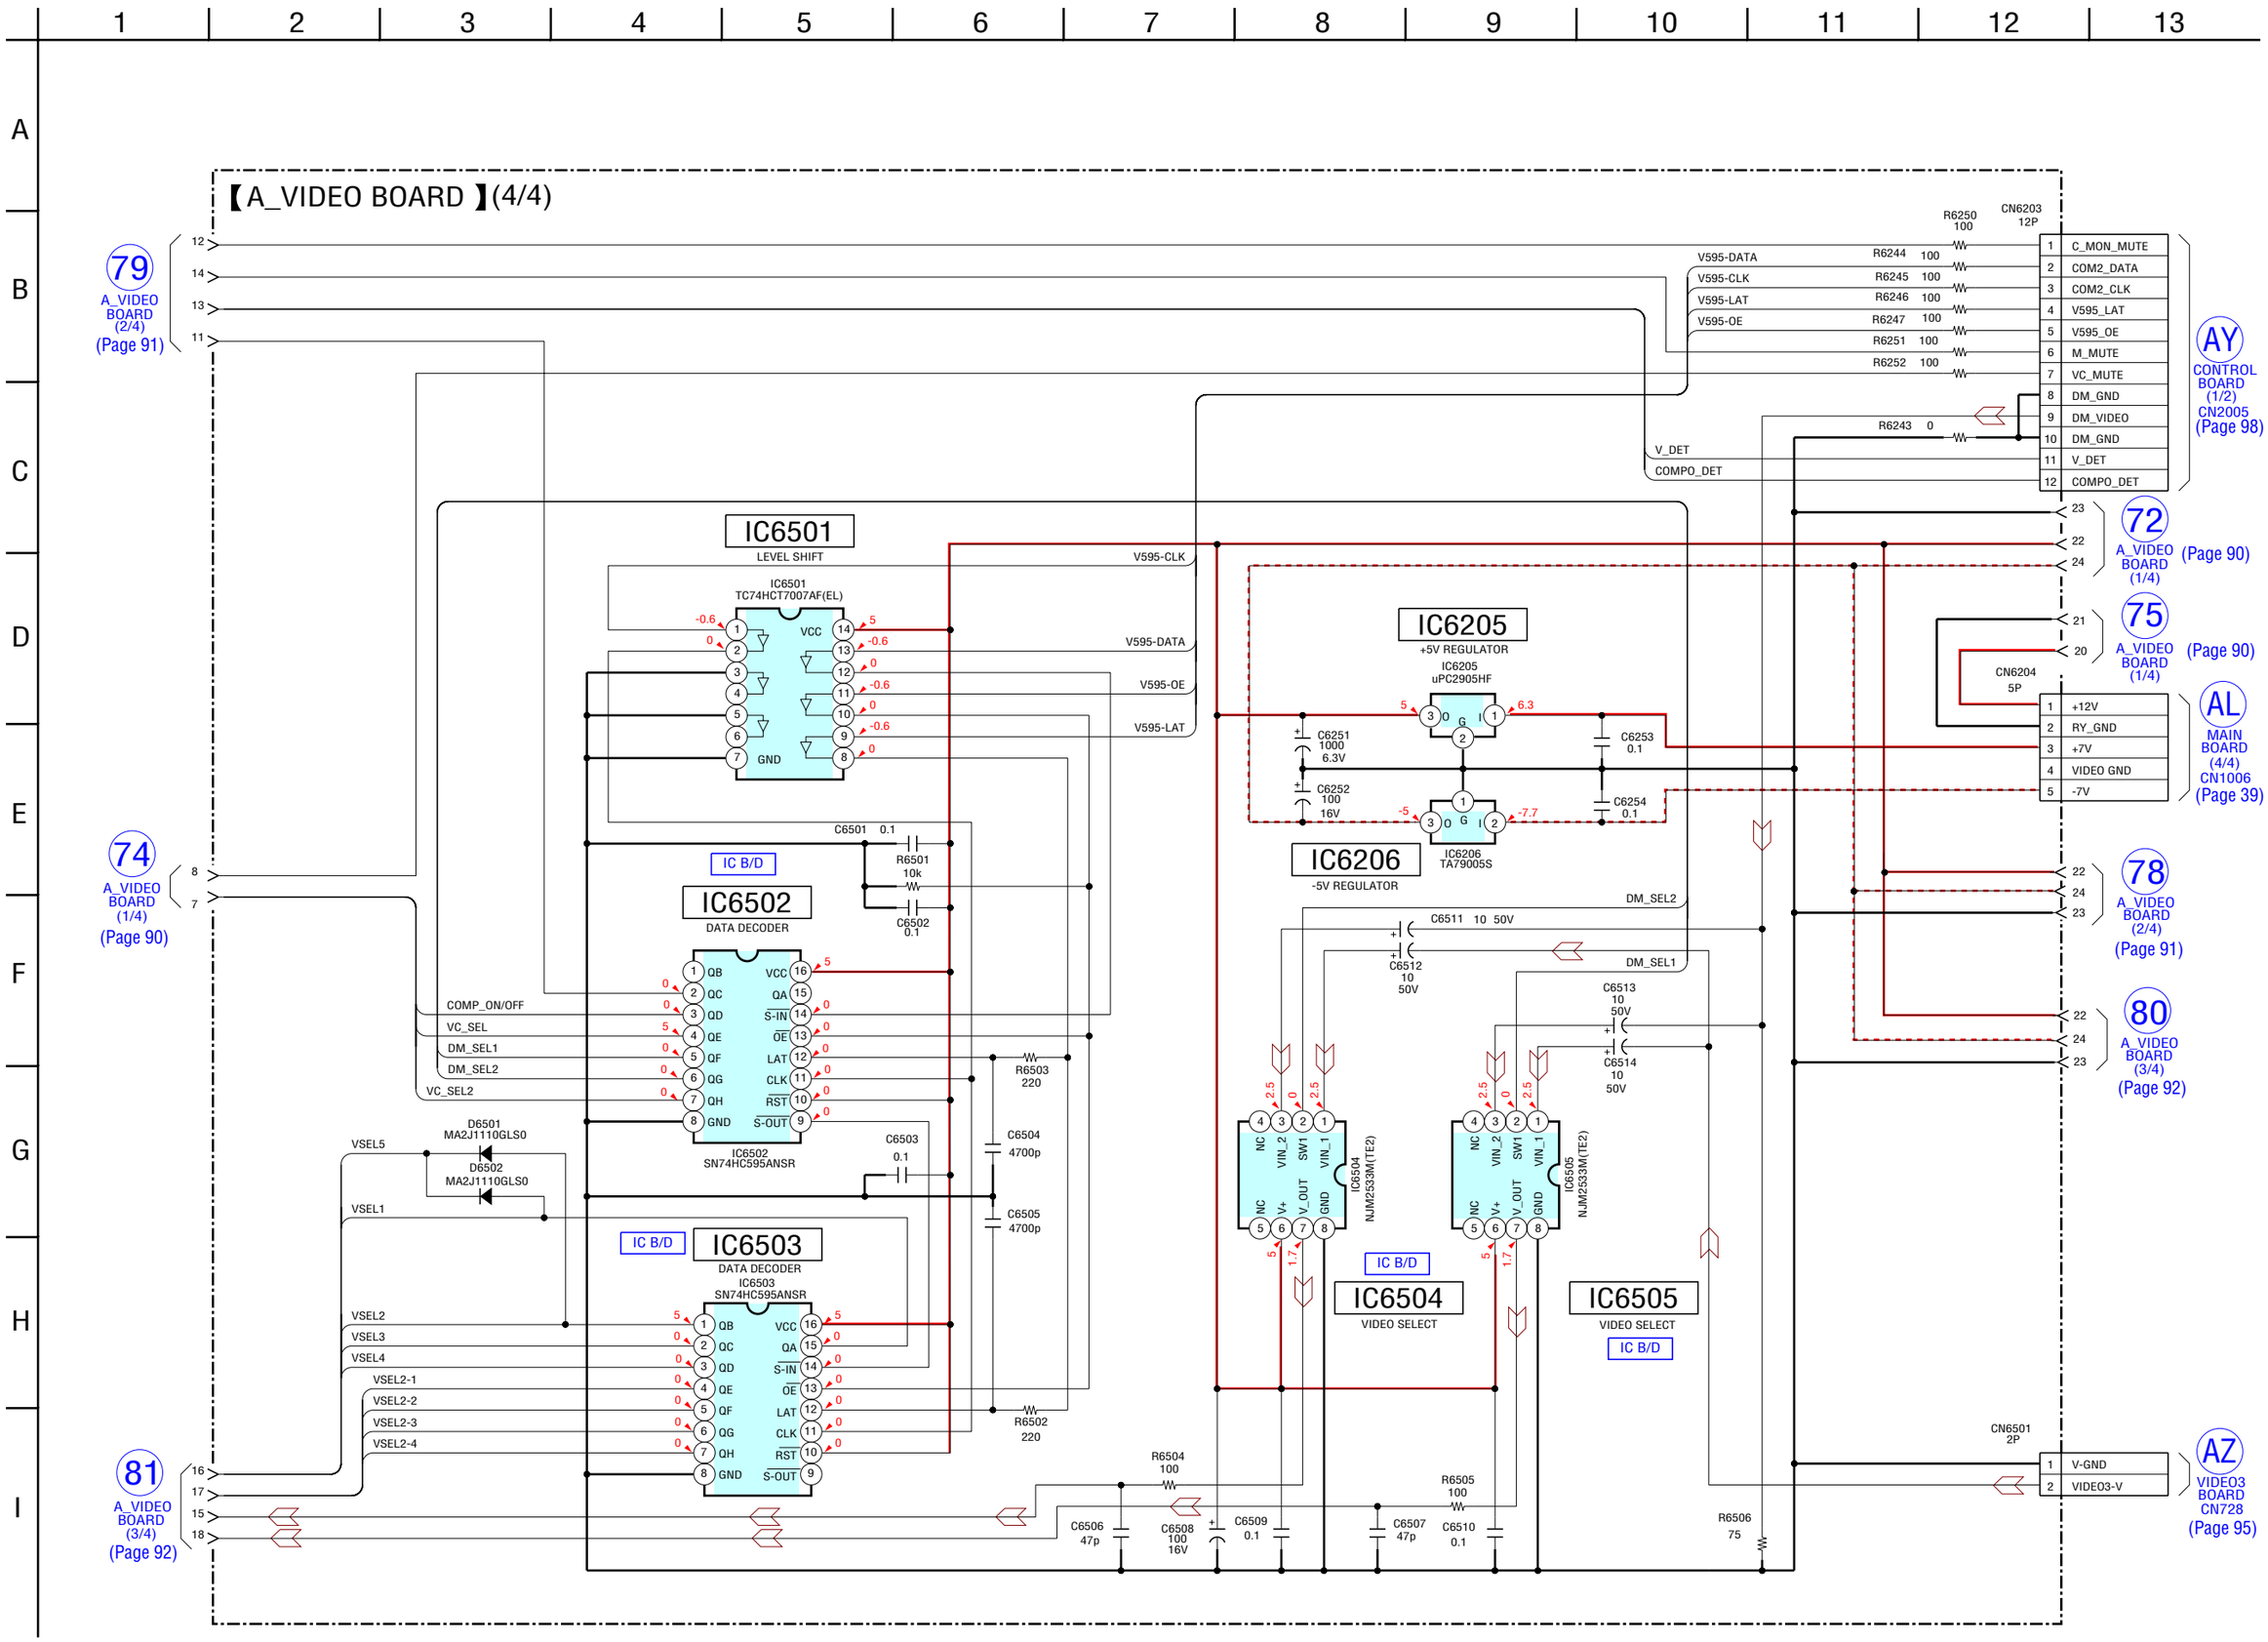

6-70. PRINTED WIRING BOARD – VIDEO3 Board –

• See page 35 for Circuit Boards Location. : Uses unleaded solder.

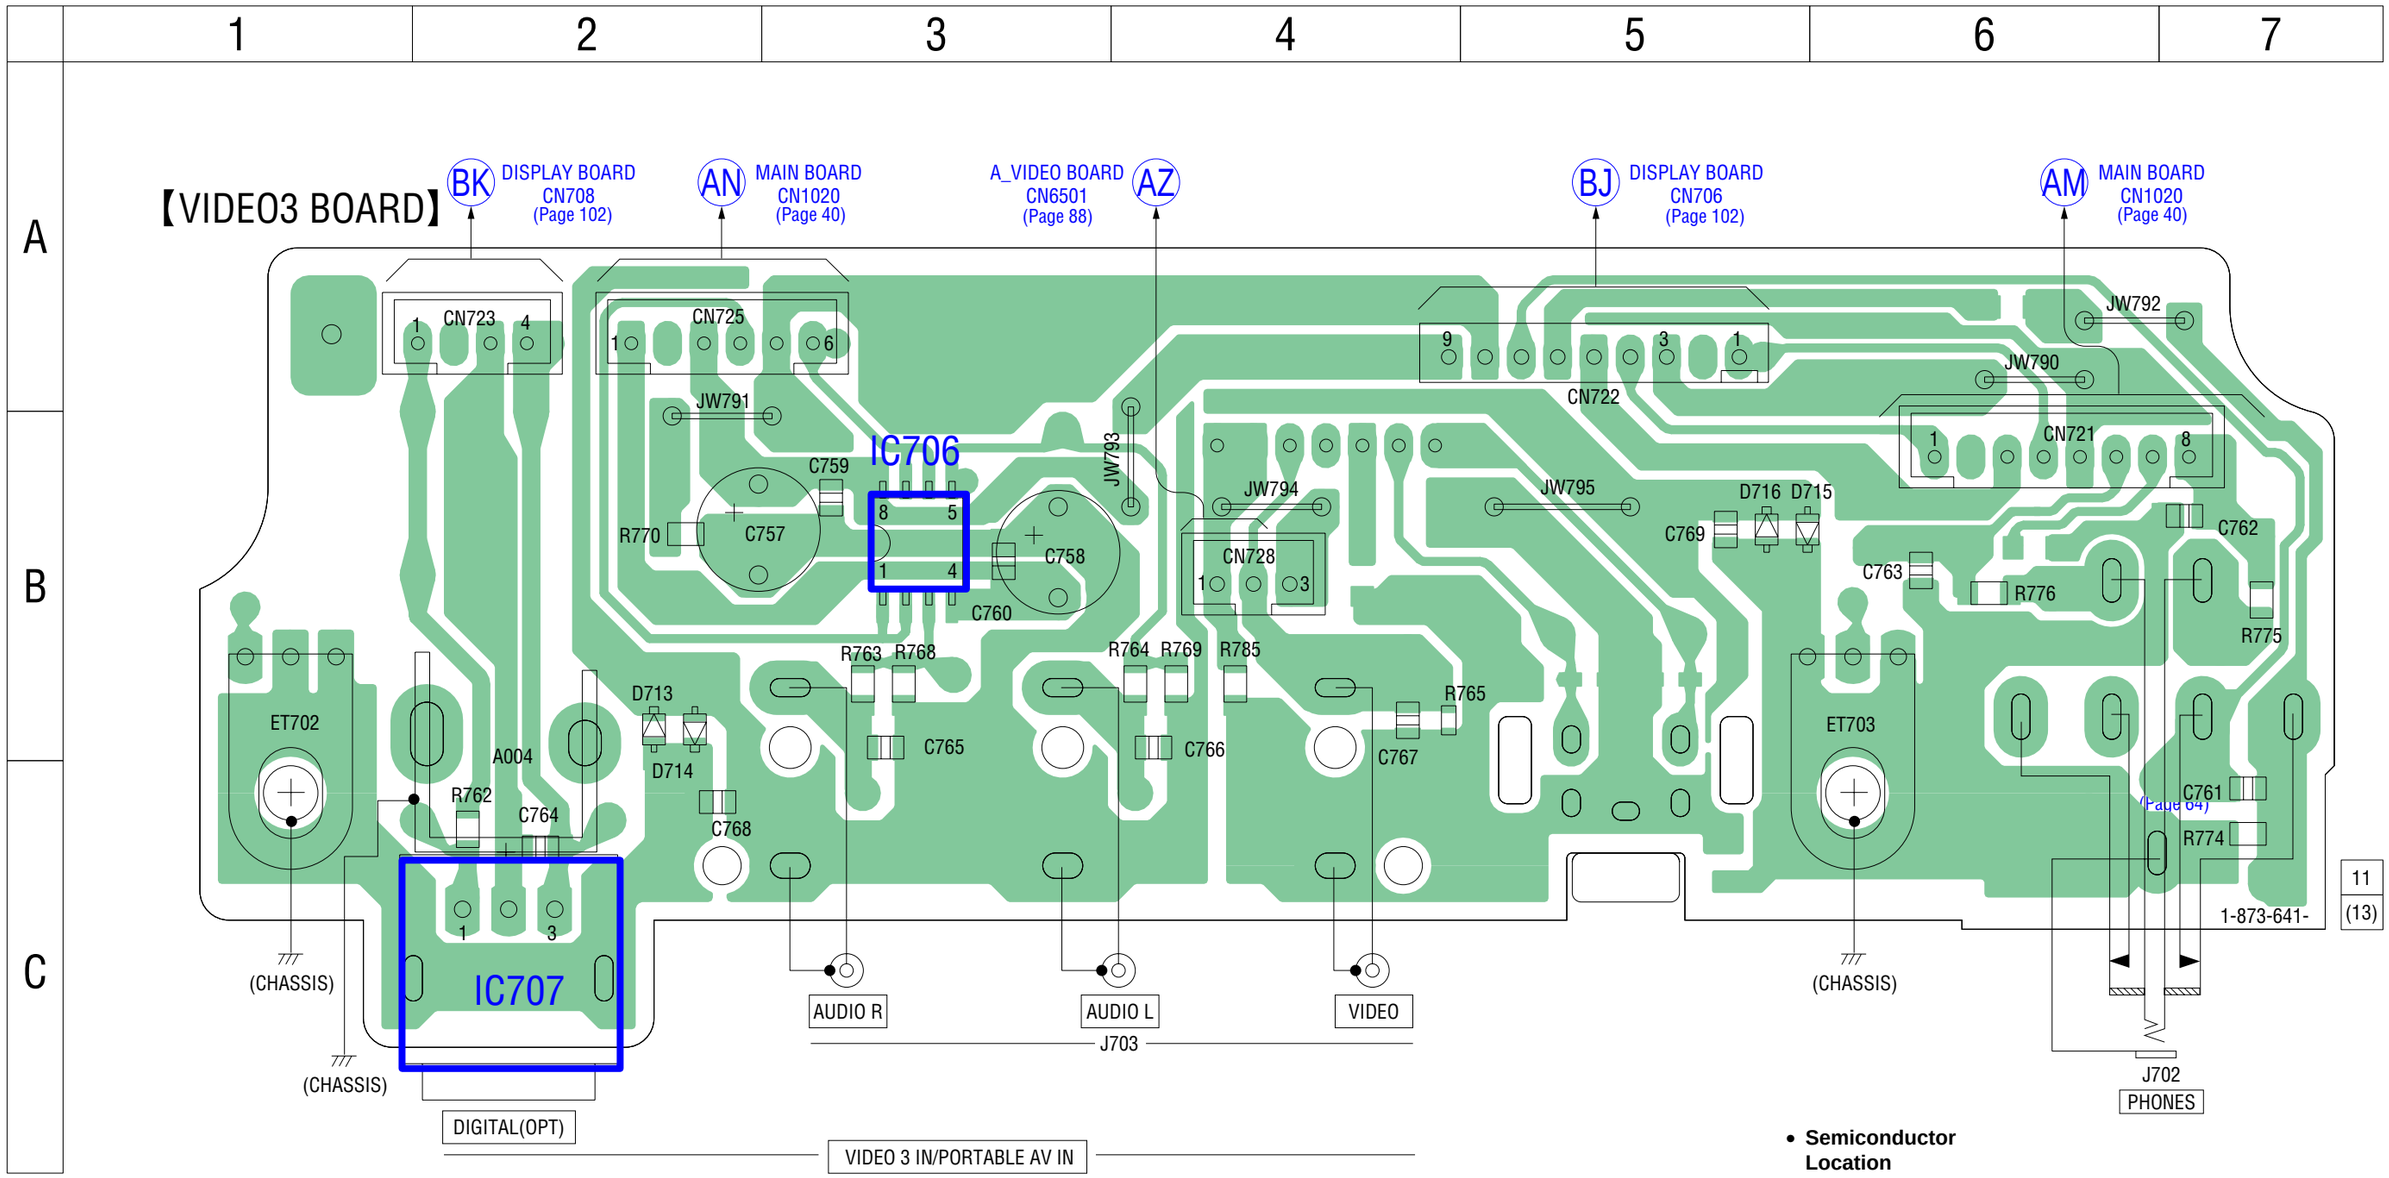

- **Semiconductor Location**

Ref. No.	Location
D713	B-2
D714	B-2
D715	B-5
D716	B-5
IC706	B-3
IC707	C-2

6-71. SCHEMATIC DIAGRAM – VIDEO3 Board –

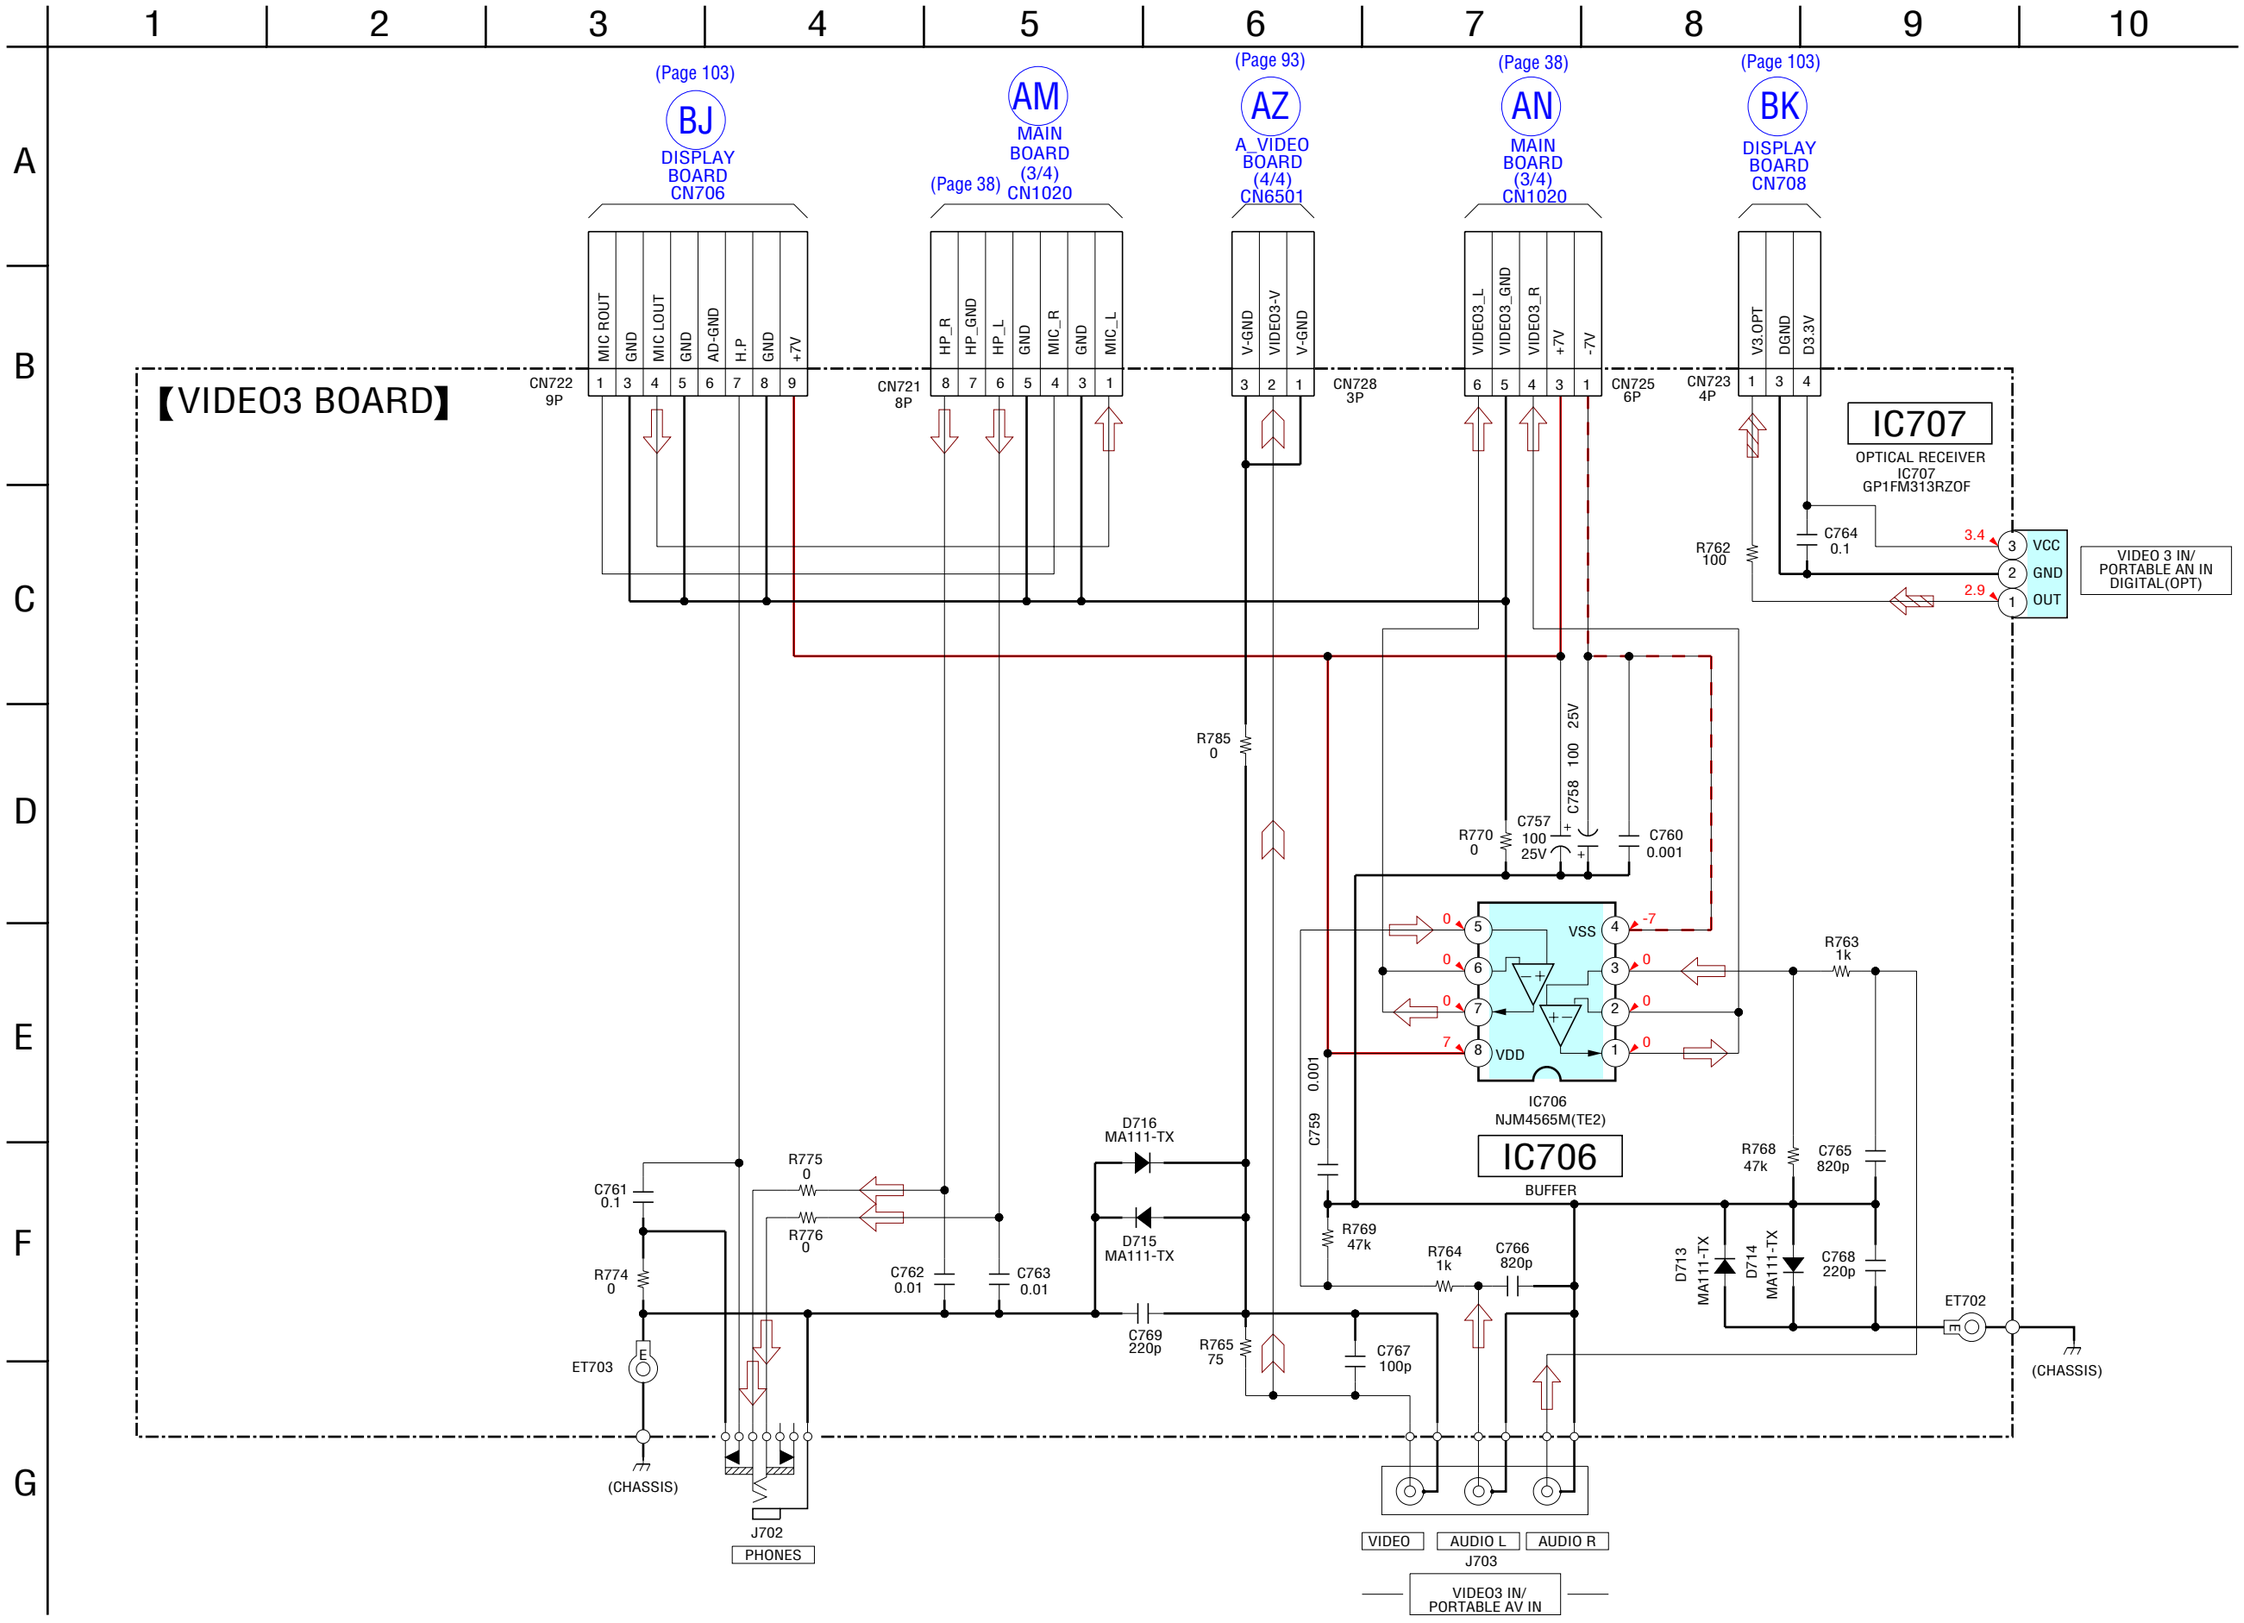

- **Semiconductor Location**

Ref. No.	Location
D2001	C-9
IC2001	C-6
IC2002	B-4
IC2003	D-8
IC2004	D-6
IC2005	E-5
IC2006	E-5
IC2007	E-8
IC2008	F-4
IC2009	E-5
IC2010	E-4
IC2011	E-6
IC2012	C-6
IC2013	E-3
Q2001	C-9
Q2002	C-9
Q2003	C-9
Q2004	C-9

6-72. PRINTED WIRING BOARD – CONTROL Board (Component Side) –

• See page 35 for Circuit Boards Location.

: Uses unleaded solder.

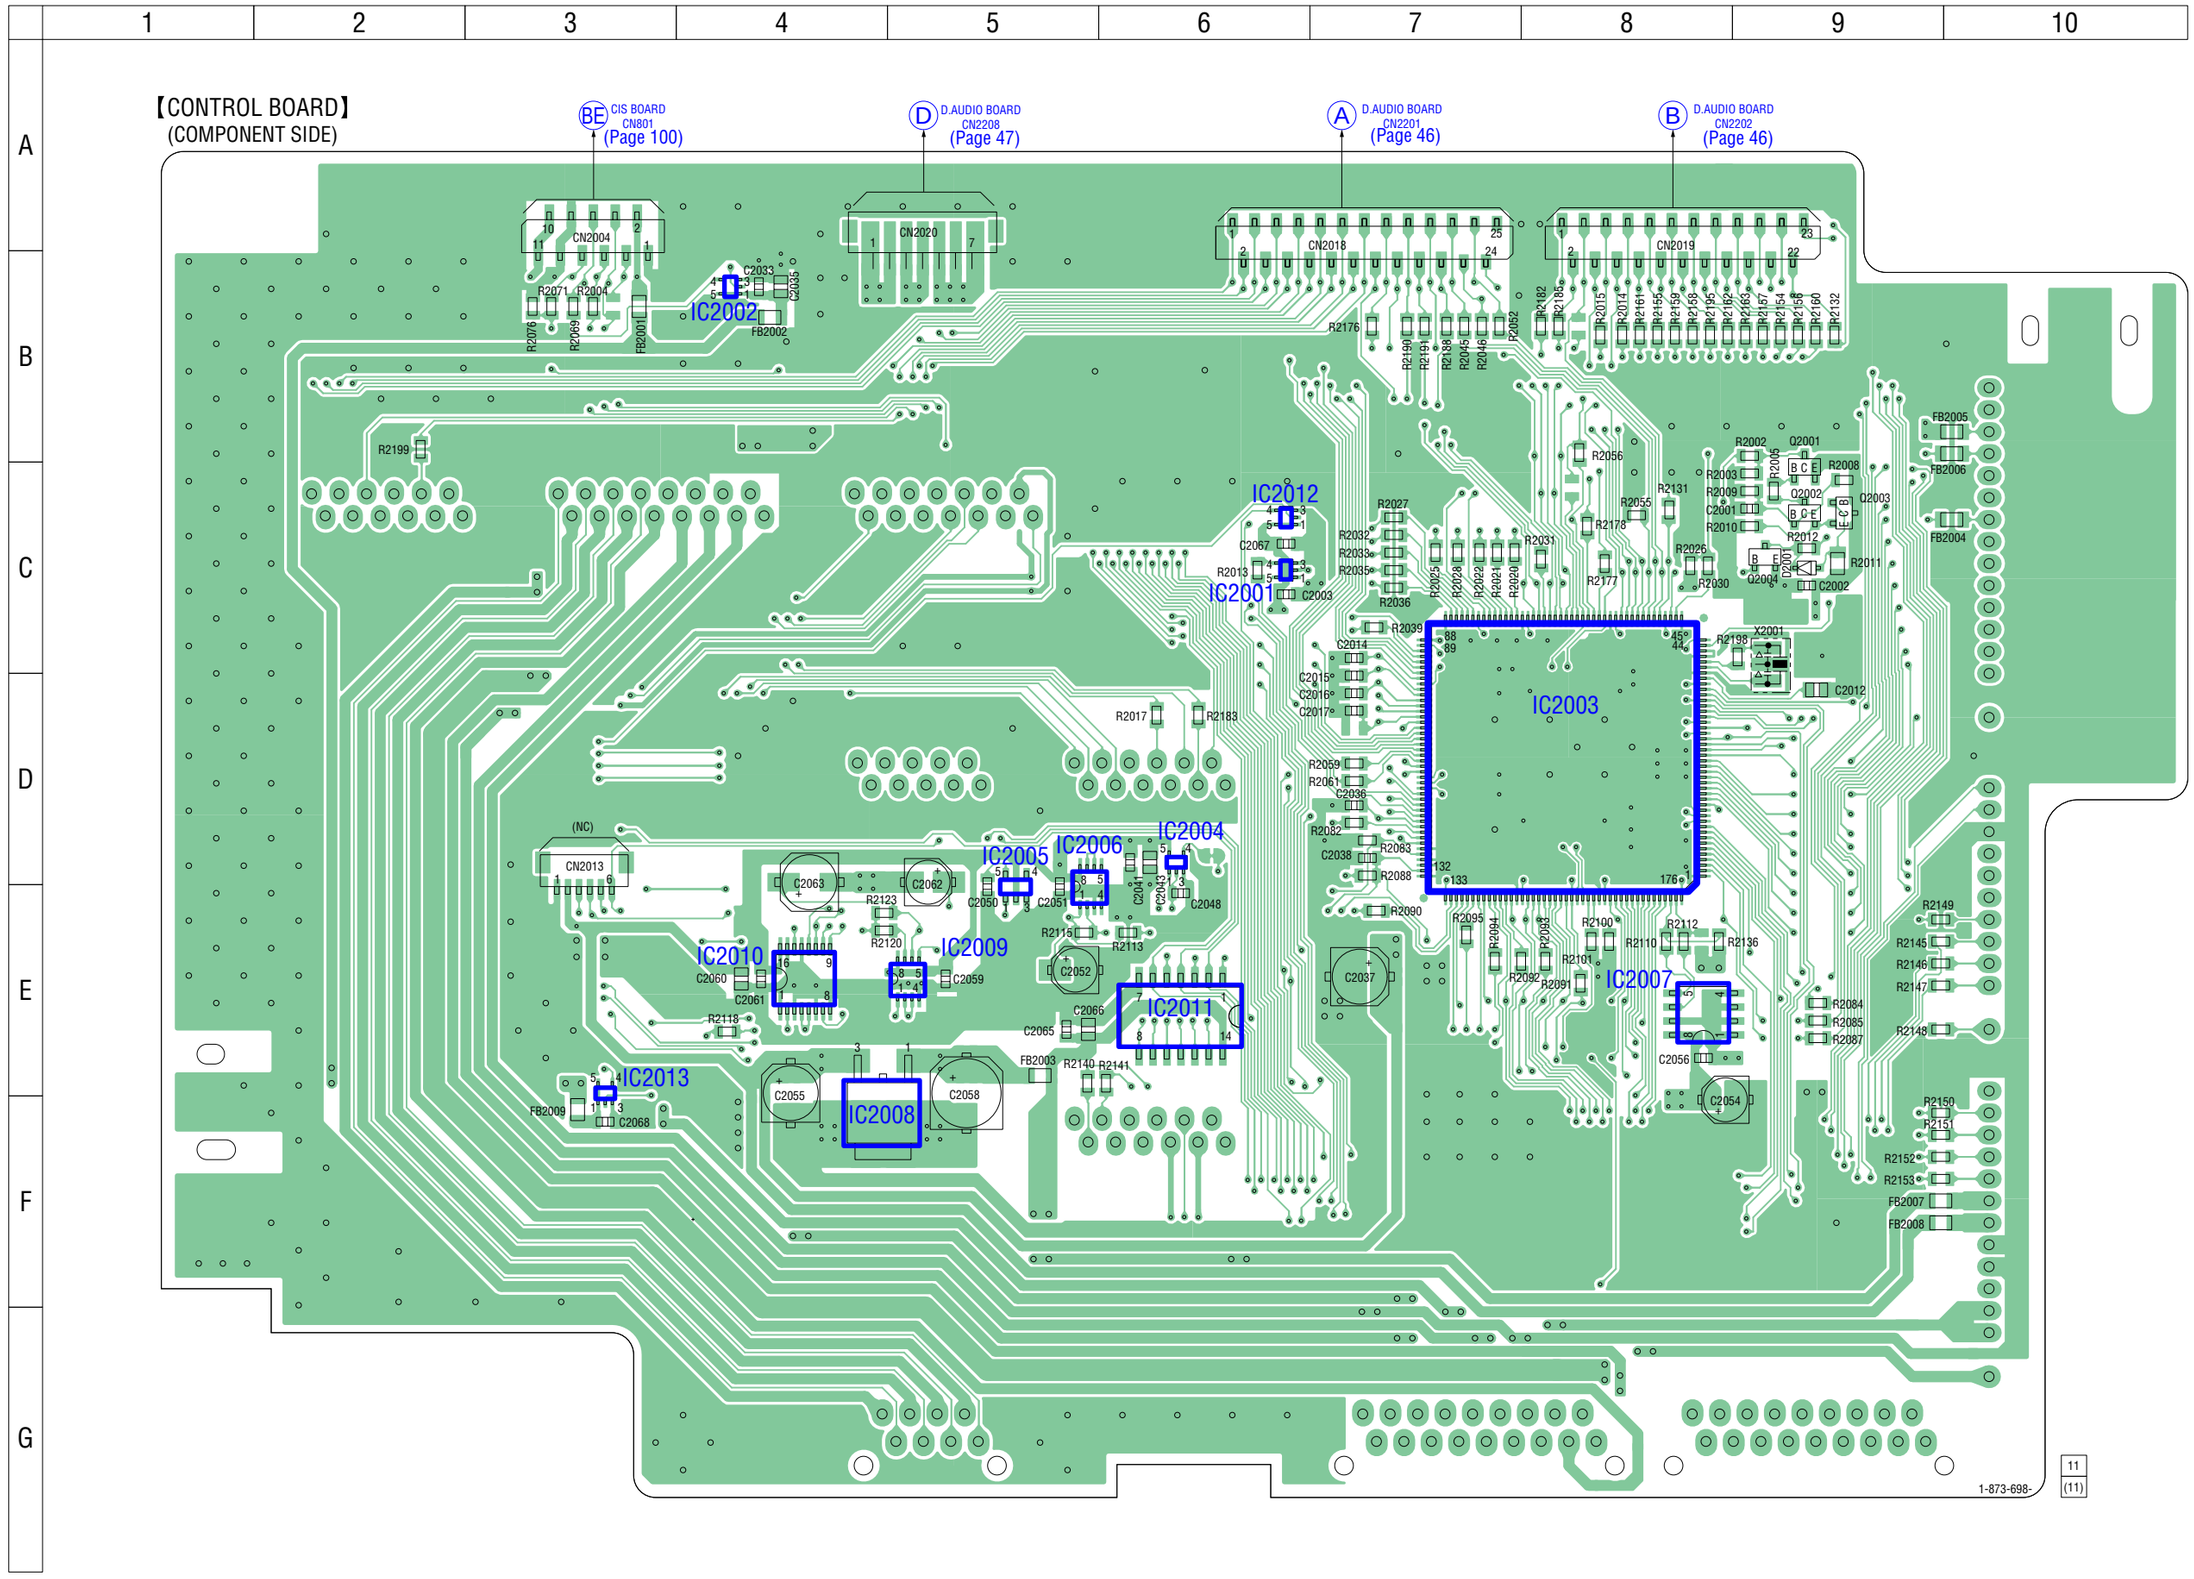

6-73. PRINTED WIRING BOARD – CONTROL Board (Conductor Side) –

• See page 35 for Circuit Boards Location. : Uses unleaded solder.

【CONTROL BOARD】(CONDUCTOR SIDE)

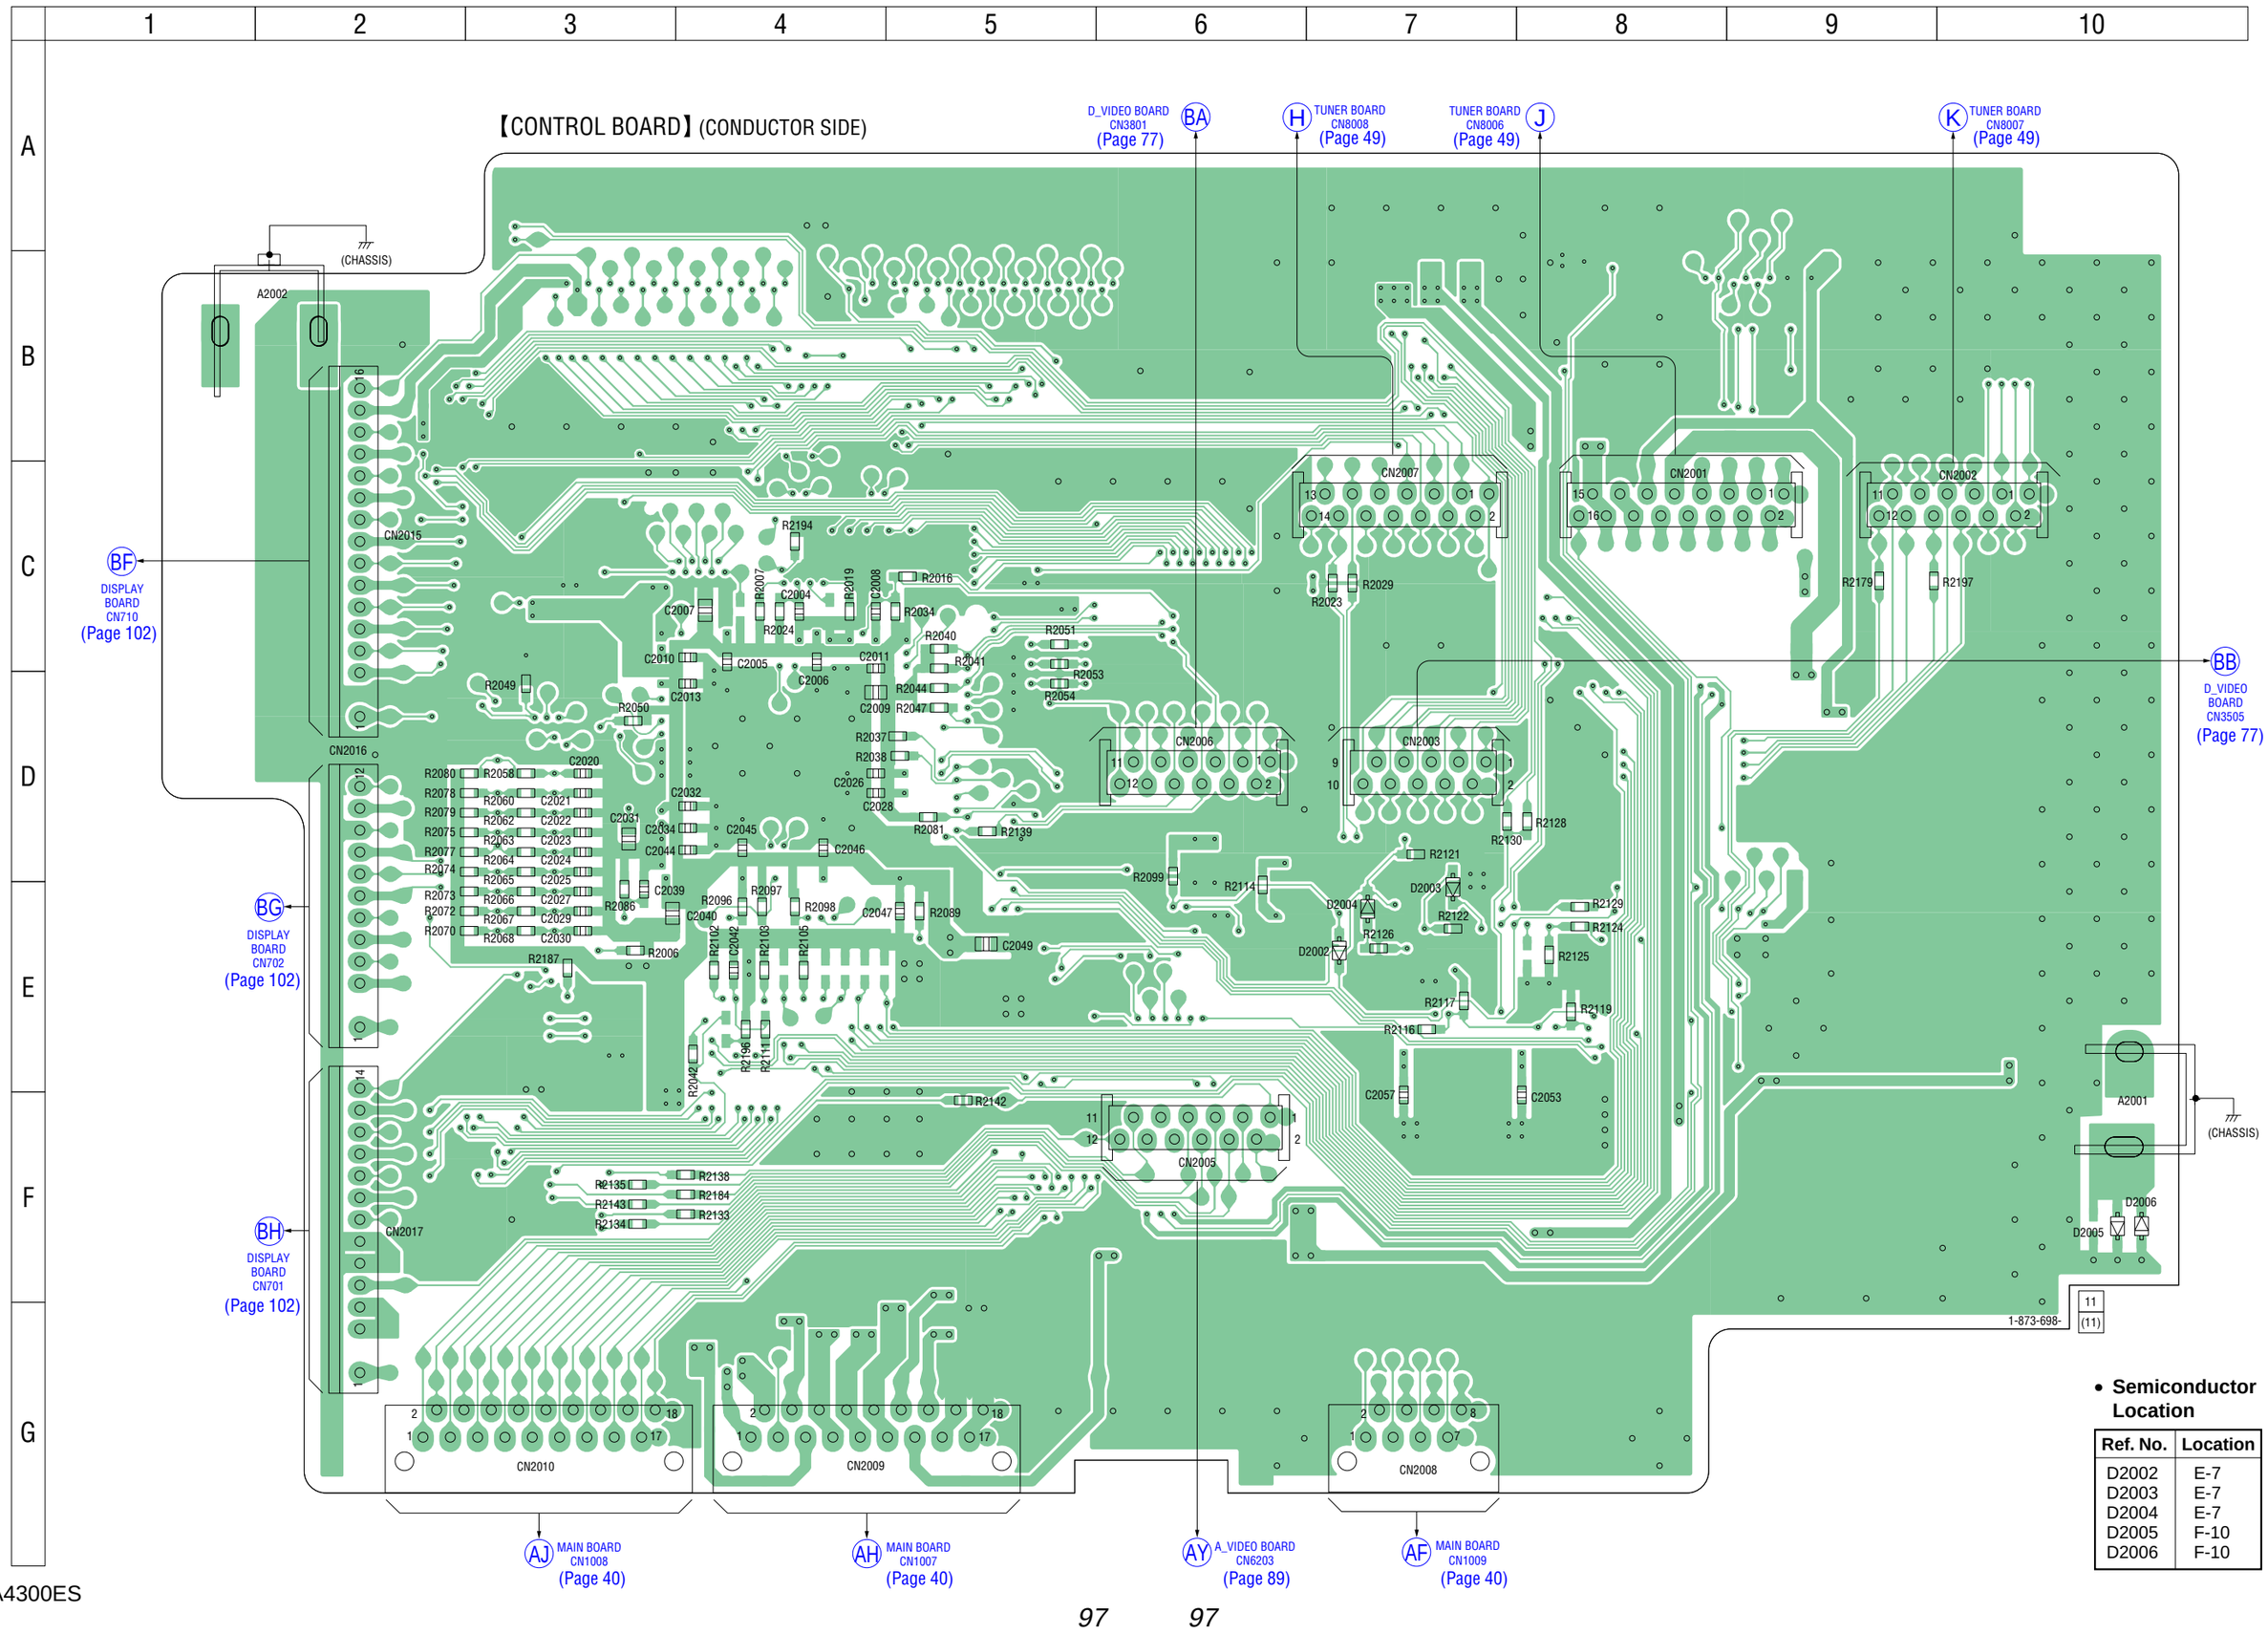

• **Semiconductor Location**

Ref. No.	Location
D2002	E-7
D2003	E-7
D2004	E-7
D2005	F-10
D2006	F-10

6-74. SCHEMATIC DIAGRAM – CONTROL Board (1/2) –

• See page 123 for IC Pin Function Description.

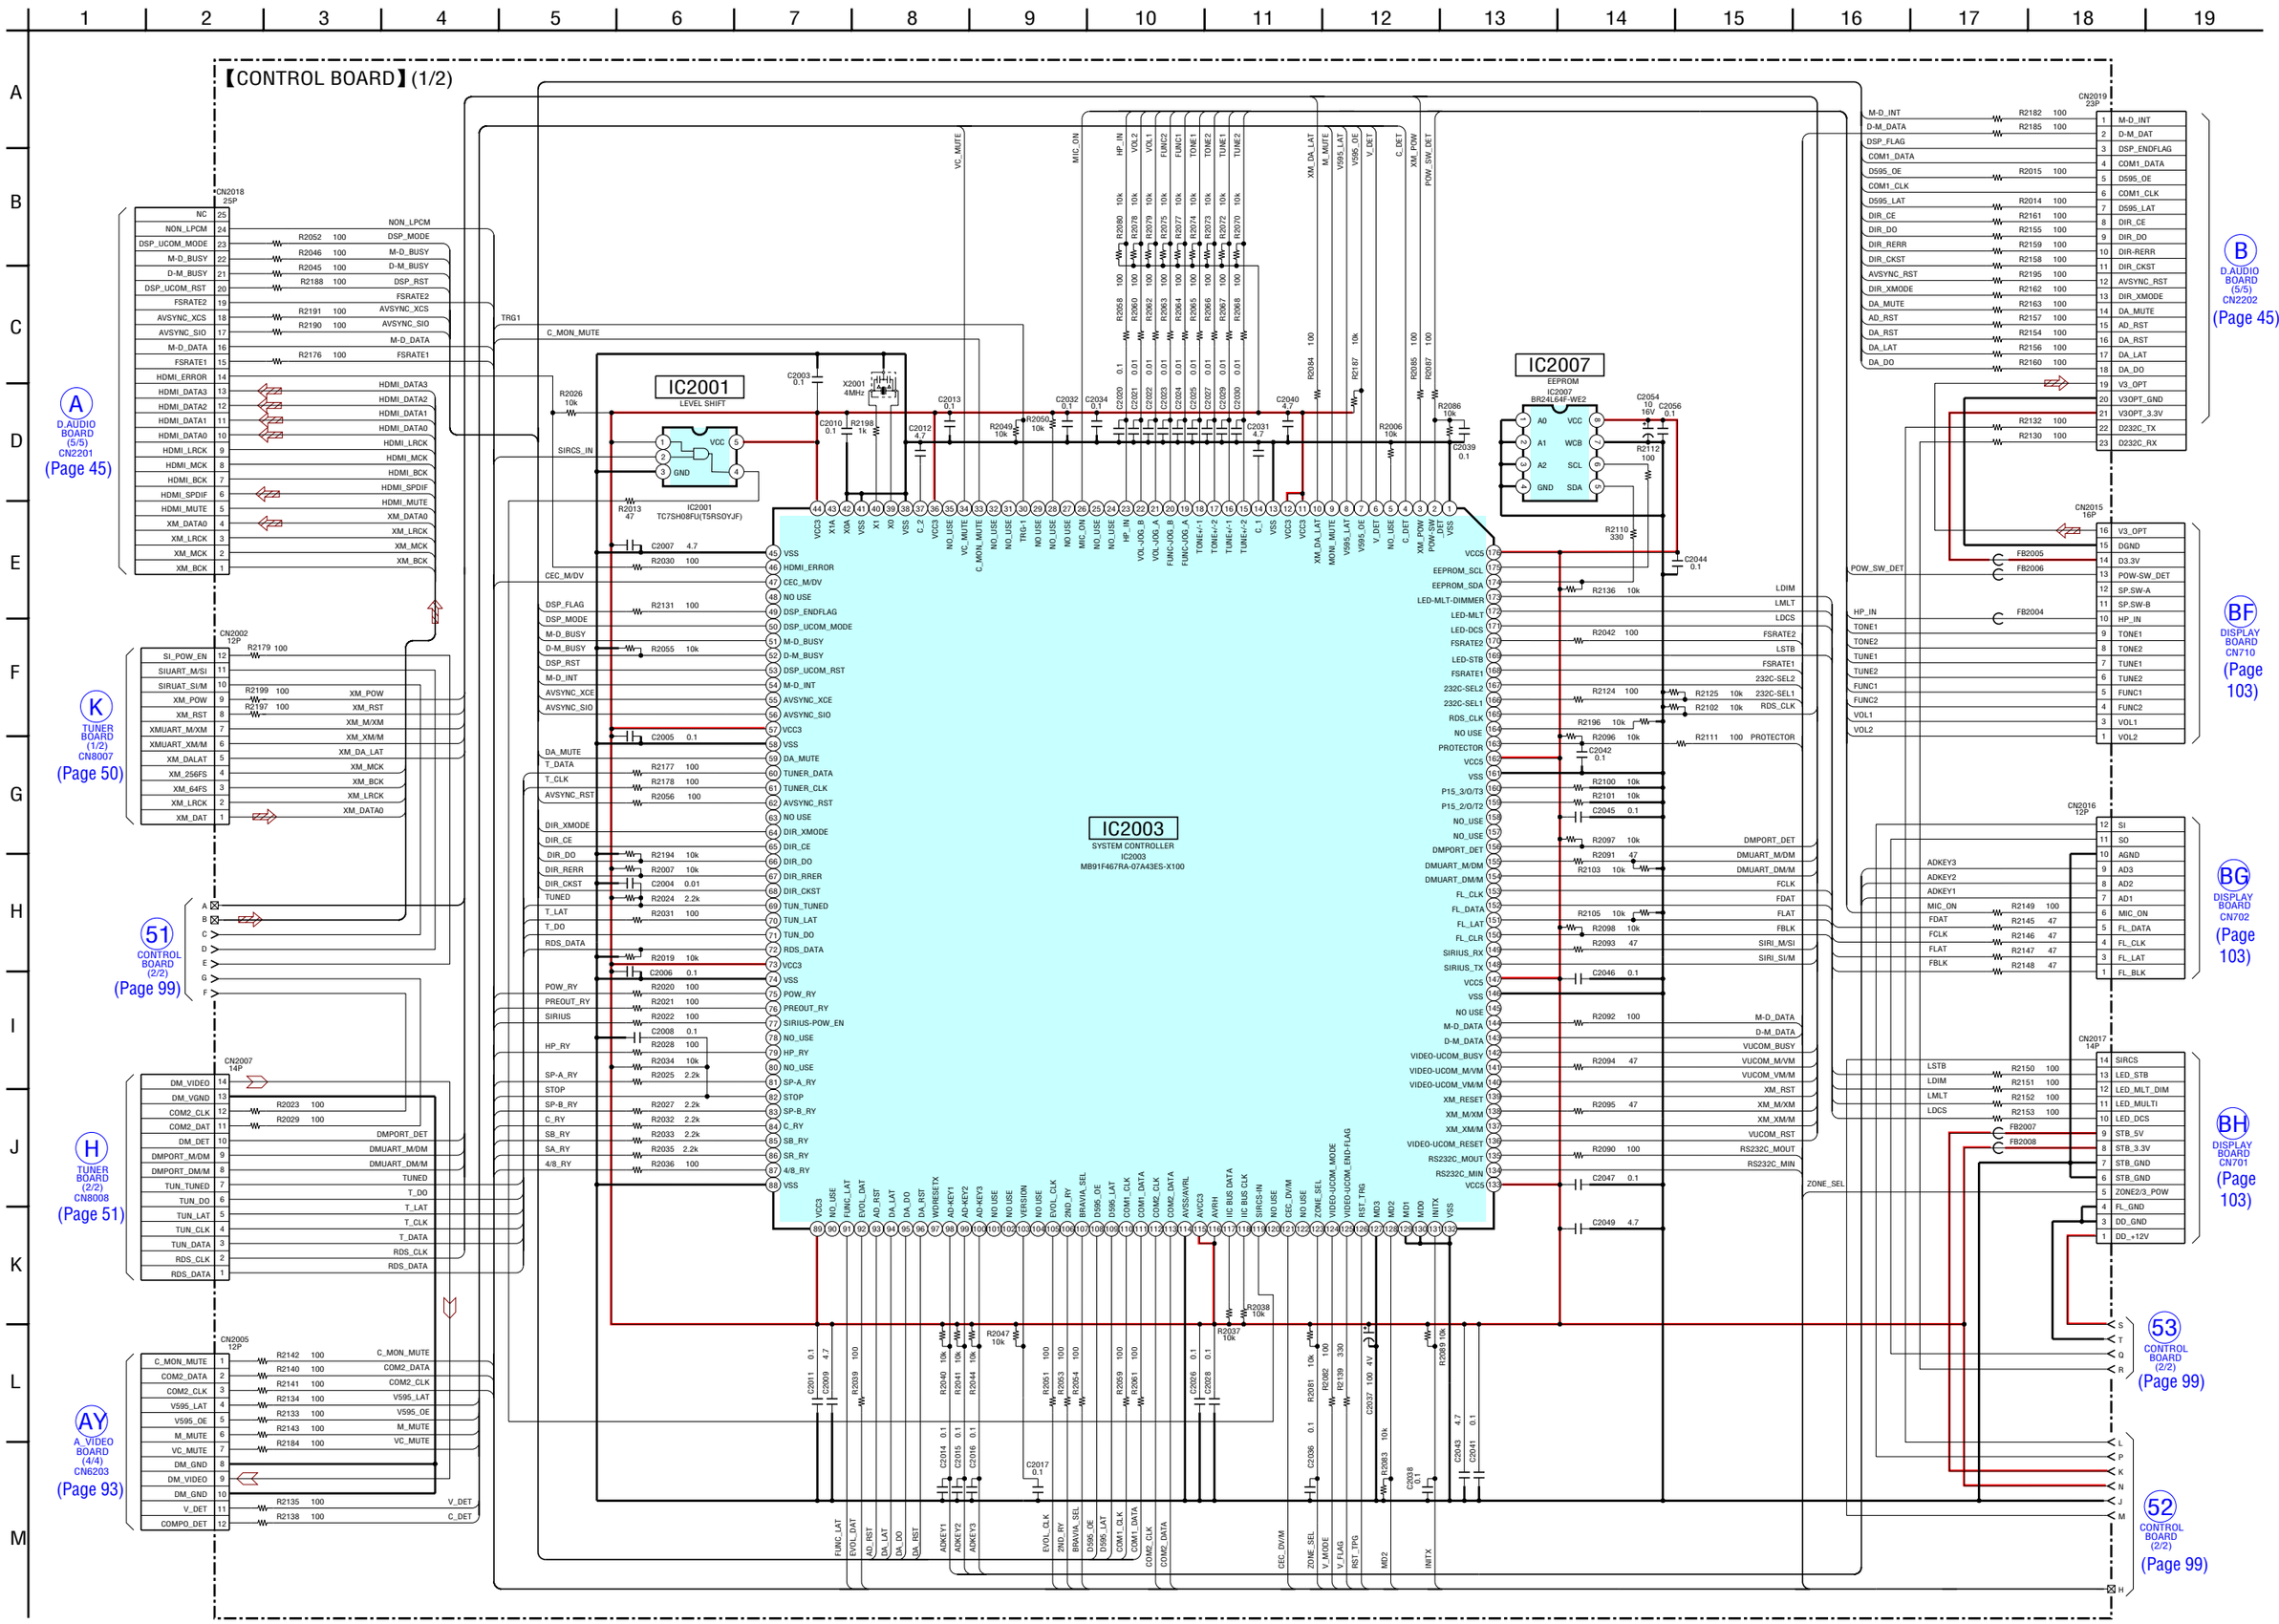

6-75. SCHEMATIC DIAGRAM – CONTROL Board (2/2) –

• See page 110 for IC Block Diagrams.

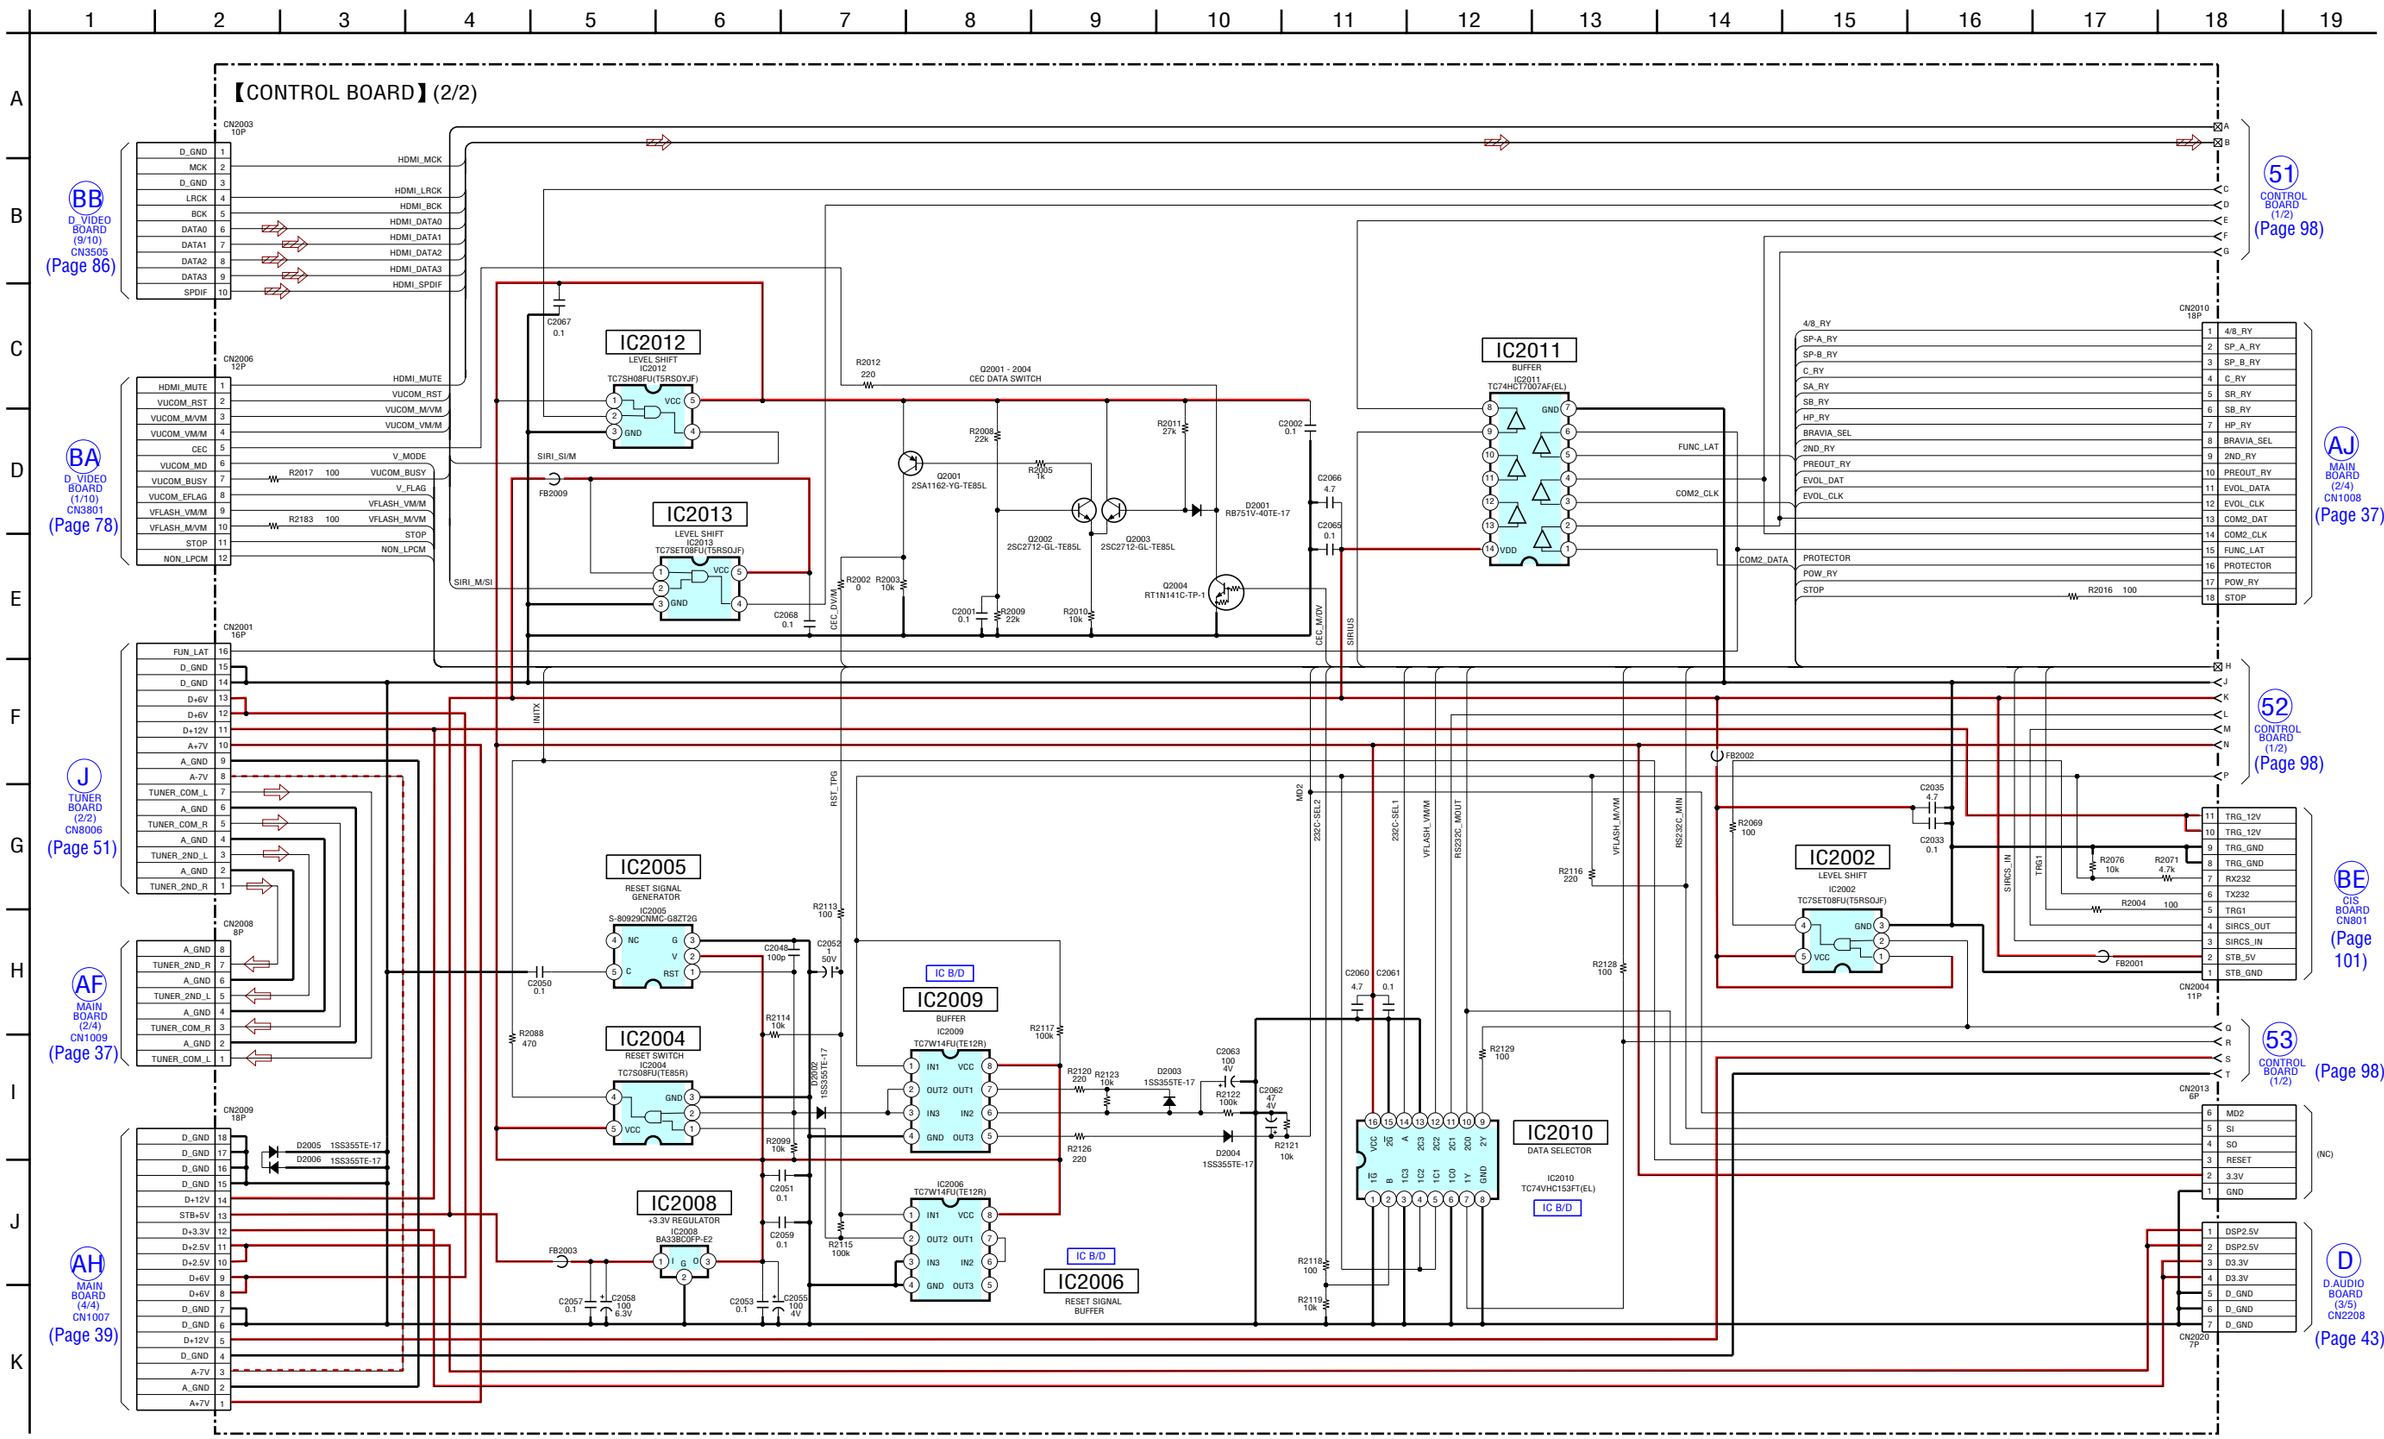

6-76. PRINTED WIRING BOARD – CIS Board –

• See page 35 for Circuit Boards Location.

: Uses unleaded solder.

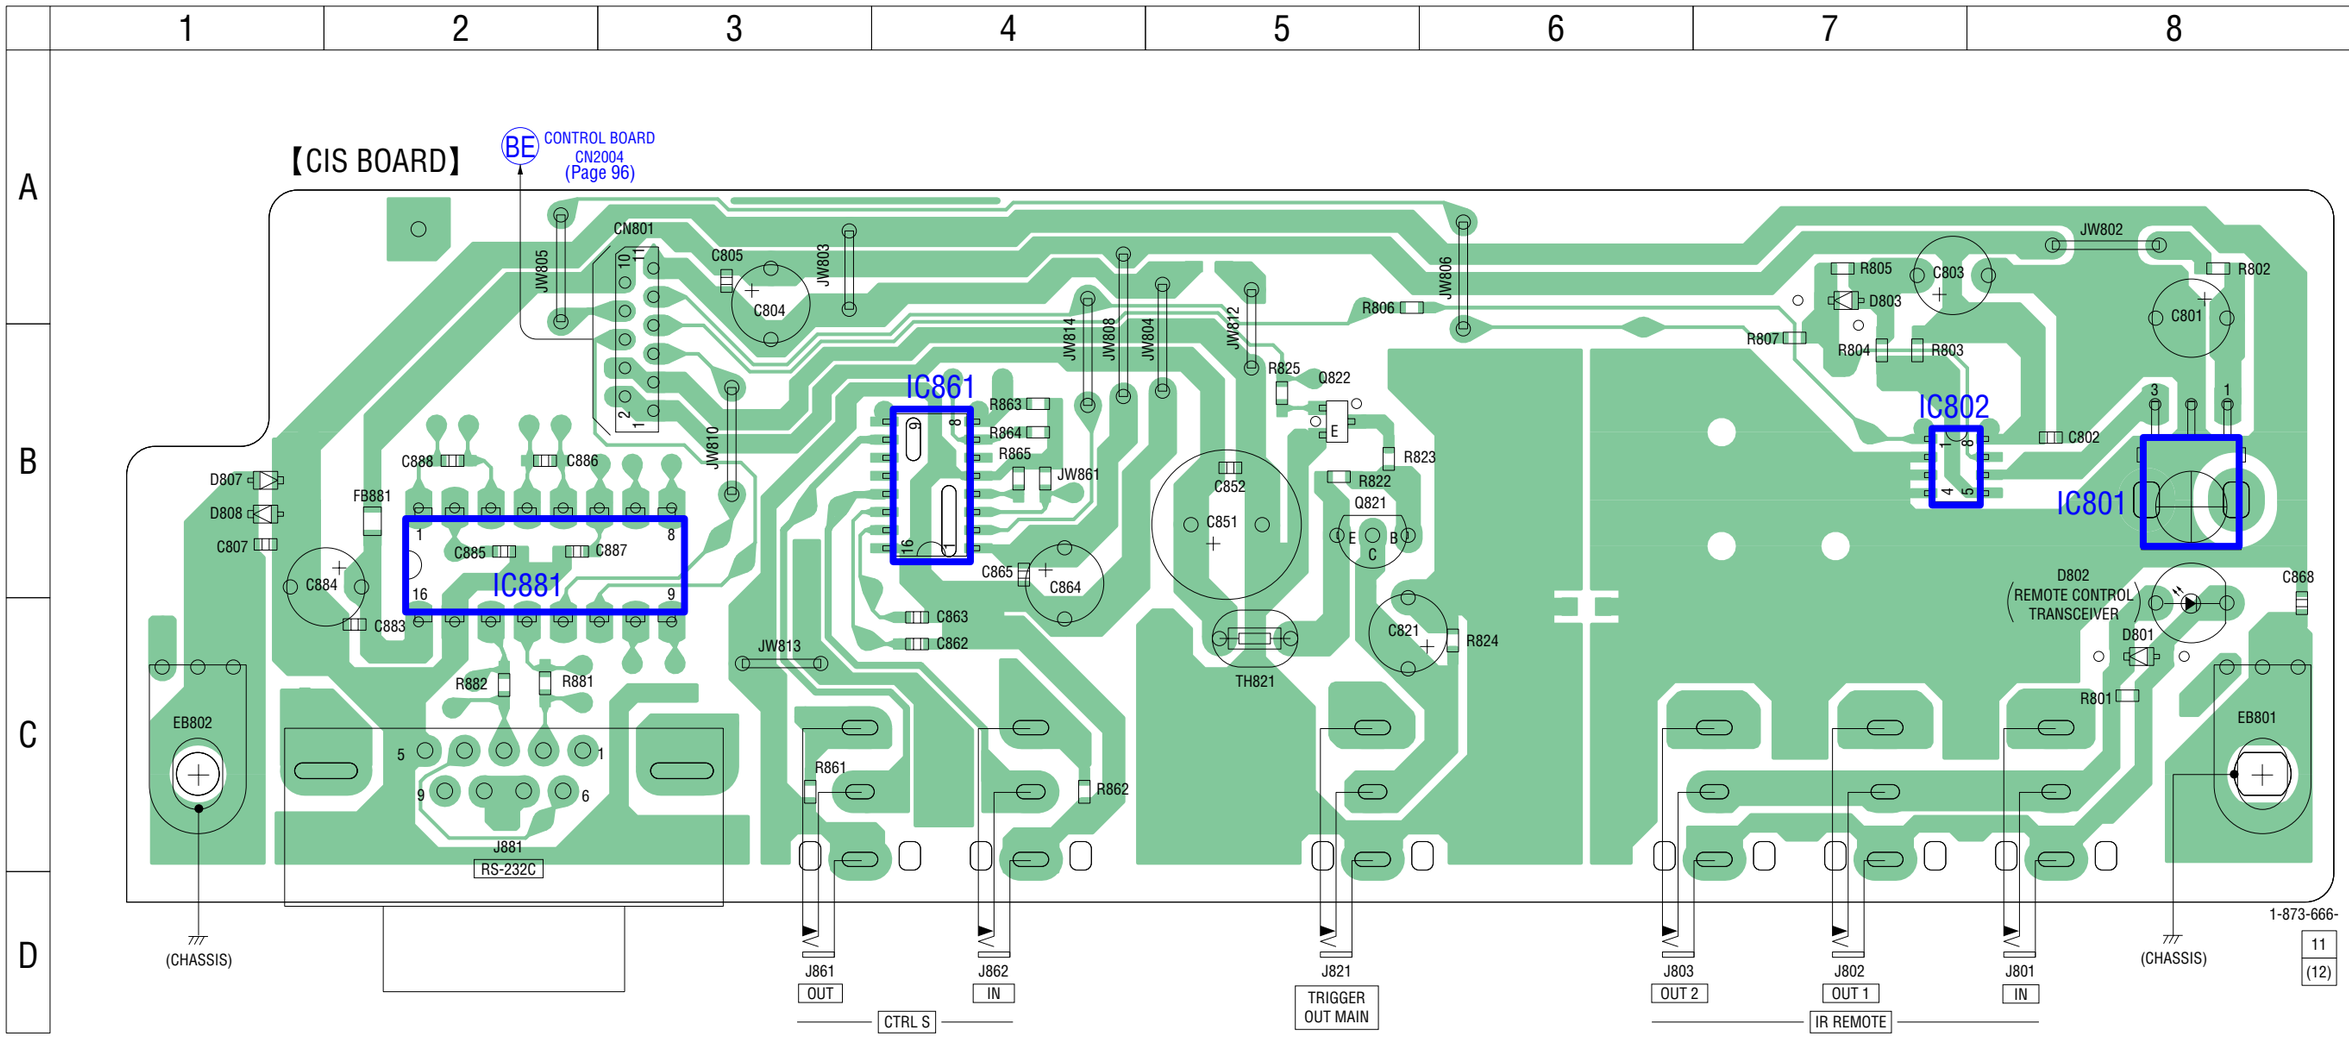

- **Semiconductor Location**

Ref. No.	Location
D801	C-8
D802	C-8
D803	A-7
D807	B-1
D808	B-1
IC801	B-8
IC802	B-7
IC861	B-4
IC881	B-2
Q821	B-5
Q822	B-5

6-77. SCHEMATIC DIAGRAM – CIS Board – • See page 110 for IC Block Diagrams.

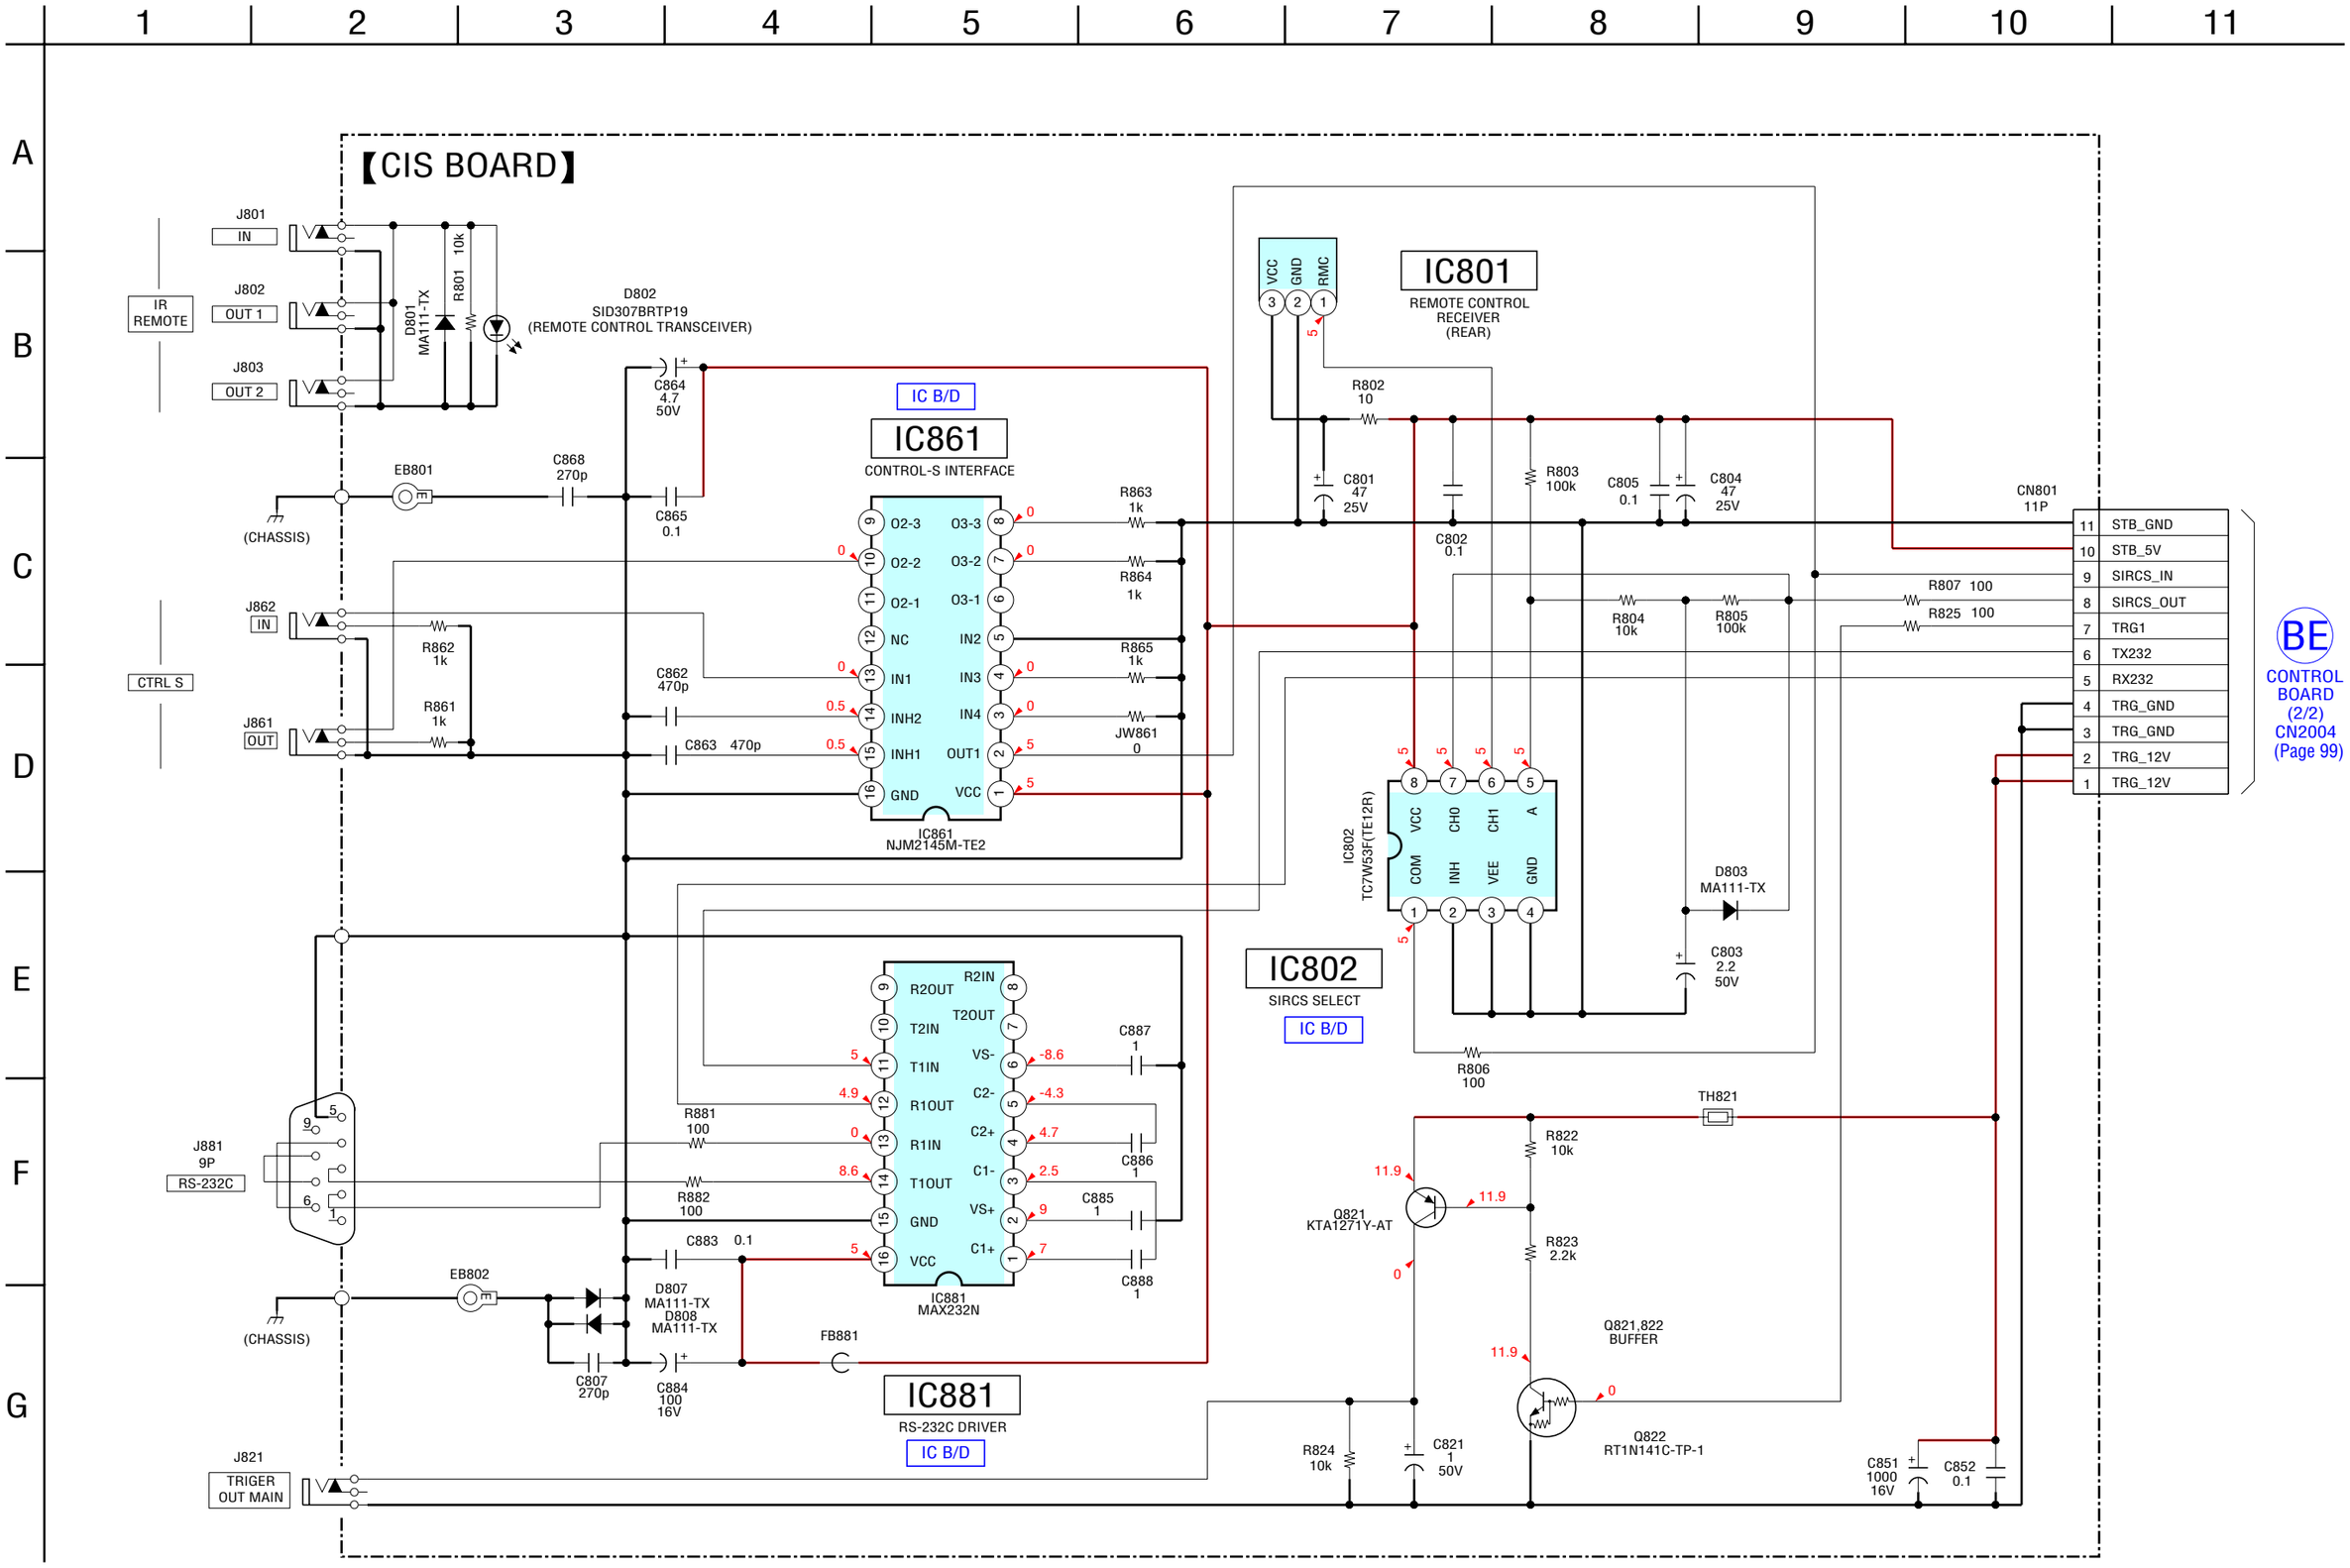

6-78. PRINTED WIRING BOARD – DISPLAY Board –

• See page 35 for Circuit Boards Location. : Uses unleaded solder.

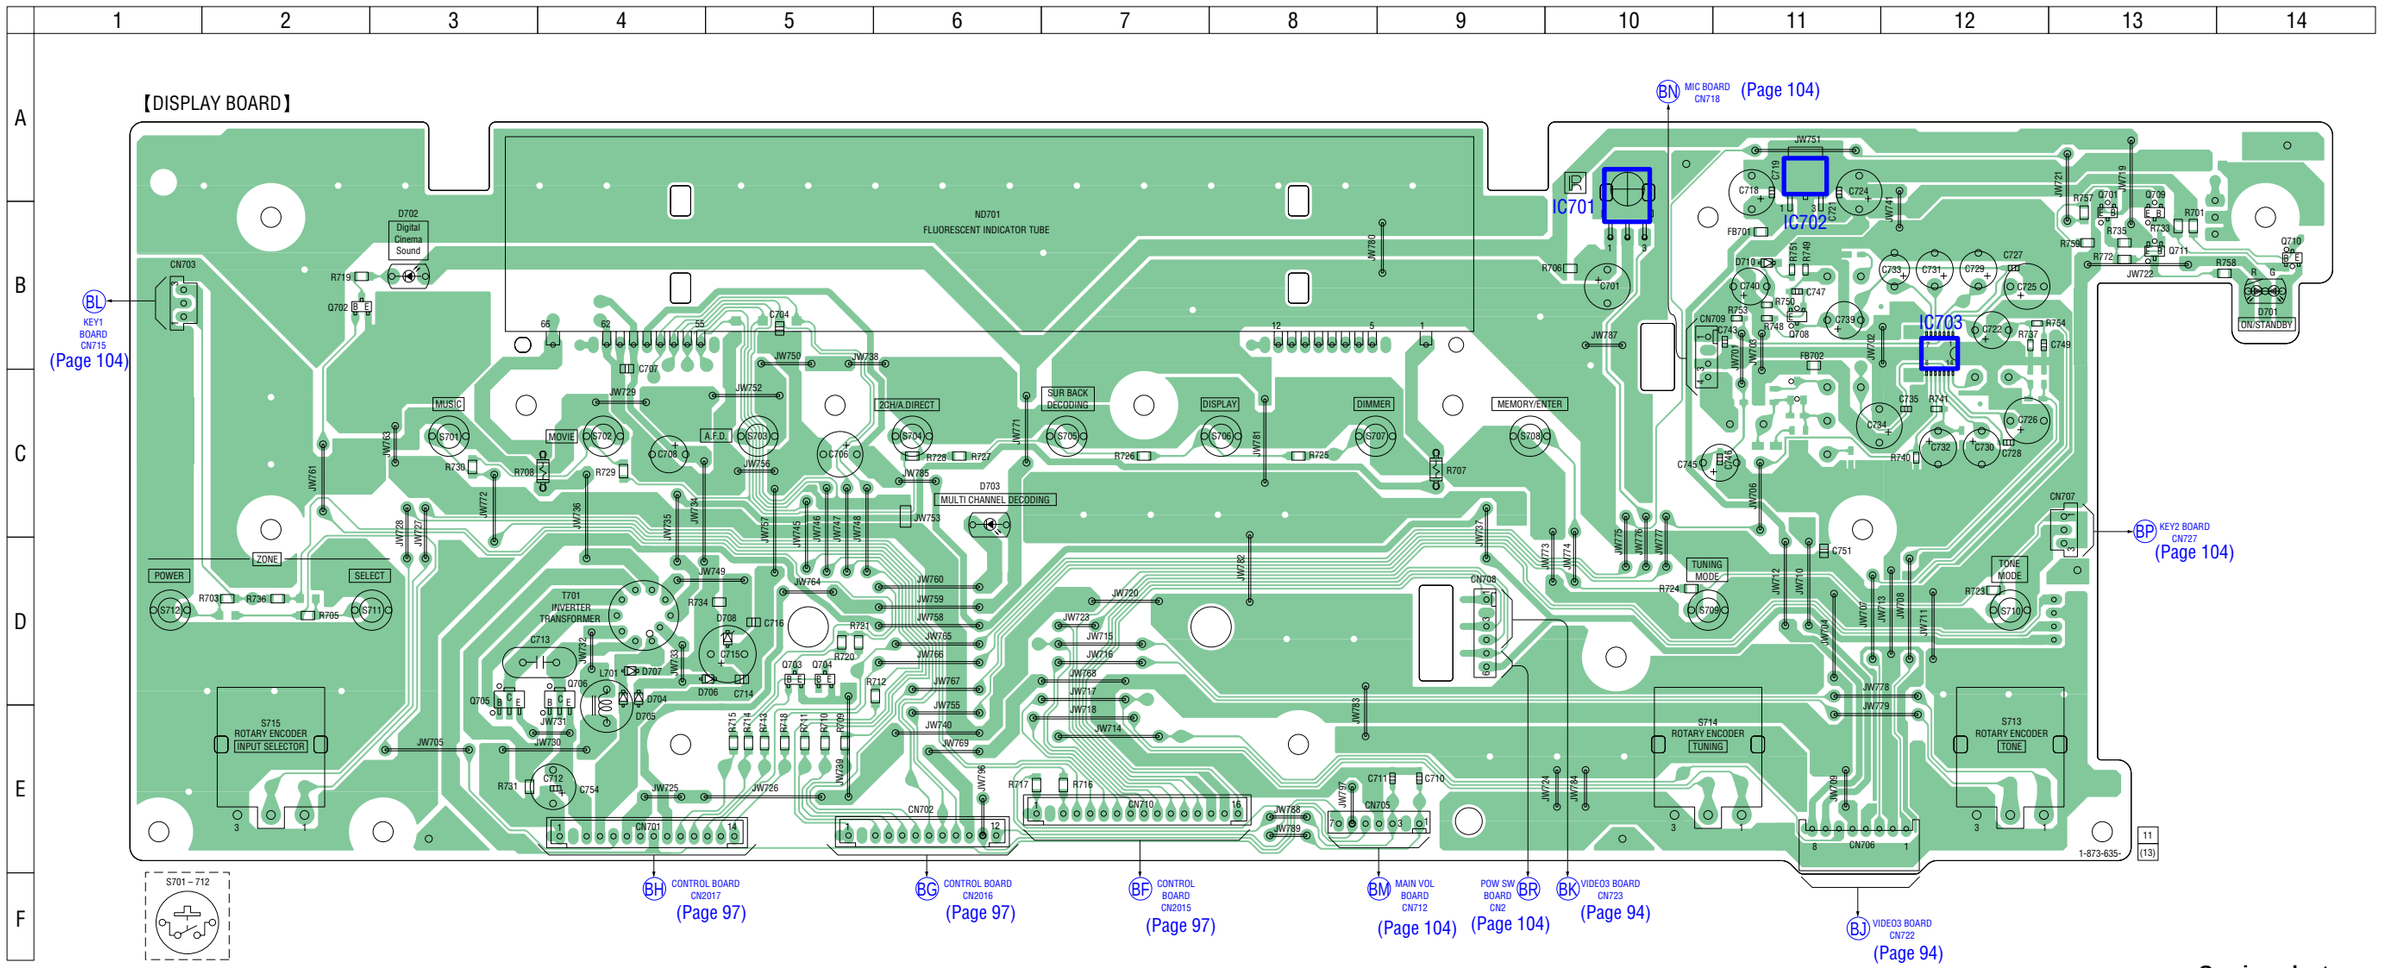

- **Semiconductor Location**

Ref. No.	Location
D701	B-14
D702	B-3
D703	C-6
D704	D-4
D705	D-4
D706	D-5
D707	D-4
D708	D-5
D710	B-11
IC701	B-10
IC702	B-11
IC703	B-12
Q701	B-13
Q702	B-2
Q703	D-5
Q704	D-5
Q705	D-3
Q706	D-4
Q708	B-11
Q709	B-13
Q710	B-14
Q711	B-13

6-79. SCHEMATIC DIAGRAM – DISPLAY Board – • See page 110 for IC Block Diagrams.

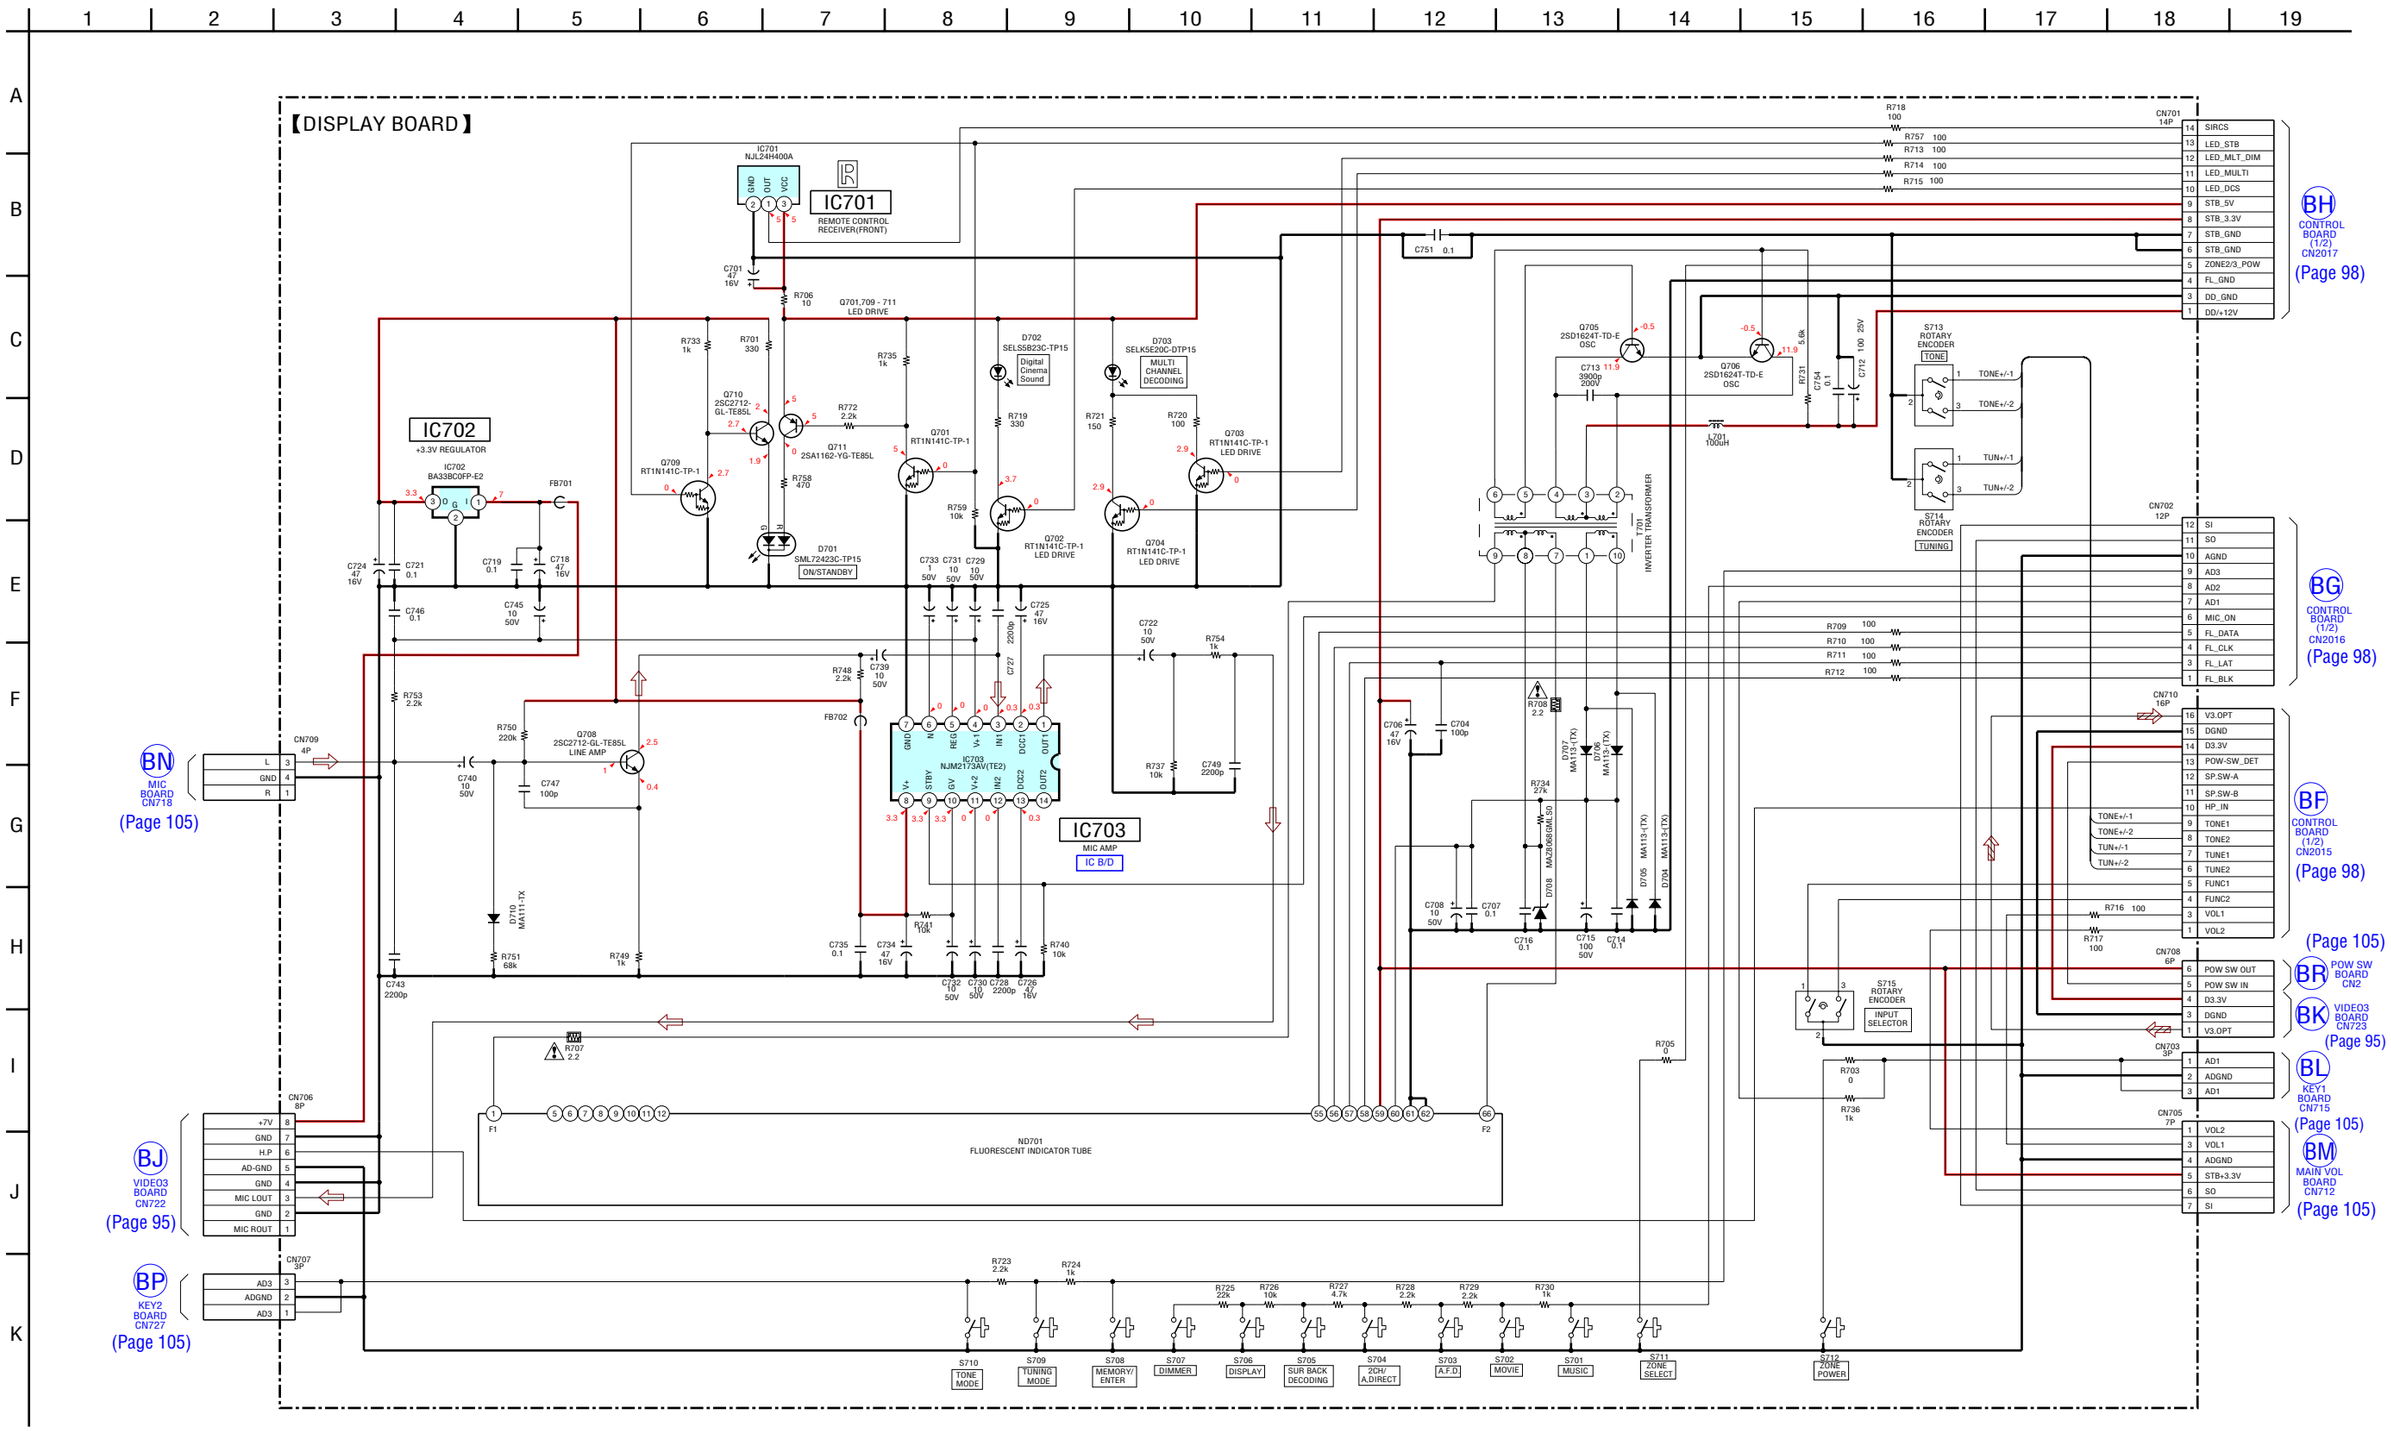

6-80. PRINTED WIRING BOARDS – PANEL Section –

• See page 35 for Circuit Boards Location. :Uses unleaded solder.

【KEY1 BOARD】

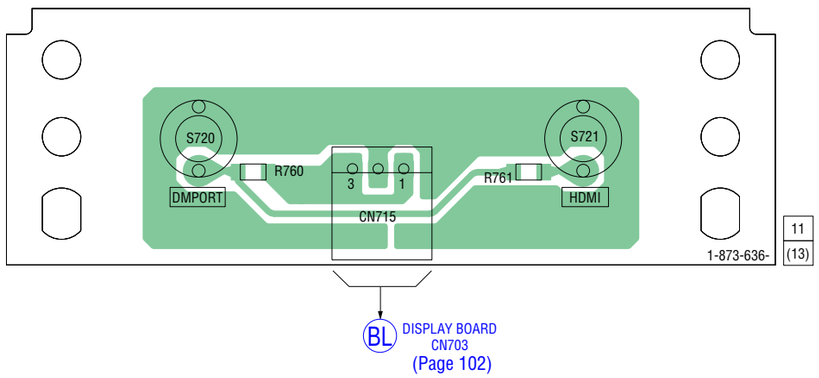

【KEY2 BOARD】

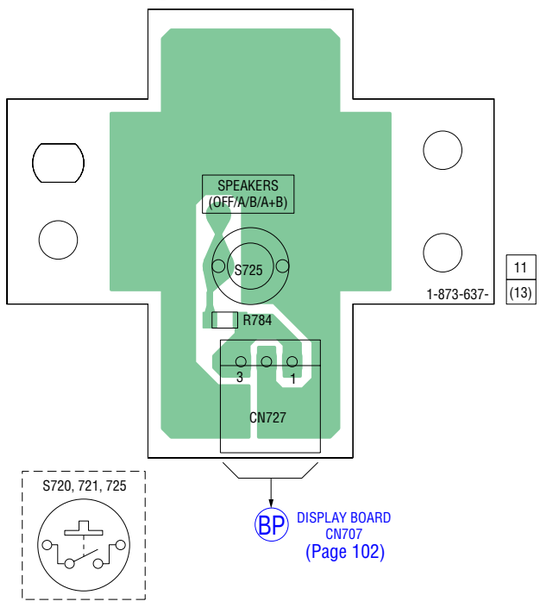

【MAIN VOL BOARD】

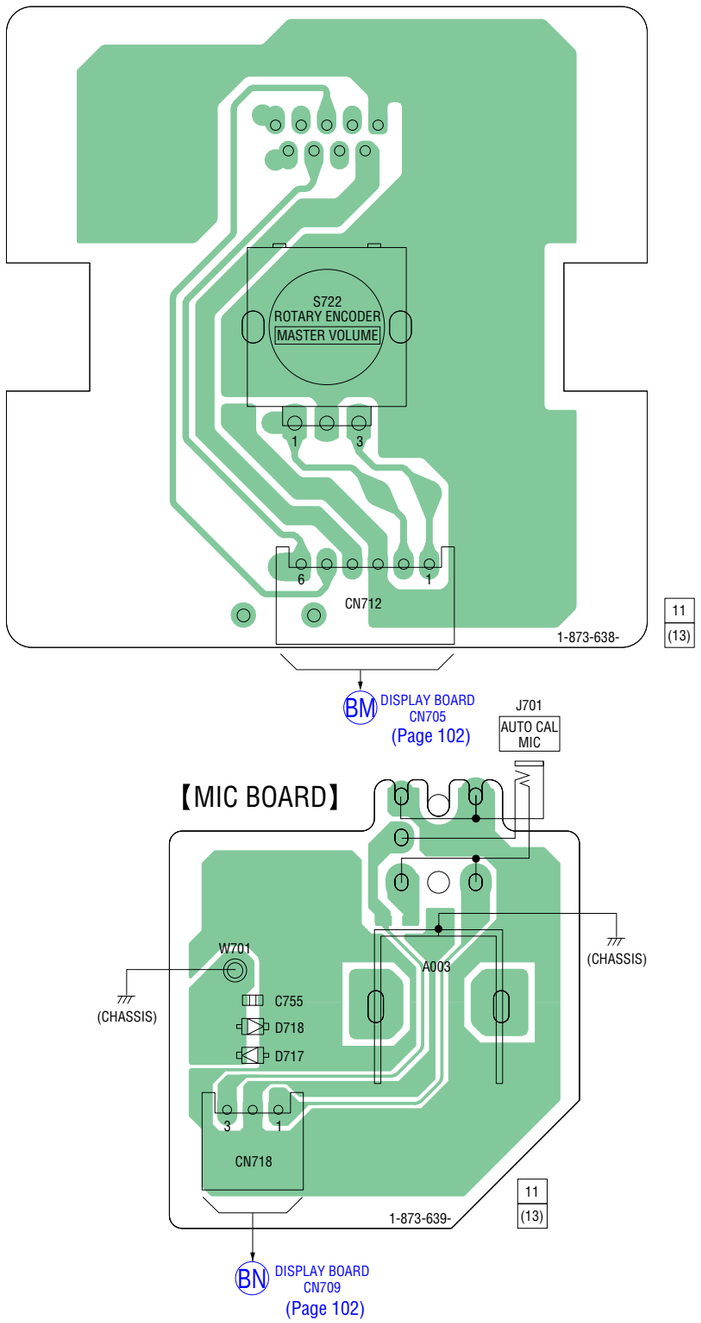

【MIC BOARD】

【POW SW BOARD】

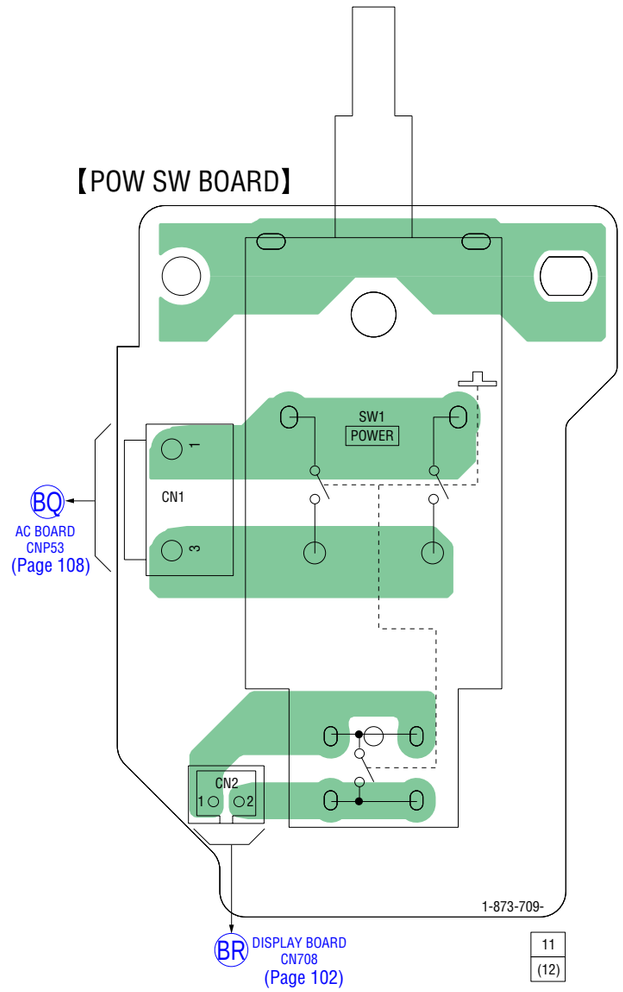

6-81. SCHEMATIC DIAGRAM – PANEL Section –

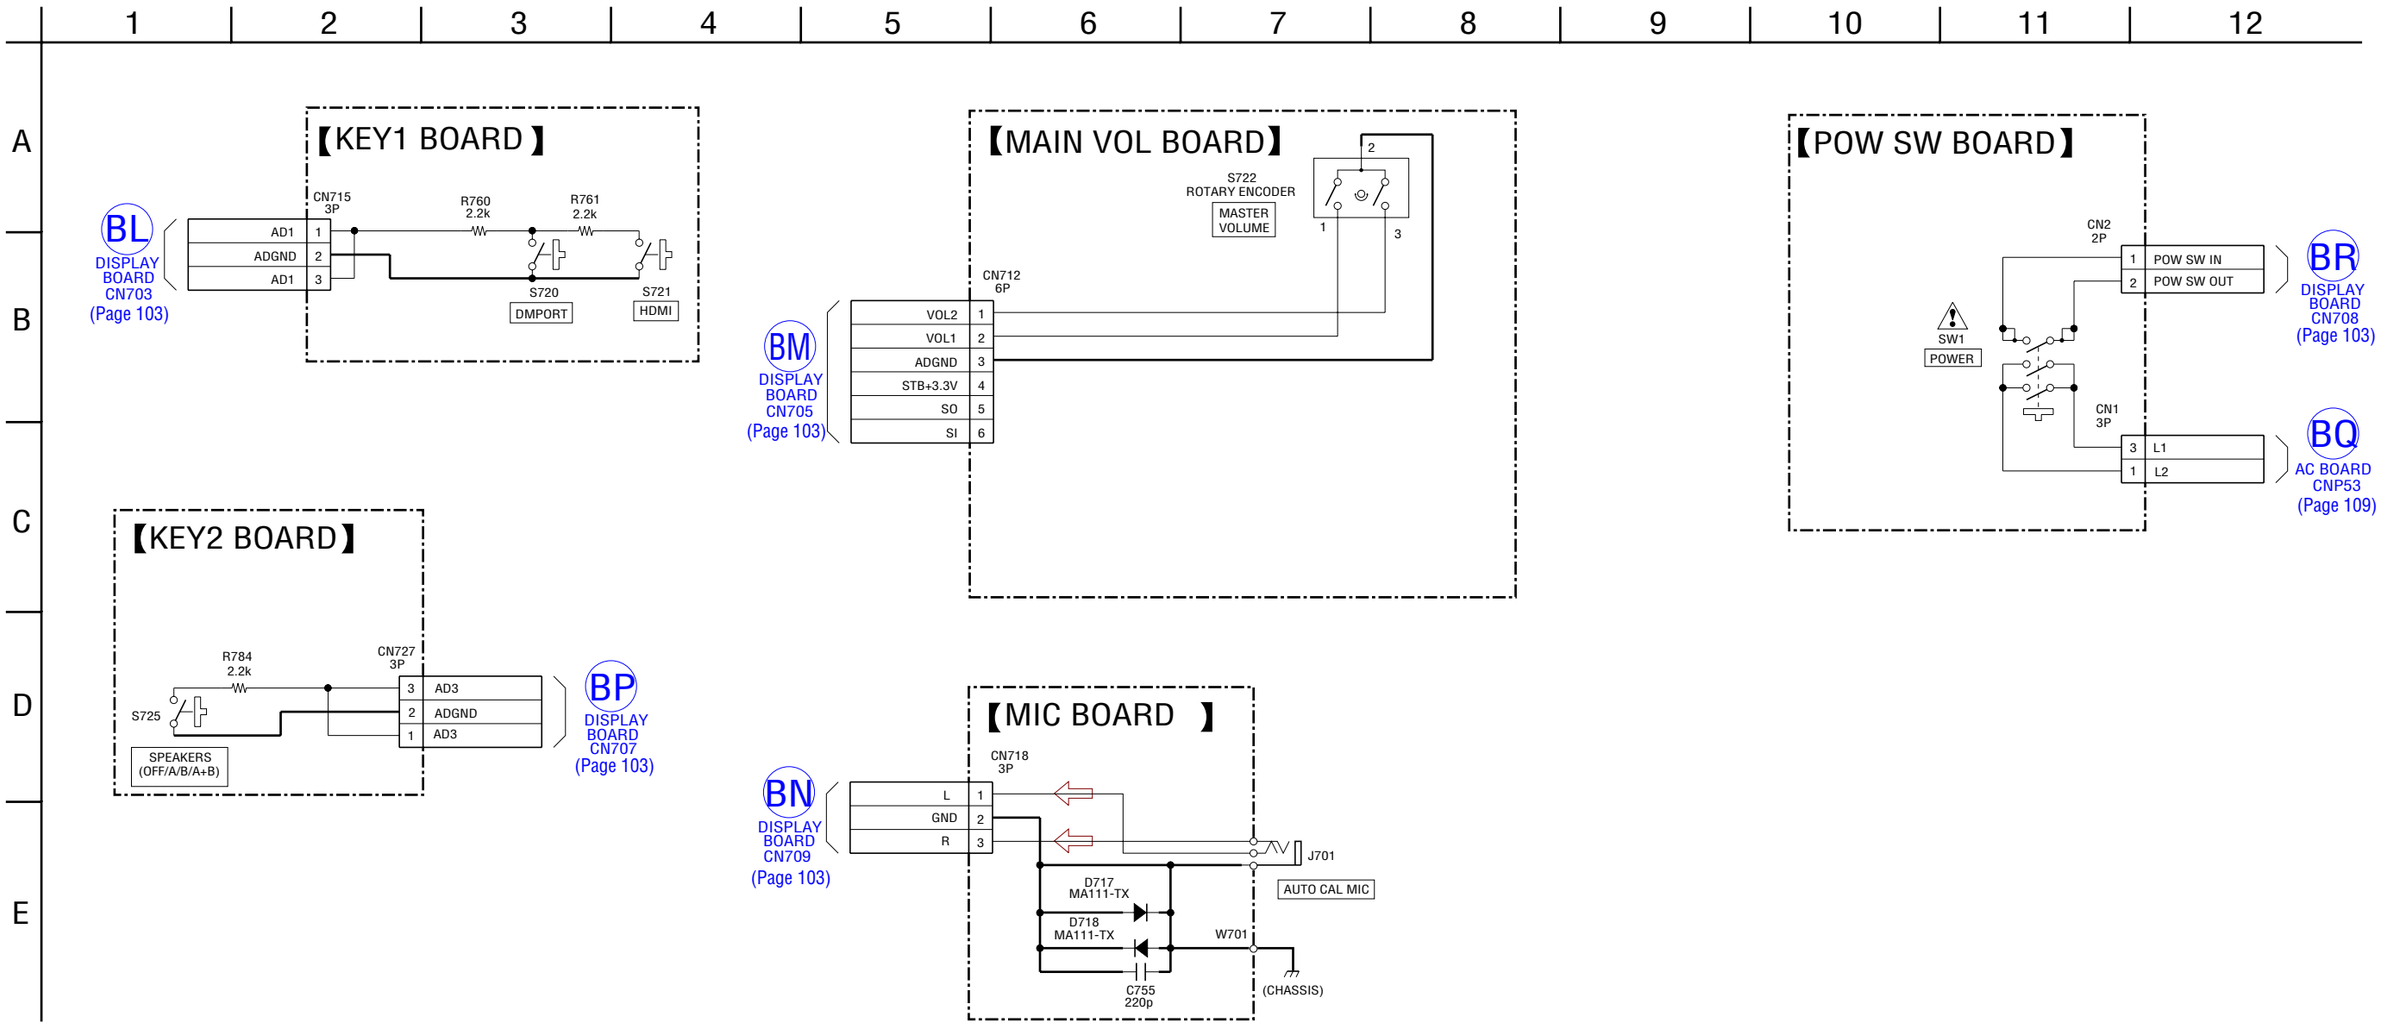

6-82. PRINTED WIRING BOARD – DC-DC Board –

• See page 35 for Circuit Boards Location.

:Uses unleaded solder.

- **Semiconductor Location**

Ref. No.	Location
D1401	E-2
D1403	G-4
D1404	E-3
D1405	C-3
D1406	B-3
IC1402	G-3
IC1403	F-3
IC1404	C-3
IC1405	C-3
Q1409	G-4

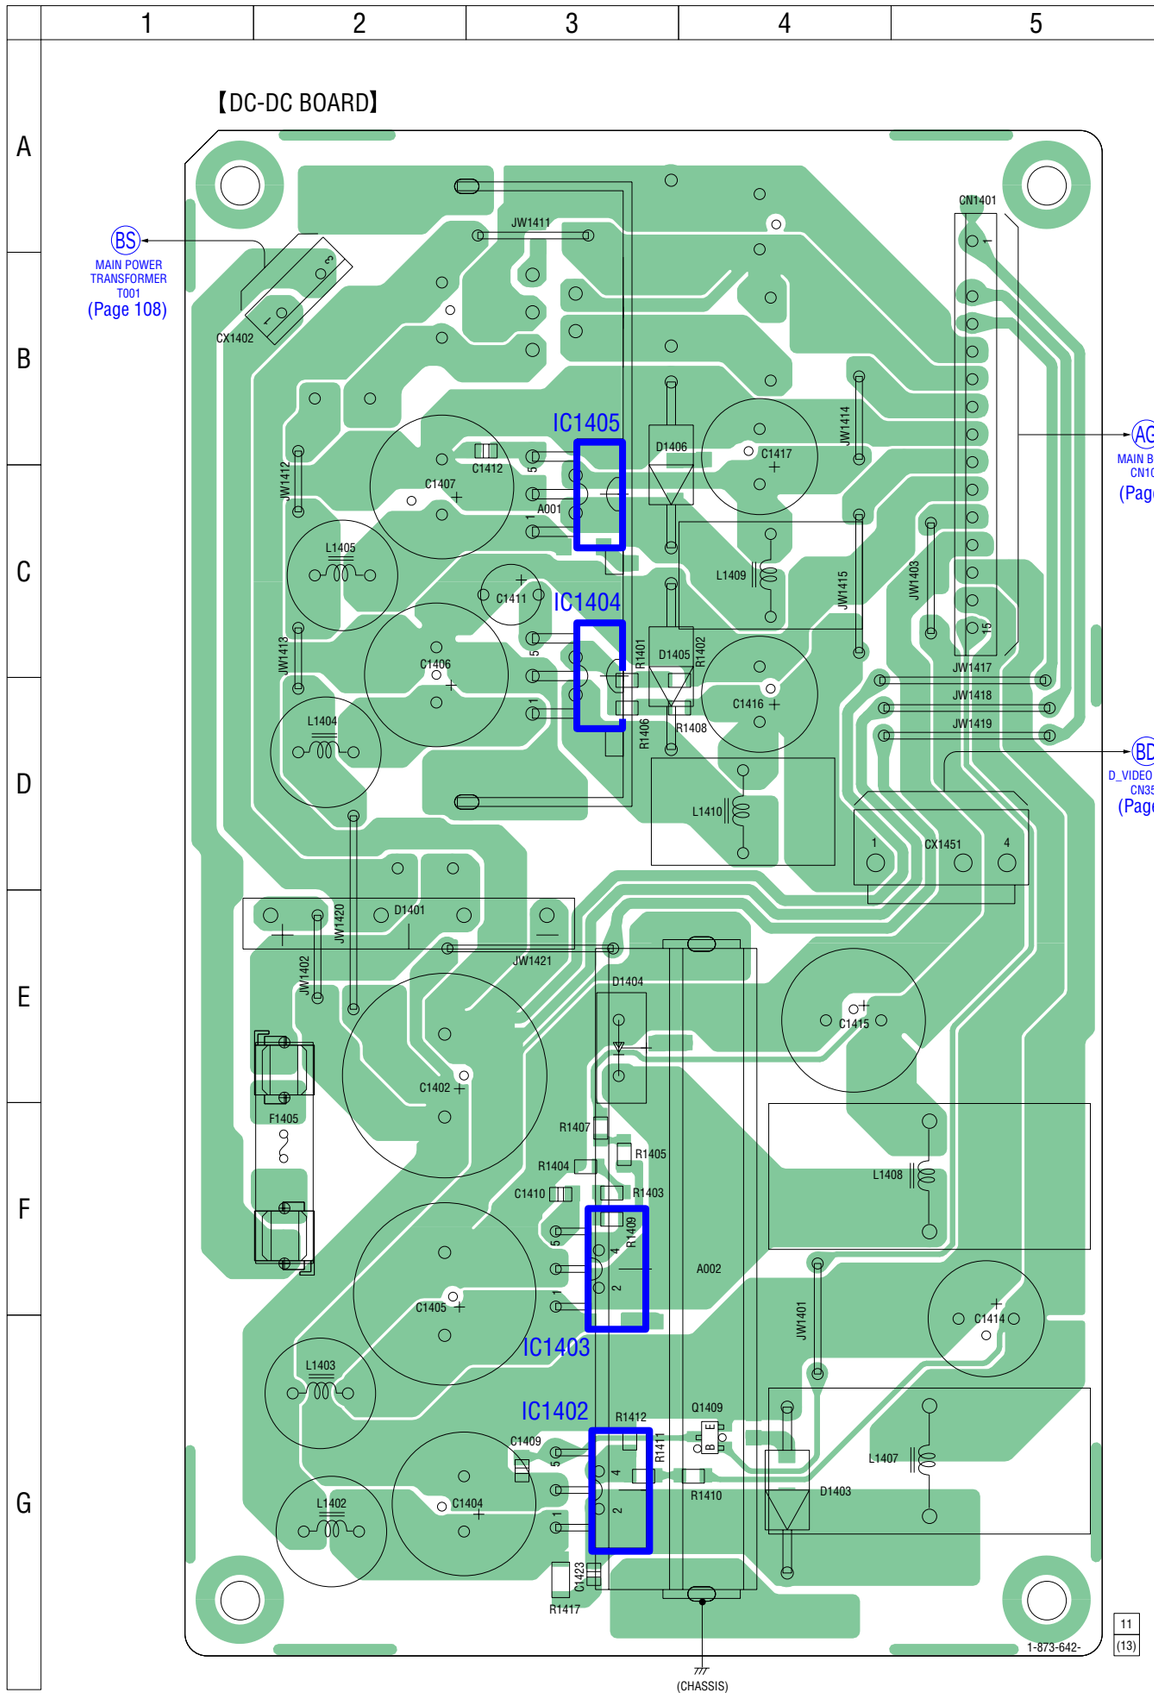

6-83. SCHEMATIC DIAGRAM – DC-DC Board – • See page 110 for IC Block Diagrams.

【DC-DC BOARD】

BS
MAIN POWER TRANSFORMER T001
(Page 109)

CX1402 3P
AC24V 3
AC24V 1

F1405 T6.3AL 250V

D1401 RBV-602LF-A

C1402 3300 35V

IC1404 SI-8050S-LF1101
IN OUT GND FB CONTROL
25.2 6.5 5 2.4
IC1404 +6V REGULATOR
IC B/D

IC1405 SI-8120JF
IN OUT GND FB CONTROL
25.2 12 12 24
IC1405 +12V REGULATOR
IC B/D

IC1402 SI-8008HFE
IN OUT GND FB CONTROL
25.2 3.4 0.8 3.7
IC1402 +3.3V REGULATOR
IC B/D

IC1403 SI-8008HFE
IN OUT GND FB CONTROL
25.2 4 0.8 3.7
IC1403 +4V REGULATOR
IC B/D

L1404 100uH
L1410 100uH
L1405 100uH
L1409 100uH
L1402 100uH
L1403 100uH
L1407 100uH
L1408 100uH

R1406 75
R1408 100
D1405 RK14-LFA-A1
R1401 330
R1402 330
C1406 1000 35V
C1411 10 50V
C1416 1000 16V
C1407 1000 35V
D1406 RK14-LFA-A1
C1412 0.1
C1417 1000 16V

R1417 22
C1423 2200p
R1411 1k
R1410 100
C1409 0.1
C1414 1000 16V
C1404 1000 35V
D1403 RK14-LFA-A1
R1412 330
3.7
0
Q1409 RT1N241C-TP-1 (NO USE)
C1405 2200 35V
D1404 FMB-G16L
R1405 2.2k
R1407 1k
R1409 100
R1403 220
R1404 470
C1410 0.1
C1415 2200 16V

CN1401 15P
1 +24V
3 GND_+24V
4 GND
5 DCDC-5V
6 GND-5V
7 DCDC+12V
8 GND+12V
9 +6V
10 GND+6V
11 DCDC4V
12 GND4V
13 DCDC3.3V
14 GND3.3V
15 D-POW

AG
MAIN BOARD (4/4)
CN1003
(Page 39)

CX1451 4P
1 +6V
3 GND
4 +4V

BD
D_VIDEO BOARD (10/10)
CN3508
(Page 87)

6-84. PRINTED WIRING BOARD – AC Board –

• See page 35 for Circuit Boards Location.

:Uses unleaded solder.

• **Semiconductor Location**

Ref. No.	Location
D51	C-2
D52	C-5
D53	C-5
D54	B-5
D55	B-5
D56	C-3
D57	C-3
D58	G-1
D61	A-3
IC51	B-3
Q51	D-2
Q52	F-1
Q53	B-3
Q54	B-3
Q55	B-3

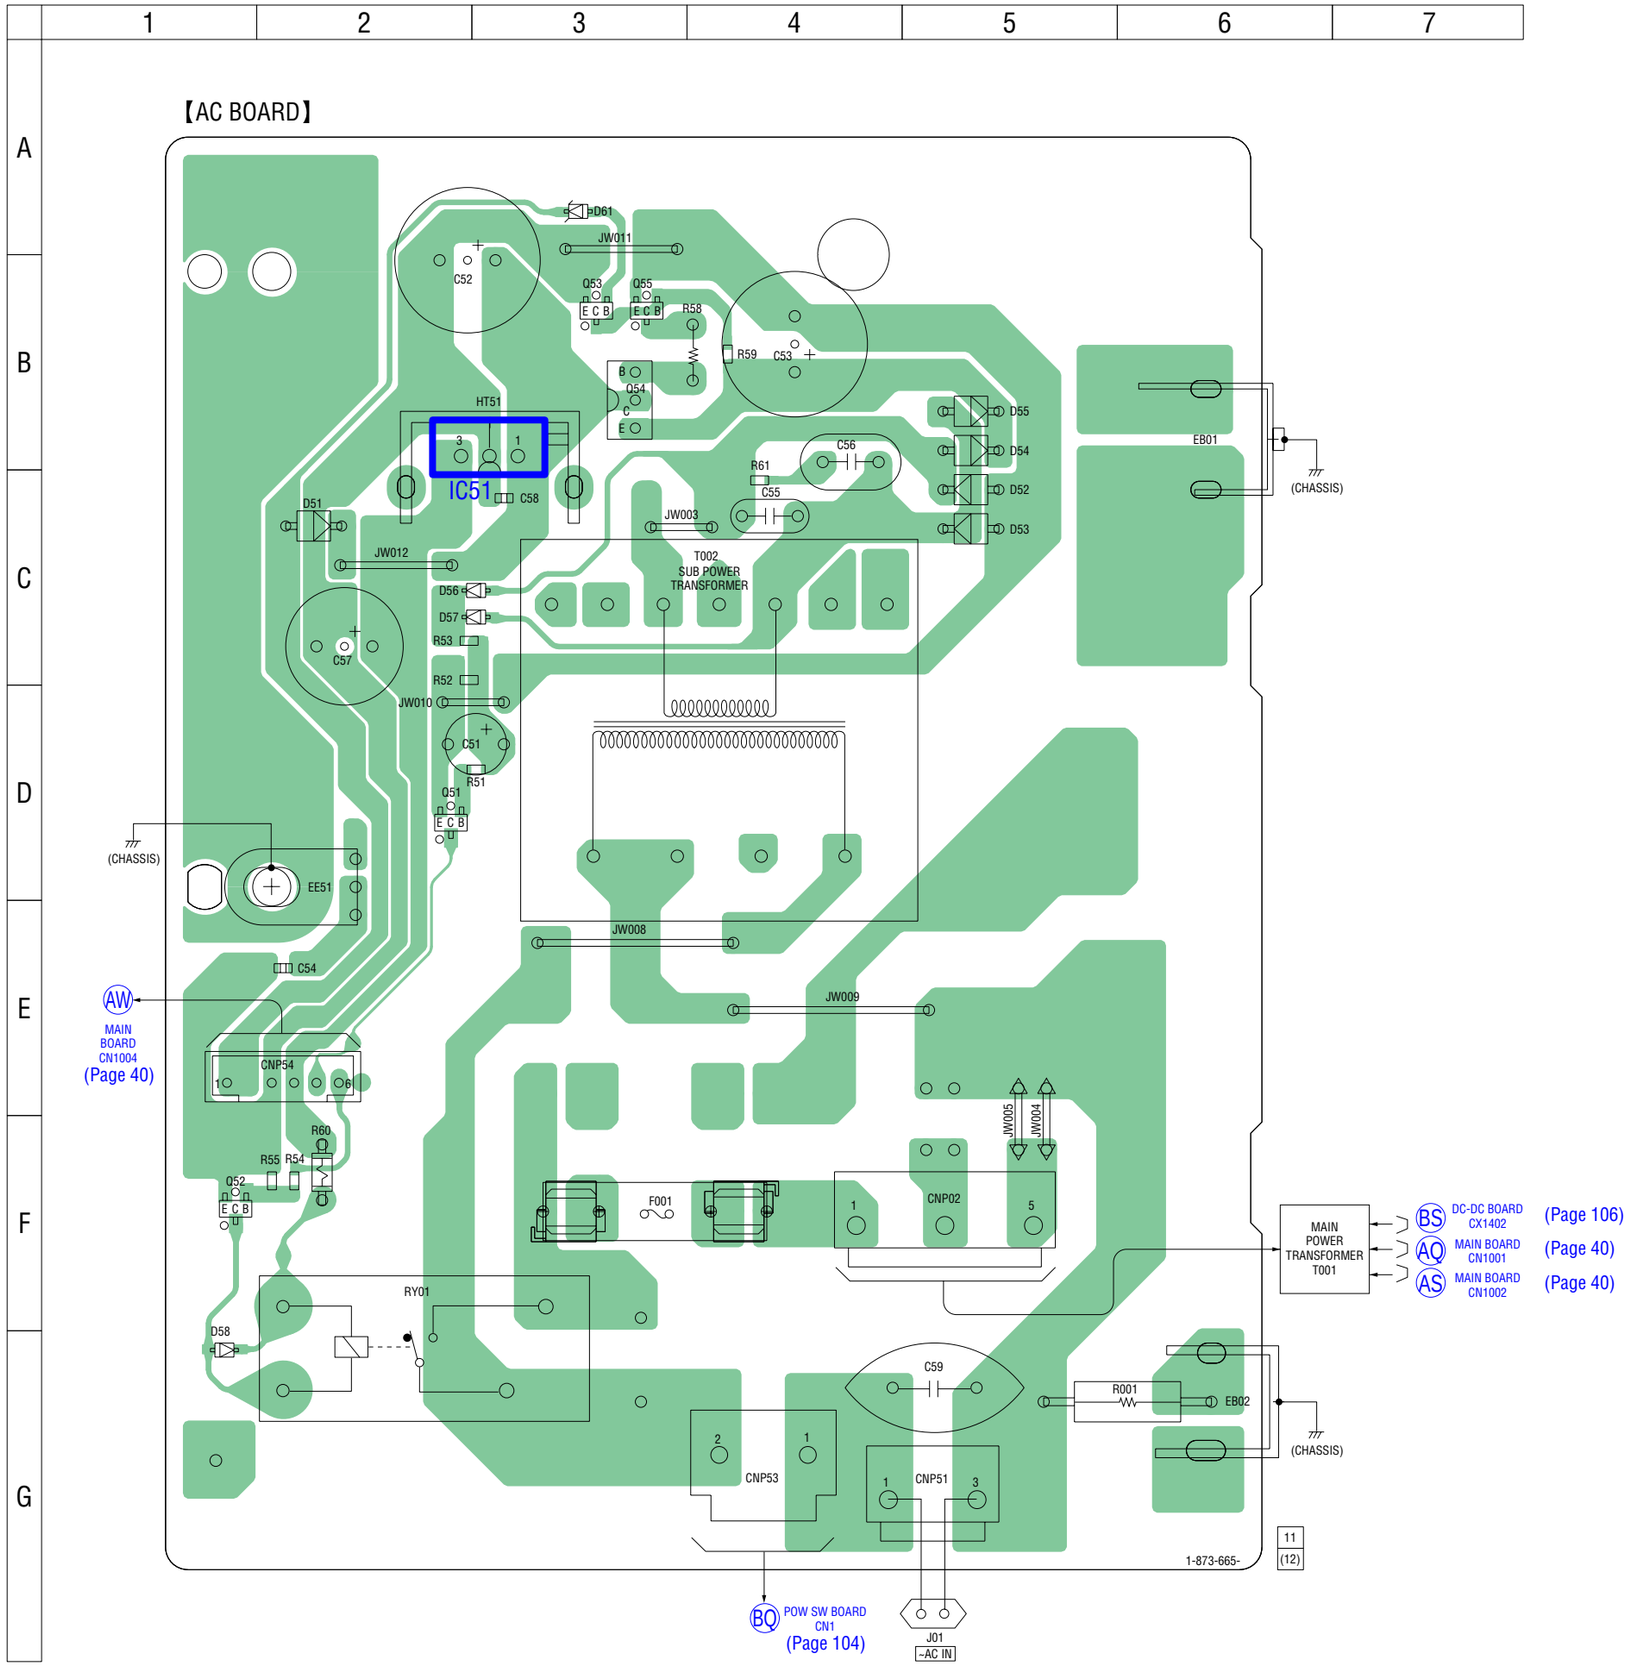

6-85. SCHEMATIC DIAGRAM – AC Board –

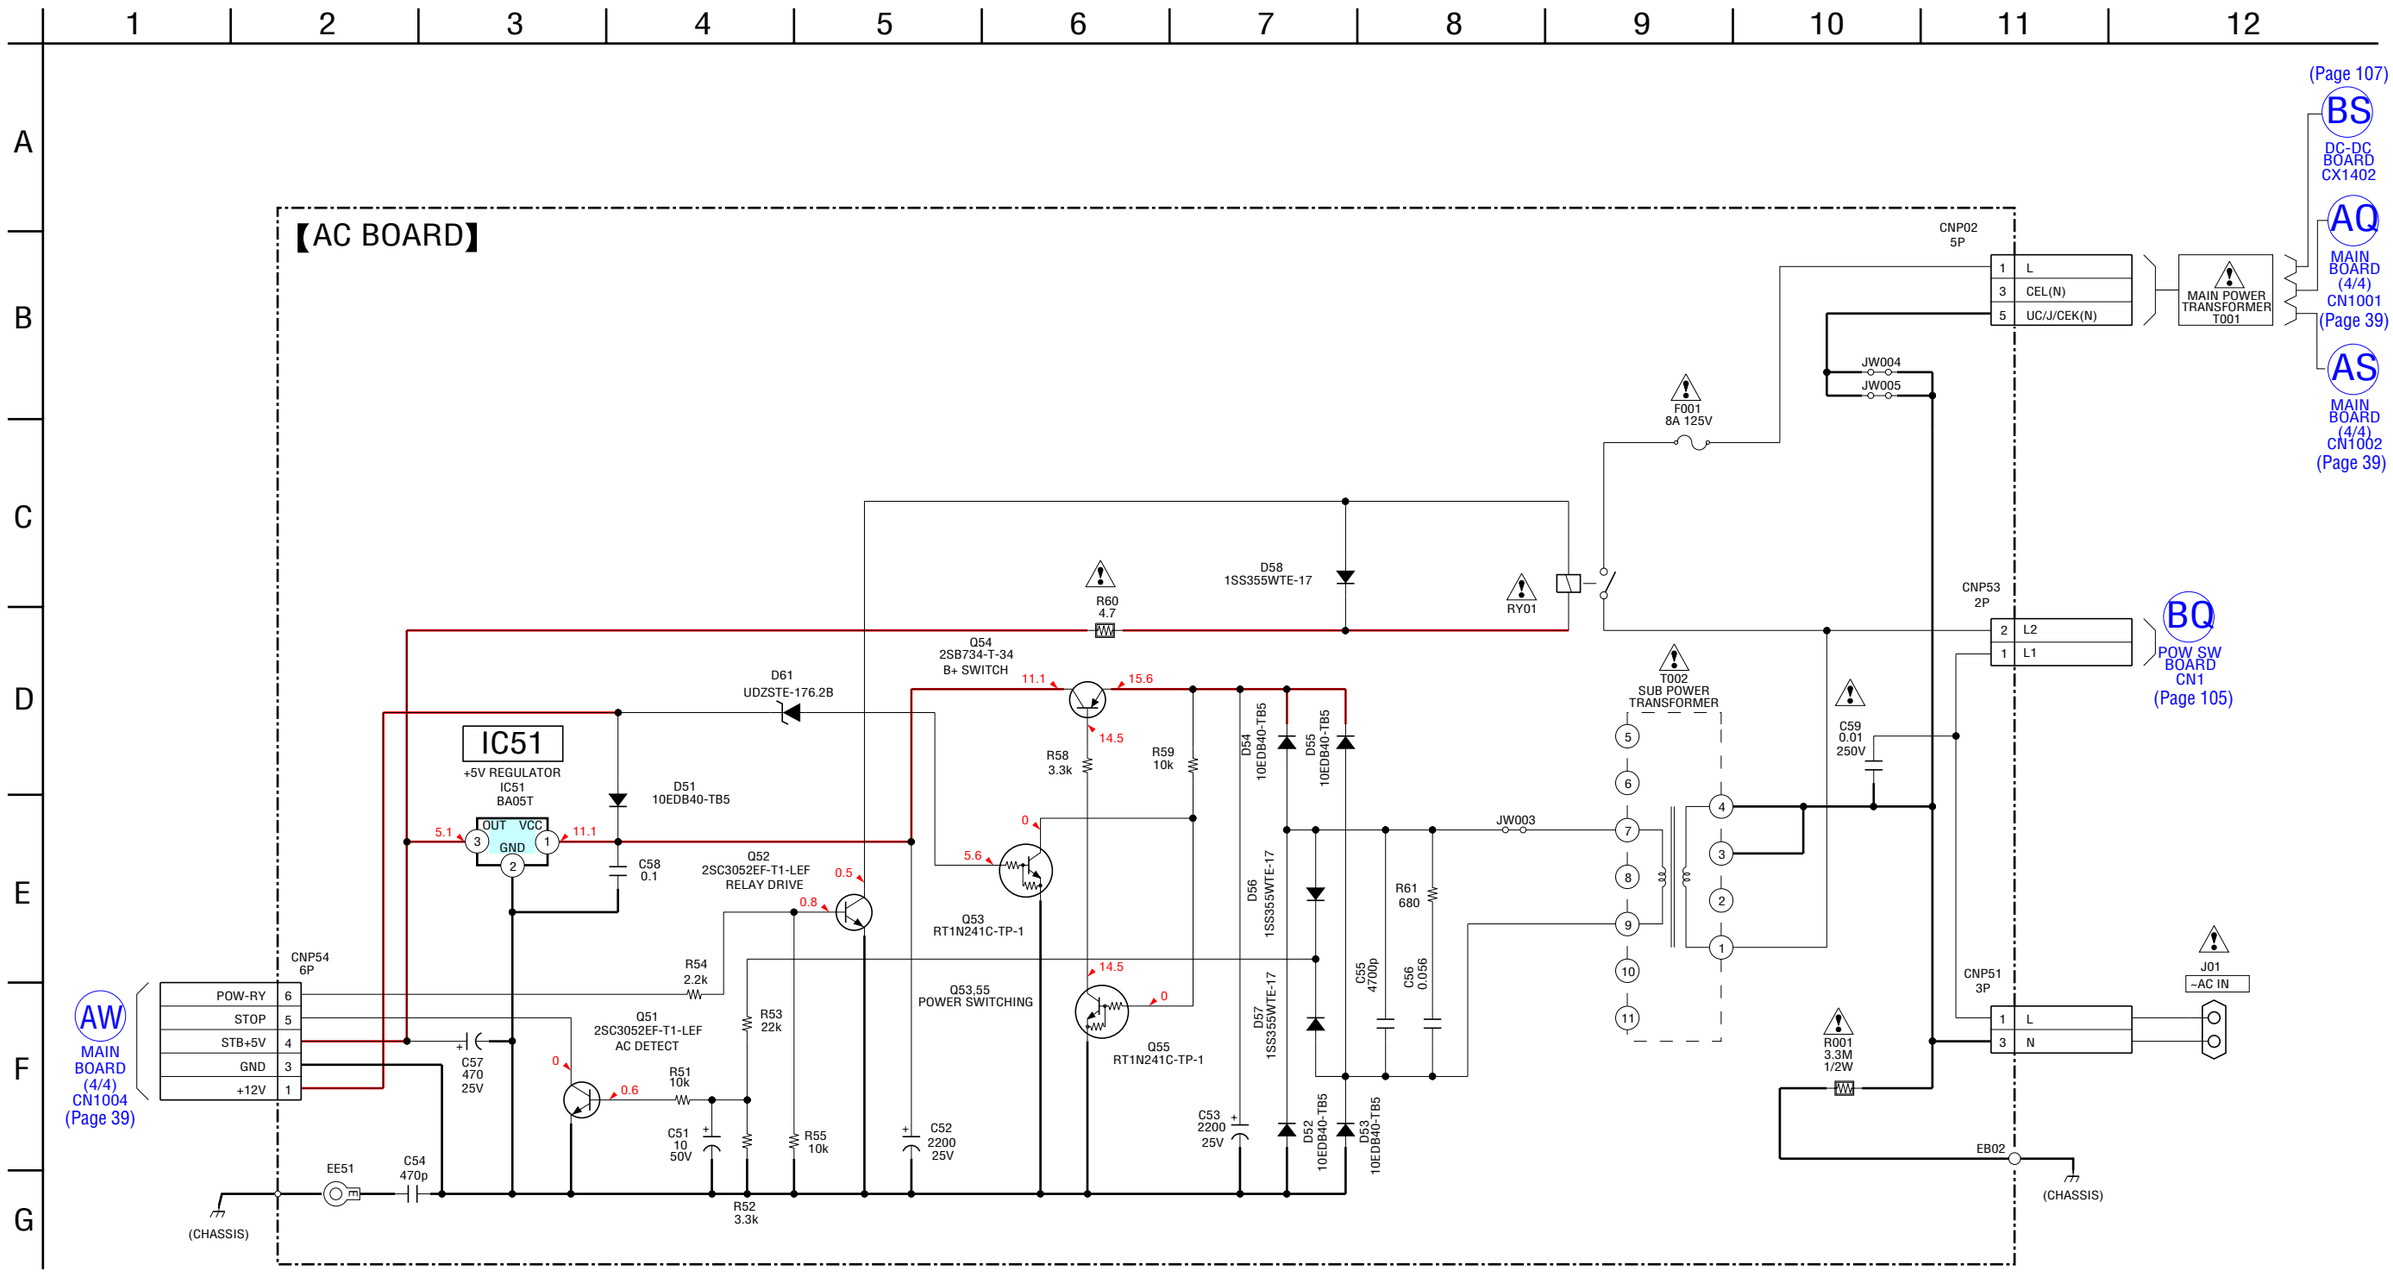

• Waveforms

– TUNER Board –

① IC8003 ㉖ (OSCOUT)

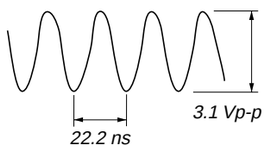

1 V/DIV, 10 ns/DIV

② IC8003 ㊴ (I2SSCLK)

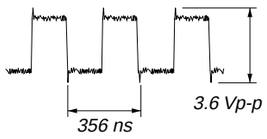

1 V/DIV, 100 ns/DIV

③ IC8003 ㊶ (I2SLRCK)

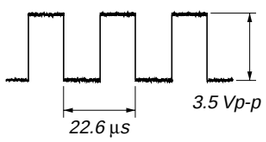

1 V/DIV, 10 µs/DIV

④ IC8003 ㊸ (I2SOCLK)

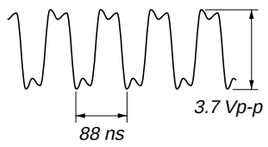

1 V/DIV, 50 ns/DIV

– DSP Board –

⑪ IC5002 Ⓐ2 (XTAL)

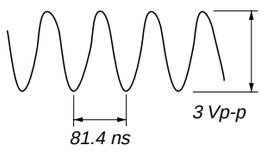

1 V/DIV, 50 ns/DIV

⑫ IC5202 Ⓐ2 (XTAL)

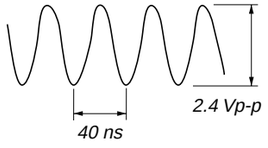

1 V/DIV, 20 ns/DIV

⑬ IC5208 ㊼ (XOUT)

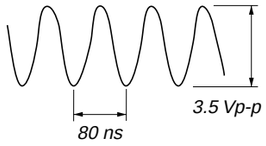

1 V/DIV, 50 ns/DIV

– D_VIDEO Board –

㉑ IC3511 ㊽ (XTALOUT)

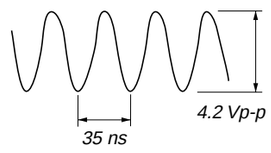

1 V/DIV, 20 ns/DIV

㉒ IC3604 ㊷ (XOUT)

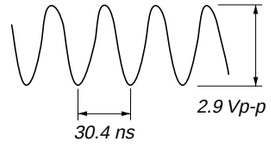

1 V/DIV, 20 ns/DIV

㉓ IC3850 ㊲ (CR/B) (Color bar)

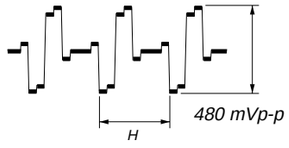

200 mV/DIV, 20 µs/DIV

㉔ IC3850 ㊳ (CB/R) (Color bar)

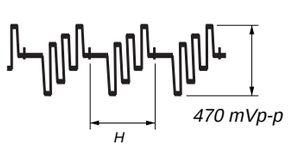

200 mV/DIV, 20 µs/DIV

㉕ IC3850 ㊴ (Y/G) (Color bar)

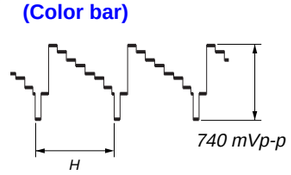

200 mV/DIV, 20 µs/DIV

㉖ IC3850 ㊹ (V) (Color bar)

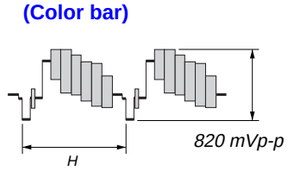

200 mV/DIV, 20 µs/DIV

• IC Block Diagrams

– MAIN Board –

IC1001 R2S15206FP

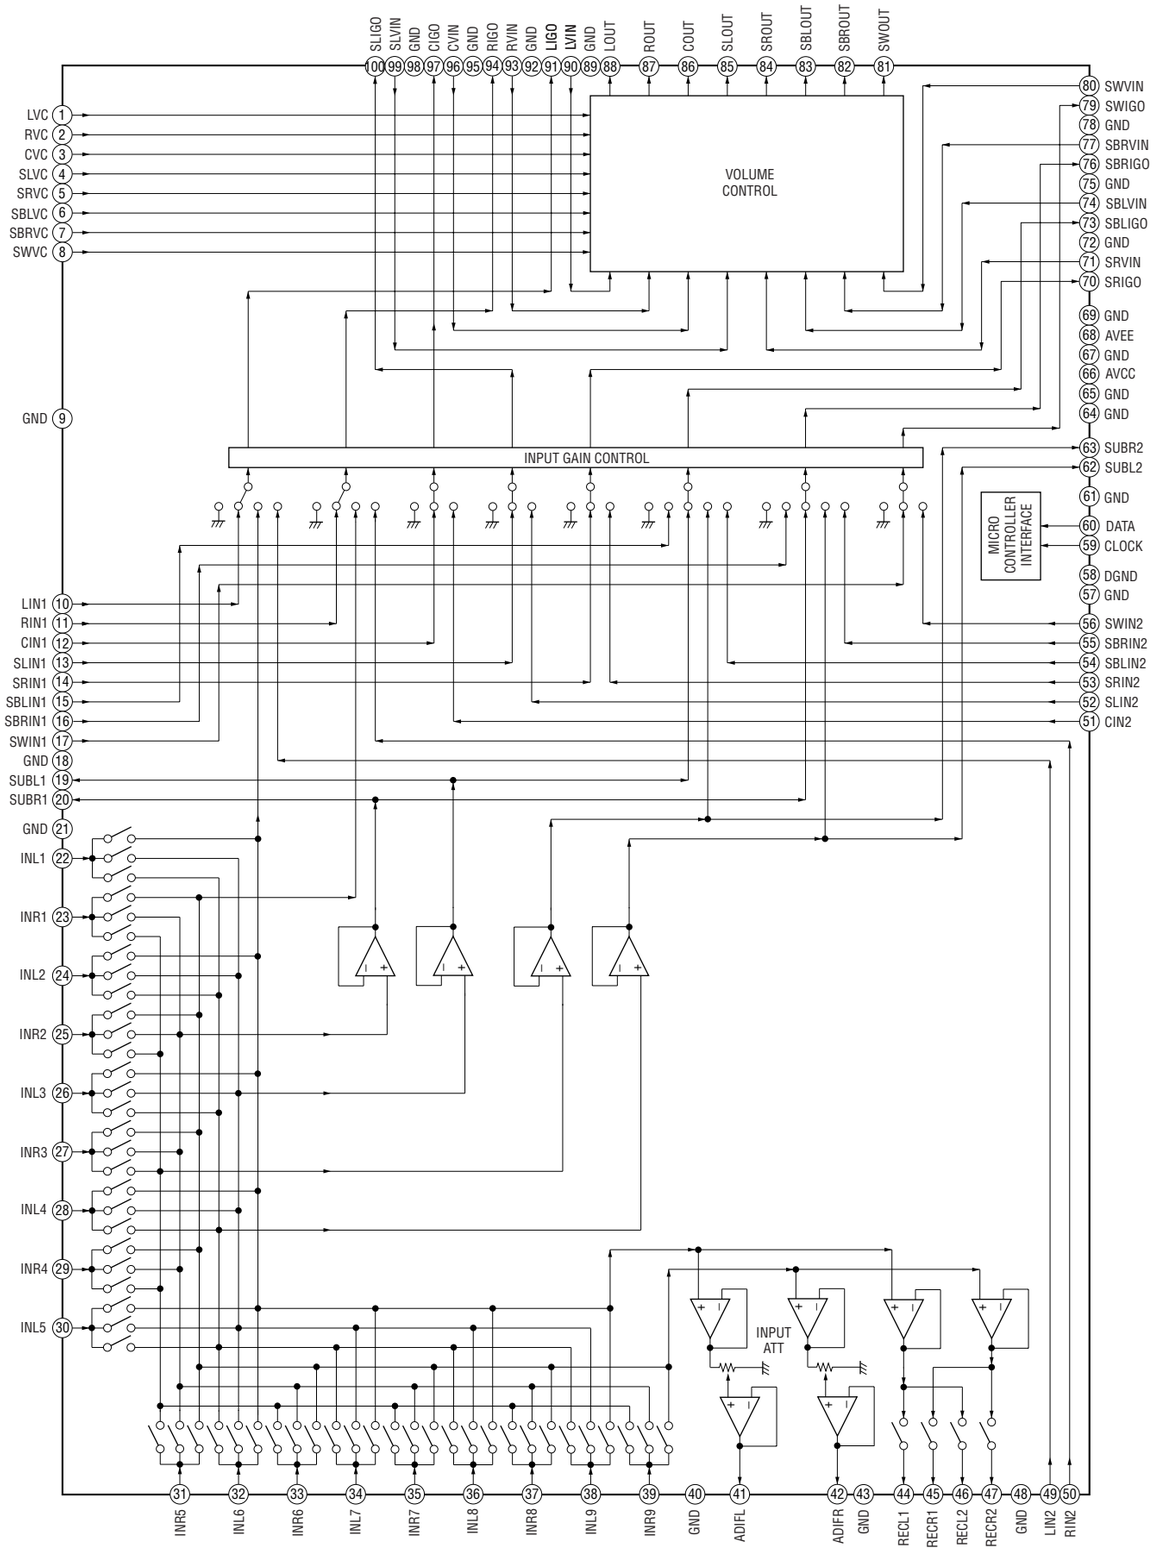

IC1002 NJU7311AM (TE2)

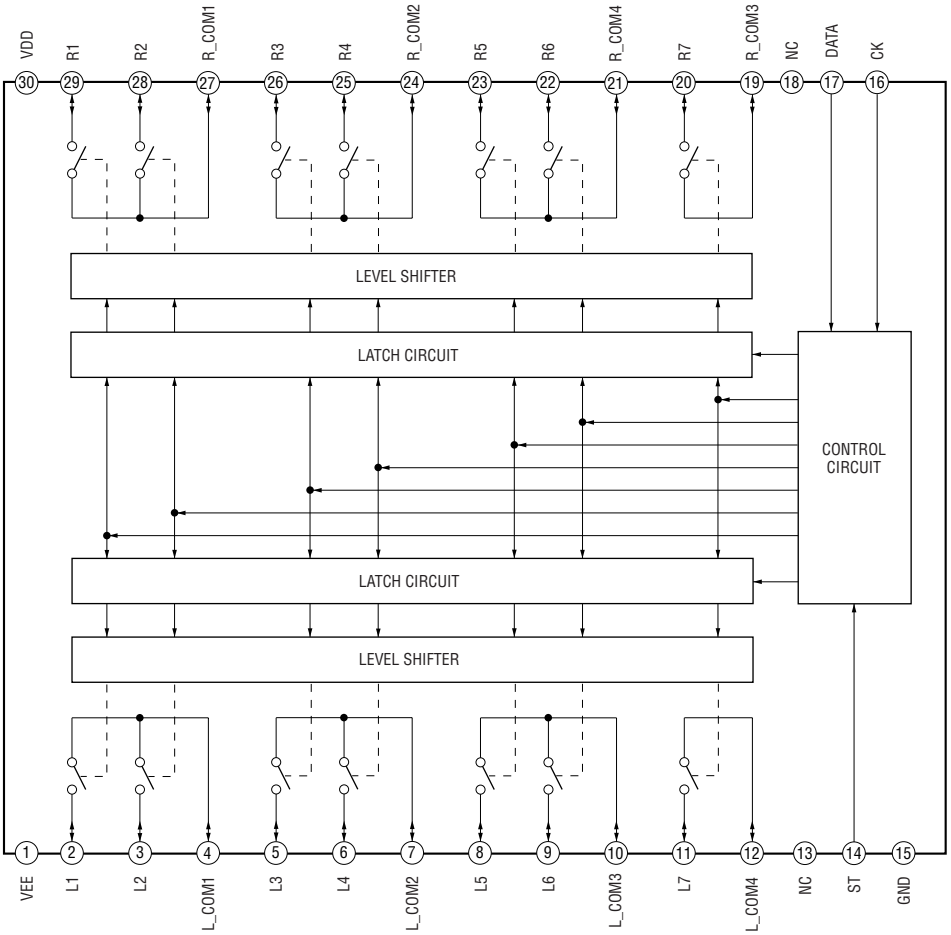

IC1003 MC14052 BDR2

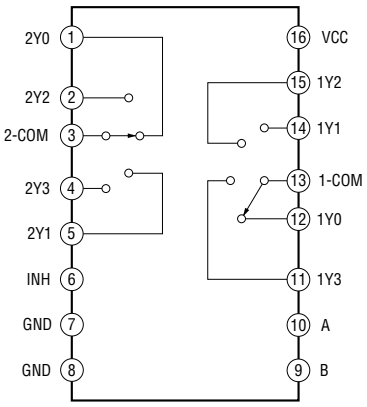

– D.AUDIO Board –

IC2207 TC74HC151AF (EL)

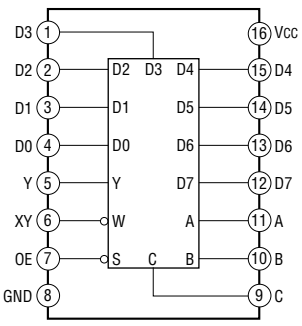

IC2208 LC89057W-VF4A-E

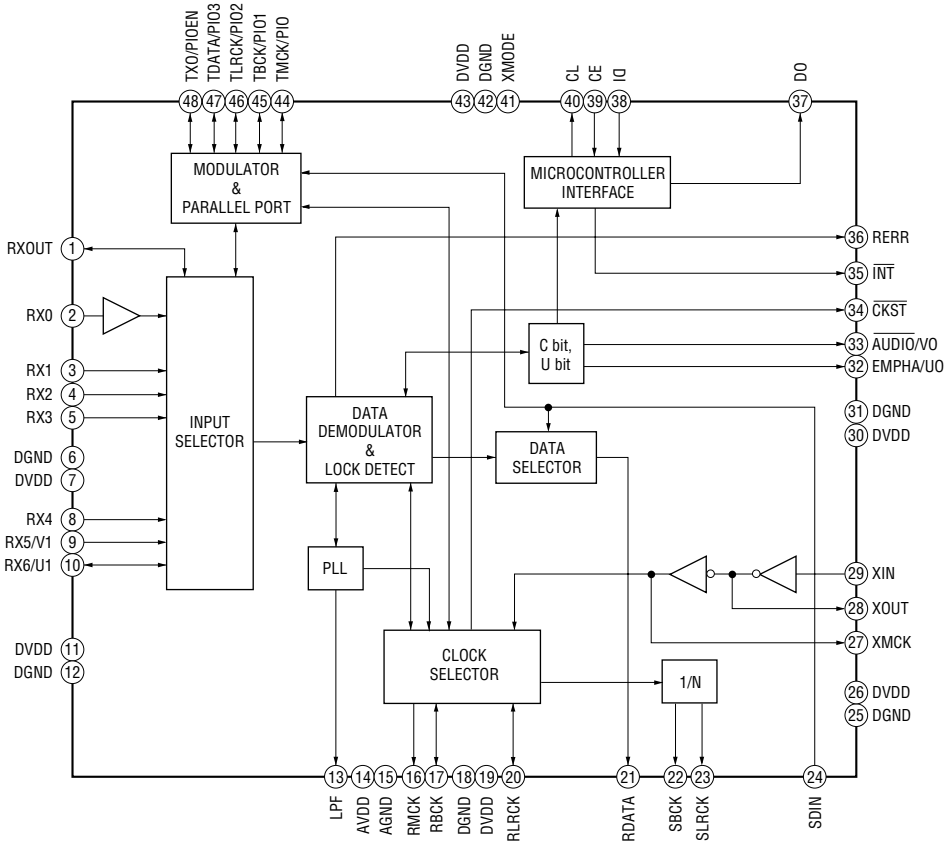

IC2210 SN74HC595ANS

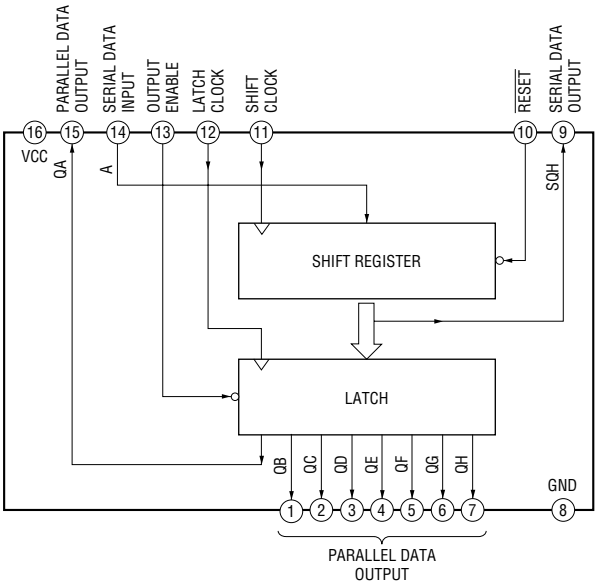

IC2211, 2216 TC74VHC393FT (EL)

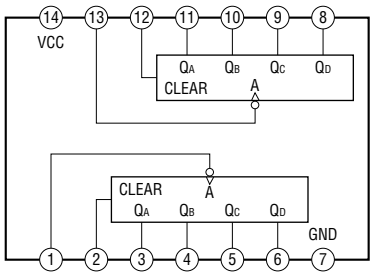

IC2212 – 2214, 2228, 2231 TC74VHC157FT (EKJ)

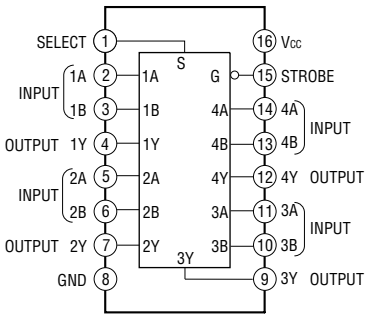

IC2217 CS5340-CZZR

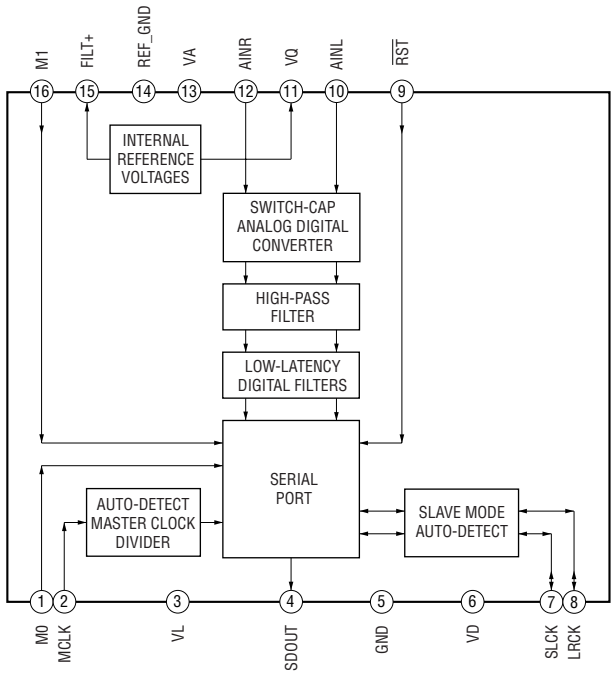

IC2218 PCM1609APT

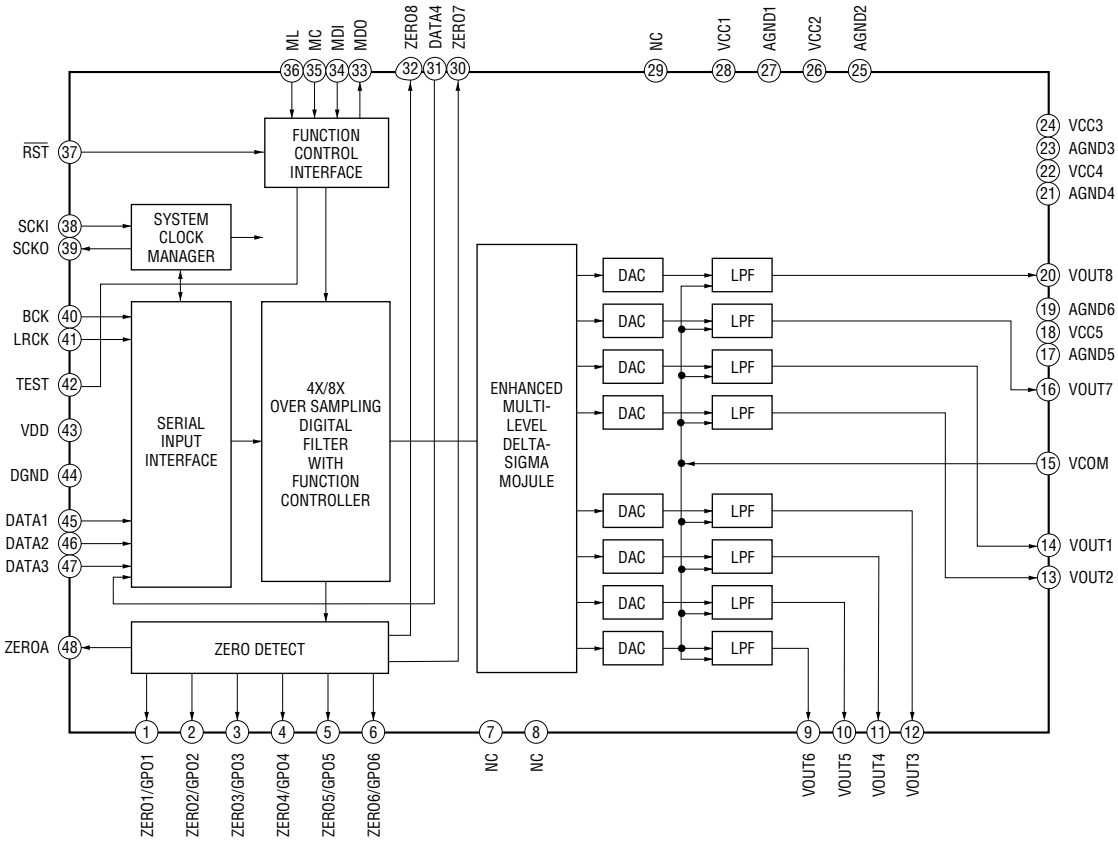

IC2223 SM5921AF-G

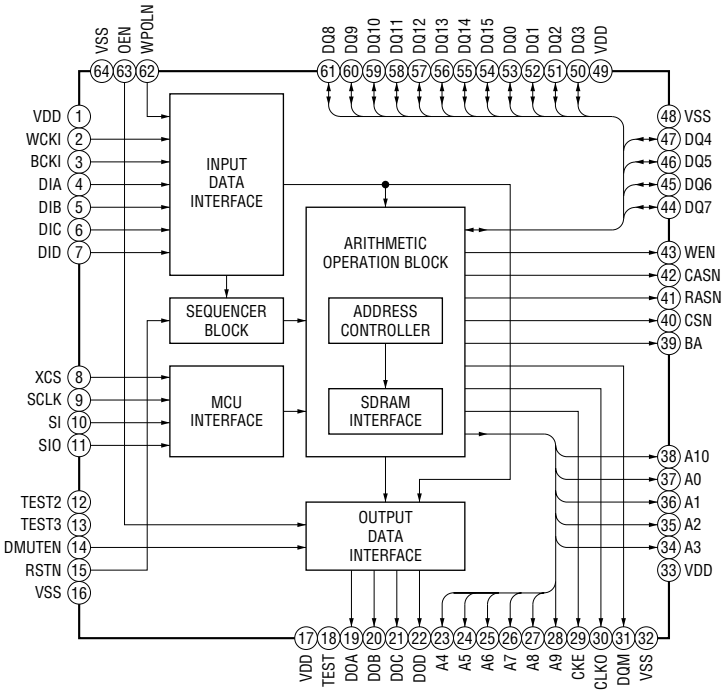

IC2227 TC7WH157FU (TE12R)

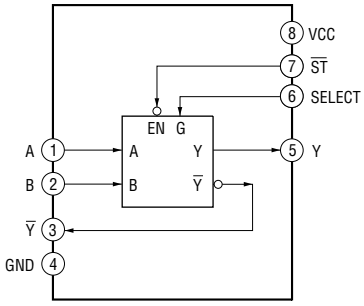

IC2230 TK11150CSCL-G

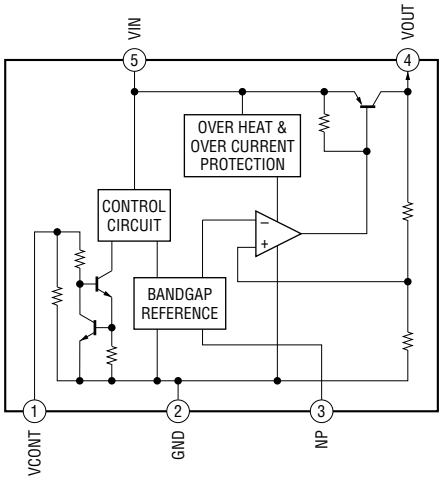

– TUNER Board –

IC8004 TK11133CSCL-G
IC8007 TK11150CSCL-G

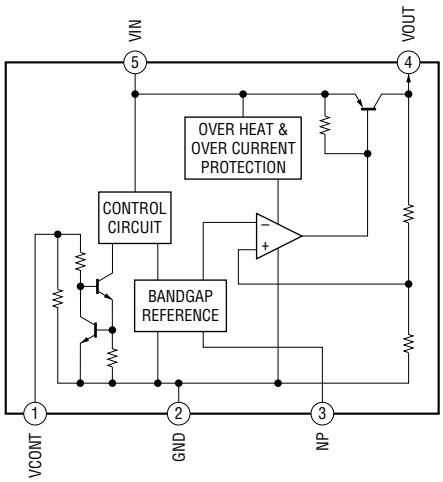

IC8005 PCM1753DBQR

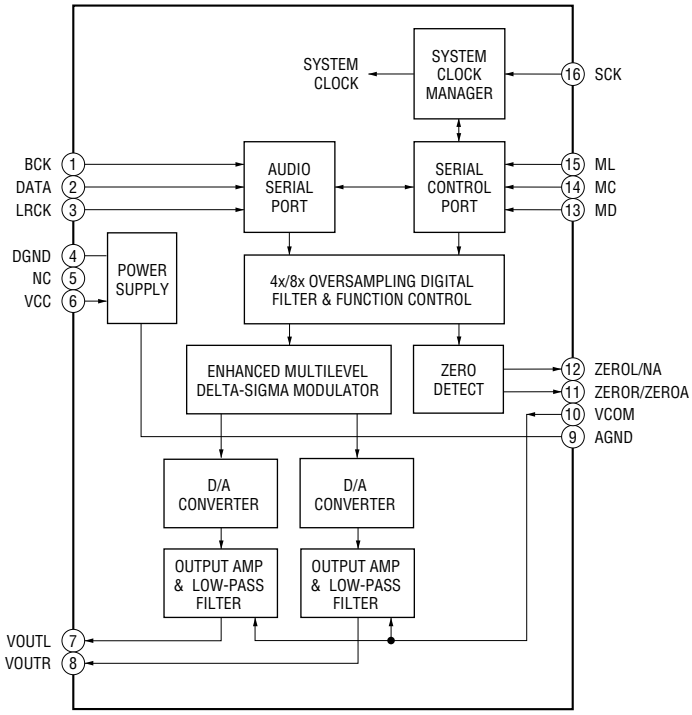

IC8006 BA00BC0WFP-E2

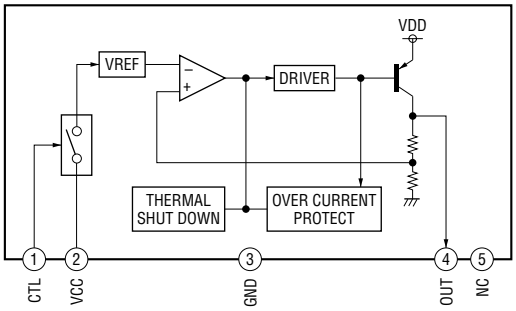

IC8009 NJU7313AM (TE2)

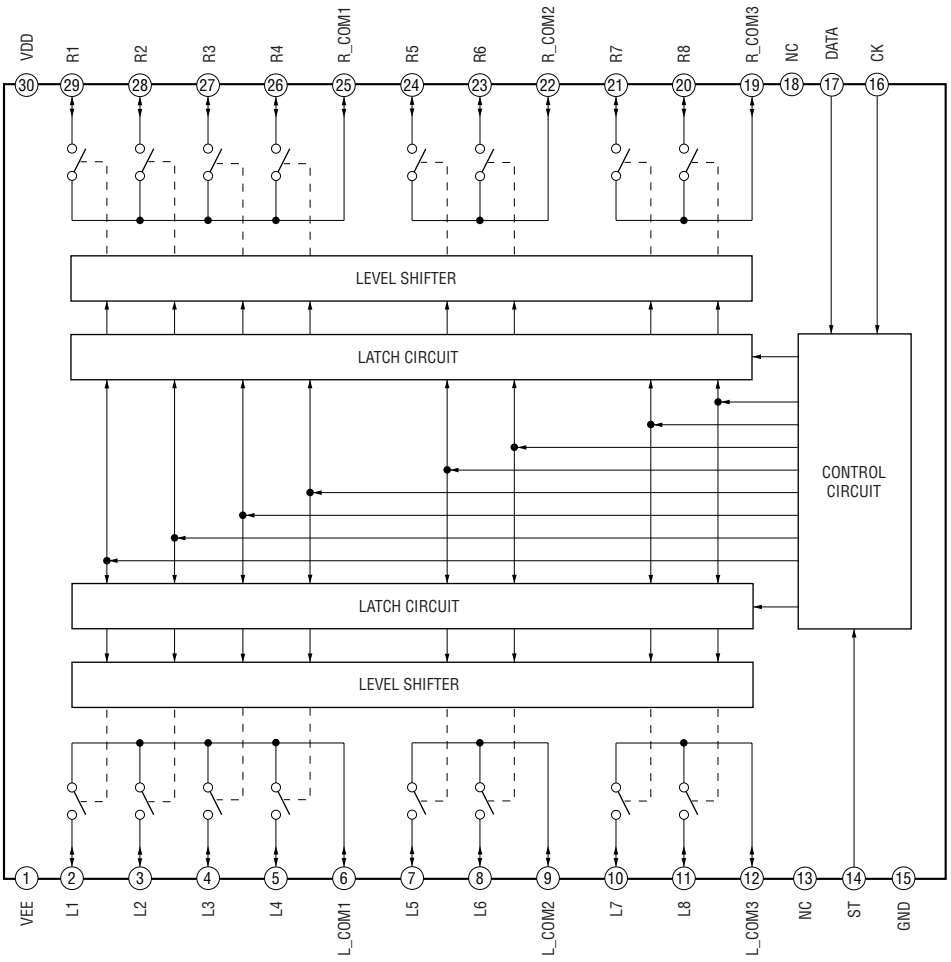

– DSP Board –

IC5001, 5201 SI-3010KM-TL

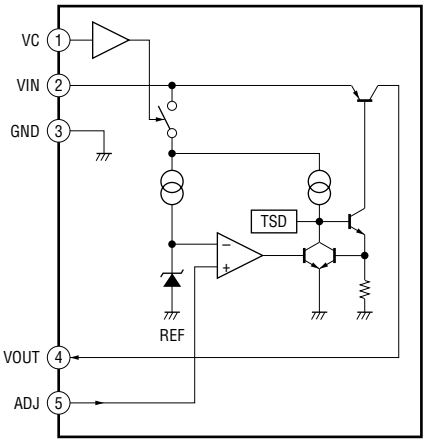

IC5009, 5010, 5209, 5210 SN74LVC573APWR

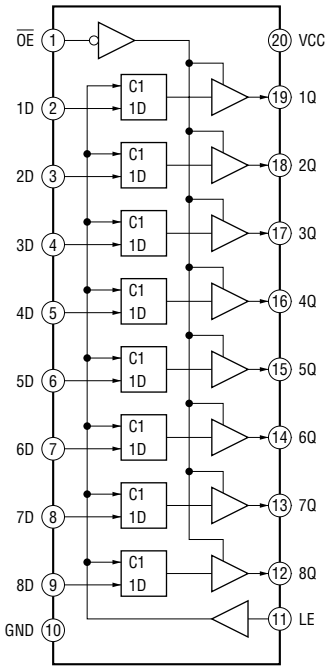

IC5013 TC74VHC157FT (EKJ)

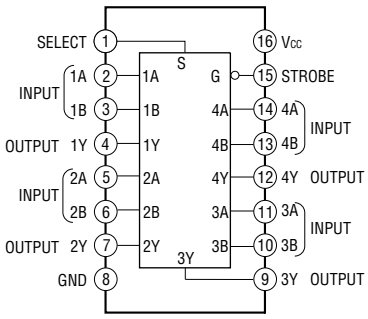

IC5212 TC7WH157FK (TE85R)

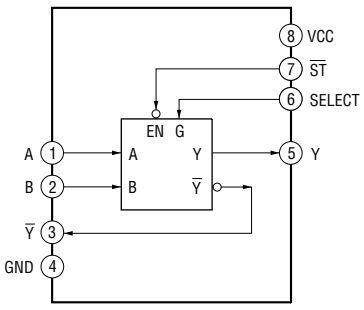

– D_VIDEO Board –

IC3508 SN74LV4052APWR

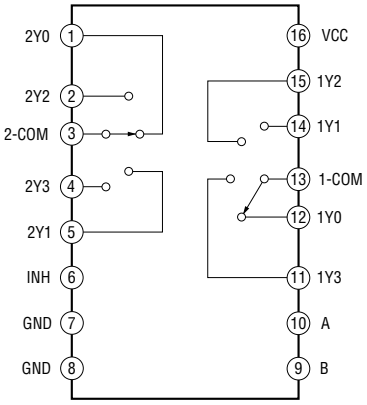

IC3514, 3517 TK73400AU3G0L-C

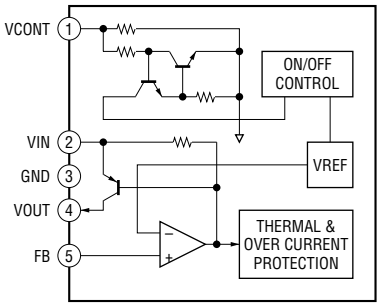

IC3516 TK11150CSCL-G
IC3608 TK11118CSCL-G
IC3852 TK11125CSCL-G

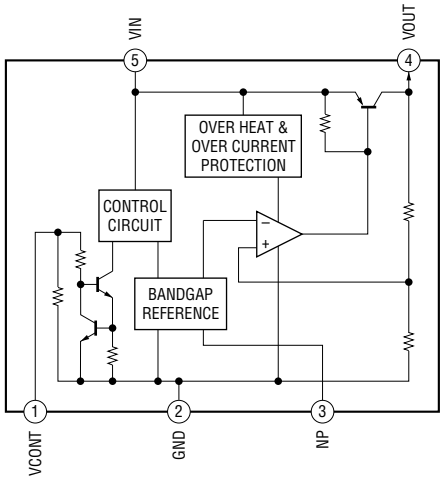

IC3619, 3620 TC74LCX245FK (EL)

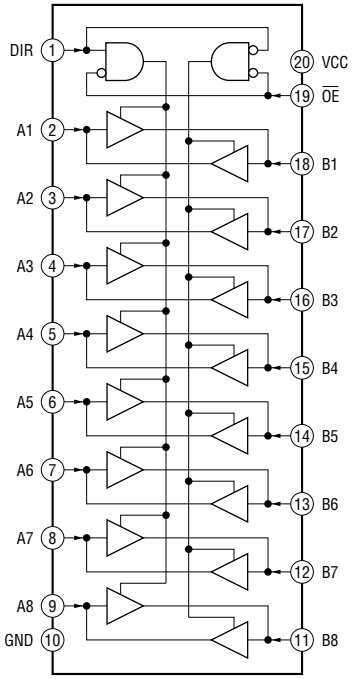

IC3617 SI-3011ZFE

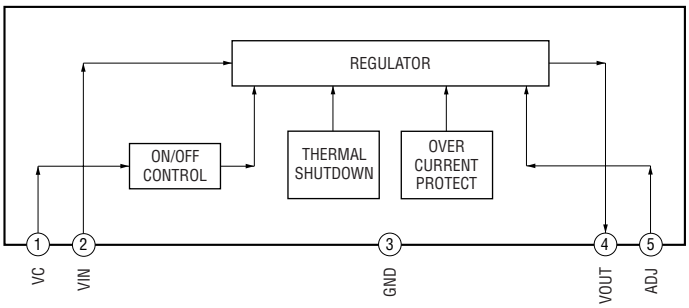

IC3850 ADV7322KSTZ

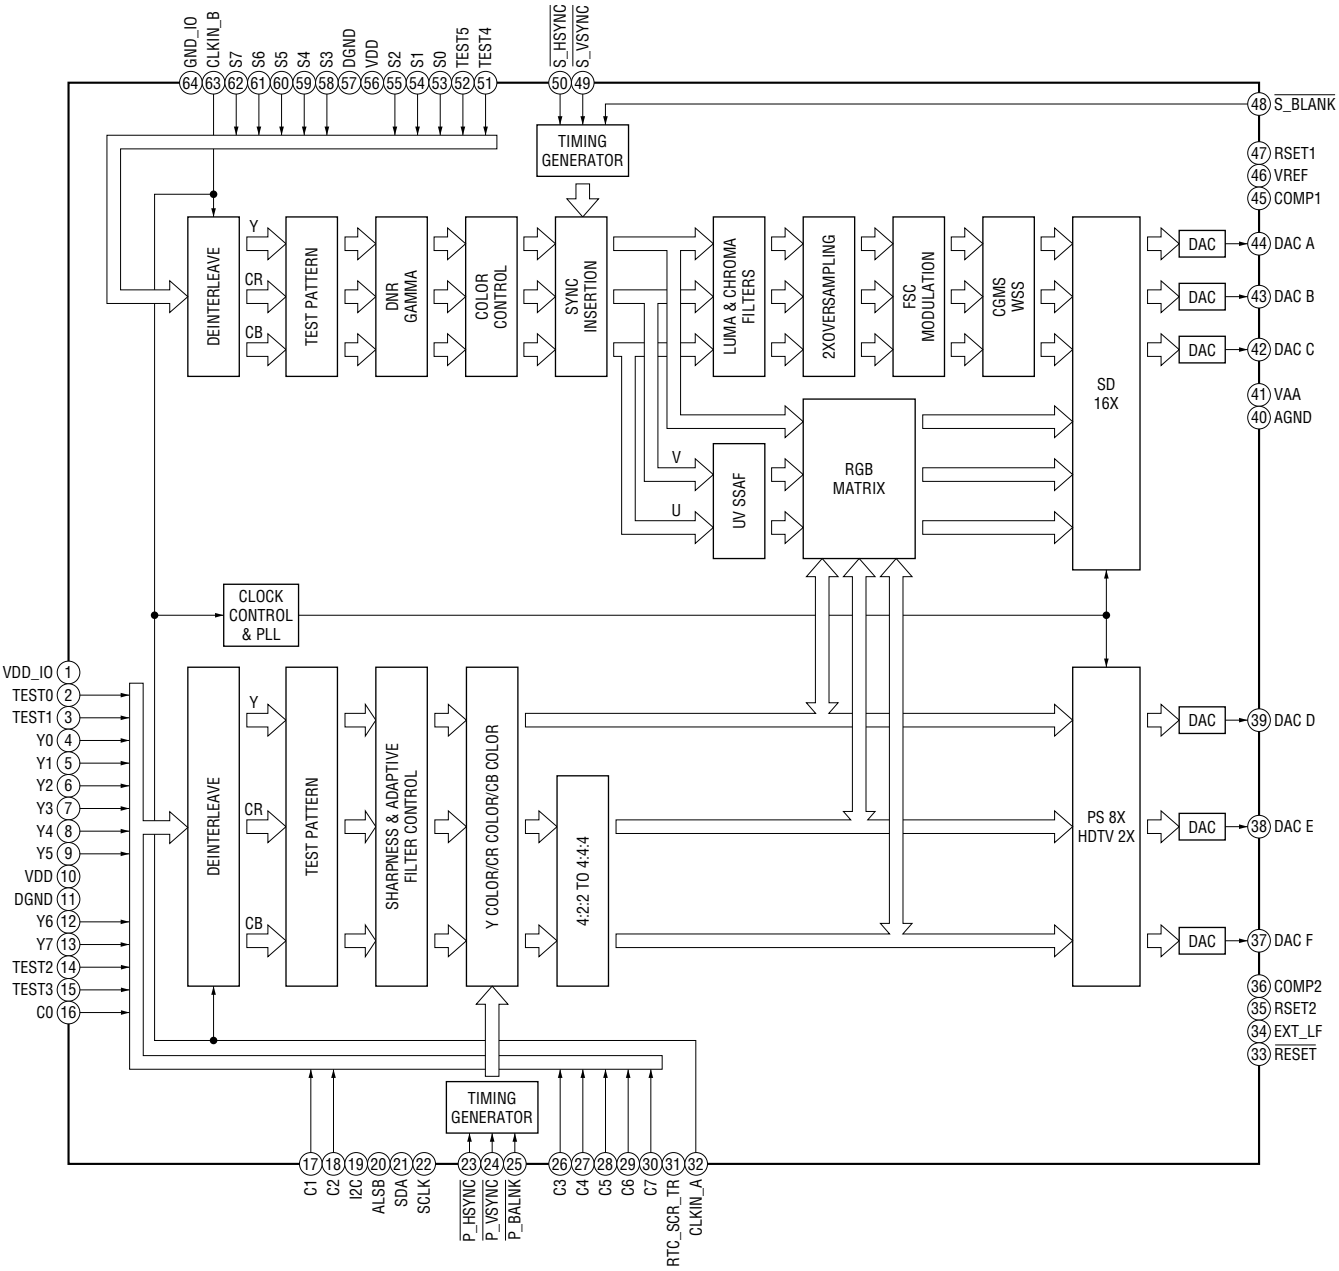

IC3851 TK11225CMCL-G

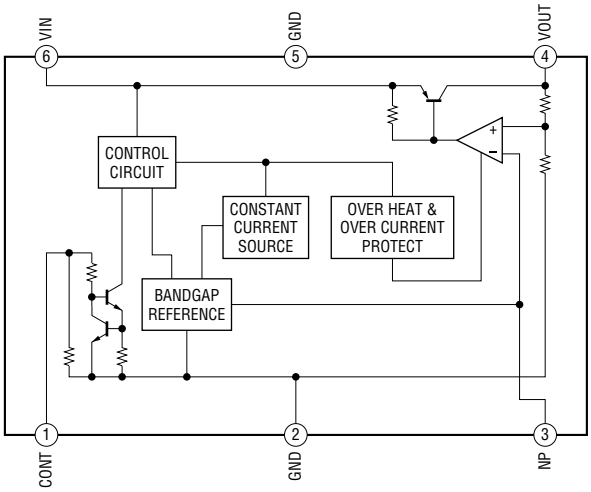

IC3853 SI-3010KM-TL

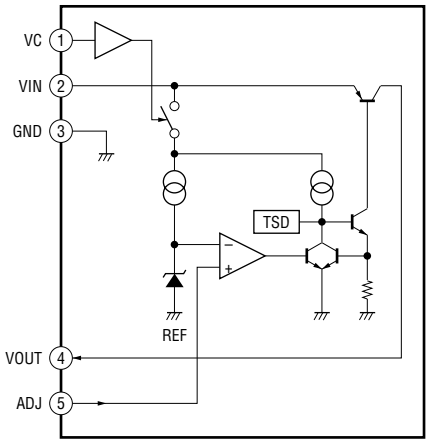

IC3854 CY2302-SXC-1T

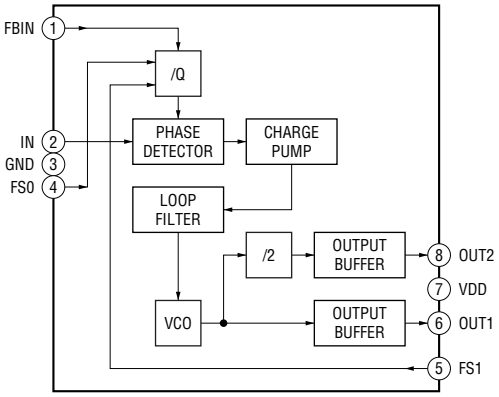

IC3855 TC74VHC541FT(EL)

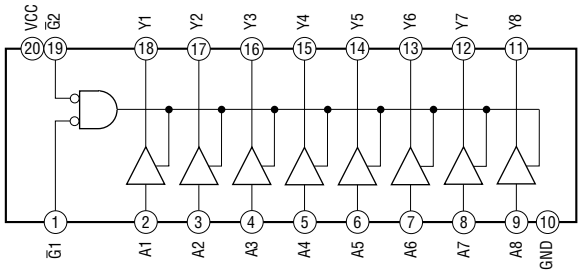

– A_VIDEO Board –

IC6001, 6104 NJM2586AM

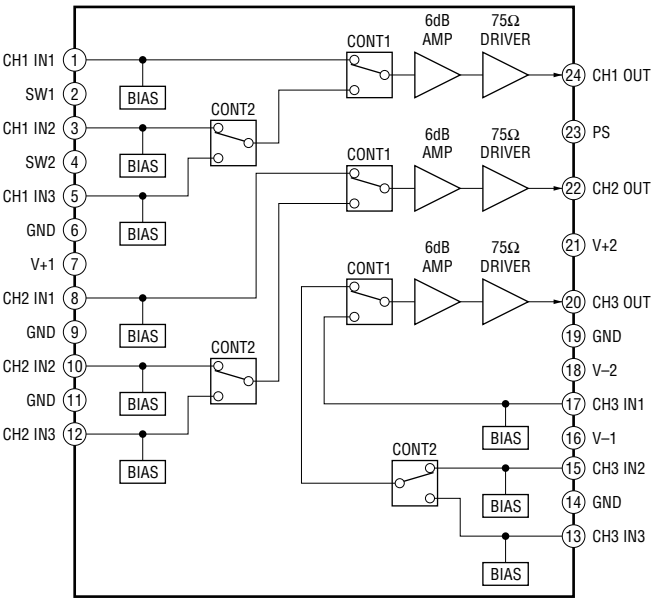

IC6103 LA73053-TLM-E

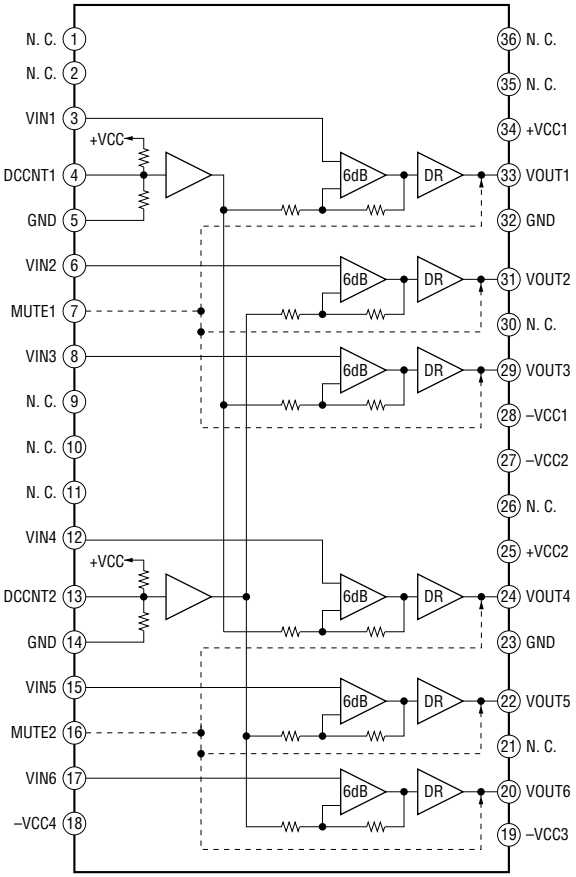

IC6101, 6102 LA7213

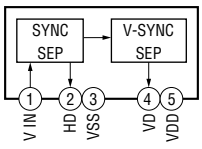

IC6204, 6504, 6505 NJM2533M (TE2)

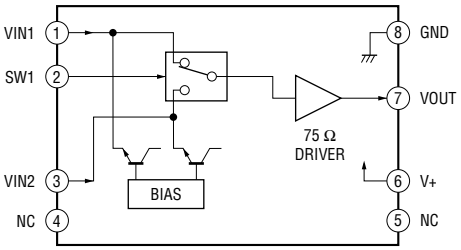

IC6301, 6302 NJM2595M-TE2

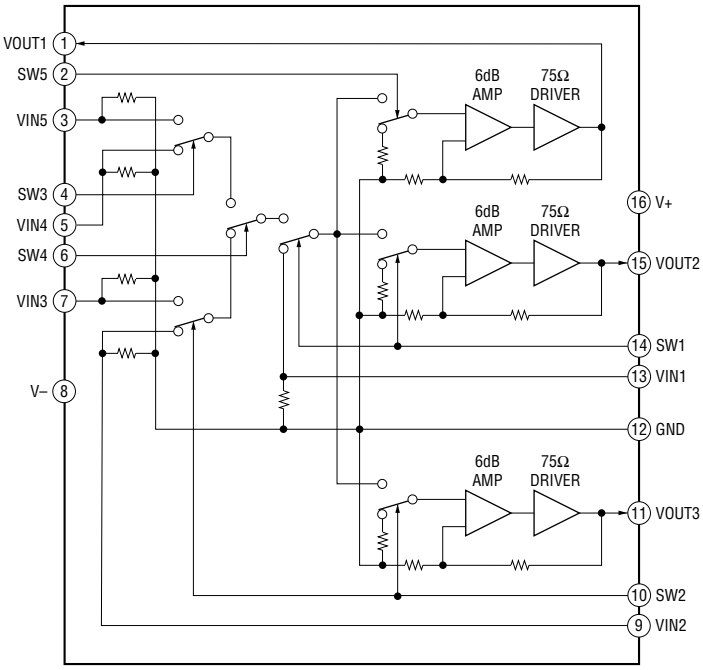

IC6502, 6503 SN74HC595ANS

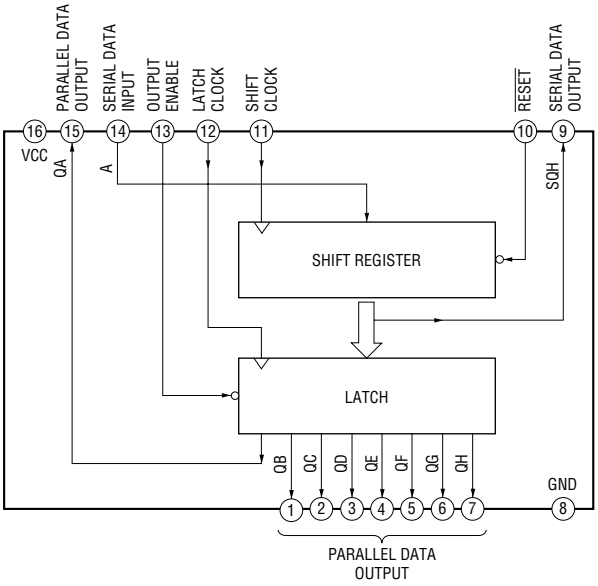

– CONTROL Board –

IC2006, 2009 TC7W14FU (TE12R)

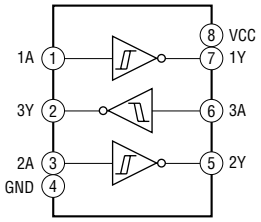

IC2010 TC74VHC153FT (EL)

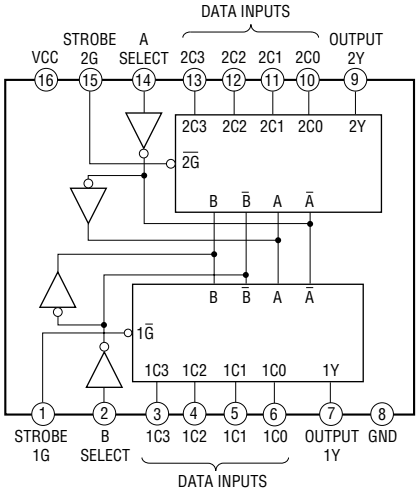

– CIS Board –

IC802 TC7W53F (TE12R)

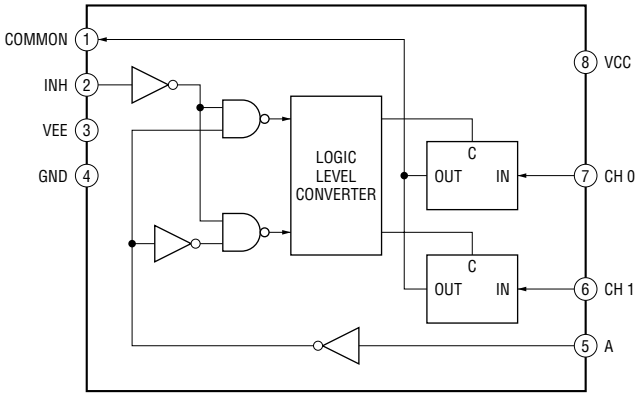

IC861 NJM2145M-TE2

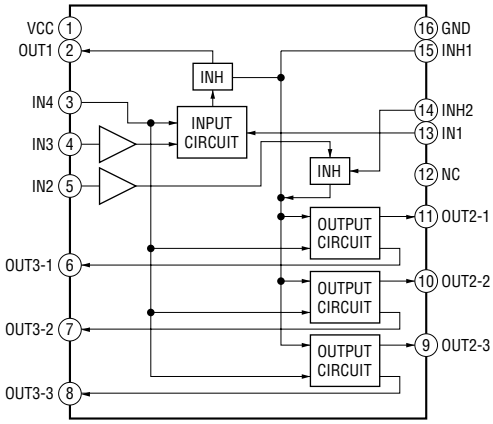

IC881 MAX232N

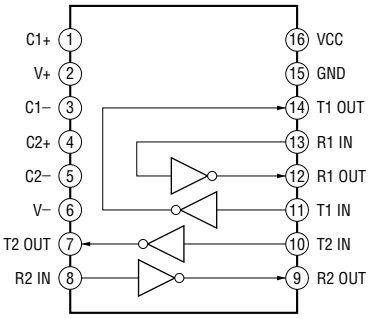

– DISPLAY Board –

IC703 NJM2173AV (TE2)

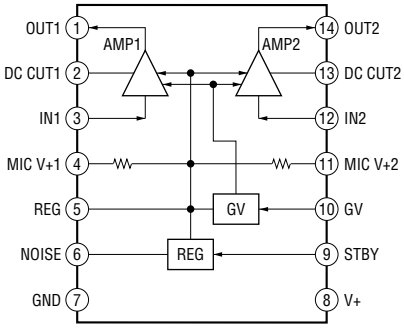

– DC-DC Board –

IC1402, 1403 SI-8008HFE

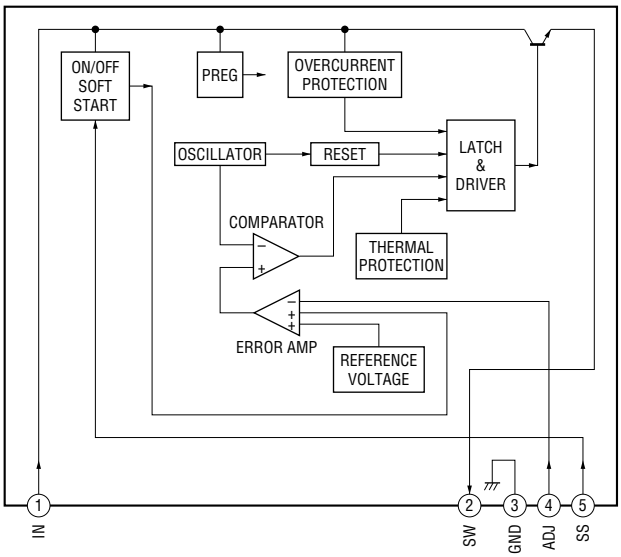

IC1404 SI-8050S-LF1101

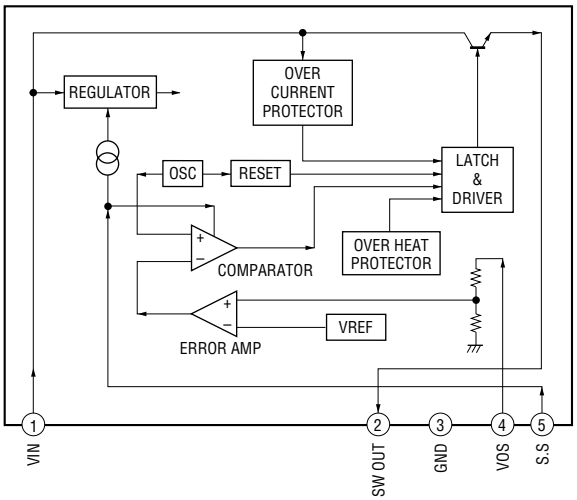

IC1405 SI-8120JF

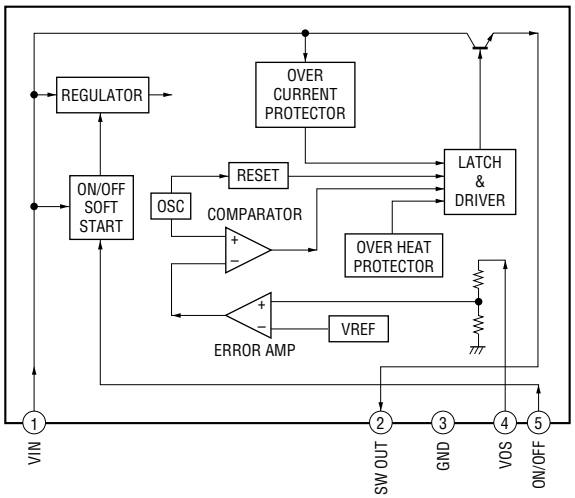

- **IC Pin Function Description**

TUNER BOARD IC8003 F2602E-01-TR (XM RECEIVER)

Pin No.	Pin Name	I/O	Description
1	LSOPTXRX	-	Not used
2	VSS	-	Ground terminal
3	SCTXOUT	O	Serial data output to the system controller
4	VDD	-	Power supply terminal (+3.3V)
5	SCRXIN	I	Serial data input from the system controller
6	VSS	-	Ground terminal
7	COMMSEL	I	Command mode selection signal input terminal Not used
8	VDD	-	Power supply terminal (+3.3V)
9	$\overline{\text{IRQ}}$	O	Interrupt request signal output terminal Not used
10	VSS	-	Ground terminal
11	$\overline{\text{RESET}}$	I	Reset signal input from the system controller "L": reset
12	SLAVESL	I	Master/slave mode setting terminal "L": master mode, "H": slave mode Fixed at "L" in this set
13	COMRXDIG	-	Not used
14	COMTXDIG	-	Not used
15	COMTXEN	-	Not used
16	VSS	-	Ground terminal
17	VDD	-	Power supply terminal (+3.3V)
18	COMRXP	I	XM receiver differential signal (positive) input terminal
19	COMRXM	I	XM receiver differential signal (negative) input terminal
20	VDD	-	Power supply terminal (+3.3V)
21	VSS	-	Ground terminal
22	COMTXM	O	XM transmitter differential signal (negative) output terminal
23	COMTXP	O	XM transmitter differential signal (positive) output terminal
24, 25	VSS	-	Ground terminal
26	OSCOUT	O	System clock output terminal (45.1584 MHz)
27	VDD	-	Power supply terminal (+3.3V)
28	OSCIN	I	System clock input terminal (45.1584 MHz)
29	VSS	-	Ground terminal
30	TEST	-	Not used
31	VSS	-	Ground terminal
32	HSDPDATA	-	Not used
33	VDD	-	Power supply terminal (+3.3V)
34	HSDPCLK	-	Not used
35	VSS	-	Ground terminal
36	HSDPEN	-	Not used
37	I2SDATA	O	I2S digital audio data output to the D/A converter and DSP1 and DSP2
38	VSS	-	Ground terminal
39	I2SSCLK	O	I2S bit clock signal output to the D/A converter and DSP1 and DSP2
40	VDD	-	Power supply terminal (+3.3V)
41	I2SLRCLK	O	I2S L/R sampling clock signal output to the D/A converter and DSP1 and DSP2
42	VSS	-	Ground terminal
43	I2SOCLK	O	I2S over sample clock signal output to the D/A converter and DSP1 and DSP2
44	VSS	-	Ground terminal
45	SAIICLK	-	Not used
46	VDD	-	Power supply terminal (+3.3V)

Pin No.	Pin Name	I/O	Description
47	SAIIDATA	-	Not used
48	SAIIEN	-	Not used

DSP BOARD IC5002 ADSST-AVR-1132 (DSP1)

Pin No.	Pin Name	I/O	Description
A1	CLKCFG0	I	Clock frequency setting terminal
A2	XTAL	O	System clock output terminal (12.288 MHz)
A3	TMS	-	Not used
A4	TCK	-	Not used
A5	TDI	-	Not used
A6	CLKOUT	-	Not used
A7	TDO	-	Not used
A8	$\overline{\text{EMU}}$	-	Not used
A9	MOSI	I	Serial data input from the DSP controller
A10	MISO	O	Serial data output to the DSP controller
A11	$\overline{\text{SPIDS}}$	I	Serial data latch pulse signal input from the DSP controller
A12	VDDINT	-	Power supply terminal (+1.2V)
A13, A14	GND	-	Ground terminal
B1	CLKCFG1	I	Clock frequency setting terminal
B2	GND	-	Ground terminal
B3	VDDEXT	-	Power supply terminal (+3.3V)
B4	CLKIN	I	System clock input terminal (12.288 MHz)
B5	$\overline{\text{TRST}}$	-	Not used
B6	AVSS	-	Ground terminal
B7	AVDD	-	Power supply terminal (+1.2V)
B8	VDDEXT	-	Power supply terminal (+3.3V)
B9	SPICLK	I	Serial data transfer clock signal input from the DSP controller
B10	$\overline{\text{RESET}}$	I	Reset signal input from the DSP controller "L": reset
B11	VDDINT	-	Power supply terminal (+1.2V)
B12 to B14	GND	-	Ground terminal
C1, C2	BOOTCFG1, BOOTCFG0	I	Boot mode setting signal input from the DSP controller
C3, C12, C13	GND	-	Ground terminal
C14, D1	VDDINT	-	Power supply terminal (+1.2V)
D2, D4 to D6, D9 to D11, D13	GND	-	Ground terminal
D14, E1	VDDINT	-	Power supply terminal (+1.2V)
E2, E4 to E6, E9 to E11, E13	GND	-	Ground terminal
E14	P_ERROR	O	PLL lock error signal and data error flag output to the DSP2 and DSP controller
F1	FLAG1	I	Audio muting control signal input from the digital audio interface receiver, video system controller or HDMI receiver
F2	FLAG0	O	Interrupt request signal output to the DSP controller
F4 to F6, F9 to F11	GND	-	Ground terminal
F13	NONAUDIO	I	PCM audio data input from the digital audio interface receiver or video system controller
F14	DPFSCK	I	Master clock signal input from the digital audio interface receiver, HDMI receiver or XM receiver
G1	AD7	I/O	Two-way data bus with S-RAM and flash memory and address signal output to the address latch

Pin No.	Pin Name	I/O	Description
G2	VDDINT	-	Power supply terminal (+1.2V)
G13	VDDEXT	-	Power supply terminal (+3.3V)
G14	DPBCK	I	Bit clock signal input for PCM audio input from the digital audio interface receiver, HDMI receiver or XM receiver
H1	AD6	I/O	Two-way data bus with S-RAM and flash memory and address signal output to the address latch
H2	VDDEXT	-	Power supply terminal (+3.3V)
H13	DPLRCK	I	L/R sampling clock signal input for PCM audio input from the digital audio interface receiver, HDMI receiver or XM receiver
H14	DPDVBCK	O	Bit clock signal output for PCM audio output to the DSP2
J1, J2	AD5, AD4	I/O	Two-way data bus with S-RAM and flash memory and address signal output to the address latch
J4 to J6, J9 to J11	GND	-	Ground terminal
J13	VDDINT	-	Power supply terminal (+1.2V)
J14	DPDVLRCK	O	L/R sampling clock signal output for PCM audio output to the DSP2
K1	AD3	I/O	Two-way data bus with S-RAM and flash memory and address signal output to the address latch
K2	VDDINT	-	Power supply terminal (+1.2V)
K4 to K6, K9 to K11, K13	GND	-	Ground terminal
K14	DPSIE	I	PCM audio signal (surround back L/R) input from the HDMI receiver
L1, L2	AD2, AD1	I/O	Two-way data bus with S-RAM and flash memory and address signal output to the address latch
L4 to L6, L9 to L11, L13	GND	-	Ground terminal
L14	DPSID	I	PCM audio signal (center, sub woofer) input from the HDMI receiver
M1	AD0	I/O	Two-way data bus with S-RAM and flash memory and address signal output to the address latch
M2	$\overline{WR}$	O	Data write enable signal output to the S-RAM and flash memory
M3, M12	GND	-	Ground terminal
M13	DPSIB	I	PCM audio signal (front L/R) input from the A/D converter, HDMI receiver or XM receiver
M14	DPSIC	I	PCM audio signal (surround L/R) input from the HDMI receiver
N1	AD15	O	Address signal output to the S-RAM and flash memory
N2	ALE	O	Address latch enable signal output terminal
N3	$\overline{RD}$	O	Data read enable signal output to the S-RAM and flash memory
N4	VDDINT	-	Power supply terminal (+1.2V)
N5	VDDEXT	-	Power supply terminal (+3.3V)
N6	AD8	O	Address signal output to the S-RAM, flash memory and address latch
N7	VDDINT	-	Power supply terminal (+1.2V)
N8	DAI_P2	-	Not used
N9	VDDEXT	-	Power supply terminal (+3.3V)
N10	DAI_P4	-	Not used
N11, N12	VDDINT	-	Power supply terminal (+1.2V)
N13	GND	-	Ground terminal
N14	DPSOE	O	PCM audio signal output to the DSP2
P1 to P6	AD14 to AD9	O	Address signal output to the S-RAM, flash memory and address latch
P7, P8, P9	DAI_P1, DAI_P3, DAI_P5	-	Not used
P10	DPSOA	O	PCM audio signal (front L/R) output to the DSP2
P11	DPSOB	O	PCM audio signal (surround L/R) output to the DSP2

Pin No.	Pin Name	I/O	Description
P12	DPSOC	O	PCM audio signal (center, sub woofer) output to the DSP2
P13	DPSOD	O	PCM audio signal (surround back L/R) output to the DSP2
P14	DPSIA	I	PCM audio signal (digital input) input from the digital audio interface receiver

DSP BOARD IC5202 ADSST-AVR-1131 (DSP2)

Pin No.	Pin Name	I/O	Description
A1	CLKCFG0	I	Clock frequency setting terminal
A2	XTAL	O	System clock output terminal (25 MHz)
A3	TMS	-	Not used
A4	TCK	-	Not used
A5	TDI	-	Not used
A6	CLKOUT	-	Not used
A7	TDO	-	Not used
A8	$\overline{\text{EMU}}$	-	Not used
A9	MOSI	I/O	When DSP2 is master: Serial data output to the serial flash When DSP2 is slave: Serial data input from the DSP controller
A10	MISO	I/O	When DSP2 is master: Serial data input from the serial flash When DSP2 is slave: Serial data output to the DSP controller
A11	$\overline{\text{SPIDS}}$	I	Serial data latch pulse signal input from the DSP controller
A12	VDDINT	-	Power supply terminal (+1.2V)
A13, A14	GND	-	Ground terminal
B1	CLKCFG1	I	Clock frequency setting terminal
B2	GND	-	Ground terminal
B3	VDDEXT	-	Power supply terminal (+3.3V)
B4	CLKIN	I	System clock input terminal (25 MHz)
B5	$\overline{\text{TRST}}$	-	Not used
B6	AVSS	-	Ground terminal
B7	AVDD	-	Power supply terminal (+1.2V)
B8	VDDEXT	-	Power supply terminal (+3.3V)
B9	SPICLK	I/O	When DSP2 is master: Serial data transfer clock signal input from the DSP controller When DSP2 is slave: Serial data transfer clock signal output to the serial flash
B10	$\overline{\text{RESET}}$	I	Reset signal input from the DSP controller "L": reset
B11	VDDINT	-	Power supply terminal (+1.2V)
B12 to B14	GND	-	Ground terminal
C1, C2	BOOTCFG1, BOOTCFG0	I	Boot mode setting signal input from the DSP controller
C3, C12, C13	GND	-	Ground terminal
C14, D1	VDDINT	-	Power supply terminal (+1.2V)
D2, D4 to D6, D9 to D11, D13	GND	-	Ground terminal
D14, E1	VDDINT	-	Power supply terminal (+1.2V)
E2, E4 to E6, E9 to E11, E13	GND	-	Ground terminal
E14	SF2_DSP2_CE	O	Chip enable signal output to the serial flash
F1	FLAG1	I	Audio muting control signal input from the digital audio interface receiver, video system controller or HDMI receiver
F2	FLAG0	O	Interrupt request signal output to the DSP controller
F4 to F6, F9 to F11	GND	-	Ground terminal
F13	P_ERROR	I	PLL lock error signal and data error flag input from the DSP1

Pin No.	Pin Name	I/O	Description
F14	DPFSCK	I	Master clock signal input from the digital audio interface receiver, HDMI receiver or XM receiver
G1	AD7	I/O	Two-way data bus with S-RAM and address signal output to the address latch
G2	VDDINT	-	Power supply terminal (+1.2V)
G13	VDDEXT	-	Power supply terminal (+3.3V)
G14	DPBCK	I	Bit clock signal input for PCM audio input from the DSP1, digital audio interface receiver, HDMI receiver or XM receiver
H1	AD6	I/O	Two-way data bus with S-RAM and address signal output to the address latch
H2	VDDEXT	-	Power supply terminal (+3.3V)
H13	DPLRCK	I	L/R sampling clock signal input for PCM audio input from the DSP1, digital audio interface receiver, HDMI receiver or XM receiver
H14	DPDVBCK	O	Bit clock signal output for PCM audio output to the lip sync adjust and D/A converter
J1, J2	AD5, AD4	I/O	Two-way data bus with S-RAM and address signal output to the address latch
J4 to J6, J9 to J11	GND	-	Ground terminal
J13	VDDINT	-	Power supply terminal (+1.2V)
J14	DPDVLRCK	O	L/R sampling clock signal output for PCM audio output to the lip sync adjust and D/A converter
K1	AD3	I/O	Two-way data bus with S-RAM and address signal output to the address latch
K2	VDDINT	-	Power supply terminal (+1.2V)
K4 to K6, K9 to K11, K13	GND	-	Ground terminal
K14	DPSIE	I	PCM audio signal (surround back L/R) input from the DSP1
L1, L2	AD2, AD1	I/O	Two-way data bus with S-RAM and address signal output to the address latch
L4 to L6, L9 to L11, L13	GND	-	Ground terminal
L14	DPSID	I	PCM audio signal (center, sub woofer) input from the DSP1
M1	AD0	I/O	Two-way data bus with S-RAM and address signal output to the address latch
M2	$\overline{WR}$	O	Data write enable signal output to the S-RAM
M3, M12	GND	-	Ground terminal
M13	DPSIB	I	PCM audio signal (front L/R) input from the A/D converter, HDMI receiver, XM receiver or DSP1
M14	DPSIC	I	PCM audio signal (surround L/R) input from the DSP1
N1	AD15	O	Address signal output to the S-RAM and address latch
N2	ALE	O	Address latch enable signal output terminal
N3	$\overline{RD}$	O	Data read enable signal output to the S-RAM
N4	VDDINT	-	Power supply terminal (+1.2V)
N5	VDDEXT	-	Power supply terminal (+3.3V)
N6	AD8	O	Address signal output to the S-RAM and address latch
N7	VDDINT	-	Power supply terminal (+1.2V)
N8	DAI_P2	-	Not used
N9	VDDEXT	-	Power supply terminal (+3.3V)
N10	DAI_P4	-	Not used
N11, N12	VDDINT	-	Power supply terminal (+1.2V)
N13	GND	-	Ground terminal
N14	DPSOE	O	PCM audio signal output terminal Not used
P1 to P6	AD14 to AD9	O	Address signal output to the S-RAM and address latch
P7	DAI_P1	O	Address signal output to the S-RAM

Pin No.	Pin Name	I/O	Description
P8	DAI_P3	-	Not used
P9	SF2_DSP2_MAS	O	Master/slave selection signal output terminal
P10	DPSOA	O	PCM audio signal (front L/R) output to the lip sync adjust
P11	DPSOB	O	PCM audio signal (surround L/R) output to the lip sync adjust
P12	DPSOC	O	PCM audio signal (center, sub woofer) output to the lip sync adjust
P13	DPSOD	O	PCM audio signal (surround back L/R) output to the lip sync adjust
P14	DPSIA	I	PCM audio signal (digital input) input from the DSP1

DSP BOARD IC5208 MB91F353APMT-07A53DSP-X103 (DSP CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	RDATA0	I	Audio serial data input from the digital audio interface receiver
2 to 8	-	-	Not used
9	DSP2_SIB_SEL	O	Data selection signal output to the data selector
10	P_ERROR	I	PLL lock error signal and data error flag input from the DSP1
11	DSP1_SPIDS	O	Serial data latch pulse signal output to the DSP1
12	DSP1_RESET	O	Reset signal output to the DSP1 and flash memory "L": reset
13, 14	DSP1_ BOOTCFG0, DSP1_ BOOTCFG1	O	Boot mode setting signal output to the DSP1
15, 16	-	-	Not used
17	SF2_DSP2_MAS	I	Master/slave selection signal input from the DSP2
18, 19	-	-	Not used
20	SF2_CPU_CE	O	Chip enable signal output to the serial flash
21	DSP2_SPIDS	O	Serial data latch pulse signal output to the DSP2
22	DSP2_RESET	O	Reset signal output to the DSP2 "L": reset
23, 24	-	-	Not used
25, 26	DSP2_ BOOTCFG0, DSP2_ BOOTCFG1	O	Boot mode setting signal output to the DSP2
27 to 35	-	-	Not used
36	DRST_TRG	I	Programming end flag input from the system controller
37 to 39	-	-	Not used
40	VSS	-	Ground terminal
41, 42	-	-	Not used
43	VSS	-	Ground terminal
44	VCC	-	Power supply terminal (+3.3V)
45 to 47	-	-	Not used
48	$\overline{RD}$	-	Not used
49	$\overline{WR0}$	-	Not used
50, 51	-	-	Not used
52	MD2	I	Programming mode signal input from the system controller
53, 54	MD1, MD0	I	Programming mode signal input terminal Not used
55	XRESET	I	Reset signal input from the system controller "L": reset
56	VCC	-	Power supply terminal (+3.3V)
57	XOUT	O	System clock output terminal (12.5 MHz)
58	XIN	I	System clock input terminal (12.5 MHz)
59	VSS	-	Ground terminal
60 to 62	-	-	Not used
63	MD_BUSY	I	Busy signal input from the system controller
64	DM_BUSY	O	Busy signal output to the system controller
65	DM_INT	O	Interrupt request signal output terminal Not used
66 to 69	-	-	Not used
70, 71	PN0, PN2	-	Not used
72 to 75	-	-	Not used
76	VSS	-	Ground terminal

Pin No.	Pin Name	I/O	Description
77	VCC	-	Power supply terminal (+3.3V)
78 to 80	-	-	Not used
81	INT0	-	Not used
82	MD_INT	I	Interrupt request signal input from the system controller
83	DSP1_INT	I	Interrupt request signal input from the DSP1
84	DSP2_INT	I	Interrupt request signal input from the DSP2
85, 86	INT4, INT5	-	Not used
87, 88	-	-	Not used
89	MD_DATA	I	Serial data input from the system controller
90	DM_DATA	O	Serial data output to the system controller
91	SCK0	-	Not used
92	DSP1_MISO	I	Serial data input from the DSP1
93	DSP1_MOSI	O	Serial data output to the DSP1
94	DSP1_SPICLK	O	Serial data transfer clock signal output to the DSP1
95	VCC	-	Power supply terminal (+3.3V)
96	VSS	-	Ground terminal
97, 98	-	-	Not used
99	DSP2_MISO	I	Serial data input from the DSP2 or serial flash
100	DSP2_MOSI	O	Serial data output to the DSP2 or serial flash
101	DSP2_SPICLK	O	Serial data transfer clock signal output to the DSP2 or serial flash
102	SI3	I	Serial data input terminal
103	SO3	O	Serial data output terminal
104	SCK3	-	Not used
105, 106	-	-	Not used
107	DAVS	-	Ground terminal
108	DAVC	-	Power supply terminal (+3.3V)
109	AVCC	-	Power supply terminal (+3.3V)
110	AVRH	I	Reference voltage input terminal (+3.3V)
111	AVSS	-	Ground terminal
112	VSS	-	Ground terminal
113, 114	KEY0, KEY1	-	Not used
115 to 120	-	-	Not used

D_VIDEO BOARD IC3503 SII9185CTU (HDMI INPUT SELECT)

Pin No.	Pin Name	I/O	Description
1	TX2+	O	TMDS data (positive) output to the HDMI receiver
2	TX2-	O	TMDS data (negative) output to the HDMI receiver
3	AGND	-	Ground terminal
4	TX1+	O	TMDS data (positive) output to the HDMI receiver
5	TX1-	O	TMDS data (negative) output to the HDMI receiver
6	AVCC18	-	Power supply terminal (+1.8V)
7	TX0+	O	TMDS data (positive) output to the HDMI receiver
8	TX0-	O	TMDS data (negative) output to the HDMI receiver
9	AGND	-	Ground terminal
10	TXC+	O	TMDS clock (positive) output to the HDMI receiver
11	TXC-	O	TMDS clock (negative) output to the HDMI receiver
12	EXTSWING	-	Not used
13	RESET#	I	Reset signal input from the video system controller "L": reset
14	LSDA/EPSEL[0]	I/O	I2C two-way data bus with the video system controller, EEPROM, HDMI receiver, HDMI transceiver and D/A converter
15	LSCL/EPSEL[1]	I	I2C clock signal input from the video system controller
16	HPD0	O	Hot plug detection signal output to the HDMI ASSIGNABLE (INPUT ONLY) IN jack
17	AVCC18	-	Power supply terminal (+1.8V)
18	R0XC-	I	TMDS clock signal (negative) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
19	R0XC+	I	TMDS clock signal (positive) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
20	AGND	-	Ground terminal
21	R0X0-	I	TMDS data (negative) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
22	R0X0+	I	TMDS data (positive) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
23	AVCC33	-	Power supply terminal (+3.3V)
24	R0X1-	I	TMDS data (negative) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
25	R0X1+	I	TMDS data (positive) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
26	AGND	-	Ground terminal
27	R0X2-	I	TMDS data (negative) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
28	R0X2+	I	TMDS data (positive) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
29	AVCC18	-	Power supply terminal (+1.8V)
30	DSDA0	I/O	I2C two-way data bus with the HDMI ASSIGNABLE (INPUT ONLY) IN jack
31	DSCL0	I	I2C clock signal input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
32	RPWR0	I	Power supply voltage (+5V) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
33	DVCC18	-	Power supply terminal (+1.8V)
34	DGND	-	Ground terminal
35	I2CSEL/INT	-	Not used
36	HPD1	O	Hot plug detection signal output to the HDMI ASSIGNABLE (INPUT ONLY) IN jack
37	AVCC18	-	Power supply terminal (+1.8V)
38	R1XC-	I	TMDS clock signal (negative) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
39	R1XC+	I	TMDS clock signal (positive) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
40	AGND	-	Ground terminal
41	R1X0-	I	TMDS data (negative) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
42	R1X0+	I	TMDS data (positive) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
43	AVCC33	-	Power supply terminal (+3.3V)
44	R1X1-	I	TMDS data (negative) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
45	R1X1+	I	TMDS data (positive) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack

Pin No.	Pin Name	I/O	Description
46	AGND	-	Ground terminal
47	R1X2-	I	TMDS data (negative) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
48	R1X2+	I	TMDS data (positive) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
49	AVCC18	-	Power supply terminal (+1.8V)
50	DSDA1	I/O	I2C two-way data bus with the HDMI ASSIGNABLE (INPUT ONLY) IN jack
51	DSCL1	I	I2C clock signal input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
52	RPWR1	I	Power supply voltage (+5V) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
53, 54	CEC_D, CEC_A	-	Not used
55	AVCC33	-	Power supply terminal (+3.3V)
56	HPD2	O	Hot plug detection signal output to the HDMI ASSIGNABLE (INPUT ONLY) IN jack
57	AVCC18	-	Power supply terminal (+1.8V)
58	R2XC-	I	TMDS clock signal (negative) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
59	R2XC+	I	TMDS clock signal (positive) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
60	AGND	-	Ground terminal
61	R2X0-	I	TMDS data (negative) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
62	R2X0+	I	TMDS data (positive) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
63	AVCC33	-	Power supply terminal (+3.3V)
64	R2X1-	I	TMDS data (negative) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
65	R2X1+	I	TMDS data (positive) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
66	AGND	-	Ground terminal
67	R2X2-	I	TMDS data (negative) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
68	R2X2+	I	TMDS data (positive) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
69	AVCC18	-	Power supply terminal (+1.8V)
70	DSDA2	I/O	I2C two-way data bus with the HDMI ASSIGNABLE (INPUT ONLY) IN jack
71	DSCL2	I	I2C clock signal input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
72	RPWR2	I	Power supply voltage (+5V) input from the HDMI ASSIGNABLE (INPUT ONLY) IN jack
73	DVCC18	-	Power supply terminal (+1.8V)
74	DGND	-	Ground terminal
75	RSVDL	-	Not used
76	HPDIN	I	Hot plug detection signal input from the video system controller
77	TSDA	I/O	I2C two-way data bus with the EEPROM and HDMI receiver
78	TSCL	O	I2C clock signal output to the EEPROM and HDMI receiver
79	TPWR/I2CADDR	O	Power supply voltage (+5V) output to the HDMI receiver
80	AGND	-	Ground terminal

D_VIDEO BOARD IC3511 SII9135CTU (HDMI RECEIVER)

Pin No.	Pin Name	I/O	Description
1 to 3	Q10 to Q8	O	Serial data output to the HDMI transceiver and video processor
4	IOGND	-	Ground terminal
5	ODCK	O	Output data clock signal output to the HDMI transceiver, video processor and D/A converter
6	IOVCC33	-	Power supply terminal (+3.3V)
7 to 10	Q7 to Q4	O	Serial data output to the HDMI transceiver and video processor
11	CGND	-	Ground terminal
12	CVCC18	-	Power supply terminal (+1.8V)
13 to 16	Q3 to Q0	O	Serial data output to the HDMI transceiver
17	IOGND	-	Ground terminal
18	IOVCC33	-	Power supply terminal (+3.3V)
19	DE	O	Data enable signal output to the HDMI transceiver, video processor and D/A converter
20	HSYNC	O	Horizontal sync signal output to the HDMI transceiver, video processor and D/A converter
21	VSYNC	O	Vertical sync signal output to the HDMI transceiver, video system controller, video processor and D/A converter
22	EVNODD	-	Not used
23	CGND	-	Ground terminal
24, 25	CVCC18	-	Power supply terminal (+1.8V)
26	CSDA	I/O	I2C two-way data bus with the EEPROM, HDMI input select, HDMI transceiver, video system controller and D/A converter
27	CSCL	I	I2C clock signal input from the video system controller
28	DSDA1	I/O	I2C two-way data bus terminal Not used
29	DSCL1	I	I2C clock signal input terminal Not used
30	R1PWR5V	I	Power supply voltage (+5V) input terminal Not used
31	IOGND	-	Ground terminal
32	IOVCC33	-	Power supply terminal (+3.3V)
33	DSDA0	I/O	I2C two-way data bus with the HDMI input select and EEPROM
34	DSCL0	I	I2C clock signal input from the HDMI input select
35	R0PWR5V	I	Power supply voltage (+5V) input from the HDMI input select
36	AGND	-	Ground terminal
37	AVCC18	-	Power supply terminal (+1.8V)
38	AVCC33	-	Power supply terminal (+3.3V)
39	R0XC-	I	TMDS clock (negative) signal input from the HDMI input select
40	R0XC+	I	TMDS clock (positive) signal input from the HDMI input select
41	AGND	-	Ground terminal
42	AVCC33	-	Power supply terminal (+3.3V)
43	R0X0-	I	TMDS data (negative) input from the HDMI input select
44	R0X0+	I	TMDS data (positive) input from the HDMI input select
45	AGND	-	Ground terminal
46	AVCC33	-	Power supply terminal (+3.3V)
47	R0X1-	I	TMDS data (negative) input from the HDMI input select
48	R0X1+	I	TMDS data (positive) input from the HDMI input select
49	AGND	-	Ground terminal
50	AVCC33	-	Power supply terminal (+3.3V)
51	R0X2-	I	TMDS data (negative) input from the HDMI input select
52	R0X2+	I	TMDS data (positive) input from the HDMI input select
53	AGND	-	Ground terminal
54	AVCC18	-	Power supply terminal (+1.8V)

Pin No.	Pin Name	I/O	Description
55	RSVDNC	-	Not used
56	AVCC33	-	Power supply terminal (+3.3V)
57	R1XC-	I	TMDS clock (negative) signal input terminal Not used
58	R1XC+	I	TMDS clock (positive) signal input terminal Not used
59	AGND	-	Ground terminal
60	AVCC33	-	Power supply terminal (+3.3V)
61	R1X0-	I	TMDS data (negative) input terminal Not used
62	R1X0+	I	TMDS data (positive) input terminal Not used
63	AGND	-	Ground terminal
64	AVCC33	-	Power supply terminal (+3.3V)
65	R1X1-	I	TMDS data (negative) input terminal Not used
66	R1X1+	I	TMDS data (positive) input terminal Not used
67	AGND	-	Ground terminal
68	AVCC33	-	Power supply terminal (+3.3V)
69	R1X2-	I	TMDS data (negative) input terminal Not used
70	R1X2+	I	TMDS data (positive) input terminal Not used
71	AGND	-	Ground terminal
72	AVCC18	-	Power supply terminal (+1.8V)
73	IOGND	-	Ground terminal
74	IOVCC33	-	Power supply terminal (+3.3V)
75	MUTEOUT	O	Audio muting control signal output terminal
76, 77	RSVDNC	-	Not used
78	SPDIF	O	S/PDIF signal output to the digital audio interface receiver and HDMI transceiver
79	CGND	-	Ground terminal
80	CVCC18	-	Power supply terminal (+1.8V)
81	SD0	O	PCM audio signal output to the DSP1, DSP2 and HDMI transceiver
82 to 84	SD1 to SD3	O	PCM audio signal output to the DSP1 and HDMI transceiver
85	WS	O	L/R sampling clock signal output to the DSP1, DSP2 and HDMI transceiver
86	SCK	O	Bit clock signal output to the DSP1, DSP2 and HDMI transceiver
87	IOGND	-	Ground terminal
88	IOVCC33	-	Power supply terminal (+3.3V)
89	MCLK	O	Master clock signal output to the DSP1, DSP2 and HDMI transceiver
90	CGND	-	Ground terminal
91	CVCC18	-	Power supply terminal (+1.8V)
92	DVCC18	-	Power supply terminal (+1.8V)
93	DGND2	-	Ground terminal
94	XTALOUT	O	System clock output terminal (28.322 MHz)
95	XTALIN	I	System clock input terminal (28.322 MHz)
96	XTALVCC	-	Power supply terminal (+3.3V)
97	REGVCC	-	Power supply terminal (+3.3V)
98	RSVDNC	-	Not used
99	RSVDL	-	Not used
100	RESET#	I	Reset signal input from the video system controller "L": reset
101	SCDT	-	Not used
102	INT	O	Interrupt signal output to the video system controller
103	IOGND	-	Ground terminal
104	IOVCC33	-	Power supply terminal (+3.3V)

Pin No.	Pin Name	I/O	Description
105	CI2CA	-	Not used
106	CGND	-	Ground terminal
107	CVCC18	-	Power supply terminal (+1.8V)
108 to 111	Q35 to Q32	O	Serial data output to the HDMI transceiver, video processor and D/A converter
112	IOGND	-	Ground terminal
113	IOVCC33	-	Power supply terminal (+3.3V)
114 to 117	Q31 to Q28	O	Serial data output to the HDMI transceiver, video processor and D/A converter
118	CGND	-	Ground terminal
119	CVCC18	-	Power supply terminal (+1.8V)
120 to 123	Q27 to Q24	O	Serial data output to the HDMI transceiver
124	IOGND	-	Ground terminal
125	IOVCC33	-	Power supply terminal (+3.3V)
126 to 129	Q23 to Q20	O	Serial data output to the HDMI transceiver, video processor and D/A converter
130	CGND	-	Ground terminal
131	CVCC	-	Power supply terminal (+1.8V)
132 to 135	Q19 to Q16	O	Serial data output to the HDMI transceiver, video processor and D/A converter
136	IOGND	-	Ground terminal
137	IOVCC33	-	Power supply terminal (+3.3V)
138 to 141	Q15 to Q12	O	Serial data output to the HDMI transceiver
142	CGND	-	Ground terminal
143	CVCC18	-	Power supply terminal (+1.8V)
144	Q11	O	Serial data output to the HDMI transceiver and video processor

D_VIDEO BOARD IC3513 SII9134CTU (HDMI TRANSCEIVER)

Pin No.	Pin Name	I/O	Description
1	DE	I	Data enable signal input from the HDMI receiver
2	HSYNC	I	Horizontal sync signal input from the HDMI receiver
3	VSYNC	I	Vertical sync signal input from the HDMI receiver
4	SPDIF	I	S/PDIF signal input from the HDMI receiver
5	MCLK	I	Master clock signal input from the HDMI receiver
6 to 9	SD3 to SD0	I	PCM audio signal input from the HDMI receiver
10	WS	I	L/R sampling clock signal input from the HDMI receiver
11	SCK	I	Bit clock signal input from the HDMI receiver
12	CVCC18	-	Power supply terminal (+1.8V)
13	GND	-	Ground terminal
14	IOVCC33	-	Power supply terminal (+3.3V)
15	DCLK	I	Bit clock signal input from the HDMI receiver
16	DR0	I	L/R sampling clock signal input from the HDMI receiver
17 to 20	DL0, DR1, DL1, DR2	I	PCM audio signal input from the HDMI receiver
21	DL2	I	S/PDIF signal input from the HDMI receiver
22, 23	DR3, DL3	-	Not used
24	INT	O	Interrupt signal output to the video system controller
25	RESET#	I	Reset signal input from the video system controller "L": reset
26	AGND	-	Ground terminal
27	EXT_SWG	-	Not used
28	PVCC1	-	Power supply terminal (+1.8V)
29	AGND	-	Ground terminal
30	TXC-	O	TMDS clock (negative) output to the HDMI ASSIGNABLE (INPUT ONLY) OUT jack
31	TXC+	O	TMDS clock (positive) output to the HDMI ASSIGNABLE (INPUT ONLY) OUT jack
32	AVCC18	-	Power supply terminal (+1.8V)
33	TX0-	O	TMDS data (negative) output to the HDMI ASSIGNABLE (INPUT ONLY) OUT jack
34	TX0+	O	TMDS data (positive) output to the HDMI ASSIGNABLE (INPUT ONLY) OUT jack
35	AGND	-	Ground terminal
36	TX1-	O	TMDS data (negative) output to the HDMI ASSIGNABLE (INPUT ONLY) OUT jack
37	TX1+	O	TMDS data (positive) output to the HDMI ASSIGNABLE (INPUT ONLY) OUT jack
38	AVCC18	-	Power supply terminal (+1.8V)
39	TX2-	O	TMDS data (negative) output to the HDMI ASSIGNABLE (INPUT ONLY) OUT jack
40	TX2+	O	TMDS data (positive) output to the HDMI ASSIGNABLE (INPUT ONLY) OUT jack
41	AGND	-	Ground terminal
42	PVCC2	-	Power supply terminal (+1.8V)
43	AGND	-	Ground terminal
44	AVCC33	-	Power supply terminal (+3.3V)
45	DCCPWR5V	I	Power supply voltage (+5V) input terminal
46	DSCL	O	I2C clock signal output to the HDMI ASSIGNABLE (INPUT ONLY) OUT jack
47	DSDA	I/O	I2C two-way data bus with the HDMI ASSIGNABLE (INPUT ONLY) OUT jack
48	CSCL	I	I2C clock signal input from the video system controller
49	CSDA	I/O	I2C two-way data bus with the EEPROM, HDMI input select, HDMI receiver, video system controller and D/A converter
50	CI2CA	-	Not used
51	HPD	I	Hot plug detection signal input from the HDMI ASSIGNABLE (INPUT ONLY) OUT jack
52	TMODE	-	Not used

Pin No.	Pin Name	I/O	Description
53	IOVCC33	-	Power supply terminal (+3.3V)
54	GND	-	Ground terminal
55	VPP18	-	Power supply terminal (+1.8V)
56 to 63	D35 to D28	I	Serial data input from the HDMI receiver and video processor
64	CVCC18	-	Power supply terminal (+1.8V)
65	GND	-	Ground terminal
66	IOVCC33	-	Power supply terminal (+3.3V)
67 to 70	D27 to D24	I	Serial data input from the HDMI receiver
71 to 75	D23 to D19	I	Serial data input from the HDMI receiver and video processor
76	CVCC18	-	Power supply terminal (+1.8V)
77 to 79	D18 to D16	I	Serial data input from the HDMI receiver and video processor
80 to 83	D15 to D12	I	Serial data input from the HDMI receiver
84 to 86	D11 to D9	I	Serial data input from the HDMI receiver and video processor
87	GND	-	Ground terminal
88	IDCK	I	Output data clock signal input from the HDMI receiver
89	IOVCC33	-	Power supply terminal (+3.3V)
90 to 94	D8 to D4	I	Serial data input from the HDMI receiver and video processor
95 to 98	D3 to D0	I	Serial data input from the HDMI receiver
99	CVCC18	-	Power supply terminal (+1.8V)
100	GND	-	Ground terminal

D_VIDEO BOARD IC3601 FLI8638-LF (VIDEO PROCESSOR)

Pin No.	Pin Name	I/O	Description
A1	NC	-	Not used
A2	MSTR1_SDA	O	Power detection signal output to the video system controller
A3	MSTR1_SCL	I	Busy signal input from the video system controller
A4, A5	FSDATA1, FSDATA3	I/O	Two-way data bus with the SD-RAM
A6	FSDQM0	O	Lower data mask signal output to the SD-RAM
A7 to A10	FSDATA5, FSDATA7, FSDATA9, FSDATA11	I/O	Two-way data bus with the SD-RAM
A11	FSDQM1	O	Upper data mask signal output to the SD-RAM
A12, A13	FSDATA13, FSDATA15	I/O	Two-way data bus with the SD-RAM
A14	VDDA18_DLL	-	Power supply terminal (+1.8V)
A15, A16	FSDATA17, FSDATA19	I/O	Two-way data bus with the SD-RAM
A17	FSDQS2	O	Upper data strobe signal output to the SD-RAM
A18 to A21	FSDATA21, FSDATA23, FSDATA25, FSDATA27	I/O	Two-way data bus with the SD-RAM
A22	FSDQS3	O	Lower data strobe signal output to the SD-RAM
A23, A24	FSDATA29, FSDATA31	I/O	Two-way data bus with the SD-RAM
A25, A26	RPLL_AGND	-	Ground terminal
B1	BDATA0	I	Digital video signal (B) input from the OSD controller
B2	OCM_UDO_1	O	UART communication transfer data output to the video system controller
B3	OCM_UDI_1	I	UART communication transfer data input from the video system controller
B4, B5	FSDATA0, FSDATA2	I/O	Two-way data bus with the SD-RAM
B6	FSDQS0	O	Upper data strobe signal output to the SD-RAM
B7 to B10	FSDATA4, FSDATA6, FSDATA8, FSDATA10	I/O	Two-way data bus with the SD-RAM
B11	FSDQS1	O	Lower data strobe signal output to the SD-RAM
B12, B13	FSDATA12, FSDATA14	I/O	Two-way data bus with the SD-RAM
B14	VSSA18_DLL	-	Ground terminal
B15, B16	FSDATA16, FSDATA18	I/O	Two-way data bus with the SD-RAM
B17	FSDQM2	O	Lower data mask signal output to the SD-RAM
B18 to B21	FSDATA20, FSDATA22, FSDATA24, FSDATA26	I/O	Two-way data bus with the SD-RAM
B22	FSDQM3	O	Upper data mask signal output to the SD-RAM
B23, B24	FSDATA28, FSDATA30	I/O	Two-way data bus with the SD-RAM

Pin No.	Pin Name	I/O	Description
B25	RPLL_DGND	-	Ground terminal
B26	XTAL	O	System clock output terminal (19.6 MHz)
C1 to C3	BDATA3 to BDATA1	I	Digital video signal (B) input from the OSD controller
C4	FSCKE	O	Clock enable signal output to the SD-RAM
C5	FSCLKN	O	Clock signal (negative) output to the SD-RAM
C6 to C8	FSADDR8 to FSADDR6	O	Address signal output to the SD-RAM
C9	FSVREF	O	Reference voltage output to the SD-RAM
C10 to C18	FSADDR5, FSADDR12, FSADDR9, FSADDR4, FSADDR11, FSADDR3 to FSADDR0	O	Address signal output to the SD-RAM
C19	FSVREF	O	Reference voltage output to the SD-RAM
C20, C21	FSBKSEL1, FSBKSEL0	O	Bank select signal output to the SD-RAM
C22	FSCS1	O	Chip select signal output terminal Not used
C23	FSWE	O	Write enable signal output to the SD-RAM
C24	FSRAS	O	Row address strobe signal output to the SD-RAM
C25	RPLL_1.8V	-	Power supply terminal (+1.8V)
C26	TCLK	I	System clock input terminal (19.6 MHz)
D1	BDATA6	I	Digital video signal input terminal Not used
D2, D3	BDATA5, BDATA4	I	Digital video signal (B) input from the OSD controller
D4	DDR_2.5V	-	Power supply terminal (+2.5V)
D5	FSCLKP	O	Clock signal (positive) output to the SD-RAM
D6 to D8	DDR_2.5V	-	Power supply terminal (+2.5V)
D9	FSVREFVSS	-	Ground terminal
D10 to D15	DDR_2.5V	-	Power supply terminal (+2.5V)
D16	FSADDR10	O	Address signal output to the SD-RAM
D17, D18	DDR_2.5V	-	Power supply terminal (+2.5V)
D19	FSVREFVSS	-	Ground terminal
D20	DDR_2.5V	-	Power supply terminal (+2.5V)
D21	FSCS0	O	Chip select signal output to the SD-RAM
D22, D23	DDR_2.5V	-	Power supply terminal (+2.5V)
D24	FSCAS	O	Column address strobe signal output to the SD-RAM
D25	NC	-	Not used
D26	RPLL_3.3V	-	Power supply terminal (+3.3V)
E1, E2	BDATA9, BDATA8	I	Digital video signal (G) input from the OSD controller
E3	BDATA7	I	Digital video signal input terminal Not used
E4	IO_3.3V	-	Power supply terminal (+3.3V)
E23, E24	PD22, PD23	I/O	Serial data input from the HDMI receiver and serial data output to the HDMI transmitter and D/A converter
E25	LVDS_GND	-	Ground terminal
E26	LVDS_3.3V	-	Power supply terminal (+3.3V)

Pin No.	Pin Name	I/O	Description
F1 to F3	BDATA12 to BDATA10	I	Digital video signal (G) input from the OSD controller
F4	IO_3.3V	-	Power supply terminal (+3.3V)
F23 to F26	PD18 to PD21	I/O	Serial data input from the HDMI receiver and serial data output to the HDMI transmitter and D/A converter
G1, G2	BDATA15, BDATA14	I	Digital video signal input terminal Not used
G3	BDATA13	I	Digital video signal (G) input from the OSD controller
G4	IO_3.3V	-	Power supply terminal (+3.3V)
G23 to G26	PD14 to PD17	I/O	Serial data input from the HDMI receiver and serial data output to the HDMI transmitter and D/A converter
H1 to H3	BDATA18 to BDATA16	I	Digital video signal (R) input from the OSD controller
H4	IO_3.3V	-	Power supply terminal (+3.3V)
H23	LVDS_PLL_GND	-	Ground terminal
H24	LVDS_PLL_3.3V	-	Power supply terminal (+3.3V)
H25	LVDS_GND	-	Ground terminal
H26	LVDS_3.3V	-	Power supply terminal (+3.3V)
J1 to J3	BDATA21 to BDATA19	I	Digital video signal (R) input from the OSD controller
J4	IO_3.3V	-	Power supply terminal (+3.3V)
J23, J24	PD12, PD13	I/O	Serial data input from the HDMI receiver and serial data output to the HDMI transmitter and D/A converter
J25	LVDS_GND	-	Ground terminal
J26	LVDS_3.3V	-	Power supply terminal (+3.3V)
K1	BHREF_DE	I	Blanking period signal input from the OSD controller
K2, K3	BDATA23, BDATA22	I	Digital video signal input terminal Not used
K4	IO_3.3V	-	Power supply terminal (+3.3V)
K10, K11	CORE_1.8V	-	Power supply terminal (+1.8V)
K12 to K15	D_GND	-	Ground terminal
K16, K17	CORE_1.8V	-	Power supply terminal (+1.8V)
K23 to K26	PD8 to PD11	I/O	Serial data input from the HDMI receiver and serial data output to the HDMI transmitter and D/A converter
L1	IPCLK3	I	Clock signal input terminal Not used
L2	BVS	I	Vertical sync signal input from the OSD controller
L3	BHS	I	Horizontal sync signal input from the OSD controller
L4	IO_3.3V	-	Power supply terminal (+3.3V)
L10	D_GND	-	Ground terminal
L11	CORE_1.8V	-	Power supply terminal (+1.8V)
L12 to L15	D_GND	-	Ground terminal
L16	CORE_1.8V	-	Power supply terminal (+1.8V)
L17	D_GND	-	Ground terminal
L23 to L26	PD4 to PD7	I/O	Serial data input from the HDMI receiver and serial data output to the HDMI transmitter
M1	DIP_CLEAN_HS_OUT	O	Horizontal sync signal output terminal Not used
M2	DIP_EXT_CLAMP	-	Not used

Pin No.	Pin Name	I/O	Description
M3	DIP_EXT _COAST	-	Not used
M4	IPCLK2	I	Dot clock signal input from the OSD controller
M10 to M17	D_GND	-	Ground terminal
M23	IO_3.3V	-	Power supply terminal (+3.3V)
M24, M25	LVDS_GND	-	Ground terminal
M26	LVDS_3.3V	-	Power supply terminal (+3.3V)
N1	IPCLK0	I	Clock signal input terminal Not used
N2	DIP_RAW_HS_CS	-	Not used
N3	DIP_AODD	-	Not used
N4	DIP_BODD	-	Not used
N10 to N17	D_GND	-	Ground terminal
N23 to N26	PD0 to PD3	I/O	Serial data input from the HDMI receiver and serial data output to the HDMI transmitter
P1 to P3	ADATA2 to ADATA0	-	Not used
P4	IPCLK1	I	Clock signal input terminal Not used
P10 to P17	D_GND	-	Ground terminal
P23	IO_3.3V	-	Power supply terminal (+3.3V)
P24	DCLK	I	Output data clock signal input from the HDMI receiver
P25	DHS	I	Horizontal sync signal input from the HDMI receiver
P26	DEN	I	Data enable signal input from the HDMI receiver
R1 to R4	ADATA6 to ADATA3	-	Not used
R10 to R17	D_GND	-	Ground terminal
R23	JTAG_BS_TDI	-	Not used
R24	JTAG_BS_RST	-	Not used
R25	JTAG_BS_TCK	-	Not used
R26	DVS	I	Vertical sync signal input from the HDMI receiver
T1 to T4	ADATA10 to ADATA7	-	Not used
T10	D_GND	-	Ground terminal
T11	CORE_1.8V	-	Power supply terminal (+1.8V)
T12 to T15	D_GND	-	Ground terminal
T16, T17	CORE_1.8V	-	Power supply terminal (+1.8V)
T23	IO_3.3V	-	Power supply terminal (+3.3V)
T24	JTAG_BS_TMS	-	Not used
T25	JTAG_BS_TDO	-	Not used
T26	GPIO_44	-	Not used
U1 to U4	ADATA14 to ADATA11	-	Not used
U10, U11	CORE_1.8V	-	Power supply terminal (+1.8V)
U12 to U15	D_GND	-	Ground terminal
U16, U17	CORE_1.8V	-	Power supply terminal (+1.8V)
U23, U24	PWM1, PWM2	-	Not used
U25	PPWR	-	Not used
U26	PBIAS	-	Not used
V1 to V4	ADATA18 to ADATA15	-	Not used

Pin No.	Pin Name	I/O	Description
V23	IO_3.3V	-	Power supply terminal (+3.3V)
V24	PWM0	-	Not used
V25	SLAVE_SDA	-	Not used
V26	SLAVE_SCL	-	Not used
W1 to W4	ADATA22 to ADATA19	-	Not used
W23	OCM_INT1	-	Not used
W24	OCM_TIMER1	-	Not used
W25	OCM_UDI_0	-	Not used
W26	OCM_UDO_0	-	Not used
Y1	AVS	-	Not used
Y2	AHS	-	Not used
Y3	AHREF_DE	-	Not used
Y4	ADATA23	-	Not used
Y23	IO_3.3V	-	Power supply terminal (+3.3V)
Y24	OCM_INT2	-	Not used
Y25	VGA1_SDA	-	Not used
Y26	VGA1_SCL	-	Not used
AA1	NC	-	Not used
AA2 to AA4	DGND_ADC	-	Ground terminal
AA23	MSTR0_SDA	I/O	Two-way data bus with the EEPROM
AA24	MSTR0_SCL	O	Serial clock signal output to the EEPROM
AA25	VGA0_SDA	-	Not used
AA26	VGA0_SCL	-	Not used
AB1	A1P	I	Video signal input (P_R/C_R) from the COMPONENT VIDEO ASSIGNABLE (INPUT ONLY) jack
AB2	SV1P	-	Not used
AB3	AGND_ADC	-	Ground terminal
AB4	ADC_1.8V	-	Power supply terminal (+1.8V)
AB23	IO_3.3V	-	Power supply terminal (+3.3V)
AB24	IRO	-	Not used
AB25	MSTR2_SDA	I/O	Not used
AB26	MSTR2_SCL	O	Not used
AC1	C1P	I	Video signal input (Y) from the COMPONENT VIDEO ASSIGNABLE (INPUT ONLY) jack
AC2	B1P	I	Video signal input (P_B/C_B) from the COMPONENT VIDEO ASSIGNABLE (INPUT ONLY) jack
AC3	AGND_ADC	-	Ground terminal
AC4, AC5	ADC_1.8V	-	Power supply terminal (+1.8V)
AC6	AGND_ADC	-	Ground terminal
AC7	VOUT2	-	Not used
AC8	AGND_ADC	-	Ground terminal
AC9	LBADC_3.3V	-	Power supply terminal (+3.3V)
AC10	LBADC_IN4	-	Not used
AC11	LBADC_GND	-	Ground terminal
AC12	AVSIN_DATA	-	Not used
AC13	EXTOSD_HS	-	Not used
AC14	IO_3.3V	-	Power supply terminal (+3.3V)
AC15	OCMADDR18	O	Address signal output to the flash memory
AC16	IO_3.3V	-	Power supply terminal (+3.3V)

Pin No.	Pin Name	I/O	Description
AC17	OCMADDR11	O	Address signal output to the flash memory
AC18	IO_3.3V	-	Power supply terminal (+3.3V)
AC19	OCMADDR4	O	Address signal output to the flash memory
AC20	IO_3.3V	-	Power supply terminal (+3.3V)
AC21	OCMDATA13	I/O	Two-way data bus with the flash memory
AC22	IO_3.3V	-	Power supply terminal (+3.3V)
AC23	OCMDATA6	I/O	Two-way data bus with the flash memory
AC24	OCM_CS2N	O	Chip select signal output terminal Not used
AC25	OCN_RE_N	O	Read enable signal output to the flash memory
AC26	OCN_WE_N	O	Write enable signal output to the flash memory
AD1	AN	-	Not used
AD2	AGND_ADC	-	Ground terminal
AD3 to AD5	ADC1_3.3V	-	Power supply terminal (+3.3V)
AD6, AD7	ADC2_3.3V	-	Power supply terminal (+3.3V)
AD8	AGND_ADC	-	Ground terminal
AD9	RESET	I	Reset signal input from the video system controller "L": reset
AD10	LBADC_IN3	-	Not used
AD11	LBADC_RETURN	-	Not used
AD12	AVSIN_WORDSEL	-	Not used
AD13	EXTOSD_VS	-	Not used
AD14	AVSOUT_DATA	-	Not used
AD15 to AD20	OCMADDR19, OCMADDR15, OCMADDR12, OCMADDR8, OCMADDR5, OCMADDR1	O	Address signal output to the flash memory
AD21 to AD23	OCMDATA14, OCMDATA10, OCMDATA7	I/O	Two-way data bus with the flash memory
AD24	ROM_CS_N	O	Chip enable signal output to the flash memory
AD25, AD26	OCM_CS0N, OCM_CS1N	O	Chip select signal output terminal Not used
AE1	SV2P	-	Not used
AE2	B2P	-	Not used
AE3	AGND_ADC	-	Ground terminal
AE4	SV3P	-	Not used
AE5	B3P	-	Not used
AE6	AGND_ADC	-	Ground terminal
AE7	SV4P	-	Not used
AE8	BN2	-	Not used
AE9	AGND_ADC	-	Ground terminal
AE10, AE11	LBADC_IN2, LBADC_IN6	-	Not used
AE12	AIP_RAW_VS	-	Not used
AE13	AVSOUT_SCL	-	Not used
AE14	AVSOUT_ WORDSEL	-	Not used

Pin No.	Pin Name	I/O	Description
AE15 to AE20	OCMADDR20, OCMADDR16, OCMADDR13, OCMADDR9, OCMADDR6, OCMADDR2	O	Address signal output to the flash memory
AE21 to AE26	OCMDATA15, OCMDATA11, OCMDATA8, OCMDATA2 to OCMDATA0	I/O	Two-way data bus with the flash memory
AF1	A2P	-	Not used
AF2	C2P	-	Not used
AF3	BN	-	Not used
AF4	A3P	I	Video signal input (CVBS) from VIDEO IN jack
AF5	C3P	-	Not used
AF6	CN	-	Not used
AF7	AN2	-	Not used
AF8	CN2	-	Not used
AF9	SVN	-	Not used
AF10, AF11	LBADC_IN1, LBADC_IN5	-	Not used
AF12	AIP_RAW_HS_CS	-	Not used
AF13	EXTOSD_CLK	-	Not used
AF14	AVSIN_SCL	-	Not used
AF15 to AF20	OCMADDR21, OCMADDR17, OCMADDR14, OCMADDR10, OCMADDR7, OCMADDR3	O	Address signal output to the flash memory
AF21	OCMADDR0	O	Address signal output terminal Not used
AE22 to AE26	OCMDATA12, OCMDATA9 OCMDATA5 to OCMDATA3	I/O	Two-way data bus with the flash memory

D_VIDEOBOARD IC3604 YGV629-VZ (OSD CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	PLLVDD	-	Power supply terminal (+3.3V)
2	FILTER	I	Filter connection terminal for internal PLL
3	PLLVSS	-	Ground terminal
4	NC	-	Not used
5 to 10	PLLCTL5 to PLLCTL0	I	PLL setting terminal
11	DTCKS_N	I	Clock signal input terminal Not used
12	DTCK_IN	I	Clock signal input terminal Not used
13	VSS	-	Ground terminal
14	VDD	-	Power supply terminal (+3.3V)
15 to 22	D0 to D7	I/O	Two-way data bus with the video system controller and S-RAM
23	WAIT_N	O	Wait signal output to the video system controller
24	READY_N	-	Not used
25	INT_N	O	Internal status output to the video system controller
26	VDD	-	Power supply terminal (+3.3V)
27	VSS	-	Ground terminal
28	CS_N	I	Chip select signal input from the video system controller
29	WR_N	I	Write enable signal input from the video system controller
30	RD_N	I	Read enable signal input from the video system controller
31 to 33	PS2 to PS0	I	Address signal input from the video system controller
34	SDOUT	O	Serial data output terminal Not used
35	SDIN	I	Serial data input terminal Not used
36	SCS_N	I	Chip select signal input terminal Not used
37	SCLK	I	Serial data transfer clock signal input terminal Not used
38	SER_N	I	CPU interface select setting terminal Fixed at "H" in this set
39	RESET_N	I	Reset signal input from the video system controller "L": reset
40	VSS	-	Ground terminal
41	VDD	-	Power supply terminal (+3.3V)
42	MA0	O	Address signal output terminal Not used
43 to 47	MA1 to MA5	O	Address signal output to the flash memory
48	VSS	-	Ground terminal
49 to 54	MA6 to MA11	O	Address signal output to the flash memory
55	VDD	-	Power supply terminal (+3.3V)
56	VSS	-	Ground terminal
57 to 62	MA12 to MA17	O	Address signal output to the flash memory
63	VSS	-	Ground terminal
64 to 70	MA18 to MA24	O	Address signal output to the flash memory
71	VDD	-	Power supply terminal (+3.3V)
72	VSS	-	Ground terminal
73	MWE_N	O	Write enable signal output to the flash memory
74	MOE_N	O	Output enable signal output to the flash memory
75 to 80	MD15, MD7, MD14, MD6, MD13, MD5	I/O	Two-way data bus with the flash memory
81	VSS	-	Ground terminal
82	VDD	-	Power supply terminal (+3.3V)

Pin No.	Pin Name	I/O	Description
83 to 90	MD12, MD4, MD11, MD3, MD10, MD2, MD9, MD1	I/O	Two-way data bus with the flash memory
91	VSS	-	Ground terminal
92	VDD	-	Power supply terminal (+3.3V)
93, 94	MD8, MD0	I/O	Two-way data bus with the flash memory
95	RAHZ_N	-	Not used
96 to 98	XTEST2 to XTEST0	-	Not used
99	VSIN_N	I	Vertical sync signal input terminal Not used
100	HSIN_N	I	Horizontal sync signal input terminal Not used
101	NC	-	Not used
102	AVDD	-	Power supply terminal (+3.3V)
103	R	O	Analog video signal (R) output terminal Not used
104	G	O	Analog video signal (G) output terminal Not used
105	B	O	Analog video signal (B) output terminal Not used
106	IREF	-	Not used
107	AVSS	-	Ground terminal
108	NC	-	Not used
109	VDD	-	Power supply terminal (+3.3V)
110	VSS	-	Ground terminal
111 to 116	DR0 to DR5	O	Digital video signal (R) output to the video processor
117	VSS	-	Ground terminal
118	VDD	-	Power supply terminal (+3.3V)
119 to 124	DG0 to DG5	O	Digital video signal (G) output to the video processor
125	VSS	-	Ground terminal
126	VDD	-	Power supply terminal (+3.3V)
127to 132	DB0 to DB5	O	Digital video signal (B) output to the video processor
133	VSS	-	Ground terminal
134	FSC	-	Not used
135	YS_N	-	Not used
136	VSYNC_N	O	Vertical sync signal output to the video processor
137	HSYNC_N	O	Horizontal sync signal output to the video processor
138	BLANK_N	O	Blanking period signal output to the video processor
139	DOTCLK	O	Dot clock signal output to the video processor
140	VDD	-	Power supply terminal (+3.3V)
141	XIN	I	System clock input terminal (33.2 MHz)
142	XOUT	O	System clock output terminal (33.2 MHz)
143	VSS	-	Ground terminal
144	NC	-	Not used

D_VIDEO BOARD IC3610 MB91F467RA-07A43GUI-X100 (VIDEO SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	VSS GND	-	Ground terminal
2 to 5	NO USE	-	Not used
6	STOP IN	I	AC off detection signal input terminal
7	DAC CLK SEL	O	Clock on/off control signal output terminal for D/A converter
8	EDID SEL0	O	I2C line selection signal output terminal for EEPROM
9, 10	NO USE	-	Not used
11, 12	VCC3 +3.3V	-	Power supply terminal (+3.3V)
13	VSS GND	-	Ground terminal
14	C_1	-	Not used
15	YAMAHA FLASH CE	O	Not used
16	NO USE	-	Not used
17	EXT_ROM CE	O	Not used
18	YAMAHA CE	O	Chip enable signal output to the OSD controller
19	SRAM CE	O	Chip enable signal output to the S-RAM
20	NO USE	-	Not used
21	YAMAHA_RESET	O	Reset signal output to the flash memory and OSD controller "L": reset
22	YAMAHA _WAIT_N	I	Wait signal input from the OSD controller
23	YAMAHA_ READY_N	I	Not used
24	NO USE	-	Not used
25	RDX	O	Read enable signal output to the S-RAM and OSD controller
26	SRAM LB/WE	O	Lower-byte control signal and write enable signal output to the S-RAM
27	SRAM UB/WE	O	Upper-byte control signal and write enable signal output to the S-RAM, and write enable signal output to the OSD controller
28, 29	NO USE	-	Not used
30	TX_RST	O	Reset signal output to the HDMI transceiver "L": reset
31	TX_5VPWR	O	Power on/off control signal output terminal for the HDMI ASSIGNABLE (INPUT ONLY) OUT jack "H": power on
32	VDAC_RESET	O	Reset signal output to the D/A converter "L": reset
33, 34	NO USE	-	Not used
35	RX_RST	O	Reset signal output to the HDMI receiver "L": reset
36	VCC3 +3.3V	-	Power supply terminal (+3.3V)
37	C_2	-	Not used
38	VSS GND	-	Ground terminal
39	X0	I	System clock input terminal (4 MHz)
40	X1	O	System clock output terminal (4 MHz)
41	VSS GND	-	Ground terminal
42	X0A	I	System clock input terminal Not used
43	X1A	O	System clock output terminal Not used
44	VCC3 +3.3V	-	Power supply terminal (+3.3V)
45	VSS GND	-	Ground terminal
46 to 53	SRAM IO0 to SRAM IO7	I/O	Two-way data bus with the S-RAM

Pin No.	Pin Name	I/O	Description
54 to 56	SRAM IO8/ YAMAHA D0 to SRAM IO10/ YAMAHA D2	I/O	Two-way data bus with the OSD controller and S-RAM
57	VCC3 +3.3V	-	Power supply terminal (+3.3V)
58	VSS GND	-	Ground terminal
59 to 63	SRAM IO11/ YAMAHA D3 to SRAM IO15/ YAMAHA D7	I/O	Two-way data bus with the OSD controller and S-RAM
64	YAMAHA PS0	O	Address signal output to the OSD controller
65, 66	SRAM A0/ YAMAHA PS1, SRAM A1/ YAMAHA PS2	O	Address signal output to the OSD controller and S-RAM
67 to 72	SRAM A2 to SRAM A7	O	Address signal output to the S-RAM
73	VCC3 +3.3V	-	Power supply terminal (+3.3V)
74	VSS GND	-	Ground terminal
75 to 83	SRAM A8 to SRAM A16	O	Address signal output to the S-RAM
84	EXR_ROMA17	O	Not used
85 to 87	NO USE	-	Not used
88	VSS GND	-	Ground terminal
89	VCC3 +3.3V	-	Power supply terminal (+3.3V)
90, 91	NO USE	-	Not used
92	NON LPCM	O	PCM audio data output to the DSP1
93	9185 1 HPD1-3	O	Hot plug detection signal output to the HDMI input select
94	9185 1 RST	O	Reset signal output to the HDMI input select "L": reset
95 to 97	NO USE	-	Not used
98	AUDIO MUTE REQ	O	Audio muting control signal output terminal
99 to 113	NO USE	-	Not used
114	VSS GND	-	Ground terminal
115, 116	VCC3 +3.3V	-	Power supply terminal (+3.3V)
117	UC3V_SDA	I/O	I2C two-way data bus with the EEPROM, HDMI input select, HDMI receiver, HDMI transceiver and D/A converter
118	UC3V_SCL	O	I2C clock signal output to the EEPROM, HDMI input select, HDMI receiver, HDMI transceiver and D/A converter
119	YAMAHA_INT_N	I	Interrupt status input from the OSD controller
120	NO USE	-	Not used
121	RX_INT	I	Interrupt status input from the HDMI receiver
122	NO USE	-	Not used
123	TX_INT	I	Interrupt status input from the HDMI transceiver
124	NO USE	-	Not used
125	Faroudja Power DETECT	I	Power detection signal input from the video processor
126	Faroudja UCOM RESET	O	Reset signal output to the video processor and flash memory "L": reset
127	MD3	-	Mode setting terminal Fixed at "L" in this set

Pin No.	Pin Name	I/O	Description
128	MD2	I	Programming mode signal input from the system controller
129, 130	MD1, MD0	-	Mode setting terminal Fixed at "L" in this set
131	INITX	I	Reset signal input from the system controller "L": reset
132	VSS GND	-	Ground terminal
133	VCC5 +5V	-	Power supply terminal (+3.3V)
134	Flash Update RX	I	Serial data input terminal
135	Flash Update TX	O	Serial data output terminal
136	ENDFLAG	I	Programming end flag input from the system controller
137	MAIN UCOM UART RX	I	Serial data input from the system controller
138	MAIN UCOM UART TX	O	Serial data output to the system controller
139	MAIN UCOM UART BUSY	I	Busy signal input from the system controller
140	Faroudja UCOM UART RX	I	UART communication transfer data input from the video processor
141	Faroudja UCOM UART TX	O	UART communication transfer data output to the video processor
142	Faroudja UCOM BUSY	O	Busy signal output to the video processor
143 to 145	NO USE	-	Not used
146	VSS GND	-	Ground terminal
147	VCC5 +5V	-	Power supply terminal (+3.3V)
148 to 160	NO USE	-	Not used
161	VSS GND	-	Ground terminal
162	VCC5 +5V	-	Power supply terminal (+3.3V)
163 to 167	NO USE	-	Not used
168	V.SYNC_DET	I	Vertical sync signal input from the HDMI receiver
169 to 175	NO USE	-	Not used
176	VCC5	-	Power supply terminal (+3.3V)

CONTROL BOARD IC2003 MB91F467RA-07A43ES-X100 (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	VSS	-	Ground terminal
2	POW-SW_DET	I	POWER switch input terminal
3	XM_POW	O	Power supply on/off control signal output terminal for XM section "H": power on
4	C_DET	I	Component video signal detection signal input terminal
5	NO_USE	-	Not used
6	V_DET	I	CVBS video signal detection signal input terminal
7	V595_OE	O	Output enable signal output to the data decoder
8	V595_LAT	O	Serial data latch pulse signal output to the data decoder
9	HDMI_MUTE	O	Monitor video out muting on/off control signal output to the video amplifier "H": muting on
10	XM_DA_LAT	O	Serial data latch pulse signal output to the D/A converter
11, 12	VCC3	-	Power supply terminal (+3.3V)
13	VSS	-	Ground terminal
14	C_1	-	External capacitor connection terminal for internal regulator
15, 16	TUNE+/-2, TUNE+/-1	I	Jog dial pulse input from the rotary encoder (for TUNING)
17, 18	TONE+/-2, TONE+/-1	I	Jog dial pulse input from the rotary encoder (for TONE)
19, 20	FUNC-JOG_A, FUNC-JOG_B	I	Jog dial pulse input from the rotary encoder (for INPUT SELECTOR)
21, 22	VOL-JOG_A, VOL-JOG_B	I	Jog dial pulse input from the rotary encoder (for MASTER VOLUME)
23	HP_IN	I	Headphone detection signal input terminal "H": headphone is connected
24, 25	NO_USE	-	Not used
26	MIC_ON	O	Enable signal output to the mic amplifier
27 to 29	NO_USE	-	Not used
30	TRG-1	O	Trigger signal output terminal
31, 32	NO_USE	-	Not used
33	C_MON_MUTE	O	Component video monitor out muting on/off control signal output terminal "H": muting on
34	VC_MUTE	O	Component video muting on/off control signal output to the input select (for component video) "H": muting on
35	NO_USE	-	Not used
36	VCC3	-	Power supply terminal (+3.3V)
37	C_2	-	External capacitor connection terminal for internal regulator
38	VSS	-	Ground terminal
39	X0	I	Main system clock input terminal (4 MHz)
40	X1	O	Main system clock output terminal (4 MHz)
41	VSS	-	Ground terminal
42	X0A	I	Sub system clock input terminal Not used
43	X1A	O	Sub system clock output terminal Not used
44	VCC3	-	Power supply terminal (+3.3V)
45	VSS	-	Ground terminal
46	HDMI_ERROR	I	HDMI audio error signal input terminal
47	CEC_M/DV	O	CEC data output terminal
48	NO_USE	-	Not used
49	DSP_ENDFLAG	O	Programming end flag output to the DSP controller
50	DSP_UCOM _MODE	O	Programming mode signal output to the DSP controller

Pin No.	Pin Name	I/O	Description
51	M-D_BUSY	O	Busy signal output to the DSP controller
52	D-M_BUSY	I	Busy signal input from the DSP controller
53	DSP_UCOM _RST	O	Reset signal output to the DSP controller "L": reset
54	M-D_INT	I	Interrupt request signal input from the DSP controller
55	AVSYNC_XCS	O	Chip enable signal output to the lip sync adjust
56	AVSYNC_SIO	I/O	Two-way data bus with the lip sync adjust
57	VCC3	-	Power supply terminal (+3.3V)
58	VSS	-	Ground terminal
59	D/A MUTE	O	Audio muting on/off control signal output terminal "H": muting on
60	TUNER_DATA	O	Serial data output to the tuner (FM/AM)
61	TUNER_CLK	O	Serial data transfer clock signal output to the tuner (FM/AM)
62	AVSYNC_RST	O	Reset signal output to the lip sync adjust "L": reset
63	NO USE	-	Not used
64	DIR_XMODE	O	Reset signal output to the digital audio interface receiver "L": reset
65	DIR_CE	O	Chip enable signal output to the digital audio interface receiver
66	DIR_DO	I	Serial data input from the digital audio interface receiver
67	DIR_RERR	I	PLL lock error signal and data error flag input from the digital audio interface receiver
68	DIR_CKST	I	Clock select signal input from the digital audio interface receiver
69	TUN_TUNED	I	Tuned detection signal input from the tuner (FM/AM)
70	TUN_LAT	O	Serial data latch pulse signal output to the tuner (FM/AM)
71	TUN_DO	I	Serial data input from the tuner (FM/AM)
72	RDS_DATA	I	RDS serial data input from the tuner (FM/AM)
73	VCC3	-	Power supply terminal (+3.3V)
74	VSS	-	Ground terminal
75	POW_RY	O	Relay drive signal (for main power) output terminal "H": relay on
76	PREOUT_RY	O	Relay drive signal (for pre out) output terminal "H": relay on
77	SIRIUS-POW_EN	O	Power enable signal output to the SIRIUS connector
78	NO_USE	-	Not used
79	HP_RY	O	Relay drive signal (for headphone) output terminal "H": relay on
80	NO_USE	-	Not used
81	SP-A_RY	O	Relay drive signal (for front A) output terminal "H": relay on
82	STOP	I	AC cut detection signal input terminal
83	SP-B_RY	O	Relay drive signal (for front B) output terminal "H": relay on
84	C_RY	O	Relay drive signal (for center) output terminal "H": relay on
85	SB_RY	O	Relay drive signal (for surround back) output terminal "H": relay on
86	SR_RY	O	Relay drive signal (for surround) output terminal "H": relay on
87	4/8_RY	O	Impedance 4/8 ohm selection signal output terminal
88	VSS	-	Ground terminal
89	VCC3	-	Power supply terminal (+3.3V)
90	NO_USE	-	Not used
91	FUNC_LAT	O	Serial data latch pulse signal output to the input selector (for analog audio)
92	EVOL_DAT	O	Serial data output to the electrical volume
93	AD_RST	O	Reset signal output to the A/D converter "L": reset
94	D/A_LAT	O	Serial data latch pulse signal output to the D/A converter
95	D/A_DO	I	Serial data input from the D/A converter
96	D/A_RST	O	Reset signal output to the D/A converter "L": reset
97	WDRESETX	I	Watch dog timer reset signal output terminal Not used

Pin No.	Pin Name	I/O	Description
98 to100	AD-KEY1 to AD-KEY3	I	Front panel key input terminal (A/D input)
101, 102	NO_USE	-	Not used
103	VERSION	I	Model and destination detection terminal
104	NO_USE	-	Not used
105	2ND_RY	O	Relay drive signal (for zone 2) output terminal "H": relay on
106	BRAVIA_SEL	O	PHONO IN/TV IN selection signal output terminal "L": PHONO IN, "H": TV IN
107	EVOL_CLK	O	Serial data transfer clock signal output to the electrical volume
108	D595_OE	O	Output enable signal output to the data decoder
109	D595_LAT	O	Serial data latch pulse signal output to the data decoder
110	COM1_CLK	O	Serial data transfer clock signal output to the digital audio interface receiver, data decoder and D/A converter
111	COM1_DATA	O	Serial data output to the digital audio interface receiver, data decoder and D/A converter
112	COM2_CLK	O	Serial data transfer clock signal output to the input selector (for analog audio) and data decoder
113	COM2_DATA	O	Serial data output to the input selector (for analog audio) and data decoder
114	AVSS/AVRL	-	Ground terminal
115	AVCC3	-	Power supply terminal (+3.3V)
116	AVRH	I	Reference voltage input terminal (+3.3V)
117	IIC BUS DATA	I/O	I2C data bus terminal Not used
118	IIC BUS CLK	I/O	I2C clock bus terminal Not used
119	SIRCS-IN	I	SIRCS signal input terminal
120	NO_USE	-	Not used
121	CEC_DV/M	I	CEC data input terminal
122	NO_USE	-	Not used
123	ZONE_SEL	I	ZONE SELECT switch input terminal
124	VIDEO-UCOM _MODE	O	Programming mode signal output to the video system controller
125	VIDEO-UCOM _END-FLAG	O	Programming end flag output to the video system controller
126	RST_TRG	O	Reset signal output terminal for the system controller "L": reset
127	MD3	-	Mode setting terminal Fixed at "L" in this set
128	MD2	I	Serial data input terminal
129, 130	MD1, MD0	-	Mode setting terminal Fixed at "L" in this set
131	INITX	I	System reset signal input from the reset signal generator "L": reset For several hundreds msec. after the power supply rises, "L" is input, then it changes to "H"
132	VSS	-	Ground terminal
133	VCC5	-	Power supply terminal (+5V)
134	RS232C_MIN	I	Serial data input terminal
135	RS232C_MOUT	O	Serial data output terminal
136	VIDEO-UCOM _RESET	O	Reset signal output to the video system controller "L": reset
137	XM_XM/M	I	Serial data input from the XM receiver
138	XM_M/XM	O	Serial data output to the XM receiver
139	XM_RESET	O	Reset signal output to the XM receiver "L": reset
140	VIDEO-UCOM _VM/M	I	Serial data input from the video system controller
141	VIDEO-UCOM _M/VM	O	Serial data output to the video system controller

Pin No.	Pin Name	I/O	Description
142	VIDEO-UCOM _BUSY	O	Busy signal output to the video system controller
143	D-M_DATA	I	Serial data input from the DSP controller
144	M-D_DATA	O	Serial data output to the DSP controller
145	NO_USE	-	Not used
146	VSS	-	Ground terminal
147	VCC5	-	Power supply terminal (+5V)
148	SIRIUS_TX	I	Serial data input from the SIRIUS connector
149	SIRIUS_RX	O	Serial data output to the SIRIUS connector
150	FL_CLR	O	Blanking period signal output to the fluorescent indicator tube
151	FL_LAT	O	Serial data latch pulse signal output to the fluorescent indicator tube
152	FL_DATA	O	Serial data output to the fluorescent indicator tube
153	FL_CLK	O	Serial data transfer clock signal output to the fluorescent indicator tube
154	DMUART_DM/M	I	Serial data input from the DMPORT connector
155	DMUART_M/DM	O	Serial data output to the DMPORT connector
156	DMPORT_DET	I	DMPORT detection signal input terminal
157, 158	NO_USE	-	Not used
159	P15_2/O/T2	-	Not used
160	P15_3/O/T3	-	Not used
161	VSS	-	Ground terminal
162	VCC5	-	Power supply terminal (+5V)
163	PROTECTOR	I	Protect signal input terminal
164	NO_USE	-	Not used
165	RDS_CLK	I	RDS serial data transfer clock signal input from the tuner (FM/AM)
166, 167	232C-SEL1, 232C-SEL2	O	Data selection signal output to the data selector
168	FSRATE1	I	L/R sampling clock signal input terminal
169	LED-STB	O	LED drive signal output terminal for ON/STANDBY indicator "H": LED on
170	FSRATE2	I	L/R sampling clock signal input terminal
171	LED-DCS	O	LED drive signal output terminal for Digital Cinema Sound indicator "H": LED on
172	LED-MLT	O	LED drive signal output terminal MULTI CHANNEL DECODING indicator "H": LED on
173	LED-MLT -DIMMER	O	LED dimmer control signal output terminal for MULTI CHANNEL DECODING indicator "H": dimmer on
174	EEPROM_SDA	I/O	Two-way data bus with the EEPROM
175	EEPROM_SCL	O	Serial data transfer clock signal output to the EEPROM
176	VCC5	-	Power supply terminal (+5V)

SECTION 7
EXPLODED VIEWS

NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
  Example:
  KNOB, BALANCE (WHITE) . . . (RED)
  ↑ ↑
  Parts Color Cabinet's Color
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Accessories are given in the last of the electrical parts list.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiquens pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by mark 🔒 contain confidential information.
Strictly follow the instructions whenever the components are repaired and/or replaced.

Les composants identifiés par la marque 🔒 contiennent des informations confidentielles.
Suivre scrupuleusement les instructions chaque fois qu'un composant est remplacé et / ou réparé.

7-1. CASE SECTION

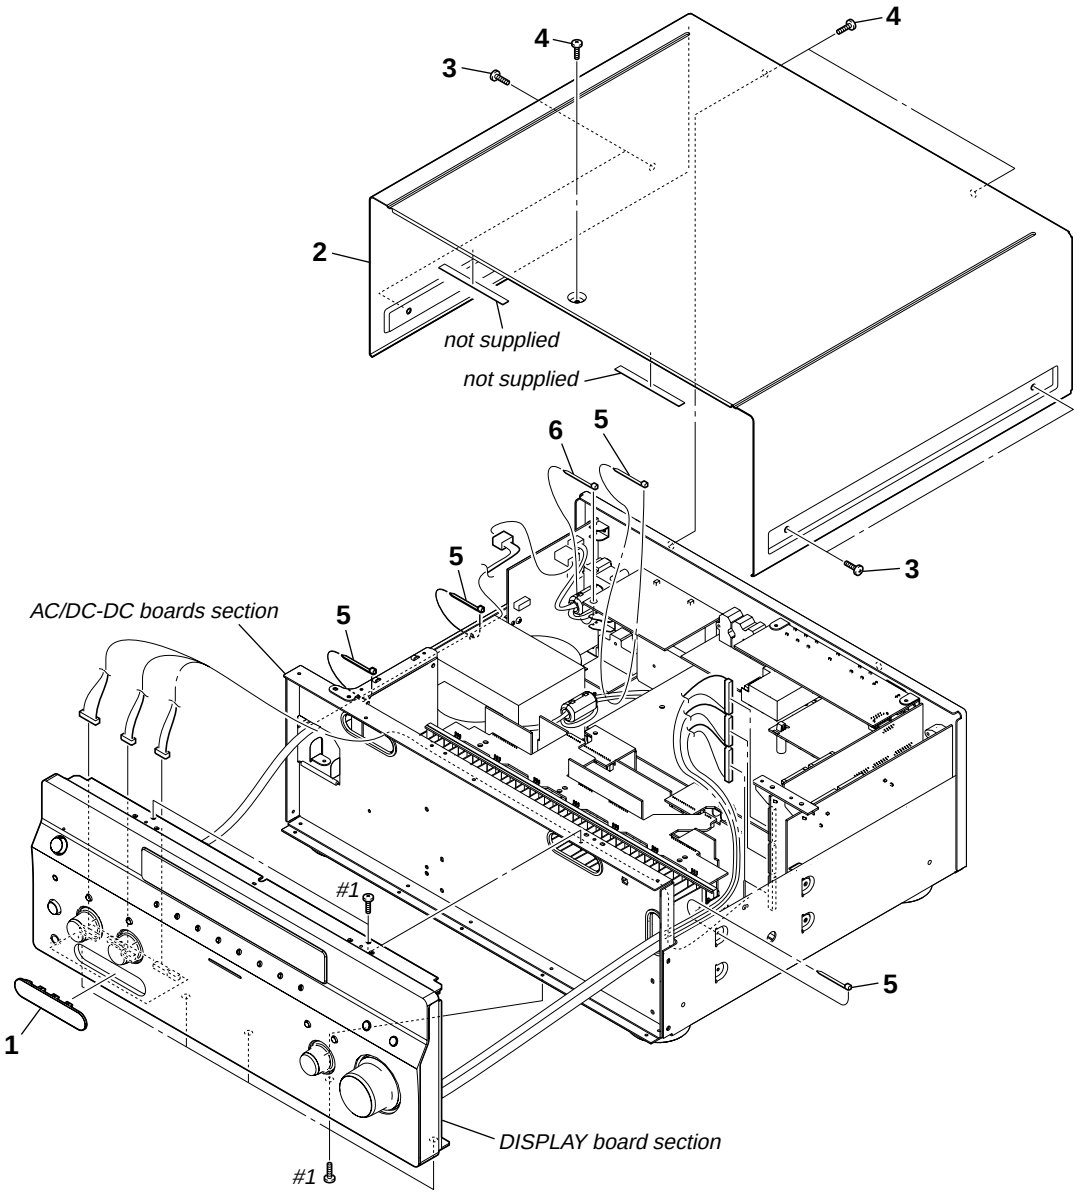

Ref. No.	Part No.	Description	Remark
1	2-698-310-01	LID (A2)	
2	2-668-102-11	CASE	
3	2-580-630-01	SCREW, +BVST 4X8	
4	4-227-843-03	SCREW (TP), FLAT HEAD	
5	3-701-748-00	CLAMP	
6	3-655-653-11	BAND (TAITON), BINDING	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

7-2. DISPLAY BOARD SECTION

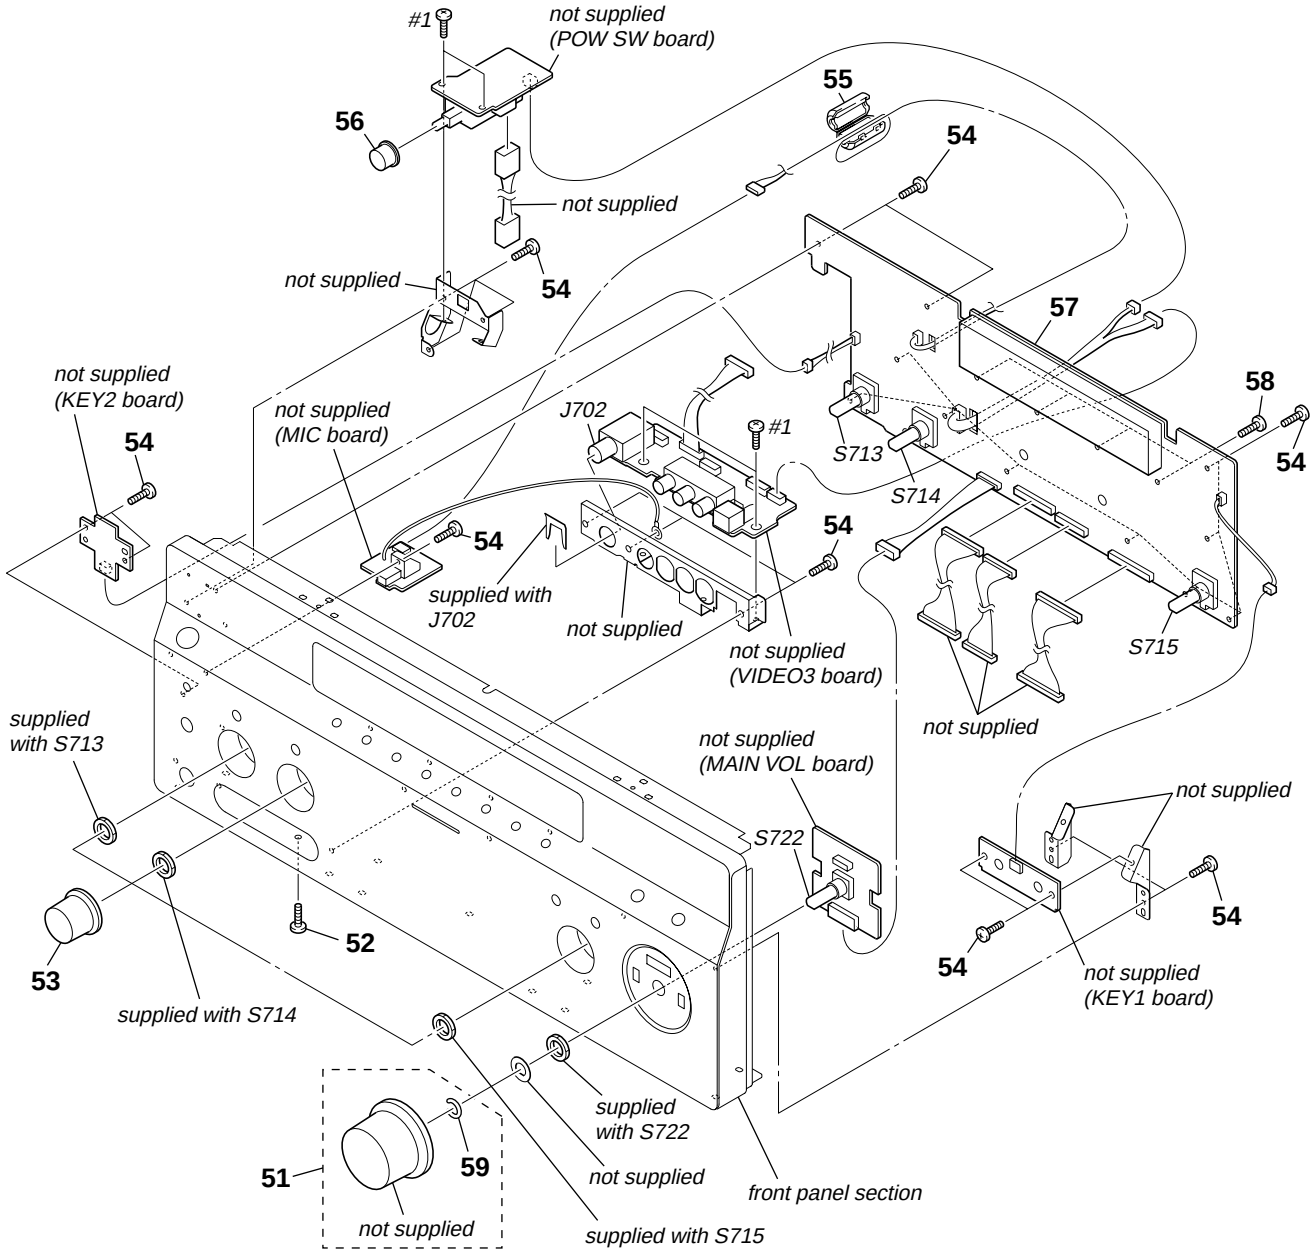

Ref. No.	Part No.	Description	Remark
51	X-2176-946-1	KNOB (VOL) ASSY	
52	3-704-515-22	SCREW (BV/RING)	
53	2-661-141-31	MENU KNOB	
54	3-087-053-01	+BVTP2.6 (3CR)	
55	1-543-793-41	FILTER, CLAMP (FERRITE CORE)	
56	3-113-929-01	BUTTON (POWER-A13)	
57	A-1257-022-A	DISPLAY BOARD, COMPLETE	
58	3-087-053-11	+BVTP2.6 (3CR)	

Ref. No.	Part No.	Description	Remark
59	3-350-426-01	SPRING, RING	
J702	1-815-313-11	JACK (PHONES)	
S713	1-418-400-11	ENCODER, ROTARY (TONE)	
S714	1-418-400-11	ENCODER, ROTARY (TUNING)	
S715	1-418-400-11	ENCODER, ROTARY (INPUT SELECTOR)	
S722	1-418-725-41	ENCODER, ROTARY (12 TYPE) (MASTER VOLUME)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

7-3. FRONT PANEL SECTION

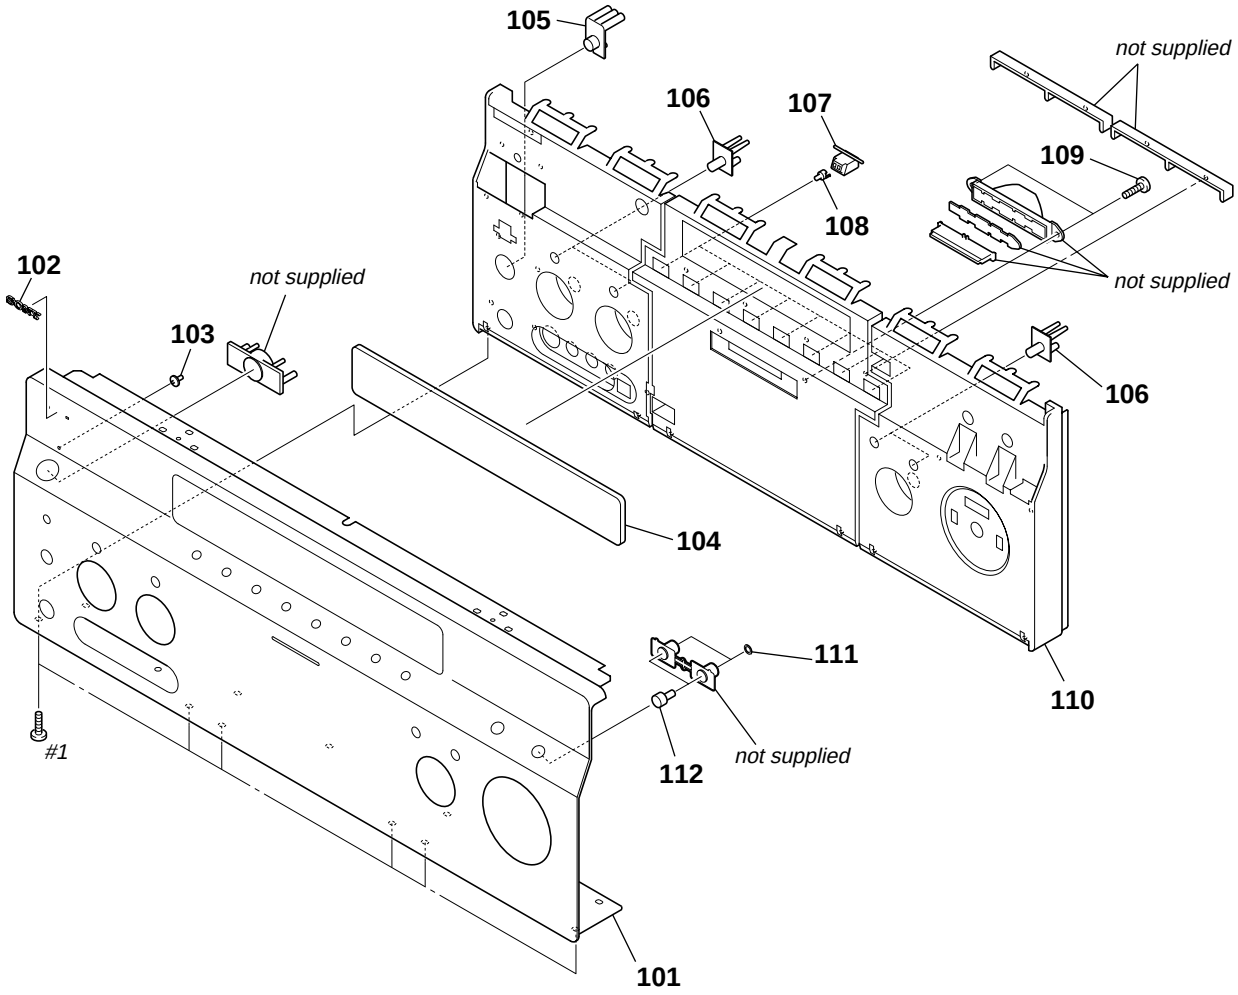

Ref. No.	Part No.	Description	Remark
101	3-196-055-81	PANEL (A13), FRONT	
102	4-942-568-41	EMBLEM (NO.5), SONY	
103	X-4950-462-1	LENS ASSY, LED	
104	2-668-128-01	PLATE (A2), INDICATION	
105	4-245-434-01	BUTTON (SP)	
106	2-668-113-01	BUTTON (ZONE)	
107	2-676-728-01	BUTTON (MUSIC-B)	
108	2-676-727-01	BUTTON (MUSIC-A)	
109	3-087-053-01	+BVTP2.6 (3CR)	
110	2-668-108-21	BASE, PANEL (A2)	
111	3-325-697-21	WASHER	
112	3-198-582-01	BUTTON (DIA. 7-A23)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

7-4. AC/DC-DC BOARDS SECTION

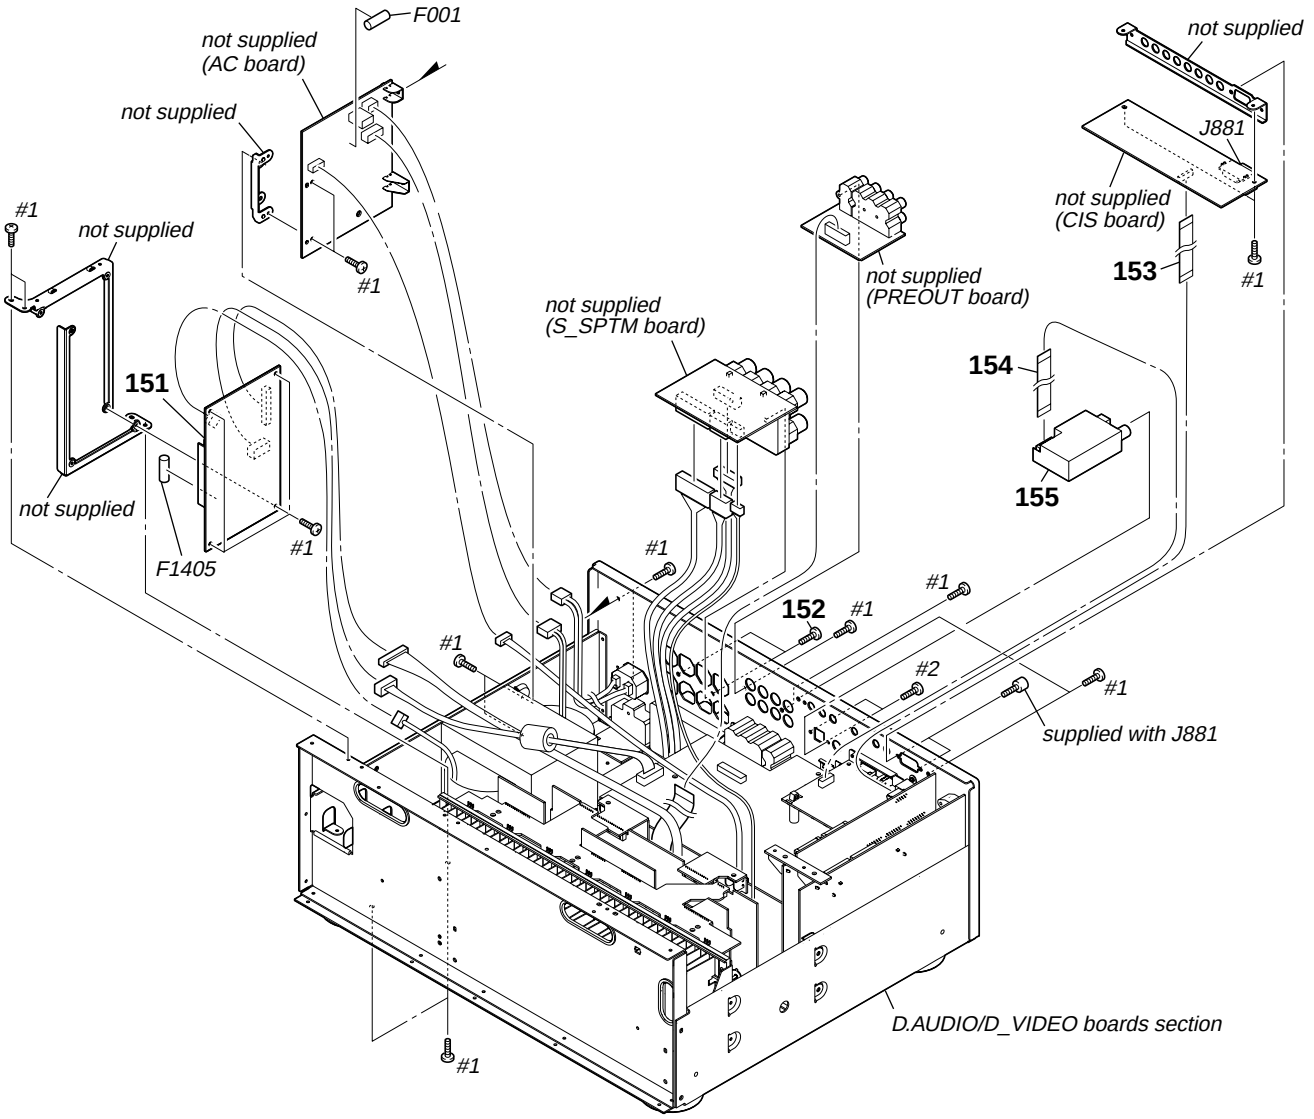

Ref. No.	Part No.	Description	Remark
151	A-1252-444-A	DC-DC BOARD, COMPLETE	
152	3-704-515-51	SCREW (BV/RING)	
153	1-828-318-51	WIRE (FLAT TYPE) (11 CORE)	
154	1-828-954-51	WIRE (FLAT TYPE) (9 CORE)	
155	1-693-728-11	TUNER (FM/AM)	

Ref. No.	Part No.	Description	Remark
⚠F001	1-533-311-12	FUSE, GLASS CYLINDRICAL (DIA.5) (8A/125V)	
⚠F1405	1-532-506-33	FUSE (T6.3AL/250V)	
J881	1-815-737-11	CONNECTOR, (D) SUB 9P (RS-232C)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
#2	7-685-862-01	SCREW +BVTT 2.6X6 (S)	

7-5. D.AUDIO/D_VIDEO BOARDS SECTION

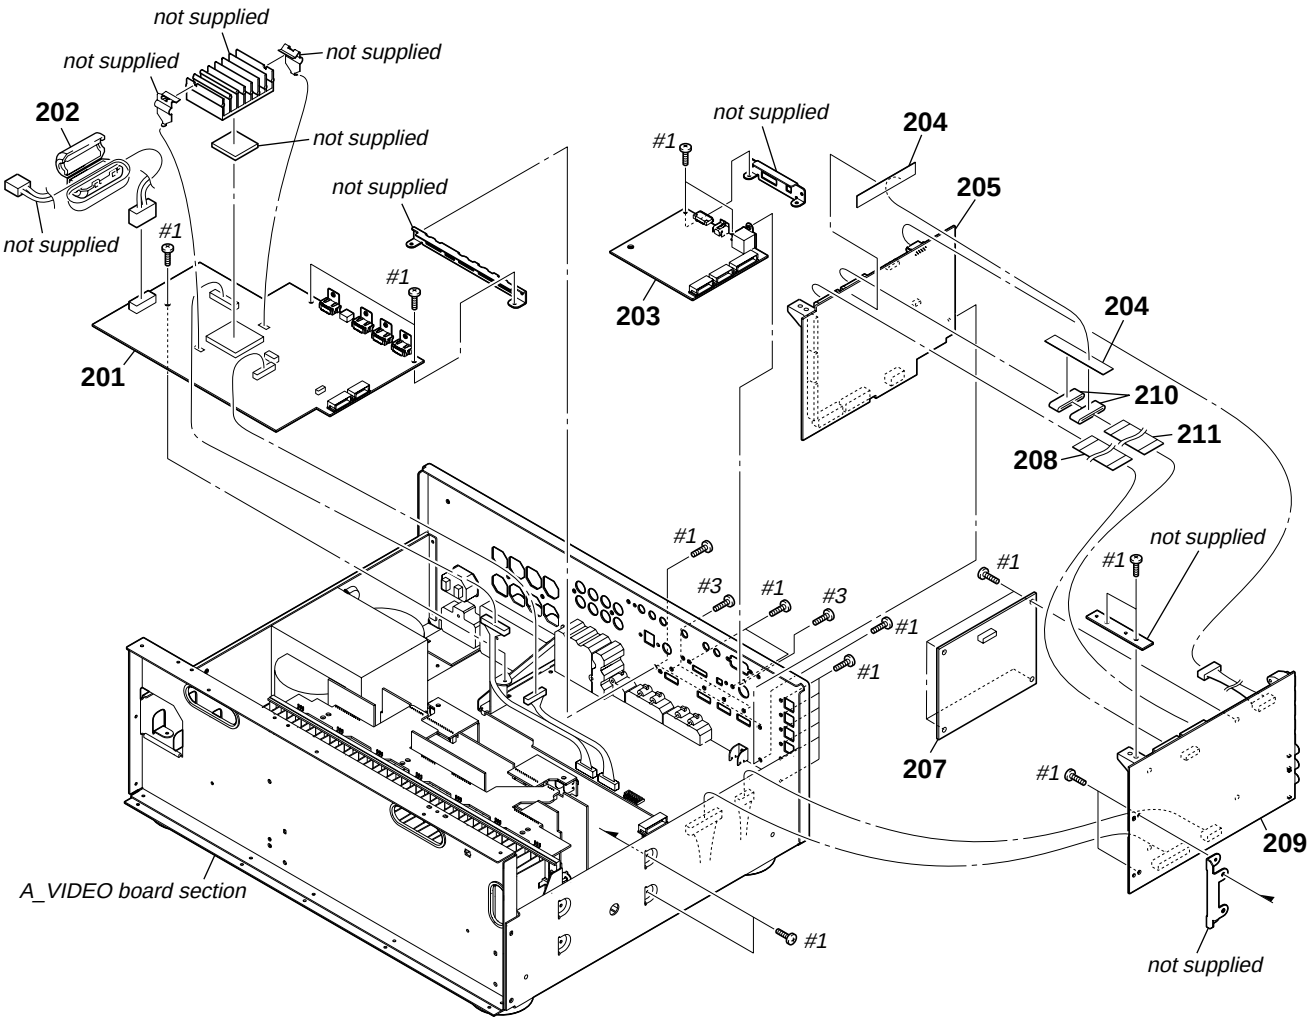

Ref. No.	Part No.	Description	Remark
🔒 201	A-1313-290-A	D_VIDEO BOARD, COMPLETE (for SERVICE)	
202	1-500-386-11	FILTER, CLAMP (FERRITE CORE)	
203	A-1382-222-A	TUNER BOARD, COMPLETE	
204	3-378-109-12	CUSHION, SARANET	
205	A-1274-399-A	CONTROL BOARD, COMPLETE	
207	A-1439-542-A	DSP BOARD, COMPLETE	

Ref. No.	Part No.	Description	Remark
208	1-832-623-11	WIRE (FLAT TYPE) (23 CORE)	
209	A-1274-400-A	D.AUDIO BOARD, COMPLETE	
* 210	1-469-435-11	CORE, FERRITE	
211	1-828-387-51	WIRE (FLAT TYPE) (25 CORE)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
#3	7-682-547-04	SCREW +B 3X6	

7-6. A_VIDEO BOARD SECTION

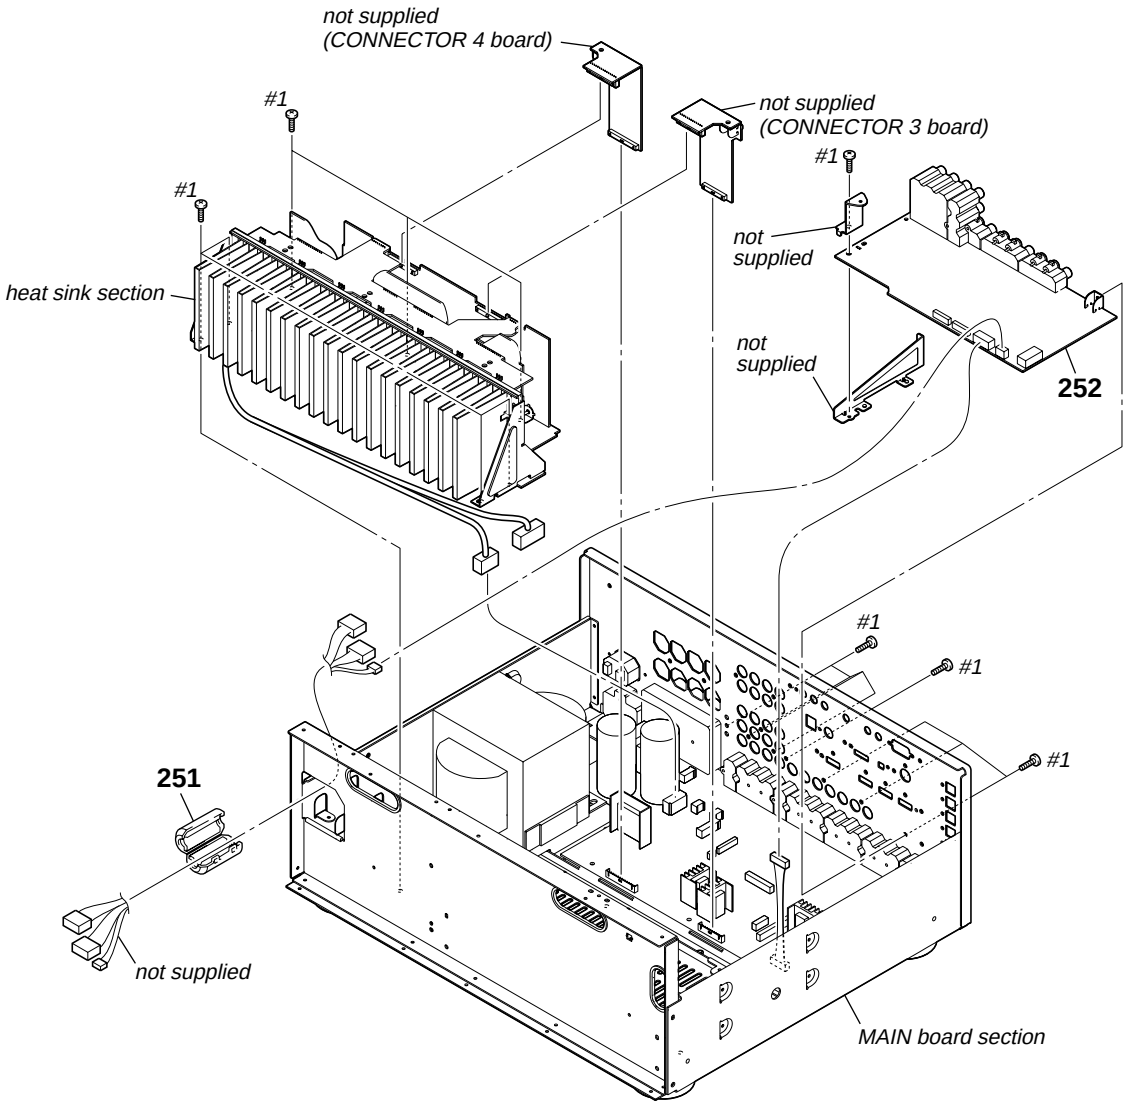

Ref. No.	Part No.	Description	Remark
251	1-500-386-11	FILTER, CLAMP (FERRITE CORE)	
252	A-1254-399-A	A_VIDEO BOARD, COMPLETE	

Ref. No.	Part No.	Description	Remark
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

7-7. HEAT SINK SECTION

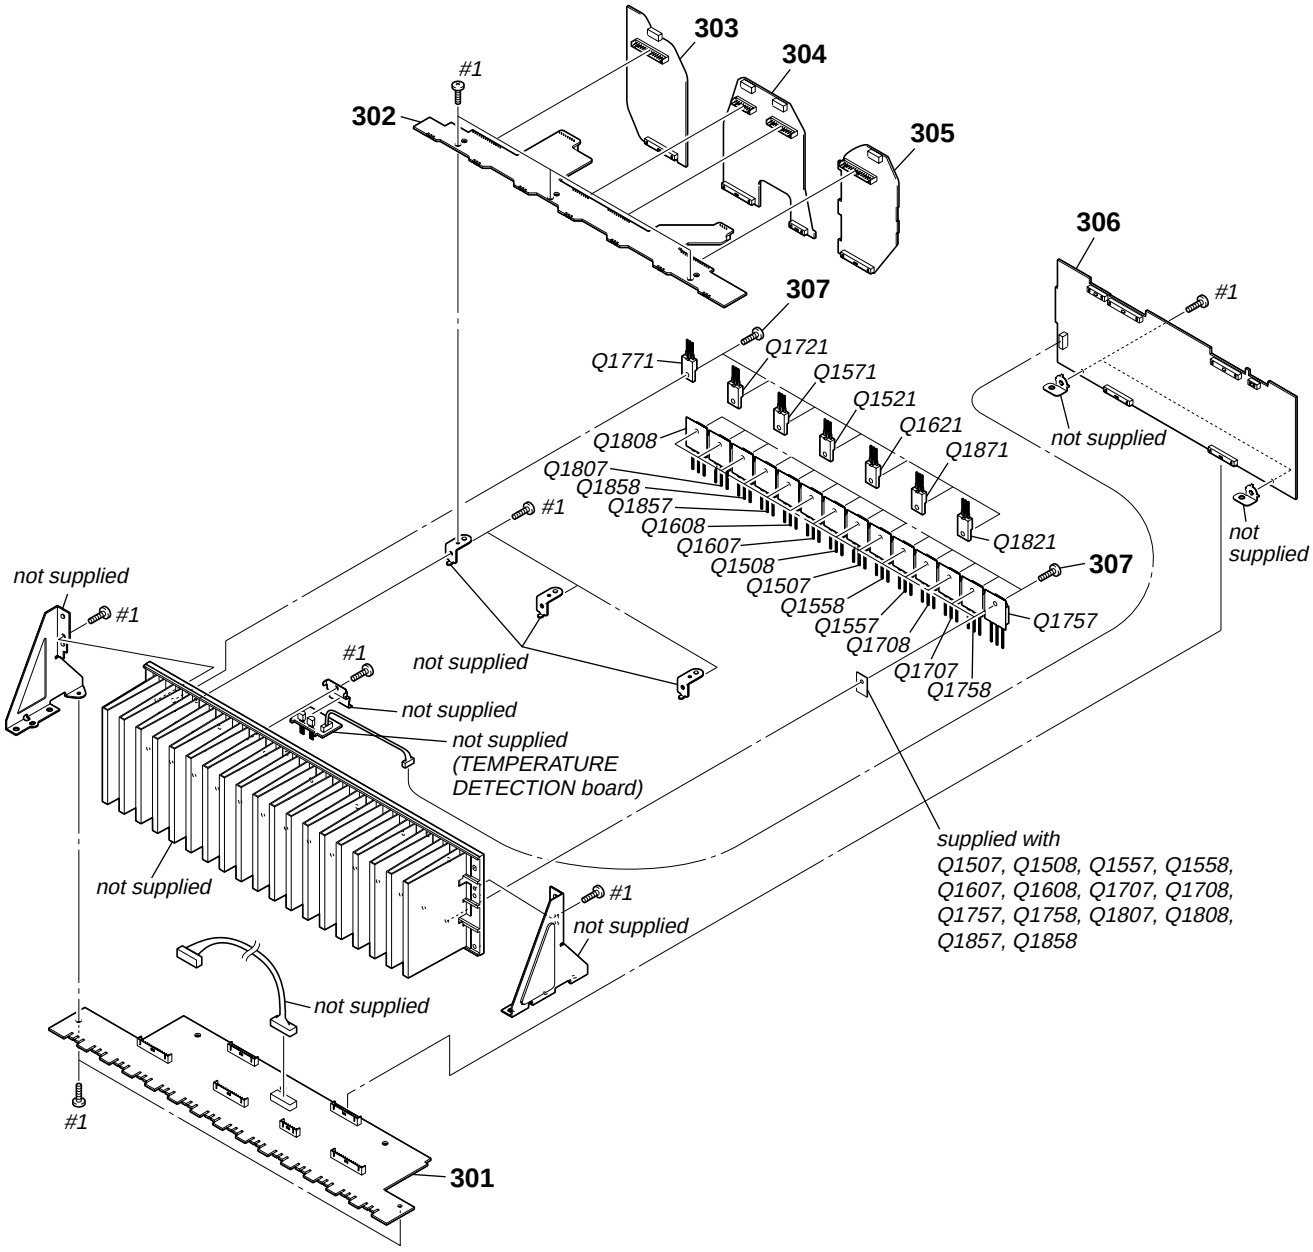

Ref. No.	Part No.	Description	Remark
301	A-1254-657-A	POWER AMP BOARD, COMPLETE	
302	A-1254-659-A	BIAS BOARD, COMPLETE	
303	A-1252-369-A	PROTECTOR (SB) BOARD, COMPLETE	
304	A-1252-367-A	PROTECTOR (F-C) BOARD, COMPLETE	
305	A-1252-368-A	PROTECTOR (SURR) BOARD, COMPLETE	
306	A-1254-660-A	A CLASS AMP BOARD, COMPLETE	
307	3-905-609-13	SCREW (TRANSISTOR)	
Q1507	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q1508	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q1521	8-729-026-08	TRANSISTOR 2SC4495	
Q1557	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q1558	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q1571	8-729-026-08	TRANSISTOR 2SC4495	
Q1607	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q1608	6-702-391-01	TRANSISTOR MP1620-OPY-MK	

Ref. No.	Part No.	Description	Remark
Q1621	8-729-026-08	TRANSISTOR 2SC4495	
Q1707	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q1708	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q1721	8-729-026-08	TRANSISTOR 2SC4495	
Q1757	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q1758	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q1771	8-729-026-08	TRANSISTOR 2SC4495	
Q1807	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q1808	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q1821	8-729-026-08	TRANSISTOR 2SC4495	
Q1857	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q1858	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q1871	8-729-026-08	TRANSISTOR 2SC4495	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

7-8. MAIN BOARD SECTION

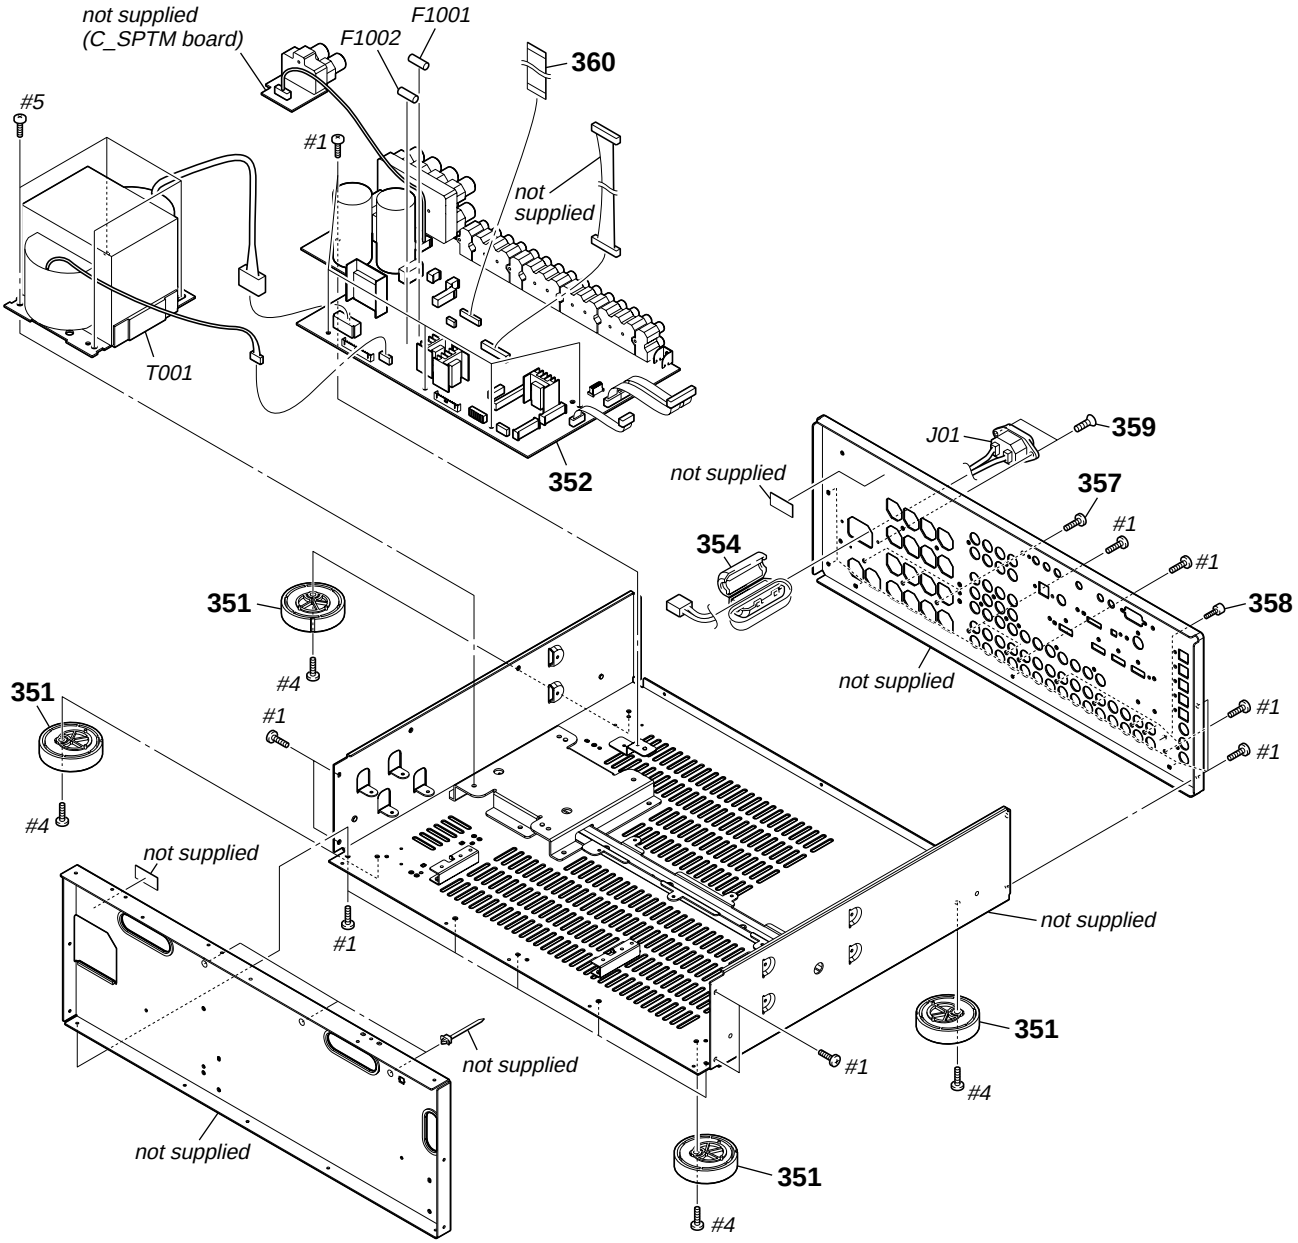

Ref. No.	Part No.	Description	Remark
351	X-4955-348-1	FOOT ASSY	
352	A-1314-646-A	MAIN BOARD, COMPLETE	
354	1-500-386-11	FILTER, CLAMP (FERRITE CORE)	
357	3-704-515-51	SCREW (BV/RING)	
358	4-947-010-01	SCREW, FEEDER FIXED	
359	2-580-644-01	SCREW, +KTP2 3X8	
360	1-828-362-51	WIRE (FLAT TYPE) (19 CORE)	

Ref. No.	Part No.	Description	Remark
⚠F1001	1-532-504-33	FUSE (T4AL/250V)	
⚠F1002	1-532-504-33	FUSE (T4AL/250V)	
⚠J01	1-821-082-21	INLET, AC 2P (~AC IN)	
⚠T001	1-445-232-11	TRANSFORMER, POWER	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
#4	7-685-885-09	SCREW +BVTT 4X16 (S)	
#5	7-685-881-09	SCREW +BVTT 4X8 (S)	

A CLASS AMP

SECTION 8
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS
  uF: µF
- COILS
  uH: µH
- RESISTORS
  All resistors are in ohms.
  METAL: Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F: nonflammable
- SEMICONDUCTORS
  In each case, u: µ, for example:
  uA... : µA... uPA... : µPA...
  uPB... : µPB... uPC... : µPC...
  uPD... : µPD...

When indicating parts by reference number, please include the board.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiquens pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by mark 🔒 contain confidential information. Strictly follow the instructions whenever the components are repaired and/or replaced.

Les composants identifiés par la marque 🔒 contiennent des informations confidentielles. Suivre scrupuleusement les instructions chaque fois qu'un composant est remplacé et / ou réparé.

Ref. No.	Part No.	Description			Remark
	A-1254-660-A	A CLASS AMP BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C1501	1-126-963-11	ELECT	4.7uF	20%	50V
C1502	1-128-809-11	CERAMIC	100PF	5%	50V
C1503	1-137-503-11	FILM	100PF	5%	100V
C1504	1-136-357-11	FILM	680PF	5%	100V
C1505	1-104-665-11	ELECT	100uF	20%	25V
C1507	1-107-587-11	CERAMIC	7PF	0.5PF	500V
C1508	1-126-940-11	ELECT	330uF	20%	25V
C1510	1-126-934-11	ELECT	220uF	20%	16V
C1511	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C1515	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C1551	1-126-963-11	ELECT	4.7uF	20%	50V
C1552	1-128-809-11	CERAMIC	100PF	5%	50V
C1553	1-137-503-11	FILM	100PF	5%	100V
C1554	1-136-357-11	FILM	680PF	5%	100V
C1555	1-104-665-11	ELECT	100uF	20%	25V
C1557	1-107-587-11	CERAMIC	7PF	0.5PF	500V
C1558	1-126-940-11	ELECT	330uF	20%	25V
C1560	1-126-934-11	ELECT	220uF	20%	16V
C1561	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C1565	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C1601	1-126-963-11	ELECT	4.7uF	20%	50V
C1602	1-128-809-11	CERAMIC	100PF	5%	50V
C1603	1-137-503-11	FILM	100PF	5%	100V
C1604	1-136-357-11	FILM	680PF	5%	100V
C1605	1-104-665-11	ELECT	100uF	20%	25V
C1607	1-107-587-11	CERAMIC	7PF	0.5PF	500V
C1608	1-126-940-11	ELECT	330uF	20%	25V
C1610	1-126-934-11	ELECT	220uF	20%	16V
C1611	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C1615	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C1701	1-126-963-11	ELECT	4.7uF	20%	50V
C1702	1-128-809-11	CERAMIC	100PF	5%	50V
C1703	1-137-503-11	FILM	100PF	5%	100V
C1704	1-136-357-11	FILM	680PF	5%	100V
C1705	1-104-665-11	ELECT	100uF	20%	25V
C1707	1-107-587-11	CERAMIC	7PF	0.5PF	500V
C1708	1-126-940-11	ELECT	330uF	20%	25V
C1710	1-126-934-11	ELECT	220uF	20%	16V
C1711	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C1715	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C1751	1-126-963-11	ELECT	4.7uF	20%	50V
C1752	1-128-809-11	CERAMIC	100PF	5%	50V
C1753	1-137-503-11	FILM	100PF	5%	100V
C1754	1-136-357-11	FILM	680PF	5%	100V
C1755	1-104-665-11	ELECT	100uF	20%	25V
C1757	1-107-587-11	CERAMIC	7PF	0.5PF	500V
C1758	1-126-940-11	ELECT	330uF	20%	25V
C1760	1-126-934-11	ELECT	220uF	20%	16V
C1761	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C1765	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C1801	1-126-963-11	ELECT	4.7uF	20%	50V
C1802	1-128-809-11	CERAMIC	100PF	5%	50V
C1803	1-137-503-11	FILM	100PF	5%	100V
C1804	1-136-357-11	FILM	680PF	5%	100V
C1805	1-104-665-11	ELECT	100uF	20%	25V
C1807	1-107-587-11	CERAMIC	7PF	0.5PF	500V
C1808	1-126-940-11	ELECT	330uF	20%	25V
C1810	1-126-934-11	ELECT	220uF	20%	16V
C1811	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C1815	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C1851	1-126-963-11	ELECT	4.7uF	20%	50V
C1852	1-128-809-11	CERAMIC	100PF	5%	50V
C1853	1-137-503-11	FILM	100PF	5%	100V
C1854	1-136-357-11	FILM	680PF	5%	100V
C1855	1-104-665-11	ELECT	100uF	20%	25V
C1857	1-107-587-11	CERAMIC	7PF	0.5PF	500V
C1858	1-126-940-11	ELECT	330uF	20%	25V
C1860	1-126-934-11	ELECT	220uF	20%	16V
C1861	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C1865	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C1901	1-128-560-11	ELECT	22uF	20%	100V
C1902	1-128-560-11	ELECT	22uF	20%	100V
C1911	1-126-791-11	ELECT	10uF	20%	35V
C1912	1-127-888-11	CERAMIC	0.1uF	10%	50V
		< CONNECTOR >			
CN1504	1-764-864-41	CONNECTOR, BOARD TO BOARD 12P			
CN1505	1-573-829-11	CONNECTOR, BOARD TO BOARD 15P			
CN1905	1-764-864-41	CONNECTOR, BOARD TO BOARD 12P			
CN1906	1-764-864-41	CONNECTOR, BOARD TO BOARD 12P			

Ref. No.	Part No.	Description	Remark
CN1907	1-770-011-41	CONNECTOR, BOARD TO BOARD 4P	
CN1908	1-784-031-41	CONNECTOR, BOARD TO BOARD 8P	
CN1909	1-784-921-11	PIN, CONNECTOR 4P	
		< DIODE >	
D1501	8-719-109-93	DIODE RD6.2ESB2	
D1551	8-719-109-93	DIODE RD6.2ESB2	
D1601	8-719-109-93	DIODE RD6.2ESB2	
D1701	8-719-109-93	DIODE RD6.2ESB2	
D1751	8-719-109-93	DIODE RD6.2ESB2	
D1801	8-719-109-93	DIODE RD6.2ESB2	
D1851	8-719-109-93	DIODE RD6.2ESB2	
D1901	8-719-991-33	DIODE 1SS133T-77	
D1902	8-719-991-33	DIODE 1SS133T-77	
D1903	8-719-991-33	DIODE 1SS133T-77	
D1907	8-719-991-33	DIODE 1SS133T-77	
D1911	8-719-991-33	DIODE 1SS133T-77	
		< IC >	
IC1902	8-759-167-88	IC NJM4565D	
IC1904	6-711-698-01	IC PQ050ES1MXPQ	
		< TRANSISTOR >	
Q1501	8-729-045-15	TRANSISTOR 2SC5169-FG	
Q1502	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q1503	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q1504	8-729-021-73	TRANSISTOR 2SC2229-OY	
Q1505	8-729-021-74	TRANSISTOR 2SA949-OY	
Q1551	8-729-045-15	TRANSISTOR 2SC5169-FG	
Q1552	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q1553	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q1554	8-729-021-73	TRANSISTOR 2SC2229-OY	
Q1555	8-729-021-74	TRANSISTOR 2SA949-OY	
Q1601	8-729-045-15	TRANSISTOR 2SC5169-FG	
Q1602	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q1603	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q1604	8-729-021-73	TRANSISTOR 2SC2229-OY	
Q1605	8-729-021-74	TRANSISTOR 2SA949-OY	
Q1701	8-729-045-15	TRANSISTOR 2SC5169-FG	
Q1702	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q1703	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q1704	8-729-021-73	TRANSISTOR 2SC2229-OY	
Q1705	8-729-021-74	TRANSISTOR 2SA949-OY	
Q1751	8-729-045-15	TRANSISTOR 2SC5169-FG	
Q1752	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q1753	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q1754	8-729-021-73	TRANSISTOR 2SC2229-OY	
Q1755	8-729-021-74	TRANSISTOR 2SA949-OY	
Q1801	8-729-045-15	TRANSISTOR 2SC5169-FG	
Q1802	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q1803	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q1804	8-729-021-73	TRANSISTOR 2SC2229-OY	
Q1805	8-729-021-74	TRANSISTOR 2SA949-OY	
Q1851	8-729-045-15	TRANSISTOR 2SC5169-FG	
Q1852	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q1853	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q1854	8-729-021-73	TRANSISTOR 2SC2229-OY	
Q1855	8-729-021-74	TRANSISTOR 2SA949-OY	
Q1901	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q1902	8-729-140-96	TRANSISTOR 2SD774-34	
Q1903	8-729-140-96	TRANSISTOR 2SD774-34	
Q1910	8-729-029-94	TRANSISTOR DTC143TSA	
Q1911	8-729-029-86	TRANSISTOR DTC124ESA	
Q1912	8-729-029-86	TRANSISTOR DTC124ESA	
Q1913	8-729-029-86	TRANSISTOR DTC124ESA	
Q1914	8-729-029-86	TRANSISTOR DTC124ESA	
		< RESISTOR >	
R1501	1-259-428-61	CARBON 1K 5% 1/6W	
R1502	1-259-476-61	CARBON 100K 5% 1/6W	
⚠R1503	1-249-409-11	CARBON 220 5% 1/4W F	
⚠R1504	1-249-409-11	CARBON 220 5% 1/4W F	
R1505	1-259-410-61	CARBON 180 5% 1/6W	
R1506	1-259-440-61	CARBON 3.3K 5% 1/6W	
R1507	1-259-436-61	CARBON 2.2K 5% 1/6W	
R1509	1-260-116-11	CARBON 27K 5% 1/2W	
⚠R1511	1-249-405-11	CARBON 100 5% 1/4W F	
R1512	1-247-764-11	CARBON 10K 5% 1/2W	
R1513	1-247-759-11	CARBON 3.9K 5% 1/2W	
R1514	1-249-496-11	CARBON 100K 5% 1/2W	
R1549	1-259-476-61	CARBON 100K 5% 1/6W	
R1551	1-259-428-61	CARBON 1K 5% 1/6W	
R1552	1-259-476-61	CARBON 100K 5% 1/6W	
⚠R1553	1-249-409-11	CARBON 220 5% 1/4W F	
⚠R1554	1-249-409-11	CARBON 220 5% 1/4W F	
R1555	1-259-410-61	CARBON 180 5% 1/6W	
R1556	1-259-440-61	CARBON 3.3K 5% 1/6W	
R1557	1-259-436-61	CARBON 2.2K 5% 1/6W	
R1559	1-260-116-11	CARBON 27K 5% 1/2W	
⚠R1561	1-249-405-11	CARBON 100 5% 1/4W F	
R1562	1-247-764-11	CARBON 10K 5% 1/2W	
R1563	1-247-759-11	CARBON 3.9K 5% 1/2W	
R1564	1-249-496-11	CARBON 100K 5% 1/2W	
R1601	1-259-428-61	CARBON 1K 5% 1/6W	
R1602	1-259-476-61	CARBON 100K 5% 1/6W	
⚠R1603	1-249-409-11	CARBON 220 5% 1/4W F	
⚠R1604	1-249-409-11	CARBON 220 5% 1/4W F	
R1605	1-259-410-61	CARBON 180 5% 1/6W	
R1606	1-259-440-61	CARBON 3.3K 5% 1/6W	
R1607	1-259-436-61	CARBON 2.2K 5% 1/6W	
R1609	1-260-116-11	CARBON 27K 5% 1/2W	
⚠R1611	1-249-405-11	CARBON 100 5% 1/4W F	
R1612	1-247-764-11	CARBON 10K 5% 1/2W	
R1613	1-247-759-11	CARBON 3.9K 5% 1/2W	
R1614	1-249-496-11	CARBON 100K 5% 1/2W	
R1701	1-259-428-61	CARBON 1K 5% 1/6W	
R1702	1-259-476-61	CARBON 100K 5% 1/6W	
⚠R1703	1-249-409-11	CARBON 220 5% 1/4W F	
⚠R1704	1-249-409-11	CARBON 220 5% 1/4W F	
R1705	1-259-410-61	CARBON 180 5% 1/6W	
R1706	1-259-440-61	CARBON 3.3K 5% 1/6W	
R1707	1-259-436-61	CARBON 2.2K 5% 1/6W	
R1709	1-260-116-11	CARBON 27K 5% 1/2W	
⚠R1711	1-249-405-11	CARBON 100 5% 1/4W F	

A CLASS AMP **A_VIDEO**

Ref. No.	Part No.	Description			Remark
R1712	1-247-764-11	CARBON	10K	5%	1/2W
R1713	1-247-759-11	CARBON	3.9K	5%	1/2W
R1714	1-249-496-11	CARBON	100K	5%	1/2W
R1751	1-259-428-61	CARBON	1K	5%	1/6W
R1752	1-259-476-61	CARBON	100K	5%	1/6W
⚠R1753	1-249-409-11	CARBON	220	5%	1/4W F
⚠R1754	1-249-409-11	CARBON	220	5%	1/4W F
R1755	1-259-410-61	CARBON	180	5%	1/6W
R1756	1-259-440-61	CARBON	3.3K	5%	1/6W
R1757	1-259-436-61	CARBON	2.2K	5%	1/6W
R1759	1-260-116-11	CARBON	27K	5%	1/2W
⚠R1761	1-249-405-11	CARBON	100	5%	1/4W F
R1762	1-247-764-11	CARBON	10K	5%	1/2W
R1763	1-247-759-11	CARBON	3.9K	5%	1/2W
R1764	1-249-496-11	CARBON	100K	5%	1/2W
R1801	1-259-428-61	CARBON	1K	5%	1/6W
R1802	1-259-476-61	CARBON	100K	5%	1/6W
⚠R1803	1-249-409-11	CARBON	220	5%	1/4W F
⚠R1804	1-249-409-11	CARBON	220	5%	1/4W F
R1805	1-259-410-61	CARBON	180	5%	1/6W
R1806	1-259-440-61	CARBON	3.3K	5%	1/6W
R1807	1-259-436-61	CARBON	2.2K	5%	1/6W
R1809	1-260-116-11	CARBON	27K	5%	1/2W
⚠R1811	1-249-405-11	CARBON	100	5%	1/4W F
R1812	1-247-764-11	CARBON	10K	5%	1/2W
R1813	1-247-759-11	CARBON	3.9K	5%	1/2W
R1814	1-249-496-11	CARBON	100K	5%	1/2W
R1851	1-259-428-61	CARBON	1K	5%	1/6W
R1852	1-259-476-61	CARBON	100K	5%	1/6W
⚠R1853	1-249-409-11	CARBON	220	5%	1/4W F
⚠R1854	1-249-409-11	CARBON	220	5%	1/4W F
R1855	1-259-410-61	CARBON	180	5%	1/6W
R1856	1-259-440-61	CARBON	3.3K	5%	1/6W
R1857	1-259-436-61	CARBON	2.2K	5%	1/6W
R1859	1-260-116-11	CARBON	27K	5%	1/2W
⚠R1861	1-249-405-11	CARBON	100	5%	1/4W F
R1862	1-247-764-11	CARBON	10K	5%	1/2W
R1863	1-247-759-11	CARBON	3.9K	5%	1/2W
R1864	1-249-496-11	CARBON	100K	5%	1/2W
R1901	1-259-460-61	CARBON	22K	5%	1/6W
R1902	1-259-460-61	CARBON	22K	5%	1/6W
⚠R1903	1-249-393-11	CARBON	10	5%	1/4W F
R1904	1-259-460-61	CARBON	22K	5%	1/6W
⚠R1905	1-215-889-00	METAL OXIDE	330	5%	2W F
R1906	1-259-460-61	CARBON	22K	5%	1/6W
R1907	1-259-476-61	CARBON	100K	5%	1/6W
⚠R1908	1-215-888-00	METAL OXIDE	220	5%	2W F
R1909	1-249-435-11	CARBON	33K	5%	1/4W
R1910	1-247-891-00	CARBON	330K	5%	1/4W
R1920	1-247-831-91	CARBON	1K	5%	1/4W
R1921	1-247-862-11	CARBON	20K	5%	1/4W
R1922	1-247-843-11	CARBON	3.3K	5%	1/4W
R1924	1-249-429-11	CARBON	10K	5%	1/4W
R1925	1-247-864-11	CARBON	24K	5%	1/4W
R1927	1-249-429-11	CARBON	10K	5%	1/4W
R1930	1-249-429-11	CARBON	10K	5%	1/4W
R1931	1-247-831-91	CARBON	1K	5%	1/4W
R1932	1-249-429-11	CARBON	10K	5%	1/4W

Ref. No.	Part No.	Description			Remark
R1936	1-249-393-11	CARBON	10	5%	1/4W
R1937	1-249-421-11	CARBON	2.2K	5%	1/4W
**********					
	A-1254-399-A	A_VIDEO BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C6001	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C6002	1-126-964-11	ELECT	10uF	20%	50V
C6003	1-126-964-11	ELECT	10uF	20%	50V
C6004	1-126-964-11	ELECT	10uF	20%	50V
C6005	1-126-964-11	ELECT	10uF	20%	50V
C6006	1-126-964-11	ELECT	10uF	20%	50V
C6007	1-126-964-11	ELECT	10uF	20%	50V
C6008	1-126-964-11	ELECT	10uF	20%	50V
C6009	1-126-964-11	ELECT	10uF	20%	50V
C6010	1-126-964-11	ELECT	10uF	20%	50V
C6011	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6012	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6013	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6014	1-126-947-11	ELECT	47uF	20%	35V
C6015	1-126-947-11	ELECT	47uF	20%	35V
C6101	1-126-962-11	ELECT	3.3uF	20%	50V
C6102	1-126-962-11	ELECT	3.3uF	20%	50V
C6103	1-104-658-91	ELECT	100uF	20%	10V
C6104	1-104-658-91	ELECT	100uF	20%	10V
C6105	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6106	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6107	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C6108	1-126-947-11	ELECT	47uF	20%	35V
C6109	1-126-916-11	ELECT	1000uF	20%	6.3V
C6110	1-126-947-11	ELECT	47uF	20%	35V
C6111	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C6115	1-126-947-11	ELECT	47uF	20%	35V
C6116	1-126-947-11	ELECT	47uF	20%	35V
C6117	1-126-947-11	ELECT	47uF	20%	35V
C6118	1-126-947-11	ELECT	47uF	20%	35V
C6233	1-126-947-11	ELECT	47uF	20%	35V
C6234	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6235	1-126-947-11	ELECT	47uF	20%	35V
C6243	1-126-947-11	ELECT	47uF	20%	35V
C6251	1-126-916-11	ELECT	1000uF	20%	6.3V
C6252	1-126-933-11	ELECT	100uF	20%	16V
C6253	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6254	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6301	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C6304	1-126-964-11	ELECT	10uF	20%	50V
C6305	1-126-964-11	ELECT	10uF	20%	50V
C6306	1-126-964-11	ELECT	10uF	20%	50V
C6307	1-126-964-11	ELECT	10uF	20%	50V
C6308	1-126-964-11	ELECT	10uF	20%	50V
C6309	1-126-964-11	ELECT	10uF	20%	50V
C6310	1-126-964-11	ELECT	10uF	20%	50V
C6311	1-126-964-11	ELECT	10uF	20%	50V
C6312	1-126-964-11	ELECT	10uF	20%	50V
C6313	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C6314	1-162-923-11	CERAMIC CHIP	47PF	5%	50V

Ref. No.	Part No.	Description			Remark
C6315	1-126-964-11	ELECT	10uF	20%	50V
C6316	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C6317	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6318	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6319	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6320	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6321	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6322	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6323	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C6324	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C6325	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C6326	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C6327	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C6328	1-126-947-11	ELECT	47uF	20%	35V
C6329	1-126-947-11	ELECT	47uF	20%	35V
C6501	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6502	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6503	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6504	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C6505	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C6506	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C6507	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C6508	1-126-933-11	ELECT	100uF	20%	16V
C6509	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6510	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6511	1-126-964-11	ELECT	10uF	20%	50V
C6512	1-126-964-11	ELECT	10uF	20%	50V
C6513	1-126-964-11	ELECT	10uF	20%	50V
C6514	1-126-964-11	ELECT	10uF	20%	50V
		< CONNECTOR >			
CN6203	1-770-407-11	CONNECTOR, BOARD TO BOARD 12P			
* CN6204	1-564-520-11	PLUG, CONNECTOR 5P			
CN6501	1-770-469-21	PIN, CONNECTOR (PC BOARD) 2P			
CN6502	1-564-320-00	PIN, CONNECTOR (3.96mm PITCH) 2P			
		< DIODE >			
D6001	6-501-817-01	DIODE MA2J1110GLS0			
D6002	6-501-817-01	DIODE MA2J1110GLS0			
D6003	6-501-817-01	DIODE MA2J1110GLS0			
D6101	6-501-817-01	DIODE MA2J1110GLS0			
D6102	6-501-817-01	DIODE MA2J1110GLS0			
D6301	6-501-817-01	DIODE MA2J1110GLS0			
D6302	6-501-817-01	DIODE MA2J1110GLS0			
D6303	6-501-817-01	DIODE MA2J1110GLS0			
D6304	6-501-817-01	DIODE MA2J1110GLS0			
D6501	6-501-817-01	DIODE MA2J1110GLS0			
D6502	6-501-817-01	DIODE MA2J1110GLS0			
		< IC >			
IC6001	6-706-767-01	IC NJM2586AM			
IC6101	8-759-822-05	IC LA7213			
IC6102	8-759-822-05	IC LA7213			
IC6103	6-701-820-01	IC LA73053-TLM-E			
IC6104	6-706-767-01	IC NJM2586AM			
IC6204	8-759-353-02	IC NJM2533M (TE2)			
IC6205	8-759-647-11	IC uPC2905HF			
IC6206	8-759-245-79	IC TA79005S			
IC6301	6-704-199-01	IC NJM2595M-TE2			
IC6302	6-704-199-01	IC NJM2595M-TE2			
IC6501	8-759-238-47	IC TC74HCT7007AF (EL)			
IC6502	8-759-268-29	IC SN74HC595ANS			
IC6503	8-759-268-29	IC SN74HC595ANS			
IC6504	8-759-353-02	IC NJM2533M (TE2)			
IC6505	8-759-353-02	IC NJM2533M (TE2)			
		< JACK >			
J6001	1-816-592-11	JACK, PIN 9P (COMPONENT VIDEO ASSIGNABLE (INPUT ONLY) VIDEO 1/ DVD/BD/SAT/CATV IN)			
J6002	1-821-278-12	JACK 3P (COMPONENT VIDEO MONITOR OUT)			
J6003	1-774-227-41	JACK, PIN 1P (ZONE 2 VIDEO OUT)			
J6004	1-794-978-11	JACK, PIN 3P (VIDEO 1/VIDEO 2 VIDEO IN, VIDEO 1 VIDEO OUT)			
J6005	1-794-978-11	JACK, PIN 3P (DVD/BD/SAT/CATV VIDEO IN, MONITOR VIDEO OUT)			
		< COIL >			
L6001	1-469-525-91	INDUCTOR	10uH		
L6002	1-469-525-91	INDUCTOR	10uH		
		< TRANSISTOR >			
Q6001	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
Q6101	8-729-038-28	TRANSISTOR	RT1N441C-TP-1		
Q6102	8-729-038-28	TRANSISTOR	RT1N441C-TP-1		
Q6103	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
Q6104	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
		< RESISTOR >			
R6001	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6002	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6003	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6004	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6005	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6006	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6007	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6008	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6009	1-211-990-11	METAL CHIP	75	0.5%	1/10W
⚠ R6010	1-249-393-11	CARBON	10	5%	1/4W F
R6011	1-216-841-11	METAL CHIP	47K	5%	1/10W
R6012	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6013	1-216-864-11	SHORT CHIP	0		
R6014	1-216-864-11	SHORT CHIP	0		
R6015	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6016	1-216-864-11	SHORT CHIP	0		
R6017	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6018	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6101	1-216-815-11	METAL CHIP	330	5%	1/10W
R6102	1-216-815-11	METAL CHIP	330	5%	1/10W
R6103	1-216-847-11	METAL CHIP	150K	5%	1/10W
R6104	1-216-847-11	METAL CHIP	150K	5%	1/10W
R6105	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R6106	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R6110	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6111	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6112	1-216-841-11	METAL CHIP	47K	5%	1/10W

A_VIDEO **AC**

Ref. No.	Part No.	Description			Remark
R6113	1-216-841-11	METAL CHIP	47K	5%	1/10W
R6114	1-216-841-11	METAL CHIP	47K	5%	1/10W
R6115	1-216-841-11	METAL CHIP	47K	5%	1/10W
R6116	1-216-841-11	METAL CHIP	47K	5%	1/10W
R6117	1-216-841-11	METAL CHIP	47K	5%	1/10W
R6118	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6119	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6120	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6121	1-218-834-11	METAL CHIP	300	0.5%	1/10W
R6122	1-218-834-11	METAL CHIP	300	0.5%	1/10W
R6123	1-218-834-11	METAL CHIP	300	0.5%	1/10W
R6124	1-216-815-11	METAL CHIP	330	5%	1/10W
R6125	1-216-815-11	METAL CHIP	330	5%	1/10W
R6235	1-218-834-11	METAL CHIP	300	0.5%	1/10W
R6236	1-218-834-11	METAL CHIP	300	0.5%	1/10W
R6237	1-218-834-11	METAL CHIP	300	0.5%	1/10W
R6239	1-216-864-11	SHORT CHIP	0		
R6240	1-216-864-11	SHORT CHIP	0		
R6241	1-216-864-11	SHORT CHIP	0		
R6242	1-216-864-11	SHORT CHIP	0		
R6243	1-216-864-11	SHORT CHIP	0		
R6244	1-216-809-11	METAL CHIP	100	5%	1/10W
R6245	1-216-809-11	METAL CHIP	100	5%	1/10W
R6246	1-216-809-11	METAL CHIP	100	5%	1/10W
R6247	1-216-809-11	METAL CHIP	100	5%	1/10W
R6250	1-216-809-11	METAL CHIP	100	5%	1/10W
R6251	1-216-809-11	METAL CHIP	100	5%	1/10W
R6252	1-216-809-11	METAL CHIP	100	5%	1/10W
R6301	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6302	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6303	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6304	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6305	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6306	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6307	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6308	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6309	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R6310	1-216-845-11	METAL CHIP	100K	5%	1/10W
R6311	1-216-864-11	SHORT CHIP	0		
R6501	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6502	1-216-813-11	METAL CHIP	220	5%	1/10W
R6503	1-216-813-11	METAL CHIP	220	5%	1/10W
R6504	1-216-809-11	METAL CHIP	100	5%	1/10W
R6505	1-216-809-11	METAL CHIP	100	5%	1/10W
R6506	1-211-990-11	METAL CHIP	75	0.5%	1/10W
		< RELAY >			
RY6001	1-755-267-11	RELAY			
RY6002	1-755-267-11	RELAY			
RY6003	1-755-267-11	RELAY			

****

AC BOARD
****

7-685-646-79 SCREW +BVTP 3X8 TYPE2 IT-3

Ref. No.	Part No.	Description			Remark
		< CAPACITOR >			
C51	1-126-964-11	ELECT	10uF	20%	50V
C52	1-126-943-11	ELECT	2200uF	20%	25V
C53	1-126-943-11	ELECT	2200uF	20%	25V
C54	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C55	1-136-287-11	FILM	0.0047uF	5%	100V
C56	1-137-465-11	MYLAR	0.056uF	5%	100V
C57	1-126-941-11	ELECT	470uF	20%	25V
C58	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
⚠C59	1-113-925-11	CERAMIC	0.01uF	20%	250V
		< CONNECTOR >			
* CNP02	1-564-687-11	PIN, CONNECTOR (3.96mm PITCH) 3P			
CNP51	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P			
CNP53	1-774-108-11	PIN, CONNECTOR (PC BOARD)			
CNP54	1-784-922-11	PIN, CONNECTOR 5P			
		< DIODE >			
D51	6-500-522-31	DIODE 10EDB40-TB5			
D52	6-500-522-31	DIODE 10EDB40-TB5			
D53	6-500-522-31	DIODE 10EDB40-TB5			
D54	6-500-522-31	DIODE 10EDB40-TB5			
D55	6-500-522-31	DIODE 10EDB40-TB5			
D56	6-501-193-01	DIODE 1SS355WTE-17			
D57	6-501-193-01	DIODE 1SS355WTE-17			
D58	6-501-193-01	DIODE 1SS355WTE-17			
D61	8-719-069-56	DIODE UDZSNPTE-176.2B			
		< EARTH TERMINAL >			
* EE51	1-537-738-21	TERMINAL, EARTH			
		< FUSE HOLDER >			
FH01	1-533-313-11	FUSE HOLDER			
FH02	1-533-313-11	FUSE HOLDER			
		< IC >			
IC51	8-759-450-47	IC BA05T			
		< TRANSISTOR >			
Q51	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
Q52	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
Q53	8-729-027-52	TRANSISTOR	DTC124EKA-T146		
Q54	8-729-140-97	TRANSISTOR	2SB734-34		
Q55	8-729-027-52	TRANSISTOR	DTC124EKA-T146		
		< RESISTOR >			
⚠R001	1-219-237-11	SOLID	3.3M	20%	1/2W F
R51	1-216-833-11	METAL CHIP	10K	5%	1/10W
R52	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R53	1-216-837-11	METAL CHIP	22K	5%	1/10W
R54	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R55	1-216-833-11	METAL CHIP	10K	5%	1/10W
R58	1-259-179-31	CARBON	3.3K	5%	1/4W
R59	1-216-833-11	METAL CHIP	10K	5%	1/10W
⚠R60	1-249-389-11	CARBON	4.7	5%	1/4W F
R61	1-216-819-11	METAL CHIP	680	5%	1/10W

AC BIAS C_SPTM CIS

Ref. No.	Part No.	Description			Remark
		< RELAY >			
⚠RY01	1-755-266-11	RELAY, AC POWER			
		< TRANSFORMER >			
⚠T002	1-445-212-11	TRANSFORMER, POWER			
**********					
	A-1254-659-A	BIAS BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C1521	1-126-947-11	ELECT	47uF	20%	35V
C1571	1-126-947-11	ELECT	47uF	20%	35V
C1621	1-126-947-11	ELECT	47uF	20%	35V
C1721	1-126-947-11	ELECT	47uF	20%	35V
C1771	1-126-947-11	ELECT	47uF	20%	35V
C1821	1-126-947-11	ELECT	47uF	20%	35V
C1871	1-126-947-11	ELECT	47uF	20%	35V
C1905	1-126-965-91	ELECT	22uF	20%	50V
C1906	1-104-655-91	ELECT	470uF	20%	6.3V
C1907	1-128-805-11	CERAMIC	47PF	5%	50V
C1908	1-128-805-11	CERAMIC	47PF	5%	50V
		< CONNECTOR >			
CN1512	1-766-719-41	CONNECTOR, BOARD TO BOARD 10P			
CN1513	1-784-031-41	CONNECTOR, BOARD TO BOARD 8P			
* CN1705	1-573-828-11	CONNECTOR, BOARD TO BOARD 14P			
* CN1803	1-573-828-11	CONNECTOR, BOARD TO BOARD 14P			
CN1910	1-770-010-21	CONNECTOR, BOARD TO BOARD 4P			
* CN1911	1-774-876-21	CONNECTOR, BOARD TO BOARD 8P			
		< DIODE >			
D1904	8-719-991-33	DIODE 1SS133T-77			
D1905	8-719-991-33	DIODE 1SS133T-77			
D1908	8-719-991-33	DIODE 1SS133T-77			
D1909	8-719-991-33	DIODE 1SS133T-77			
D1910	8-719-991-33	DIODE 1SS133T-77			
		< IC >			
IC1901	8-759-167-88	IC NJM4565D			
		< TRANSISTOR >			
Q1904	8-729-281-53	TRANSISTOR	2SC1815-GR		
Q1905	8-729-140-84	TRANSISTOR	2SC1841-PAFAEA		
Q1906	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP		
Q1907	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP		
Q1908	8-729-029-86	TRANSISTOR	DTC124ESA		
		< RESISTOR >			
R1521	1-259-440-61	CARBON	3.3K	5%	1/6W
R1522	1-259-428-61	CARBON	1K	5%	1/6W
R1524	1-259-468-61	CARBON	47K	5%	1/6W
R1571	1-259-440-61	CARBON	3.3K	5%	1/6W
R1572	1-259-428-61	CARBON	1K	5%	1/6W
R1574	1-259-468-61	CARBON	47K	5%	1/6W
R1621	1-259-440-61	CARBON	3.3K	5%	1/6W
R1622	1-259-428-61	CARBON	1K	5%	1/6W
R1624	1-259-468-61	CARBON	47K	5%	1/6W
R1721	1-259-440-61	CARBON	3.3K	5%	1/6W
R1722	1-259-428-61	CARBON	1K	5%	1/6W
R1724	1-259-468-61	CARBON	47K	5%	1/6W
R1771	1-259-440-61	CARBON	3.3K	5%	1/6W
R1772	1-259-428-61	CARBON	1K	5%	1/6W
R1774	1-259-468-61	CARBON	47K	5%	1/6W
R1821	1-259-440-61	CARBON	3.3K	5%	1/6W
R1822	1-259-428-61	CARBON	1K	5%	1/6W
R1824	1-259-468-61	CARBON	47K	5%	1/6W
R1871	1-259-440-61	CARBON	3.3K	5%	1/6W
R1872	1-259-428-61	CARBON	1K	5%	1/6W
R1874	1-259-468-61	CARBON	47K	5%	1/6W
R1911	1-247-863-91	CARBON	22K	5%	1/4W
R1912	1-249-429-11	CARBON	10K	5%	1/4W
R1913	1-249-429-11	CARBON	10K	5%	1/4W
R1914	1-247-863-91	CARBON	22K	5%	1/4W
R1915	1-247-863-91	CARBON	22K	5%	1/4W
R1916	1-249-430-11	CARBON	12K	5%	1/4W
R1917	1-247-895-00	CARBON	470K	5%	1/4W
R1918	1-247-871-91	CARBON	47K	5%	1/4W
R1919	1-249-429-11	CARBON	10K	5%	1/4W
R1923	1-247-831-91	CARBON	1K	5%	1/4W
R1929	1-249-429-11	CARBON	10K	5%	1/4W
		< VARIABLE RESISTOR >			
RV1501	1-238-595-11	RES, ADJ, CARBON 220			
RV1551	1-238-595-11	RES, ADJ, CARBON 220			
RV1601	1-238-595-11	RES, ADJ, CARBON 220			
RV1701	1-238-595-11	RES, ADJ, CARBON 220			
RV1751	1-238-595-11	RES, ADJ, CARBON 220			
RV1801	1-238-595-11	RES, ADJ, CARBON 220			
RV1851	1-238-595-11	RES, ADJ, CARBON 220			
**********					
		C_SPTM BOARD			
		**********			
		< CAPACITOR >			
C1301	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
		< TERMINAL >			
TB1301	1-780-405-11	TERMINAL BOARD (SP) (2P)			(CENTER SPEAKERS)
**********					
		CIS BOARD			
		*********			
		< CAPACITOR >			
C801	1-126-947-11	ELECT	47uF	20%	35V
C802	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C803	1-126-961-11	ELECT	2.2uF	20%	50V
C804	1-126-947-11	ELECT	47uF	20%	35V
C805	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C807	1-164-388-91	CERAMIC CHIP	270PF	5%	50V
C821	1-126-960-11	ELECT	1uF	20%	50V
C851	1-126-767-11	ELECT	1000uF	20%	16V

CIS | CONNECTOR 3 | CONNECTOR 4 | CONTROL

Ref. No.	Part No.	Description			Remark
C852	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C862	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C863	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C864	1-126-963-11	ELECT	4.7uF	20%	50V
C865	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C868	1-164-388-91	CERAMIC CHIP	270PF	5%	50V
C883	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
C884	1-126-933-11	ELECT	100uF	20%	16V
C885	1-115-156-11	CERAMIC CHIP	1uF		10V
C886	1-115-156-11	CERAMIC CHIP	1uF		10V
C887	1-115-156-11	CERAMIC CHIP	1uF		10V
C888	1-115-156-11	CERAMIC CHIP	1uF		10V
		< CONNECTOR >			
CN801	1-779-279-11	CONNECTOR, FFC (LIF (NON-ZIF)) 11P			
		< DIODE >			
D801	8-719-404-50	DIODE MA111-TX			
D802	8-719-075-86	LED SID307BRTP19 (REMOTE CONTROL TRANSCEIVER)			
D803	8-719-404-50	DIODE MA111-TX			
D807	8-719-404-50	DIODE MA111-TX			
D808	8-719-404-50	DIODE MA111-TX			
		< EARTH TERMINAL >			
EB801	1-537-738-21	TERMINAL, GROUND			
EB802	1-537-738-21	TERMINAL, GROUND			
		< FERRITE BEAD >			
FB881	1-469-152-11	FERRITE, EMI (SMD) (2012)			
		< IC >			
IC801	6-600-349-21	IC NJL23H400A			
IC802	6-700-587-01	IC TC7W53F (TE12R)			
IC861	8-759-470-63	IC NJM2145M-TE2			
IC881	8-759-065-85	IC MAX232N			
		< JACK/CONNECTOR >			
J801	1-563-330-31	JACK (IR REMOTE IN)			
J802	1-563-330-31	JACK (IR REMOTE OUT1)			
J803	1-563-330-31	JACK (IR REMOTE OUT2)			
J821	1-563-330-31	JACK (TRIGGER OUT MAIN)			
J861	1-563-330-31	JACK (CTRL S OUT)			
J862	1-563-330-31	JACK (CTRL S IN)			
J881	1-815-737-11	CONNECTOR, (D) SUB 9P (RS-232C)			
		< JUMPER RESISTOR >			
JW861	1-216-864-11	SHORT CHIP	0		
		< TRANSISTOR >			
Q821	8-729-037-13	TRANSISTOR	KTA1271Y		
Q822	8-729-027-43	TRANSISTOR	DTC114EKA-T146		
		< RESISTOR >			
R801	1-216-833-11	METAL CHIP	10K	5%	1/10W
R802	1-216-797-11	METAL CHIP	10	5%	1/10W
R803	1-216-845-11	METAL CHIP	100K	5%	1/10W
R804	1-216-833-11	METAL CHIP	10K	5%	1/10W
R805	1-216-845-11	METAL CHIP	100K	5%	1/10W
R806	1-216-809-11	METAL CHIP	100	5%	1/10W
R807	1-216-809-11	METAL CHIP	100	5%	1/10W
R822	1-216-833-11	METAL CHIP	10K	5%	1/10W
R823	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R824	1-216-833-11	METAL CHIP	10K	5%	1/10W
R825	1-216-809-11	METAL CHIP	100	5%	1/10W
R861	1-216-821-11	METAL CHIP	1K	5%	1/10W
R862	1-216-821-11	METAL CHIP	1K	5%	1/10W
R863	1-216-821-11	METAL CHIP	1K	5%	1/10W
R864	1-216-821-11	METAL CHIP	1K	5%	1/10W
R865	1-216-821-11	METAL CHIP	1K	5%	1/10W
R881	1-216-809-11	METAL CHIP	100	5%	1/10W
R882	1-216-809-11	METAL CHIP	100	5%	1/10W
		< THERMISTOR >			
TH821	1-801-726-11	THERMISTOR, POSITIVE			

****

CONNECTOR 3 BOARD

****

< CONNECTOR >

CN1202	1-573-844-11	CONNECTOR, BOARD TO BOARD 12P			
CN1203	1-784-041-41	CONNECTOR, BOARD TO BOARD 9P			

****

CONNECTOR 4 BOARD

****

< CONNECTOR >

CN1204	1-764-865-41	CONNECTOR, BOARD TO BOARD 13P			
CN1207	1-573-847-11	CONNECTOR, BOARD TO BOARD 15P			

****

A-1274-399-A CONTROL BOARD, COMPLETE

****

< CAPACITOR >

C2001	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2002	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2003	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2004	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C2005	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2006	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2007	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C2008	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2009	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C2010	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2011	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2012	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C2013	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2014	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2015	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2016	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2017	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2020	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2021	1-162-974-11	CERAMIC CHIP	0.01uF		50V

Ref. No.	Part No.	Description			Remark
C2022	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C2023	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C2024	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C2025	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C2026	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2027	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C2028	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2029	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C2030	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C2031	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C2032	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2033	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2034	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2035	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C2036	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2037	1-126-209-11	ELECT CHIP	100uF	20%	4V
C2038	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2039	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2040	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C2041	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2042	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2043	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C2044	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2045	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2046	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2047	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2048	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C2049	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C2050	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2051	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2052	1-126-193-11	ELECT CHIP	1uF	20%	50V
C2053	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2054	1-124-779-00	ELECT CHIP	10uF	20%	16V
C2055	1-126-209-11	ELECT CHIP	100uF	20%	4V
C2056	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2057	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2058	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C2059	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2060	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C2061	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2062	1-126-208-21	ELECT CHIP	47uF	20%	4V
C2063	1-126-209-11	ELECT CHIP	100uF	20%	4V
C2065	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2066	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C2067	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2068	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
		< CONNECTOR >			
CN2001	1-770-384-21	CONNECTOR, BOARD TO BOARD 16P			
CN2002	1-770-382-11	CONNECTOR, BOARD TO BOARD 12P			
CN2003	1-770-381-11	CONNECTOR, BOARD TO BOARD 10P			
CN2004	1-784-370-51	CONNECTOR, FFC/FPC 11P			
CN2005	1-770-382-11	CONNECTOR, BOARD TO BOARD 12P			
CN2006	1-770-382-11	CONNECTOR, BOARD TO BOARD 12P			
CN2007	1-770-383-11	CONNECTOR, BOARD TO BOARD 14P			
CN2008	1-770-405-11	CONNECTOR, BOARD TO BOARD 8P			
CN2009	1-770-410-11	CONNECTOR, BOARD TO BOARD 18P			
CN2010	1-770-410-11	CONNECTOR, BOARD TO BOARD 18P			

Ref. No.	Part No.	Description	Remark
* CN2013	1-785-125-21	CONNECTOR 6P	
CN2015	1-784-930-11	PIN, CONNECTOR 15P	
CN2016	1-784-926-11	PIN, CONNECTOR 11P	
CN2017	1-784-928-11	PIN, CONNECTOR 13P	
CN2018	1-784-382-51	CONNECTOR, FFC/FPC 25P	
CN2019	1-784-380-51	CONNECTOR, FFC/FPC 23P	
CN2020	1-764-177-11	PIN, CONNECTOR (SMD) (1.5mm) 7P	
		< DIODE >	
D2001	8-719-060-48	DIODE RB751V-40TE-17	
D2002	8-719-988-61	DIODE 1SS355TE-17	
D2003	8-719-988-61	DIODE 1SS355TE-17	
D2004	8-719-988-61	DIODE 1SS355TE-17	
D2005	8-719-988-61	DIODE 1SS355TE-17	
D2006	8-719-988-61	DIODE 1SS355TE-17	
		< FERRITE BEAD >	
FB2001	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB2002	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB2003	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB2004	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB2005	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB2006	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB2007	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB2008	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB2009	1-469-152-11	FERRITE, EMI (SMD) (2012)	
		< IC >	
IC2001	6-706-487-01	IC TC7SH08FU (T5RSOYJF)	
IC2002	6-706-478-01	IC TC7SET08FU (T5RSOJF)	
IC2003	6-807-612-01	IC MB91F467RA-07A43ES-X100	
IC2004	8-759-058-62	IC TC7S08FU (TE85R)	
IC2005	6-702-913-01	IC S-80929CNMC-G8ZT2G	
IC2006	8-759-277-63	IC TC7W14FU (TE12R)	
IC2007	6-704-006-01	IC BR24L64F-WE2	
IC2008	6-705-468-01	IC BA33BC0FP-E2	
IC2009	8-759-277-63	IC TC7W14FU (TE12R)	
IC2010	8-759-524-09	IC TC74VHC153FT (EL)	
IC2011	8-759-238-47	IC TC74HCT7007AF (EL)	
IC2012	6-706-487-01	IC TC7SH08FU (T5RSOYJF)	
IC2013	6-706-478-01	IC TC7SET08FU (T5RSOJF)	
		< TRANSISTOR >	
Q2001	8-729-216-22	TRANSISTOR 2SA1162-G	
Q2002	8-729-024-91	TRANSISTOR 2SC2712-GL-TE85L	
Q2003	8-729-024-91	TRANSISTOR 2SC2712-GL-TE85L	
Q2004	8-729-027-43	TRANSISTOR DTC114EKA-T146	
		< RESISTOR >	
R2002	1-216-864-11	SHORT CHIP 0	
R2003	1-216-833-11	METAL CHIP 10K 5%	1/10W
R2004	1-216-809-11	METAL CHIP 100 5%	1/10W
R2005	1-216-821-11	METAL CHIP 1K 5%	1/10W
R2006	1-216-833-11	METAL CHIP 10K 5%	1/10W
R2007	1-216-833-11	METAL CHIP 10K 5%	1/10W
R2008	1-216-837-11	METAL CHIP 22K 5%	1/10W
R2009	1-216-837-11	METAL CHIP 22K 5%	1/10W

CONTROL

Ref. No.	Part No.	Description			Remark
R2010	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2011	1-216-685-11	METAL CHIP	27K	0.5%	1/10W
R2012	1-216-813-11	METAL CHIP	220	5%	1/10W
R2013	1-216-805-11	METAL CHIP	47	5%	1/10W
R2014	1-216-809-11	METAL CHIP	100	5%	1/10W
R2015	1-216-809-11	METAL CHIP	100	5%	1/10W
R2016	1-216-809-11	METAL CHIP	100	5%	1/10W
R2017	1-216-809-11	METAL CHIP	100	5%	1/10W
R2019	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2020	1-216-809-11	METAL CHIP	100	5%	1/10W
R2021	1-216-809-11	METAL CHIP	100	5%	1/10W
R2022	1-216-809-11	METAL CHIP	100	5%	1/10W
R2023	1-216-809-11	METAL CHIP	100	5%	1/10W
R2024	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R2025	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R2026	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2027	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R2028	1-216-809-11	METAL CHIP	100	5%	1/10W
R2029	1-216-809-11	METAL CHIP	100	5%	1/10W
R2030	1-216-809-11	METAL CHIP	100	5%	1/10W
R2031	1-216-809-11	METAL CHIP	100	5%	1/10W
R2032	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R2033	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R2034	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2035	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R2036	1-216-809-11	METAL CHIP	100	5%	1/10W
R2037	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2038	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2039	1-216-809-11	METAL CHIP	100	5%	1/10W
R2040	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2041	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2042	1-216-809-11	METAL CHIP	100	5%	1/10W
R2044	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2045	1-216-809-11	METAL CHIP	100	5%	1/10W
R2046	1-216-809-11	METAL CHIP	100	5%	1/10W
R2047	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2049	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2050	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2051	1-216-809-11	METAL CHIP	100	5%	1/10W
R2052	1-216-809-11	METAL CHIP	100	5%	1/10W
R2053	1-216-809-11	METAL CHIP	100	5%	1/10W
R2054	1-216-809-11	METAL CHIP	100	5%	1/10W
R2055	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2056	1-216-809-11	METAL CHIP	100	5%	1/10W
R2058	1-216-809-11	METAL CHIP	100	5%	1/10W
R2059	1-216-809-11	METAL CHIP	100	5%	1/10W
R2060	1-216-809-11	METAL CHIP	100	5%	1/10W
R2061	1-216-809-11	METAL CHIP	100	5%	1/10W
R2062	1-216-809-11	METAL CHIP	100	5%	1/10W
R2063	1-216-809-11	METAL CHIP	100	5%	1/10W
R2064	1-216-809-11	METAL CHIP	100	5%	1/10W
R2065	1-216-809-11	METAL CHIP	100	5%	1/10W
R2066	1-216-809-11	METAL CHIP	100	5%	1/10W
R2067	1-216-809-11	METAL CHIP	100	5%	1/10W
R2068	1-216-809-11	METAL CHIP	100	5%	1/10W
R2069	1-216-809-11	METAL CHIP	100	5%	1/10W
R2070	1-216-833-11	METAL CHIP	10K	5%	1/10W

Ref. No.	Part No.	Description			Remark
R2071	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R2072	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2073	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2074	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2075	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2076	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2077	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2078	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2079	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2080	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2081	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2082	1-216-809-11	METAL CHIP	100	5%	1/10W
R2083	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2084	1-216-809-11	METAL CHIP	100	5%	1/10W
R2085	1-216-809-11	METAL CHIP	100	5%	1/10W
R2086	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2087	1-216-809-11	METAL CHIP	100	5%	1/10W
R2088	1-216-817-11	METAL CHIP	470	5%	1/10W
R2089	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2090	1-216-809-11	METAL CHIP	100	5%	1/10W
R2091	1-216-805-11	METAL CHIP	47	5%	1/10W
R2092	1-216-809-11	METAL CHIP	100	5%	1/10W
R2093	1-216-805-11	METAL CHIP	47	5%	1/10W
R2094	1-216-805-11	METAL CHIP	47	5%	1/10W
R2095	1-216-805-11	METAL CHIP	47	5%	1/10W
R2096	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2097	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2098	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2099	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2100	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2101	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2102	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2103	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2105	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2110	1-216-815-11	METAL CHIP	330	5%	1/10W
R2111	1-216-809-11	METAL CHIP	100	5%	1/10W
R2112	1-216-809-11	METAL CHIP	100	5%	1/10W
R2113	1-216-809-11	METAL CHIP	100	5%	1/10W
R2114	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2115	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2116	1-216-813-11	METAL CHIP	220	5%	1/10W
R2117	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2118	1-216-809-11	METAL CHIP	100	5%	1/10W
R2119	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2120	1-216-813-11	METAL CHIP	220	5%	1/10W
R2121	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2122	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2123	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2124	1-216-809-11	METAL CHIP	100	5%	1/10W
R2125	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2126	1-216-813-11	METAL CHIP	220	5%	1/10W
R2128	1-216-809-11	METAL CHIP	100	5%	1/10W
R2129	1-216-809-11	METAL CHIP	100	5%	1/10W
R2130	1-216-809-11	METAL CHIP	100	5%	1/10W
R2131	1-216-809-11	METAL CHIP	100	5%	1/10W
R2132	1-216-809-11	METAL CHIP	100	5%	1/10W
R2133	1-216-809-11	METAL CHIP	100	5%	1/10W
R2134	1-216-809-11	METAL CHIP	100	5%	1/10W

Ref. No.	Part No.	Description			Remark
R2135	1-216-809-11	METAL CHIP	100	5%	1/10W
R2136	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2138	1-216-809-11	METAL CHIP	100	5%	1/10W
R2139	1-216-815-11	METAL CHIP	330	5%	1/10W
R2140	1-216-809-11	METAL CHIP	100	5%	1/10W
R2141	1-216-809-11	METAL CHIP	100	5%	1/10W
R2142	1-216-809-11	METAL CHIP	100	5%	1/10W
R2143	1-216-809-11	METAL CHIP	100	5%	1/10W
R2145	1-216-805-11	METAL CHIP	47	5%	1/10W
R2146	1-216-805-11	METAL CHIP	47	5%	1/10W
R2147	1-216-805-11	METAL CHIP	47	5%	1/10W
R2148	1-216-805-11	METAL CHIP	47	5%	1/10W
R2149	1-216-809-11	METAL CHIP	100	5%	1/10W
R2150	1-216-809-11	METAL CHIP	100	5%	1/10W
R2151	1-216-809-11	METAL CHIP	100	5%	1/10W
R2152	1-216-809-11	METAL CHIP	100	5%	1/10W
R2153	1-216-809-11	METAL CHIP	100	5%	1/10W
R2154	1-216-809-11	METAL CHIP	100	5%	1/10W
R2155	1-216-809-11	METAL CHIP	100	5%	1/10W
R2156	1-216-809-11	METAL CHIP	100	5%	1/10W
R2157	1-216-809-11	METAL CHIP	100	5%	1/10W
R2158	1-216-809-11	METAL CHIP	100	5%	1/10W
R2159	1-216-809-11	METAL CHIP	100	5%	1/10W
R2160	1-216-809-11	METAL CHIP	100	5%	1/10W
R2161	1-216-809-11	METAL CHIP	100	5%	1/10W
R2162	1-216-809-11	METAL CHIP	100	5%	1/10W
R2163	1-216-809-11	METAL CHIP	100	5%	1/10W
R2176	1-216-809-11	METAL CHIP	100	5%	1/10W
R2177	1-216-809-11	METAL CHIP	100	5%	1/10W
R2178	1-216-809-11	METAL CHIP	100	5%	1/10W
R2179	1-216-809-11	METAL CHIP	100	5%	1/10W
R2182	1-216-809-11	METAL CHIP	100	5%	1/10W
R2183	1-216-809-11	METAL CHIP	100	5%	1/10W
R2184	1-216-809-11	METAL CHIP	100	5%	1/10W
R2185	1-216-809-11	METAL CHIP	100	5%	1/10W
R2187	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2188	1-216-809-11	METAL CHIP	100	5%	1/10W
R2190	1-216-809-11	METAL CHIP	100	5%	1/10W
R2191	1-216-809-11	METAL CHIP	100	5%	1/10W
R2194	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2195	1-216-809-11	METAL CHIP	100	5%	1/10W
R2196	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2197	1-216-809-11	METAL CHIP	100	5%	1/10W
R2198	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2199	1-216-809-11	METAL CHIP	100	5%	1/10W

< VIBRATOR >

X2001	1-781-646-21	VIBRATOR, CERAMIC (4MHz)	

****

	A-1274-400-A	D.AUDIO BOARD, COMPLETE	

****

< CAPACITOR >

C2201	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2202	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2203	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2204	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2206	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2207	1-112-080-11	ELECT	470uF	20%	10V
C2208	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C2209	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2210	1-112-089-11	ELECT	47uF	20%	25V
C2211	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2212	1-112-089-11	ELECT	47uF	20%	25V
C2213	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2214	1-112-089-11	ELECT	47uF	20%	25V
C2215	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2216	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2217	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2221	1-112-080-11	ELECT	470uF	20%	10V
C2222	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2223	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2224	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2225	1-162-910-11	CERAMIC CHIP	5PF	0.25PF	50V
C2226	1-162-911-11	CERAMIC CHIP	6PF	0.5PF	50V
C2227	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2228	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2229	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2230	1-112-100-11	ELECT	10uF	20%	50V
C2231	1-112-080-11	ELECT	470uF	20%	10V
C2232	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2233	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2234	1-112-083-11	ELECT	100uF	20%	16V
C2235	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C2236	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2237	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C2238	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C2244	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C2245	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C2246	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C2247	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2248	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2249	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2250	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2251	1-112-089-11	ELECT	47uF	20%	25V
C2252	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2254	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2255	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2256	1-100-669-11	ELECT CHIP	100uF	20%	10V
C2257	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2258	1-100-669-11	ELECT CHIP	100uF	20%	10V
C2259	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2260	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2261	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2262	1-100-669-11	ELECT CHIP	100uF	20%	10V
C2263	1-112-075-11	ELECT CHIP	47uF	20%	16V
C2264	1-112-075-11	ELECT CHIP	47uF	20%	16V
C2265	1-100-382-11	ELECT CHIP	4.7uF	20%	35V
C2266	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2267	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2268	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2270	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C2271	1-112-114-11	ELECT	22uF	20%	50V
C2272	1-112-083-11	ELECT	100uF	20%	16V

D.AUDIO

Ref. No.	Part No.	Description			Remark
C2273	1-112-114-11	ELECT	22uF	20%	50V
C2274	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C2275	1-137-429-11	MYLAR	270PF	5%	50V
C2276	1-137-457-11	MYLAR	0.0027uF	5%	100V
C2277	1-112-100-11	ELECT	10uF	20%	50V
C2278	1-100-381-11	ELECT CHIP	10uF	20%	16V
C2279	1-112-083-11	ELECT	100uF	20%	16V
C2280	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2281	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2282	1-100-381-11	ELECT CHIP	10uF	20%	16V
C2283	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C2284	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2285	1-137-457-11	MYLAR	0.0027uF	5%	100V
C2286	1-137-429-11	MYLAR	270PF	5%	50V
C2287	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2288	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C2289	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C2290	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2291	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C2292	1-137-429-11	MYLAR	270PF	5%	50V
C2293	1-137-457-11	MYLAR	0.0027uF	5%	100V
C2294	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2295	1-100-381-11	ELECT CHIP	10uF	20%	16V
C2296	1-100-381-11	ELECT CHIP	10uF	20%	16V
C2297	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C2298	1-137-457-11	MYLAR	0.0027uF	5%	100V
C2299	1-137-429-11	MYLAR	270PF	5%	50V
C2300	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C2301	1-137-429-11	MYLAR	270PF	5%	50V
C2302	1-137-457-11	MYLAR	0.0027uF	5%	100V
C2303	1-100-381-11	ELECT CHIP	10uF	20%	16V
C2304	1-100-381-11	ELECT CHIP	10uF	20%	16V
C2305	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C2306	1-137-457-11	MYLAR	0.0027uF	5%	100V
C2307	1-137-429-11	MYLAR	270PF	5%	50V
C2308	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2309	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C2310	1-137-429-11	MYLAR	270PF	5%	50V
C2311	1-137-457-11	MYLAR	0.0027uF	5%	100V
C2312	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2313	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2314	1-100-381-11	ELECT CHIP	10uF	20%	16V
C2315	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C2316	1-100-381-11	ELECT CHIP	10uF	20%	16V
C2317	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C2318	1-137-457-11	MYLAR	0.0027uF	5%	100V
C2319	1-137-429-11	MYLAR	270PF	5%	50V
C2320	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2321	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2322	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C2323	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2324	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2325	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2326	1-112-071-11	ELECT CHIP	220uF	20%	6.3V
C2327	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2328	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2329	1-100-153-91	CERAMIC CHIP	220PF	5%	100V
C2330	1-112-071-11	ELECT CHIP	220uF	20%	6.3V

Ref. No.	Part No.	Description			Remark
C2331	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2332	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2333	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2335	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C2336	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C2337	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C2340	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C2349	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2350	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C2351	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C2352	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V

< CONNECTOR >

CN2201	1-784-382-51	CONNECTOR, FFC/FPC 25P
CN2202	1-784-380-51	CONNECTOR, FFC/FPC 23P
CN2204	1-779-977-11	PIN, CONNECTOR 6P
CN2206	1-785-910-21	CONNECTOR, BOARD TO BOARD 50P
CN2207	1-784-930-11	PIN, CONNECTOR 15P

< DIODE >

D2201	6-501-193-01	DIODE 1SS355WTE-17
D2202	8-719-053-18	DIODE 1SR154-400TE-25
D2204	8-719-988-61	DIODE 1SS355TE-17
D2205	8-719-988-61	DIODE 1SS355TE-17

< FERRITE BEAD >

FB2201	1-469-152-11	FERRITE, EMI (SMD) (2012)
FB2202	1-469-152-11	FERRITE, EMI (SMD) (2012)
FB2203	1-469-139-21	FERRITE, EMI (SMD) (2012)
FB2204	1-469-139-21	FERRITE, EMI (SMD) (2012)
FB2205	1-469-152-11	FERRITE, EMI (SMD) (2012)
FB2206	1-469-139-21	FERRITE, EMI (SMD) (2012)
FB2207	1-469-152-11	FERRITE, EMI (SMD) (2012)
FB2208	1-469-152-11	FERRITE, EMI (SMD) (2012)
FB2210	1-469-152-11	FERRITE, EMI (SMD) (2012)
FB2211	1-469-152-11	FERRITE, EMI (SMD) (2012)
FB2212	1-469-152-11	FERRITE, EMI (SMD) (2012)
FB2213	1-469-152-11	FERRITE, EMI (SMD) (2012)
FB2214	1-469-152-11	FERRITE, EMI (SMD) (2012)
FB2215	1-469-152-11	FERRITE, EMI (SMD) (2012)
FB2216	1-469-152-11	FERRITE, EMI (SMD) (2012)
FB2217	1-469-152-11	FERRITE, EMI (SMD) (2012)

< IC >

IC2201	6-600-466-01	IC TORX147L (SONY) (DIGITAL ASSIGNABLE (INPUT ONLY) OPTICAL VIDEO 1 IN)
IC2202	6-600-466-01	IC TORX147L (SONY) (DIGITAL ASSIGNABLE (INPUT ONLY) OPTICAL SAT/CATV IN)
IC2204	6-600-466-01	IC TORX147L (SONY) (DIGITAL ASSIGNABLE (INPUT ONLY) OPTICAL MD/DAT IN)
IC2205	6-600-461-11	IC TOTX147L (R) (DIGITAL ASSIGNABLE (INPUT ONLY) OPTICAL MD/DAT OUT)
IC2206	8-759-058-62	IC TC7S08FU (TE85R)
IC2207	8-759-236-19	IC TC74HC151AF (EL)
IC2208	6-708-025-01	IC LC89057W-VF4A-E
IC2209	8-759-233-64	IC TC74HCU04AF
IC2210	8-759-268-29	IC SN74HC595ANS
IC2211	8-759-524-48	IC TC74VHC393FT (EL)

Ref. No.	Part No.	Description			Remark
IC2212	6-707-870-01	IC TC74VHC157FT (EKJ)			
IC2213	6-707-870-01	IC TC74VHC157FT (EKJ)			
IC2214	6-707-870-01	IC TC74VHC157FT (EKJ)			
IC2216	8-759-524-48	IC TC74VHC393FT (EL)			
IC2217	6-711-060-01	IC CS5340-CZZR			
IC2218	6-708-785-01	IC PCM1609APT			
IC2219	8-759-710-97	IC NJM4565M-D			
IC2220	8-759-710-97	IC NJM4565M-D			
IC2221	8-759-710-97	IC NJM4565M-D			
IC2222	8-759-710-97	IC NJM4565M-D			
IC2223	6-711-059-01	IC SM5921AF-G			
IC2224	6-703-791-01	IC MSM56V16160F-8T3FM1			
IC2225	6-600-466-01	IC TORX147L (SONY) (TV OPTICAL IN)			
IC2227	8-759-546-74	IC TC7WH157FU (TE12R)			
IC2228	6-707-870-01	IC TC74VHC157FT (EKJ)			
IC2230	6-705-337-01	IC TK11150CSCL-G			
IC2231	6-707-870-01	IC TC74VHC157FT (EKJ)			
		< JACK >			
J2201	1-820-614-21	JACK, PIN 3P (DIGITAL ASSIGNABLE (INPUT ONLY) COAXIAL VIDEO 2/DVD/BD/SA-CD/CD IN)			
		< TRANSISTOR >			
Q2205	8-729-027-43	TRANSISTOR	DTC114EKA-T146		
Q2206	8-729-024-91	TRANSISTOR	2SC2712-GL-TE85L		
		< RESISTOR >			
R2201	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2202	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2203	1-208-755-11	METAL CHIP	75	0.5%	1/10W
R2204	1-208-755-11	METAL CHIP	75	0.5%	1/10W
R2205	1-208-755-11	METAL CHIP	75	0.5%	1/10W
R2206	1-216-809-11	METAL CHIP	100	5%	1/10W
R2207	1-216-809-11	METAL CHIP	100	5%	1/10W
R2208	1-216-809-11	METAL CHIP	100	5%	1/10W
R2209	1-216-809-11	METAL CHIP	100	5%	1/10W
R2210	1-216-809-11	METAL CHIP	100	5%	1/10W
R2212	1-216-809-11	METAL CHIP	100	5%	1/10W
R2213	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2214	1-208-774-11	METAL CHIP	470	0.5%	1/10W
R2215	1-208-774-11	METAL CHIP	470	0.5%	1/10W
R2216	1-208-774-11	METAL CHIP	470	0.5%	1/10W
R2217	1-208-550-41	RES-CHIP	470K	2%	1/10W
R2218	1-208-550-41	RES-CHIP	470K	2%	1/10W
R2219	1-208-550-41	RES-CHIP	470K	2%	1/10W
R2220	1-216-809-11	METAL CHIP	100	5%	1/10W
R2221	1-208-526-41	RES-CHIP	47K	2%	1/10W
R2222	1-208-526-41	RES-CHIP	47K	2%	1/10W
R2223	1-208-526-41	RES-CHIP	47K	2%	1/10W
R2224	1-216-809-11	METAL CHIP	100	5%	1/10W
R2225	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2226	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2227	1-216-809-11	METAL CHIP	100	5%	1/10W
R2228	1-216-809-11	METAL CHIP	100	5%	1/10W
R2229	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2230	1-216-809-11	METAL CHIP	100	5%	1/10W
R2231	1-216-833-11	METAL CHIP	10K	5%	1/10W

Ref. No.	Part No.	Description			Remark
R2232	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2233	1-216-857-11	METAL CHIP	1M	5%	1/10W
R2234	1-216-809-11	METAL CHIP	100	5%	1/10W
R2235	1-216-813-11	METAL CHIP	220	5%	1/10W
R2236	1-216-809-11	METAL CHIP	100	5%	1/10W
R2237	1-216-809-11	METAL CHIP	100	5%	1/10W
R2238	1-216-815-11	METAL CHIP	330	5%	1/10W
R2239	1-216-809-11	METAL CHIP	100	5%	1/10W
R2240	1-216-805-11	METAL CHIP	47	5%	1/10W
R2241	1-216-809-11	METAL CHIP	100	5%	1/10W
R2242	1-216-805-11	METAL CHIP	47	5%	1/10W
R2243	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R2246	1-216-815-11	METAL CHIP	330	5%	1/10W
R2248	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2249	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2250	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2251	1-216-809-11	METAL CHIP	100	5%	1/10W
R2252	1-216-809-11	METAL CHIP	100	5%	1/10W
R2256	1-216-809-11	METAL CHIP	100	5%	1/10W
R2257	1-216-809-11	METAL CHIP	100	5%	1/10W
R2258	1-216-809-11	METAL CHIP	100	5%	1/10W
R2259	1-216-805-11	METAL CHIP	47	5%	1/10W
R2260	1-216-805-11	METAL CHIP	47	5%	1/10W
R2261	1-216-805-11	METAL CHIP	47	5%	1/10W
R2262	1-216-805-11	METAL CHIP	47	5%	1/10W
R2263	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2264	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2265	1-216-809-11	METAL CHIP	100	5%	1/10W
R2267	1-216-809-11	METAL CHIP	100	5%	1/10W
R2269	1-216-864-11	SHORT CHIP	0		
R2270	1-216-797-11	METAL CHIP	10	5%	1/10W
R2271	1-216-797-11	METAL CHIP	10	5%	1/10W
R2272	1-216-797-11	METAL CHIP	10	5%	1/10W
R2273	1-216-797-11	METAL CHIP	10	5%	1/10W
R2274	1-216-797-11	METAL CHIP	10	5%	1/10W
R2275	1-216-797-11	METAL CHIP	10	5%	1/10W
R2277	1-216-797-11	METAL CHIP	10	5%	1/10W
R2278	1-216-797-11	METAL CHIP	10	5%	1/10W
R2279	1-216-797-11	METAL CHIP	10	5%	1/10W
R2282	1-216-809-11	METAL CHIP	100	5%	1/10W
R2287	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2288	1-216-809-11	METAL CHIP	100	5%	1/10W
R2289	1-216-809-11	METAL CHIP	100	5%	1/10W
R2290	1-216-809-11	METAL CHIP	100	5%	1/10W
R2291	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2292	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2293	1-216-835-11	METAL CHIP	15K	5%	1/10W
R2294	1-216-809-11	METAL CHIP	100	5%	1/10W
R2295	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2296	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R2297	1-216-805-11	METAL CHIP	47	5%	1/10W
R2298	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2299	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2300	1-216-805-11	METAL CHIP	47	5%	1/10W
R2301	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R2302	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2303	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2304	1-216-835-11	METAL CHIP	15K	5%	1/10W

D.AUDIO

Ref. No.	Part No.	Description			Remark
R2305	1-216-809-11	METAL CHIP	100	5%	1/10W
R2306	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2307	1-216-835-11	METAL CHIP	15K	5%	1/10W
R2308	1-216-809-11	METAL CHIP	100	5%	1/10W
R2309	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2310	1-216-809-11	METAL CHIP	100	5%	1/10W
R2311	1-216-809-11	METAL CHIP	100	5%	1/10W
R2312	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R2313	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2314	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2315	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R2316	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2317	1-216-835-11	METAL CHIP	15K	5%	1/10W
R2318	1-216-809-11	METAL CHIP	100	5%	1/10W
R2319	1-216-835-11	METAL CHIP	15K	5%	1/10W
R2320	1-216-809-11	METAL CHIP	100	5%	1/10W
R2321	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2322	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R2323	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2324	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2325	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R2326	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2327	1-216-835-11	METAL CHIP	15K	5%	1/10W
R2328	1-216-809-11	METAL CHIP	100	5%	1/10W
R2329	1-216-809-11	METAL CHIP	100	5%	1/10W
R2330	1-216-809-11	METAL CHIP	100	5%	1/10W
R2331	1-216-809-11	METAL CHIP	100	5%	1/10W
R2332	1-216-809-11	METAL CHIP	100	5%	1/10W
R2333	1-216-809-11	METAL CHIP	100	5%	1/10W
R2334	1-216-805-11	METAL CHIP	47	5%	1/10W
R2335	1-216-805-11	METAL CHIP	47	5%	1/10W
R2336	1-216-835-11	METAL CHIP	15K	5%	1/10W
R2337	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2338	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R2339	1-216-809-11	METAL CHIP	100	5%	1/10W
R2340	1-216-809-11	METAL CHIP	100	5%	1/10W
R2341	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2342	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2343	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2344	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2345	1-216-809-11	METAL CHIP	100	5%	1/10W
R2346	1-216-809-11	METAL CHIP	100	5%	1/10W
R2347	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R2348	1-216-809-11	METAL CHIP	100	5%	1/10W
R2349	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2350	1-216-809-11	METAL CHIP	100	5%	1/10W
R2351	1-216-809-11	METAL CHIP	100	5%	1/10W
R2352	1-216-809-11	METAL CHIP	100	5%	1/10W
R2353	1-216-809-11	METAL CHIP	100	5%	1/10W
R2354	1-216-835-11	METAL CHIP	15K	5%	1/10W
R2355	1-216-809-11	METAL CHIP	100	5%	1/10W
R2356	1-216-809-11	METAL CHIP	100	5%	1/10W
R2357	1-216-809-11	METAL CHIP	100	5%	1/10W
R2358	1-216-805-11	METAL CHIP	47	5%	1/10W
R2359	1-216-805-11	METAL CHIP	47	5%	1/10W
R2360	1-216-809-11	METAL CHIP	100	5%	1/10W
R2361	1-216-809-11	METAL CHIP	100	5%	1/10W

Ref. No.	Part No.	Description			Remark
R2362	1-216-809-11	METAL CHIP	100	5%	1/10W
R2363	1-216-809-11	METAL CHIP	100	5%	1/10W
R2364	1-216-809-11	METAL CHIP	100	5%	1/10W
R2365	1-216-809-11	METAL CHIP	100	5%	1/10W
R2366	1-216-809-11	METAL CHIP	100	5%	1/10W
R2367	1-216-809-11	METAL CHIP	100	5%	1/10W
R2368	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2369	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2370	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2371	1-216-809-11	METAL CHIP	100	5%	1/10W
R2372	1-216-809-11	METAL CHIP	100	5%	1/10W
R2373	1-216-809-11	METAL CHIP	100	5%	1/10W
R2374	1-216-809-11	METAL CHIP	100	5%	1/10W
R2375	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2376	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2377	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2378	1-216-809-11	METAL CHIP	100	5%	1/10W
R2379	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2380	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2384	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2385	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2386	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2387	1-216-809-11	METAL CHIP	100	5%	1/10W
R2392	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2395	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2398	1-216-797-11	METAL CHIP	10	5%	1/10W
R2399	1-216-797-11	METAL CHIP	10	5%	1/10W
R2400	1-216-797-11	METAL CHIP	10	5%	1/10W
R2401	1-216-797-11	METAL CHIP	10	5%	1/10W
R2402	1-216-797-11	METAL CHIP	10	5%	1/10W
R2403	1-216-797-11	METAL CHIP	10	5%	1/10W
R2404	1-216-797-11	METAL CHIP	10	5%	1/10W
R2405	1-216-797-11	METAL CHIP	10	5%	1/10W
R2406	1-216-797-11	METAL CHIP	10	5%	1/10W
R2407	1-216-797-11	METAL CHIP	10	5%	1/10W
R2408	1-216-797-11	METAL CHIP	10	5%	1/10W
R2409	1-216-797-11	METAL CHIP	10	5%	1/10W
R2410	1-216-797-11	METAL CHIP	10	5%	1/10W
R2411	1-216-797-11	METAL CHIP	10	5%	1/10W
R2412	1-216-797-11	METAL CHIP	10	5%	1/10W
R2413	1-216-797-11	METAL CHIP	10	5%	1/10W
R2414	1-216-797-11	METAL CHIP	10	5%	1/10W
R2415	1-216-797-11	METAL CHIP	10	5%	1/10W
R2416	1-216-797-11	METAL CHIP	10	5%	1/10W
R2417	1-216-797-11	METAL CHIP	10	5%	1/10W
R2418	1-216-809-11	METAL CHIP	100	5%	1/10W
R2419	1-216-797-11	METAL CHIP	10	5%	1/10W
R2420	1-216-809-11	METAL CHIP	100	5%	1/10W
R2421	1-216-809-11	METAL CHIP	100	5%	1/10W
R2423	1-216-817-11	METAL CHIP	470	5%	1/10W
R2424	1-216-817-11	METAL CHIP	470	5%	1/10W
R2429	1-216-817-11	METAL CHIP	470	5%	1/10W
R2430	1-216-817-11	METAL CHIP	470	5%	1/10W
		< VIBRATOR >			
X2201	1-795-219-21	VIBRATOR, CRYSTAL (24.576MHz)			

****

Ref. No.	Part No.	Description			Remark
🔒	A-1313-290-A	D_VIDEO BOARD, COMPLETE (for SERVICE)			
		**********			
	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3			
		< CAPACITOR >			
C3500	1-112-071-11	ELECT CHIP	220uF	20%	6.3V
C3501	1-112-071-11	ELECT CHIP	220uF	20%	6.3V
C3502	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3503	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3504	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3505	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3506	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3507	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3508	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3509	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3510	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3511	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3512	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3513	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3514	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3521	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3522	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3523	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3524	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3525	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3526	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3527	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3529	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3530	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3531	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3532	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3533	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3534	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3535	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3536	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3537	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3538	1-162-916-11	CERAMIC CHIP	12PF	5%	50V
C3539	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3540	1-162-916-11	CERAMIC CHIP	12PF	5%	50V
C3541	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3542	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3543	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3545	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3549	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3550	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3551	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3552	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3553	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3554	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3555	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3556	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3557	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3558	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3561	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3562	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3563	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3564	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3566	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3567	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3568	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3569	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3570	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3571	1-126-205-11	ELECT CHIP	47uF	20%	6.3V
C3572	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C3573	1-126-205-11	ELECT CHIP	47uF	20%	6.3V
C3574	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C3575	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C3576	1-100-669-11	ELECT CHIP	100uF	20%	10V
C3578	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C3579	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3580	1-100-669-11	ELECT CHIP	100uF	20%	10V
C3583	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C3584	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C3585	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C3586	1-117-681-11	ELECT CHIP	100uF	20%	16V
C3590	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C3591	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C3593	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C3594	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C3596	1-100-669-11	ELECT CHIP	100uF	20%	10V
C3597	1-100-669-11	ELECT CHIP	100uF	20%	10V
C3600	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3601	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3602	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3603	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3604	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3605	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C3606	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3607	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3608	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3609	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3610	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3611	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3612	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3613	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3614	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3615	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3616	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3617	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3618	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C3619	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3620	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3621	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3622	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3623	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3624	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C3625	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3626	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C3627	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3628	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C3629	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3630	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3631	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3632	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3633	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V

D_VIDEO

Ref. No.	Part No.	Description			Remark
C3634	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C3635	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3636	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C3637	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C3638	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3639	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3640	1-112-788-11	ELECT CHIP	330uF	20%	6.3V
C3641	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3642	1-114-552-21	ELECT CHIP	100uF	20%	35V
C3643	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3644	1-135-474-21	ELECT CHIP	330uF	20%	6.3V
C3645	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3646	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V
C3647	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3648	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3649	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3650	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V
C3651	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3652	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3653	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3654	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3655	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3656	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3657	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3658	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3659	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3660	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3661	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3662	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3663	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3664	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3665	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3666	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3667	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3668	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3669	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3670	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3671	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3672	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3673	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3674	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3675	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3676	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3677	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3678	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3679	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3680	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3682	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3683	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3684	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3685	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3686	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3687	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3688	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3689	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3690	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C3691	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3692	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C3693	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3694	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C3695	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3696	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3697	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3698	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3699	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3700	1-165-662-21	ELECT CHIP	220uF	20%	4V
C3701	1-165-662-21	ELECT CHIP	220uF	20%	4V
C3702	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3703	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C3704	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3705	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3706	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3707	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C3708	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3709	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3710	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C3711	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3712	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3713	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3714	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3715	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C3716	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3717	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3718	1-114-552-21	ELECT CHIP	100uF	20%	35V
C3719	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3720	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3721	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3722	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3723	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3724	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3725	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3726	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3727	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3728	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3729	1-165-662-21	ELECT CHIP	220uF	20%	4V
C3730	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3731	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3732	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3733	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3734	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3735	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3736	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3737	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3738	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3739	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3740	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3741	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3742	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3743	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3744	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3745	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3746	1-128-995-21	ELECT CHIP	100uF	20%	10V
C3747	1-165-669-21	ELECT CHIP	220uF	20%	6.3V
C3748	1-165-662-21	ELECT CHIP	220uF	20%	4V
C3749	1-126-205-11	ELECT CHIP	47uF	20%	6.3V

Ref. No.	Part No.	Description			Remark
C3750	1-126-207-11	ELECT CHIP	33uF	20%	4V
C3751	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3752	1-128-995-21	ELECT CHIP	100uF	20%	10V
C3753	1-114-552-21	ELECT CHIP	100uF	20%	35V
C3754	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3755	1-162-916-11	CERAMIC CHIP	12PF	5%	50V
C3756	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C3757	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3758	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3759	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3760	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3761	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3762	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3763	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3764	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3765	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3766	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3767	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3768	1-165-662-21	ELECT CHIP	220uF	20%	4V
C3769	1-114-552-21	ELECT CHIP	100uF	20%	35V
C3770	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3771	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3772	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3773	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3774	1-126-207-11	ELECT CHIP	33uF	20%	4V
C3775	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3776	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3777	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3778	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3779	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3780	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3781	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3782	1-165-662-21	ELECT CHIP	220uF	20%	4V
C3783	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3784	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3785	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3786	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3787	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3788	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3789	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3790	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3791	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3792	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C3793	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C3794	1-126-210-21	ELECT CHIP	220uF	20%	4V
C3795	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3796	1-165-880-21	ELECT CHIP	220uF	20%	2.5V
C3797	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3798	1-100-635-21	ELECT CHIP	82uF	20%	4V
C3799	1-112-071-11	ELECT CHIP	220uF	20%	6.3V
C3801	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C3802	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3803	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3804	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C3805	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3806	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C3807	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3808	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C3809	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3810	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C3811	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3812	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3813	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3814	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C3815	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3816	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3817	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3818	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3822	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3850	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C3851	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C3854	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C3855	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C3856	1-127-956-21	FILM CHIP	0.1uF	5%	16V
C3857	1-127-956-21	FILM CHIP	0.1uF	5%	16V
C3858	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3859	1-164-173-11	CERAMIC CHIP	0.0039uF	10%	50V
C3860	1-164-733-11	CERAMIC CHIP	820PF	10%	50V
C3861	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C3862	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C3864	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3865	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C3866	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C3867	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3868	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3869	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3870	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3873	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3874	1-126-205-11	ELECT CHIP	47uF	20%	6.3V
C3875	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3876	1-126-207-11	ELECT CHIP	33uF	20%	4V
C3958	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3959	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3960	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C3961	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C3962	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C3964	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C3965	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C3966	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C3967	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C9364	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V

< CONNECTOR >

CN3501	1-820-668-11	HDMI CONNECTOR (HDMI ASSIGNABLE (INPUT ONLY) IN 3)
CN3502	1-820-668-11	HDMI CONNECTOR (HDMI ASSIGNABLE (INPUT ONLY) IN 2)
CN3503	1-820-668-11	HDMI CONNECTOR (HDMI ASSIGNABLE (INPUT ONLY) IN 1)
CN3505	1-770-406-11	CONNECTOR, BOARD TO BOARD 10P
CN3506	1-816-296-21	PIN, CONNECTOR (PC BOARD) 9P
CN3508	1-785-101-11	PIN, CONNECTOR (3.96mm PITCH) 3P
CN3511	1-820-668-11	HDMI CONNECTOR (HDMI ASSIGNABLE (INPUT ONLY) OUT)
CN3602	1-779-992-11	PIN, CONNECTOR (PWB) 8P

D_VIDEO

Ref. No.	Part No.	Description	Remark
* CN3603	1-785-125-21	CONNECTOR 6P	
* CN3605	1-764-250-11	PIN, CONNECTOR (PC BOARD) 4P	
CN3801	1-770-407-11	CONNECTOR, BOARD TO BOARD 12P	
		< DIODE >	
D3501	8-719-988-61	DIODE 1SS355TE-17	
D3502	8-719-988-61	DIODE 1SS355TE-17	
D3511	8-719-073-81	DIODE EC21QS06-TE12L	
D3512	8-719-073-81	DIODE EC21QS06-TE12L	
D3606	8-719-312-08	DIODE FMB-G16L	
D3607	8-719-312-08	DIODE FMB-G16L	
D3617	8-719-053-18	DIODE 1SR154-400TE-25	
D3618	8-719-210-39	DIODE EC10QS-04	
D3805	8-719-988-61	DIODE 1SS355TE-17	
D3808	8-719-988-61	DIODE 1SS355TE-17	
		< EARTH TERMINAL >	
ET3501	1-780-318-11	TERMINAL	
ET3502	1-780-318-11	TERMINAL	
		< FERRITE BEAD >	
FB3501	1-469-139-21	FERRITE, EMI (SMD) (2012)	
FB3502	1-414-234-22	INDUCTOR, FERRITE BEAD	
FB3503	1-414-234-22	INDUCTOR, FERRITE BEAD	
FB3504	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB3505	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB3506	1-414-234-22	INDUCTOR, FERRITE BEAD	
FB3507	1-414-234-22	INDUCTOR, FERRITE BEAD	
FB3508	1-469-139-21	FERRITE, EMI (SMD) (2012)	
FB3509	1-469-139-21	FERRITE, EMI (SMD) (2012)	
FB3510	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB3601	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB3602	1-414-234-22	INDUCTOR, FERRITE BEAD	
FB3603	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB3604	1-414-234-22	INDUCTOR, FERRITE BEAD	
FB3605	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB3606	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB3607	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB3608	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB3609	1-469-324-21	FERRITE, EMI (SMD) (2012)	
FB3610	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB3611	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB3612	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB3613	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB3614	1-414-234-22	INDUCTOR, FERRITE BEAD	
FB3615	1-469-152-11	FERRITE, EMI (SMD) (2012)	
FB3616	1-469-152-11	FERRITE, EMI (SMD) (2012)	
		< COIL >	
* FL3501	1-813-880-11	COMMON MODE CHOKE COIL	
* FL3502	1-813-880-11	COMMON MODE CHOKE COIL	
* FL3503	1-813-880-11	COMMON MODE CHOKE COIL	
* FL3504	1-813-880-11	COMMON MODE CHOKE COIL	
		< IC >	
IC3503	6-711-088-01	IC SII9185CTU	
IC3508	8-759-596-39	IC SN74LV4052APWR	
IC3509	6-704-001-01	IC BR24L02F-WSE2	
IC3511	(Not supplied)	IC SII9135CTU	
IC3513	(Not supplied)	IC SII9134CTU	
IC3514	6-708-913-01	IC TK73400AU3G0L-C	
IC3516	6-705-337-01	IC TK11150CSCL-G	
IC3517	6-708-913-01	IC TK73400AU3G0L-C	
IC3524	8-759-548-99	IC SN74LV08APWR	
@ IC3601	6-711-139-01	IC FLI8638-LF	
IC3602	6-710-521-11	IC HY5DU561622ETP-4-C	
IC3603	6-807-428-11	IC S29GL256N90TFIR20-07GUIX103	
IC3604	6-709-564-01	IC YGV629-VZ	
IC3605	6-705-468-01	IC BA33BC0FP-E2	
IC3607	6-705-468-01	IC BA33BC0FP-E2	
IC3608	6-702-300-01	IC TK11118CSCL-G	
IC3609	6-707-842-01	IC TC74LCX08FT (EKJ)	
IC3610	6-807-535-01	IC MB91F467RA-07A43GUI-X100	
IC3611	6-710-003-01	IC IS61LV12816L-8TL	
IC3612	6-700-394-01	IC BA25BC0FP-E2	
IC3614	6-705-468-01	IC BA33BC0FP-E2	
IC3615	6-807-714-01	IC SST39VF3202704IEKE53FLIX105	
IC3616	6-705-468-01	IC BA33BC0FP-E2	
IC3617	6-600-632-01	IC SI-3011ZFE	
IC3618	6-710-521-11	IC HY5DU561622ETP-4-C	
IC3619	6-710-050-01	IC TC74LCX245FK (EL)	
IC3620	6-710-050-01	IC TC74LCX245FK (EL)	
IC3621	6-704-573-01	IC M24C32-WMN6T (B)	
IC3850	6-709-565-01	IC ADV7322KSTZ	
IC3851	6-704-261-01	IC TK11225CMCL-G	
IC3852	6-702-301-01	IC TK11125CSCL-G	
IC3853	6-705-308-01	IC SI-3010KM-TL	
IC3854	6-710-444-01	IC CY2302-SXC-1T	
IC3855	8-759-524-50	IC TC74VHC541FT (EL)	
		< COIL >	
L3501	1-469-525-91	INDUCTOR 10uH	
L3505	1-469-525-91	INDUCTOR 10uH	
L3506	1-469-525-91	INDUCTOR 10uH	
L3507	1-469-525-91	INDUCTOR 10uH	
L3508	1-469-525-91	INDUCTOR 10uH	
L3509	1-469-525-91	INDUCTOR 10uH	
L3510	1-469-525-91	INDUCTOR 10uH	
L3850	1-469-525-91	INDUCTOR 10uH	
		< FET >	
Q3501	6-550-014-01	FET SSM6N15FU (TE85R)	
Q3502	6-550-014-01	FET SSM6N15FU (TE85R)	
Q3503	6-550-014-01	FET SSM6N15FU (TE85R)	
		< RESISTOR/FERRITE BEAD >	
R2976	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R3401	1-216-864-11	SHORT CHIP 0	
R3402	1-216-801-11	METAL CHIP 22 5% 1/10W	
R3403	1-216-801-11	METAL CHIP 22 5% 1/10W	
R3404	1-216-797-11	METAL CHIP 10 5% 1/10W	
R3405	1-216-805-11	METAL CHIP 47 5% 1/10W	
R3406	1-216-790-11	METAL CHIP 2.7 5% 1/10W	
R3407	1-216-805-11	METAL CHIP 47 5% 1/10W	
R3408	1-216-805-11	METAL CHIP 47 5% 1/10W	

Note: IC3511 and IC3513 cannot exchange with single. When IC3511 and IC3513 are damaged, exchange the entire mounted board.

@Replacement of IC3601 used in this set requires a special tool.

Ref. No.	Part No.	Description			Remark
R3409	1-216-805-11	METAL CHIP	47	5%	1/10W
R3410	1-216-805-11	METAL CHIP	47	5%	1/10W
R3411	1-216-805-11	METAL CHIP	47	5%	1/10W
R3412	1-216-805-11	METAL CHIP	47	5%	1/10W
R3413	1-216-805-11	METAL CHIP	47	5%	1/10W
R3414	1-216-805-11	METAL CHIP	47	5%	1/10W
R3415	1-216-805-11	METAL CHIP	47	5%	1/10W
R3416	1-216-805-11	METAL CHIP	47	5%	1/10W
R3417	1-216-805-11	METAL CHIP	47	5%	1/10W
R3418	1-216-805-11	METAL CHIP	47	5%	1/10W
R3419	1-216-805-11	METAL CHIP	47	5%	1/10W
R3420	1-216-805-11	METAL CHIP	47	5%	1/10W
R3421	1-216-805-11	METAL CHIP	47	5%	1/10W
R3422	1-216-790-11	METAL CHIP	2.7	5%	1/10W
R3423	1-216-805-11	METAL CHIP	47	5%	1/10W
R3424	1-216-790-11	METAL CHIP	2.7	5%	1/10W
R3425	1-216-805-11	METAL CHIP	47	5%	1/10W
R3426	1-216-790-11	METAL CHIP	2.7	5%	1/10W
R3427	1-216-805-11	METAL CHIP	47	5%	1/10W
R3502	1-216-864-11	SHORT CHIP	0		
R3503	1-216-864-11	SHORT CHIP	0		
R3507	1-216-864-11	SHORT CHIP	0		
R3510	1-216-809-11	METAL CHIP	100	5%	1/10W
R3511	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3513	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3514	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3515	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R3516	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R3517	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R3518	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R3519	1-216-805-11	METAL CHIP	47	5%	1/10W
R3520	1-216-805-11	METAL CHIP	47	5%	1/10W
R3521	1-216-805-11	METAL CHIP	47	5%	1/10W
R3522	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R3523	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R3524	1-216-805-11	METAL CHIP	47	5%	1/10W
R3525	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R3526	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R3527	1-218-484-11	METAL CHIP	750	5%	1/10W
R3528	1-216-864-11	SHORT CHIP	0		
R3529	1-216-809-11	METAL CHIP	100	5%	1/10W
R3530	1-216-805-11	METAL CHIP	47	5%	1/10W
R3531	1-216-805-11	METAL CHIP	47	5%	1/10W
R3532	1-216-821-11	METAL CHIP	1K	5%	1/10W
R3533	1-216-821-11	METAL CHIP	1K	5%	1/10W
R3534	1-216-821-11	METAL CHIP	1K	5%	1/10W
R3535	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R3537	1-216-864-11	SHORT CHIP	0		
R3538	1-216-864-11	SHORT CHIP	0		
R3539	1-216-864-11	SHORT CHIP	0		
R3542	1-216-864-11	SHORT CHIP	0		
R3543	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3544	1-216-805-11	METAL CHIP	47	5%	1/10W
R3545	1-216-805-11	METAL CHIP	47	5%	1/10W
R3546	1-216-857-11	METAL CHIP	1M	5%	1/10W
R3547	1-216-864-11	SHORT CHIP	0		
R3548	1-216-805-11	METAL CHIP	47	5%	1/10W
R3549	1-216-805-11	METAL CHIP	47	5%	1/10W
R3550	1-216-805-11	METAL CHIP	47	5%	1/10W
R3551	1-216-805-11	METAL CHIP	47	5%	1/10W
R3552	1-216-805-11	METAL CHIP	47	5%	1/10W
R3553	1-216-805-11	METAL CHIP	47	5%	1/10W
R3554	1-216-805-11	METAL CHIP	47	5%	1/10W
R3555	1-216-805-11	METAL CHIP	47	5%	1/10W
R3556	1-216-817-11	METAL CHIP	470	5%	1/10W
R3557	1-469-139-21	FERRITE, EMI (SMD) (2012)			
R3558	1-216-817-11	METAL CHIP	470	5%	1/10W
R3561	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3563	1-216-809-11	METAL CHIP	100	5%	1/10W
R3564	1-216-797-11	METAL CHIP	10	5%	1/10W
R3565	1-216-797-11	METAL CHIP	10	5%	1/10W
R3566	1-216-797-11	METAL CHIP	10	5%	1/10W
R3567	1-216-797-11	METAL CHIP	10	5%	1/10W
R3568	1-216-809-11	METAL CHIP	100	5%	1/10W
R3569	1-216-809-11	METAL CHIP	100	5%	1/10W
R3570	1-216-809-11	METAL CHIP	100	5%	1/10W
R3571	1-216-809-11	METAL CHIP	100	5%	1/10W
R3572	1-216-817-11	METAL CHIP	470	5%	1/10W
R3573	1-216-809-11	METAL CHIP	100	5%	1/10W
R3574	1-414-813-11	FERRITE, EMI (SMD) (2012)			
R3575	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3576	1-216-805-11	METAL CHIP	47	5%	1/10W
R3577	1-216-805-11	METAL CHIP	47	5%	1/10W
R3578	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R3579	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3580	1-218-843-11	METAL CHIP	680	0.5%	1/10W
R3581	1-216-809-11	METAL CHIP	100	5%	1/10W
R3582	1-216-864-11	SHORT CHIP	0		
R3583	1-216-805-11	METAL CHIP	47	5%	1/10W
R3584	1-216-805-11	METAL CHIP	47	5%	1/10W
R3585	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3586	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3587	1-216-864-11	SHORT CHIP	0		
R3588	1-216-864-11	SHORT CHIP	0		
R3591	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R3593	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3597	1-216-864-11	SHORT CHIP	0		
R3598	1-216-864-11	SHORT CHIP	0		
R3599	1-216-824-11	METAL CHIP	1.8K	5%	1/10W
R3600	1-216-824-11	METAL CHIP	1.8K	5%	1/10W
R3601	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3602	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3603	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3604	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3605	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3606	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3607	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3608	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3609	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3610	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3611	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3612	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3613	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3614	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3615	1-216-841-11	METAL CHIP	47K	5%	1/10W

D_VIDEO

Ref. No.	Part No.	Description			Remark
R3616	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3617	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3618	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3619	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3620	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3621	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3622	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3623	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3624	1-216-864-11	SHORT CHIP	0		
R3625	1-216-864-11	SHORT CHIP	0		
R3626	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3627	1-216-864-11	SHORT CHIP	0		
R3628	1-216-821-11	METAL CHIP	1K	5%	1/10W
R3629	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R3630	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R3631	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R3632	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R3633	1-216-864-11	SHORT CHIP	0		
R3635	1-216-857-11	METAL CHIP	1M	5%	1/10W
R3636	1-218-990-81	SHORT CHIP	0		
R3637	1-218-990-81	SHORT CHIP	0		
R3638	1-216-821-11	METAL CHIP	1K	5%	1/10W
R3639	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3640	1-216-864-11	SHORT CHIP	0		
R3643	1-216-864-11	SHORT CHIP	0		
R3644	1-216-864-11	SHORT CHIP	0		
R3646	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3647	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3648	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3649	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3650	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3651	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3652	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3653	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3654	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3655	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3656	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3657	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3658	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3660	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3661	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3664	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3665	1-216-826-11	METAL CHIP	2.7K	5%	1/10W
R3666	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3667	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3668	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3669	1-216-805-11	METAL CHIP	47	5%	1/10W
R3670	1-216-805-11	METAL CHIP	47	5%	1/10W
R3671	1-216-864-11	SHORT CHIP	0		
R3672	1-216-864-11	SHORT CHIP	0		
R3673	1-216-864-11	SHORT CHIP	0		
R3674	1-216-864-11	SHORT CHIP	0		
R3675	1-216-805-11	METAL CHIP	47	5%	1/10W
R3676	1-216-864-11	SHORT CHIP	0		
R3677	1-216-864-11	SHORT CHIP	0		
R3678	1-216-864-11	SHORT CHIP	0		
R3679	1-216-805-11	METAL CHIP	47	5%	1/10W
R3680	1-216-805-11	METAL CHIP	47	5%	1/10W
R3681	1-216-805-11	METAL CHIP	47	5%	1/10W
R3682	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3685	1-216-809-11	METAL CHIP	100	5%	1/10W
R3686	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R3687	1-211-977-11	METAL CHIP	22	0.5%	1/10W
R3688	1-216-805-11	METAL CHIP	47	5%	1/10W
R3689	1-216-821-11	METAL CHIP	1K	5%	1/10W
R3690	1-216-864-11	SHORT CHIP	0		
R3691	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R3692	1-211-977-11	METAL CHIP	22	0.5%	1/10W
R3693	1-216-864-11	SHORT CHIP	0		
R3694	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R3695	1-211-977-11	METAL CHIP	22	0.5%	1/10W
R3696	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3698	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3699	1-216-864-11	SHORT CHIP	0		
R3700	1-216-837-11	METAL CHIP	22K	5%	1/10W
R3702	1-211-987-11	METAL CHIP	56	0.5%	1/10W
R3703	1-211-987-11	METAL CHIP	56	0.5%	1/10W
R3705	1-216-864-11	SHORT CHIP	0		
R3706	1-216-864-11	SHORT CHIP	0		
R3707	1-216-864-11	SHORT CHIP	0		
R3708	1-216-864-11	SHORT CHIP	0		
R3709	1-216-864-11	SHORT CHIP	0		
R3713	1-211-987-11	METAL CHIP	56	0.5%	1/10W
R3714	1-211-987-11	METAL CHIP	56	0.5%	1/10W
R3715	1-211-987-11	METAL CHIP	56	0.5%	1/10W
R3716	1-211-987-11	METAL CHIP	56	0.5%	1/10W
R3717	1-211-977-11	METAL CHIP	22	0.5%	1/10W
R3718	1-211-987-11	METAL CHIP	56	0.5%	1/10W
R3719	1-211-977-11	METAL CHIP	22	0.5%	1/10W
R3720	1-211-977-11	METAL CHIP	22	0.5%	1/10W
R3722	1-211-977-11	METAL CHIP	22	0.5%	1/10W
R3723	1-211-977-11	METAL CHIP	22	0.5%	1/10W
R3724	1-216-864-11	SHORT CHIP	0		
R3726	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R3727	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R3728	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R3729	1-216-805-11	METAL CHIP	47	5%	1/10W
R3730	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R3731	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R3732	1-216-805-11	METAL CHIP	47	5%	1/10W
R3733	1-216-864-11	SHORT CHIP	0		
R3734	1-216-864-11	SHORT CHIP	0		
R3735	1-216-864-11	SHORT CHIP	0		
R3736	1-216-803-11	METAL CHIP	33	5%	1/10W
R3737	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R3738	1-216-817-11	METAL CHIP	470	5%	1/10W
R3739	1-216-810-11	METAL CHIP	120	5%	1/10W
R3740	1-216-810-11	METAL CHIP	120	5%	1/10W
R3741	1-216-815-11	METAL CHIP	330	5%	1/10W
R3742	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3744	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3747	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3748	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3749	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3750	1-216-864-11	SHORT CHIP	0		

Ref. No.	Part No.	Description			Remark
R3751	1-216-821-11	METAL CHIP	1K	5%	1/10W
R3752	1-216-864-11	SHORT CHIP	0		
R3753	1-216-864-11	SHORT CHIP	0		
R3754	1-216-864-11	SHORT CHIP	0		
R3755	1-216-864-11	SHORT CHIP	0		
R3756	1-216-864-11	SHORT CHIP	0		
R3759	1-216-864-11	SHORT CHIP	0		
R3760	1-216-864-11	SHORT CHIP	0		
R3764	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3765	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3766	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3767	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3768	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3769	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3770	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3771	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3772	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3773	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3774	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3775	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3776	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3777	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3778	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3779	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3780	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3781	1-216-813-11	METAL CHIP	220	5%	1/10W
R3783	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3785	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3786	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3792	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3793	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3794	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3795	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3796	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3797	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3798	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3799	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3801	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3803	1-216-864-11	SHORT CHIP	0		
R3804	1-216-864-11	SHORT CHIP	0		
R3805	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3806	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3807	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3808	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3809	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R3810	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R3811	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3812	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3813	1-216-864-11	SHORT CHIP	0		
R3814	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R3815	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R3816	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3817	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3818	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3819	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3820	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3821	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3822	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3823	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3824	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3825	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3826	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3827	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3828	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3829	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3830	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3831	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3832	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3833	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3834	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3835	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3836	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3837	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3838	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3839	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3840	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3841	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3842	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3843	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3844	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3845	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3846	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3847	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3848	1-208-647-11	METAL CHIP	33	0.5%	1/16W
R3849	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3854	1-216-864-11	SHORT CHIP	0		
R3855	1-216-864-11	SHORT CHIP	0		
R3856	1-216-864-11	SHORT CHIP	0		
R3857	1-216-864-11	SHORT CHIP	0		
R3858	1-216-864-11	SHORT CHIP	0		
R3860	1-216-803-11	METAL CHIP	33	5%	1/10W
R3861	1-216-803-11	METAL CHIP	33	5%	1/10W
R3863	1-216-826-11	METAL CHIP	2.7K	5%	1/10W
R3864	1-216-826-11	METAL CHIP	2.7K	5%	1/10W
R3865	1-216-819-11	METAL CHIP	680	5%	1/10W
R3866	1-216-809-11	METAL CHIP	100	5%	1/10W
R3867	1-216-815-11	METAL CHIP	330	5%	1/10W
R3868	1-216-815-11	METAL CHIP	330	5%	1/10W
R3869	1-216-864-11	SHORT CHIP	0		
R3870	1-216-864-11	SHORT CHIP	0		
R3872	1-218-834-11	METAL CHIP	300	0.5%	1/10W
R3873	1-218-834-11	METAL CHIP	300	0.5%	1/10W
R3877	1-216-864-11	SHORT CHIP	0		
R3878	1-216-864-11	SHORT CHIP	0		
R3879	1-216-864-11	SHORT CHIP	0		
R3880	1-216-864-11	SHORT CHIP	0		
R3882	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3883	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3884	1-218-856-11	METAL CHIP	2.4K	0.5%	1/10W
R3885	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R3886	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3887	1-216-803-11	METAL CHIP	33	5%	1/10W
R3888	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3889	1-216-803-11	METAL CHIP	33	5%	1/10W
R3891	1-216-864-11	SHORT CHIP	0		

D_VIDEO **DC-DC**

Ref. No.	Part No.	Description			Remark
R3892	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3893	1-216-864-11	SHORT CHIP	0		
R3894	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3895	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3896	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3897	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R3898	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R3937	1-216-826-11	METAL CHIP	2.7K	5%	1/10W
R3938	1-216-826-11	METAL CHIP	2.7K	5%	1/10W
R3939	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3940	1-218-889-11	METAL CHIP	56K	0.5%	1/10W
R3941	1-218-883-11	METAL CHIP	33K	0.5%	1/10W
R3942	1-218-859-11	METAL CHIP	3.3K	0.5%	1/10W
R3943	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R3944	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3946	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3973	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3974	1-216-817-11	METAL CHIP	470	5%	1/10W
R3975	1-216-817-11	METAL CHIP	470	5%	1/10W
R3976	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R3977	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R3978	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R3979	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R3990	1-216-805-11	METAL CHIP	47	5%	1/10W
R3991	1-216-864-11	SHORT CHIP	0		
R3992	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R3995	1-216-864-11	SHORT CHIP	0		
R3998	1-216-805-11	METAL CHIP	47	5%	1/10W
		< COMPOSITION CIRCUIT BLOCK >			
RB3501	1-234-371-21	RES, NETWORK	47 (1005X4)		
RB3502	1-234-370-21	RES, NETWORK	22 (1005X4)		
RB3503	1-234-370-21	RES, NETWORK	22 (1005X4)		
RB3504	1-234-371-21	RES, NETWORK	47 (1005X4)		
RB3505	1-234-370-21	RES, NETWORK	22 (1005X4)		
RB3506	1-234-370-21	RES, NETWORK	22 (1005X4)		
RB3507	1-234-371-21	RES, NETWORK	47 (1005X4)		
RB3508	1-234-370-21	RES, NETWORK	22 (1005X4)		
RB3509	1-234-370-21	RES, NETWORK	22 (1005X4)		
RB3511	1-234-371-21	RES, NETWORK	47 (1005X4)		
RB3512	1-234-370-21	RES, NETWORK	22 (1005X4)		
RB3513	1-234-370-21	RES, NETWORK	22 (1005X4)		
RB3514	1-234-371-21	RES, NETWORK	47 (1005X4)		
RB3515	1-234-370-21	RES, NETWORK	22 (1005X4)		
RB3516	1-234-370-21	RES, NETWORK	22 (1005X4)		
RB3517	1-234-371-21	RES, NETWORK	47 (1005X4)		
RB3518	1-234-370-21	RES, NETWORK	22 (1005X4)		
RB3519	1-234-370-21	RES, NETWORK	22 (1005X4)		
RB3601	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3602	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3603	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3604	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3605	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3606	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3608	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3610	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3612	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3614	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3618	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3619	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3620	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3621	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3622	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3623	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3624	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3625	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB3626	1-234-370-21	RES, NETWORK	22 (1005X4)		
RB3627	1-234-371-21	RES, NETWORK	47 (1005X4)		
RB3628	1-234-371-21	RES, NETWORK	47 (1005X4)		
RB3630	1-234-371-21	RES, NETWORK	47 (1005X4)		
RB3631	1-234-371-21	RES, NETWORK	47 (1005X4)		
RB3636	1-234-371-21	RES, NETWORK	47 (1005X4)		
RB3637	1-234-371-21	RES, NETWORK	47 (1005X4)		
		< VIBRATOR >			
X3501	1-813-570-21	VIBRATOR, CRYSTAL (28.322MHz)			
X3601	1-813-807-11	VIBRATOR, CRYSTAL 33.2MHZ (33.2MHz)			
X3602	1-781-646-21	VIBRATOR, CERAMIC (4MHz)			
X3603	1-813-808-11	VIBRATOR, CRYSTAL 19.6608MHZ (19.6MHz)			
**********					
	A-1252-444-A	DC-DC BOARD, COMPLETE			
		**********			
	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3			
		< CAPACITOR >			
C1402	1-128-549-11	ELECT	3300uF	20%	35V
C1404	1-128-959-21	ELECT	1000uF	20%	35V
C1405	1-100-924-21	ELECT	2200uF	20%	35V
C1406	1-128-959-21	ELECT	1000uF	20%	35V
C1407	1-128-959-21	ELECT	1000uF	20%	35V
C1409	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V
C1410	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V
C1411	1-126-964-11	ELECT	10uF	20%	50V
C1412	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V
C1414	1-128-950-21	ELECT	1000uF	20%	16V
C1415	1-128-951-21	ELECT	2200uF	20%	16V
C1416	1-128-950-21	ELECT	1000uF	20%	16V
C1417	1-128-950-21	ELECT	1000uF	20%	16V
C1423	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	50V
		< CONNECTOR >			
CN1401	1-691-776-11	PLUG (MICRO CONNECTOR) 14P			
CX1402	1-778-293-11	PLUG (MICRO CONNECTOR) 2P			
CX1451	1-785-101-11	PIN, CONNECTOR (3.96mm PITCH) 3P			
		< DIODE >			
D1401	8-719-072-05	DIODE RBV-602LF-A			
D1403	8-719-301-45	DIODE RK14			
D1404	8-719-312-08	DIODE FMB-G16L			
D1405	8-719-301-45	DIODE RK14			
D1406	8-719-301-45	DIODE RK14			

Ref. No.	Part No.	Description			Remark
		< FUSE HOLDER >			
FH1403	1-533-313-11	FUSE HOLDER			
FH1404	1-533-313-11	FUSE HOLDER			
		< IC >			
IC1402	6-711-058-01	IC SI-8008HFE			
IC1403	6-711-058-01	IC SI-8008HFE			
IC1404	8-759-474-09	IC SI-8050S-LF1101			
IC1405	6-701-021-01	IC SI-8120JF			
		< COIL >			
L1402	1-456-545-11	INDUCTOR	100uH		
L1403	1-456-545-11	INDUCTOR	100uH		
L1404	1-456-545-11	INDUCTOR	100uH		
L1405	1-456-545-11	INDUCTOR	100uH		
L1407	1-481-254-11	INDUCTOR	0.1mH		
L1408	1-481-254-11	INDUCTOR	0.1mH		
L1409	1-457-508-11	INDUCTOR	0.1mH		
L1410	1-457-508-11	INDUCTOR	0.1mH		
		< TRANSISTOR >			
Q1409	8-729-027-52	TRANSISTOR	DTC124EKA-T146		
		< RESISTOR >			
R1401	1-216-037-00	RES-CHIP	330	5%	1/10W
R1402	1-216-037-00	RES-CHIP	330	5%	1/10W
R1403	1-216-033-00	RES-CHIP	220	5%	1/10W
R1404	1-216-041-00	RES-CHIP	470	5%	1/10W
R1405	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R1406	1-216-022-00	RES-CHIP	75	5%	1/10W
R1407	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1408	1-216-025-11	RES-CHIP	100	5%	1/10W
R1409	1-216-025-11	RES-CHIP	100	5%	1/10W
R1410	1-216-025-11	RES-CHIP	100	5%	1/10W
R1411	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1412	1-216-037-00	RES-CHIP	330	5%	1/10W
R1417	1-216-158-00	RES-CHIP	22	5%	1/8W
**********					
	A-1257-022-A	DISPLAY BOARD, COMPLETE			
		**********			
	2-389-320-01	CUSHION			
		< CAPACITOR >			
C701	1-104-957-11	ELECT	47uF	20%	25V
C704	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C706	1-104-957-11	ELECT	47uF	20%	25V
C707	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C708	1-126-795-11	ELECT	10uF	20%	50V
C712	1-165-733-31	ELECT	100uF	20%	25V
C713	1-107-378-11	MYLAR	0.0039uF	5%	200V
C714	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C715	1-137-807-31	ELECT	100uF	20%	50V
C716	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C718	1-104-957-11	ELECT	47uF	20%	25V
C719	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
C721	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V

Ref. No.	Part No.	Description			Remark
C722	1-126-795-11	ELECT	10uF	20%	50V
C724	1-104-957-11	ELECT	47uF	20%	25V
C725	1-104-957-11	ELECT	47uF	20%	25V
C726	1-104-957-11	ELECT	47uF	20%	25V
C727	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C728	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C729	1-126-795-11	ELECT	10uF	20%	50V
C730	1-126-795-11	ELECT	10uF	20%	50V
C731	1-126-795-11	ELECT	10uF	20%	50V
C732	1-126-795-11	ELECT	10uF	20%	50V
C733	1-107-925-11	ELECT	1uF	20%	100V
C734	1-104-957-11	ELECT	47uF	20%	25V
C735	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
C739	1-126-795-11	ELECT	10uF	20%	50V
C740	1-126-795-11	ELECT	10uF	20%	50V
C743	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C745	1-126-795-11	ELECT	10uF	20%	50V
C746	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C747	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C749	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C751	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C754	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
		< CONNECTOR >			
CN701	1-784-928-11	PIN, CONNECTOR 13P			
CN702	1-784-926-11	PIN, CONNECTOR 11P			
* CN706	1-564-724-11	PIN, CONNECTOR (SMALL TYPE) 8P			
CN710	1-784-930-11	PIN, CONNECTOR 15P			
		< DIODE >			
D701	8-719-056-11	LED SML72423C-TP15 (ON/STANDBY)			
D702	8-719-075-59	LED SELS5B23C-TP15 (Digital Cinema Sound)			
D703	6-501-539-01	LED SELK5E20C-DTP15 (MULTI CHANNEL DECODING)			
D704	8-719-041-97	DIODE MA113-(TX)			
D705	8-719-041-97	DIODE MA113-(TX)			
D706	8-719-041-97	DIODE MA113-(TX)			
D707	8-719-041-97	DIODE MA113-(TX)			
D708	6-501-743-01	DIODE MAZ8068GMLS0			
D710	8-719-404-50	DIODE MA111-TX			
		< FERRITE BEAD >			
FB701	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB702	1-469-152-11	FERRITE, EMI (SMD) (2012)			
		< IC >			
IC701	6-600-349-31	IC NJL24H400A			
IC702	6-705-468-01	IC BA33BC0FP-E2			
IC703	8-759-825-56	IC NJM2173AV (TE2)			
		< JUMPER RESISTOR >			
JW753	1-216-296-11	SHORT CHIP	0		
		< COIL >			
L701	1-421-967-11	INDUCTOR	100uH		

Ref. No.	Part No.	Description			Remark
		< FLUORESCENT INDICATOR TUBE >			
ND701	1-519-954-11	INDICATOR TUBE, FLUORESCENT			
		< TRANSISTOR >			
Q701	8-729-027-43	TRANSISTOR	DTC114EKA-T146		
Q702	8-729-027-43	TRANSISTOR	DTC114EKA-T146		
Q703	8-729-027-43	TRANSISTOR	DTC114EKA-T146		
Q704	8-729-027-43	TRANSISTOR	DTC114EKA-T146		
Q705	8-729-808-42	TRANSISTOR	2SD1624-T		
Q706	8-729-808-42	TRANSISTOR	2SD1624-T		
Q708	8-729-024-91	TRANSISTOR	2SC2712-GL-TE85L		
Q709	8-729-027-43	TRANSISTOR	DTC114EKA-T146		
Q710	8-729-024-91	TRANSISTOR	2SC2712-GL-TE85L		
Q711	8-729-216-22	TRANSISTOR	2SA1162-G		
		< RESISTOR >			
R701	1-216-037-00	RES-CHIP	330	5%	1/10W
R703	1-216-295-91	SHORT CHIP	0		
R705	1-216-295-91	SHORT CHIP	0		
R706	1-216-001-00	RES-CHIP	10	5%	1/10W
⚠R707	1-249-385-11	CARBON	2.2	5%	1/4W F
⚠R708	1-249-385-11	CARBON	2.2	5%	1/4W F
R709	1-216-025-11	RES-CHIP	100	5%	1/10W
R710	1-216-025-11	RES-CHIP	100	5%	1/10W
R711	1-216-025-11	RES-CHIP	100	5%	1/10W
R712	1-216-025-11	RES-CHIP	100	5%	1/10W
R713	1-216-025-11	RES-CHIP	100	5%	1/10W
R714	1-216-025-11	RES-CHIP	100	5%	1/10W
R715	1-216-025-11	RES-CHIP	100	5%	1/10W
R716	1-216-025-11	RES-CHIP	100	5%	1/10W
R717	1-216-025-11	RES-CHIP	100	5%	1/10W
R718	1-216-025-11	RES-CHIP	100	5%	1/10W
R719	1-216-037-00	RES-CHIP	330	5%	1/10W
R720	1-216-025-11	RES-CHIP	100	5%	1/10W
R721	1-216-029-00	RES-CHIP	150	5%	1/10W
R723	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R724	1-216-049-11	RES-CHIP	1K	5%	1/10W
R725	1-216-081-00	RES-CHIP	22K	5%	1/10W
R726	1-216-073-91	RES-CHIP	10K	5%	1/10W
R727	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R728	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R729	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R730	1-216-049-11	RES-CHIP	1K	5%	1/10W
R731	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R733	1-216-049-11	RES-CHIP	1K	5%	1/10W
R734	1-216-083-00	RES-CHIP	27K	5%	1/10W
R735	1-216-049-11	RES-CHIP	1K	5%	1/10W
R736	1-216-049-11	RES-CHIP	1K	5%	1/10W
R737	1-216-833-11	METAL CHIP	10K	5%	1/10W
R740	1-216-833-11	METAL CHIP	10K	5%	1/10W
R741	1-216-833-11	METAL CHIP	10K	5%	1/10W
R748	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R749	1-216-821-11	METAL CHIP	1K	5%	1/10W
R750	1-216-849-11	METAL CHIP	220K	5%	1/10W
R751	1-216-843-11	METAL CHIP	68K	5%	1/10W
R753	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R754	1-216-821-11	METAL CHIP	1K	5%	1/10W

Ref. No.	Part No.	Description			Remark
R757	1-216-025-11	RES-CHIP	100	5%	1/10W
R758	1-216-041-00	RES-CHIP	470	5%	1/10W
R759	1-216-073-91	RES-CHIP	10K	5%	1/10W
R772	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
		< SWITCH/ROTARY ENCODER >			
S701	1-771-349-21	SWITCH, KEYBOARD (MUSIC)			
S702	1-771-349-21	SWITCH, KEYBOARD (MOVIE)			
S703	1-771-349-21	SWITCH, KEYBOARD (A.F.D.)			
S704	1-771-349-21	SWITCH, KEYBOARD (2CH/A.DIRECT)			
S705	1-771-349-21	SWITCH, KEYBOARD (SUR BACK DECODING)			
S706	1-771-349-21	SWITCH, KEYBOARD (DISPLAY)			
S707	1-771-349-21	SWITCH, KEYBOARD (DIMMER)			
S708	1-771-349-21	SWITCH, KEYBOARD (MEMORY/ENTER)			
S709	1-771-349-21	SWITCH, KEYBOARD (TUNING MODE)			
S710	1-771-349-21	SWITCH, KEYBOARD (TONE MODE)			
S711	1-771-349-21	SWITCH, KEYBOARD (ZONE SELECT)			
S712	1-771-349-21	SWITCH, KEYBOARD (ZONE POWER)			
S713	1-418-400-11	ENCODER, ROTARY (TONE)			
S714	1-418-400-11	ENCODER, ROTARY (TUNING)			
S715	1-418-400-11	ENCODER, ROTARY (INPUT SELECTOR)			
		< TRANSFORMER >			
T701	1-445-015-11	TRANSFORMER, DC-DC CONVERTER			
**********					
	A-1439-542-A	DSP BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C5001	1-100-669-11	ELECT CHIP	100uF	20%	10V
C5006	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5007	1-114-385-11	ELECT CHIP	470uF	20%	6.3V
C5009	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C5010	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C5011	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5012	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5014	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C5019	1-117-370-11	CERAMIC CHIP	10uF		10V
C5023	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5024	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5025	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5026	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C5028	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5029	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5030	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5034	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5036	1-117-370-11	CERAMIC CHIP	10uF		10V
C5040	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5041	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5045	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5046	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5049	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5050	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5053	1-117-370-11	CERAMIC CHIP	10uF		10V
C5061	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5062	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5063	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5069	1-117-370-11	CERAMIC CHIP	10uF		10V

Ref. No.	Part No.	Description			Remark
C5071	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5073	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5074	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5077	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5078	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5079	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5080	1-114-385-11	ELECT CHIP	470uF	20%	6.3V
C5081	1-114-385-11	ELECT CHIP	470uF	20%	6.3V
C5085	1-117-370-11	CERAMIC CHIP	10uF		10V
C5088	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5089	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5090	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5091	1-117-370-11	CERAMIC CHIP	10uF		10V
C5092	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5093	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5094	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5095	1-117-370-11	CERAMIC CHIP	10uF		10V
C5096	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5097	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5098	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5099	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5100	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C5201	1-100-669-11	ELECT CHIP	100uF	20%	10V
C5202	1-117-370-11	CERAMIC CHIP	10uF		10V
C5203	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5205	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5206	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5207	1-114-385-11	ELECT CHIP	470uF	20%	6.3V
C5208	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5209	1-117-370-11	CERAMIC CHIP	10uF		10V
C5210	1-117-370-11	CERAMIC CHIP	10uF		10V
C5211	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5212	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5213	1-126-209-11	ELECT CHIP	100uF	20%	4V
C5214	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C5215	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C5216	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5218	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5219	1-117-370-11	CERAMIC CHIP	10uF		10V
C5221	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5223	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5224	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5225	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5226	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C5227	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5228	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5229	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5230	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5231	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5234	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5236	1-117-370-11	CERAMIC CHIP	10uF		10V
C5240	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5241	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5244	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5245	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5246	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5247	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5248	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5249	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5250	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5253	1-117-370-11	CERAMIC CHIP	10uF		10V
C5261	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5262	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5263	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5269	1-117-370-11	CERAMIC CHIP	10uF		10V
C5271	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5273	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5274	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5277	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5278	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5279	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5280	1-114-385-11	ELECT CHIP	470uF	20%	6.3V
C5281	1-114-385-11	ELECT CHIP	470uF	20%	6.3V
C5285	1-117-370-11	CERAMIC CHIP	10uF		10V
C5292	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5293	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5294	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5295	1-117-370-11	CERAMIC CHIP	10uF		10V
C5296	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5297	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
		< CONNECTOR >			
CN5001	1-815-136-21	CONNECTOR, BOARD TO BOARD			
* CN5204	1-785-125-21	CONNECTOR 6P			
		< DIODE >			
D5001	6-501-193-01	DIODE 1SS355WTE-17			
		< FERRITE BEAD >			
FB5001	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5002	1-400-703-21	(3216, EMI FERRITE (SMD)			
FB5003	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5004	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5006	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5007	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5201	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5202	1-400-703-21	(3216, EMI FERRITE (SMD)			
FB5204	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5205	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5206	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5207	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5208	1-469-152-11	FERRITE, EMI (SMD) (2012)			
		< IC >			
IC5001	6-705-308-01	IC SI-3010KM-TL			
IC5002	(Not supplied)	IC ADSST-AVR-1132			
IC5006	6-807-374-04	IC S29AL008D70TFI010-EX4116			
IC5007	6-710-529-01	IC IS61LV5128AL-10TLI			
IC5009	6-701-992-01	IC SN74LVC573APWR			
IC5010	6-701-992-01	IC SN74LVC573APWR			
IC5012	6-706-492-01	IC TC7SHU04FU (T5RSOJF)			
IC5013	6-707-870-01	IC TC74VHC157FT (EKJ)			
IC5201	6-705-308-01	IC SI-3010KM-TL			
IC5202	(Not supplied)	IC ADSST-AVR-1131			

Note: IC5002 and IC5202 cannot exchange with single. When IC5002 and IC5202 are damaged, exchange the entire mounted board.

DSP

Ref. No.	Part No.	Description			Remark
IC5207	6-710-003-01	IC IS61LV12816L-8TL			
IC5208	6-807-422-01	IC MB91F353APMT-07A53DSP-X103			
IC5209	6-701-992-01	IC SN74LVC573APWR			
IC5210	6-701-992-01	IC SN74LVC573APWR			
IC5211	8-759-831-52	IC TC7WH125FK (TE85R)			
IC5212	8-759-680-48	IC TC7WH157FK (TE85R)			
IC5213	6-807-854-01	IC SST25VF040B-07A53J-X101			
		< RESISTOR >			
R5002	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5003	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5004	1-216-857-11	METAL CHIP	1M	5%	1/10W
R5005	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5013	1-216-864-11	SHORT CHIP	0		
R5014	1-218-854-11	METAL CHIP	2K	0.5%	1/10W
R5015	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R5016	1-216-864-11	SHORT CHIP	0		
R5018	1-216-864-11	SHORT CHIP	0		
R5020	1-216-864-11	SHORT CHIP	0		
R5021	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5023	1-216-805-11	METAL CHIP	47	5%	1/10W
R5024	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5025	1-216-805-11	METAL CHIP	47	5%	1/10W
R5026	1-216-801-11	METAL CHIP	22	5%	1/10W
R5027	1-216-801-11	METAL CHIP	22	5%	1/10W
R5028	1-216-801-11	METAL CHIP	22	5%	1/10W
R5032	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5035	1-216-857-11	METAL CHIP	1M	5%	1/10W
R5038	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5041	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5042	1-216-864-11	SHORT CHIP	0		
R5044	1-216-864-11	SHORT CHIP	0		
R5046	1-216-864-11	SHORT CHIP	0		
R5047	1-216-864-11	SHORT CHIP	0		
R5048	1-216-801-11	METAL CHIP	22	5%	1/10W
R5049	1-216-864-11	SHORT CHIP	0		
R5051	1-216-864-11	SHORT CHIP	0		
R5052	1-216-864-11	SHORT CHIP	0		
R5053	1-216-801-11	METAL CHIP	22	5%	1/10W
R5054	1-216-801-11	METAL CHIP	22	5%	1/10W
R5055	1-216-864-11	SHORT CHIP	0		
R5056	1-216-864-11	SHORT CHIP	0		
R5057	1-216-864-11	SHORT CHIP	0		
R5058	1-216-864-11	SHORT CHIP	0		
R5059	1-216-864-11	SHORT CHIP	0		
R5060	1-216-801-11	METAL CHIP	22	5%	1/10W
R5061	1-216-801-11	METAL CHIP	22	5%	1/10W
R5062	1-216-801-11	METAL CHIP	22	5%	1/10W
R5063	1-216-801-11	METAL CHIP	22	5%	1/10W
R5064	1-216-801-11	METAL CHIP	22	5%	1/10W
R5065	1-216-801-11	METAL CHIP	22	5%	1/10W
R5066	1-216-801-11	METAL CHIP	22	5%	1/10W
R5067	1-216-801-11	METAL CHIP	22	5%	1/10W
R5068	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5069	1-216-801-11	METAL CHIP	22	5%	1/10W
R5070	1-216-864-11	SHORT CHIP	0		
R5071	1-216-864-11	SHORT CHIP	0		
R5072	1-216-864-11	SHORT CHIP	0		
R5073	1-216-801-11	METAL CHIP	22	5%	1/10W
R5074	1-216-801-11	METAL CHIP	22	5%	1/10W
R5075	1-216-801-11	METAL CHIP	22	5%	1/10W
R5076	1-216-864-11	SHORT CHIP	0		
R5077	1-216-864-11	SHORT CHIP	0		
R5078	1-216-864-11	SHORT CHIP	0		
R5096	1-216-864-11	SHORT CHIP	0		
R5097	1-216-801-11	METAL CHIP	22	5%	1/10W
R5098	1-216-801-11	METAL CHIP	22	5%	1/10W
R5202	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5204	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5205	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5208	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5209	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5212	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5213	1-216-864-11	SHORT CHIP	0		
R5214	1-218-854-11	METAL CHIP	2K	0.5%	1/10W
R5215	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R5216	1-216-864-11	SHORT CHIP	0		
R5218	1-216-864-11	SHORT CHIP	0		
R5220	1-216-864-11	SHORT CHIP	0		
R5221	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5223	1-216-864-11	SHORT CHIP	0		
R5224	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5225	1-216-805-11	METAL CHIP	47	5%	1/10W
R5226	1-216-801-11	METAL CHIP	22	5%	1/10W
R5227	1-216-801-11	METAL CHIP	22	5%	1/10W
R5228	1-216-801-11	METAL CHIP	22	5%	1/10W
R5229	1-216-801-11	METAL CHIP	22	5%	1/10W
R5230	1-216-801-11	METAL CHIP	22	5%	1/10W
R5231	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5232	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5233	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5234	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5235	1-216-857-11	METAL CHIP	1M	5%	1/10W
R5238	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5241	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5242	1-216-864-11	SHORT CHIP	0		
R5244	1-216-864-11	SHORT CHIP	0		
R5246	1-216-801-11	METAL CHIP	22	5%	1/10W
R5247	1-216-864-11	SHORT CHIP	0		
R5248	1-216-801-11	METAL CHIP	22	5%	1/10W
R5249	1-216-864-11	SHORT CHIP	0		
R5251	1-216-864-11	SHORT CHIP	0		
R5252	1-216-864-11	SHORT CHIP	0		
R5253	1-216-801-11	METAL CHIP	22	5%	1/10W
R5254	1-216-801-11	METAL CHIP	22	5%	1/10W
R5255	1-216-864-11	SHORT CHIP	0		
R5256	1-216-864-11	SHORT CHIP	0		
R5257	1-216-864-11	SHORT CHIP	0		
R5258	1-216-864-11	SHORT CHIP	0		
R5259	1-216-864-11	SHORT CHIP	0		
R5260	1-216-801-11	METAL CHIP	22	5%	1/10W
R5261	1-216-801-11	METAL CHIP	22	5%	1/10W
R5262	1-216-801-11	METAL CHIP	22	5%	1/10W
R5263	1-216-801-11	METAL CHIP	22	5%	1/10W
R5264	1-216-801-11	METAL CHIP	22	5%	1/10W

Ref. No.	Part No.	Description			Remark
R5265	1-216-801-11	METAL CHIP	22	5%	1/10W
R5266	1-216-801-11	METAL CHIP	22	5%	1/10W
R5267	1-216-801-11	METAL CHIP	22	5%	1/10W
R5268	1-216-801-11	METAL CHIP	22	5%	1/10W
R5269	1-216-864-11	SHORT CHIP	0		
R5270	1-216-837-11	METAL CHIP	22K	5%	1/10W
R5271	1-216-837-11	METAL CHIP	22K	5%	1/10W
R5272	1-216-837-11	METAL CHIP	22K	5%	1/10W
R5273	1-216-864-11	SHORT CHIP	0		
R5274	1-216-864-11	SHORT CHIP	0		
R5275	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5278	1-216-864-11	SHORT CHIP	0		
R5279	1-216-864-11	SHORT CHIP	0		
R5280	1-216-864-11	SHORT CHIP	0		
R5281	1-216-864-11	SHORT CHIP	0		
R5282	1-216-864-11	SHORT CHIP	0		
R5283	1-216-864-11	SHORT CHIP	0		
R5284	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5285	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5286	1-216-864-11	SHORT CHIP	0		
R5287	1-216-864-11	SHORT CHIP	0		
R5288	1-216-864-11	SHORT CHIP	0		
R5289	1-216-864-11	SHORT CHIP	0		
R5290	1-216-864-11	SHORT CHIP	0		
R5291	1-216-864-11	SHORT CHIP	0		
R5292	1-216-801-11	METAL CHIP	22	5%	1/10W
R5293	1-216-801-11	METAL CHIP	22	5%	1/10W
R5294	1-216-864-11	SHORT CHIP	0		
R5295	1-216-864-11	SHORT CHIP	0		
R5296	1-216-864-11	SHORT CHIP	0		
R5297	1-216-864-11	SHORT CHIP	0		
R5298	1-216-864-11	SHORT CHIP	0		
R5299	1-216-833-11	METAL CHIP	10K	5%	1/10W
		< COMPOSITION CIRCUIT BLOCK >			
RB5006	1-234-371-21	RES, NETWORK	47 (1005X4)		
RB5007	1-234-371-21	RES, NETWORK	47 (1005X4)		
RB5008	1-234-371-21	RES, NETWORK	47 (1005X4)		
RB5010	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5011	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5012	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5013	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5014	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5015	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5016	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5017	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5203	1-234-372-11	RES, NETWORK	100 (1005X4)		
RB5204	1-234-372-11	RES, NETWORK	100 (1005X4)		
RB5205	1-234-372-11	RES, NETWORK	100 (1005X4)		
RB5206	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5207	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5208	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5209	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5210	1-234-372-11	RES, NETWORK	100 (1005X4)		
RB5214	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5215	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5216	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5217	1-242-963-21	RES, NETWORK	33 (1005X4)		

Ref. No.	Part No.	Description			Remark
		< VIBRATOR >			
X5001	1-795-843-11	VIBRATOR, CRYSTAL (12.288MHz)			
X5201	1-813-967-21	PIEZOELECTRIC OSCILLAT (25MHz)			
X5202	1-781-893-21	VIBRATOR, CERAMIC (CHIP TYPE) (12.5MHz)			
**********					
		KEY1 BOARD			
		**********			
		< CONNECTOR >			
* CN715	1-568-941-11	PIN, CONNECTOR 3P			
		< RESISTOR >			
R760	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R761	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
		< SWITCH >			
S720	1-771-349-21	SWITCH, KEYBOARD (DMPORT)			
S721	1-771-349-21	SWITCH, KEYBOARD (HDMI)			
**********					
		KEY2 BOARD			
		**********			
		< CONNECTOR >			
* CN727	1-568-941-11	PIN, CONNECTOR 3P			
		< RESISTOR >			
R784	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
		< SWITCH >			
S725	1-771-349-21	SWITCH, KEYBOARD (SPEAKERS (OFF/A/B/A+B))			
**********					
	A-1314-646-A	MAIN BOARD, COMPLETE			
		**********			
	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3			
		< HEAT SINK >			
* A1005	4-363-146-71	HEAT SINK, V.OUT			
		< CAPACITOR >			
C1001	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C1002	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C1003	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C1008	1-137-395-91	MYLAR	0.022uF	5%	100V
C1009	1-137-395-91	MYLAR	0.022uF	5%	100V
C1010	1-137-395-91	MYLAR	0.022uF	5%	100V
C1011	1-126-941-11	ELECT	470uF	20%	25V
C1012	1-126-916-11	ELECT	1000uF	20%	6.3V
C1013	1-126-933-11	ELECT	100uF	20%	16V
C1014	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
C1015	1-126-933-11	ELECT	100uF	20%	16V
C1016	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
C1017	1-164-230-11	CERAMIC CHIP	220PF	5%	50V

MAIN

Ref. No.	Part No.	Description			Remark
C1018	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C1019	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C1020	1-126-933-11	ELECT	100uF	20%	16V
C1021	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
C1022	1-126-933-11	ELECT	100uF	20%	16V
C1023	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
C1024	1-126-933-11	ELECT	100uF	20%	16V
C1025	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
C1026	1-126-933-11	ELECT	100uF	20%	16V
C1027	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
C1028	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C1029	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C1030	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
C1031	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
C1032	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
C1033	1-131-992-91	CERAMIC CHIP	100000PF		35V
C1034	1-131-992-91	CERAMIC CHIP	100000PF		35V
C1035	1-131-992-91	CERAMIC CHIP	100000PF		35V
C1036	1-126-939-11	ELECT	10000uF	20%	16V
C1101	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1102	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C1103	1-126-961-11	ELECT	2.2uF	20%	50V
C1104	1-126-935-11	ELECT	470uF	20%	16V
C1105	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1106	1-125-896-91	MYLAR	0.0091uF	5%	50V
C1107	1-136-159-00	MYLAR	0.033uF	5%	50V
C1108	1-126-961-11	ELECT	2.2uF	20%	50V
C1109	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C1110	1-115-414-11	CERAMIC CHIP	820PF	5%	25V
C1111	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1112	1-126-965-91	ELECT	22uF	20%	50V
C1113	1-115-414-11	CERAMIC CHIP	820PF	5%	25V
C1114	1-115-414-11	CERAMIC CHIP	820PF	5%	25V
C1115	1-115-414-11	CERAMIC CHIP	820PF	5%	25V
C1116	1-115-414-11	CERAMIC CHIP	820PF	5%	25V
C1117	1-115-414-11	CERAMIC CHIP	820PF	5%	25V
C1118	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1119	1-126-965-91	ELECT	22uF	20%	50V
C1120	1-115-414-11	CERAMIC CHIP	820PF	5%	25V
C1121	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1122	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1123	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1124	1-126-965-91	ELECT	22uF	20%	50V
C1125	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1126	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1127	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1128	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1129	1-126-965-91	ELECT	22uF	20%	50V
C1130	1-126-965-91	ELECT	22uF	20%	50V
C1131	1-126-965-91	ELECT	22uF	20%	50V
C1132	1-126-965-91	ELECT	22uF	20%	50V
C1133	1-126-947-11	ELECT	47uF	20%	35V
C1134	1-104-999-11	MYLAR	0.1uF	5%	200V
C1135	1-137-350-11	FILM	0.015uF	5%	100V
C1136	1-137-350-11	FILM	0.015uF	5%	100V
C1137	1-114-537-11	ELECT (BLOCK)	8200uF	20%	71V
C1139	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V

Ref. No.	Part No.	Description			Remark
C1140	1-126-941-11	ELECT	470uF	20%	25V
C1141	1-126-964-11	ELECT	10uF	20%	50V
C1142	1-126-964-11	ELECT	10uF	20%	50V
C1143	1-126-964-11	ELECT	10uF	20%	50V
C1144	1-126-964-11	ELECT	10uF	20%	50V
C1145	1-126-964-11	ELECT	10uF	20%	50V
C1146	1-126-964-11	ELECT	10uF	20%	50V
C1147	1-126-964-11	ELECT	10uF	20%	50V
C1148	1-126-964-11	ELECT	10uF	20%	50V
C1149	1-126-964-11	ELECT	10uF	20%	50V
C1150	1-126-964-11	ELECT	10uF	20%	50V
C1151	1-126-964-11	ELECT	10uF	20%	50V
C1152	1-126-964-11	ELECT	10uF	20%	50V
C1153	1-126-965-91	ELECT	22uF	20%	50V
C1155	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1158	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C1159	1-126-947-11	ELECT	47uF	20%	35V
C1201	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1202	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C1203	1-126-961-11	ELECT	2.2uF	20%	50V
C1204	1-126-935-11	ELECT	470uF	20%	16V
C1205	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1206	1-125-896-91	MYLAR	0.0091uF	5%	50V
C1207	1-136-159-00	MYLAR	0.033uF	5%	50V
C1208	1-126-961-11	ELECT	2.2uF	20%	50V
C1209	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C1210	1-115-414-11	CERAMIC CHIP	820PF	5%	25V
C1211	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1212	1-126-965-91	ELECT	22uF	20%	50V
C1213	1-115-414-11	CERAMIC CHIP	820PF	5%	25V
C1214	1-115-414-11	CERAMIC CHIP	820PF	5%	25V
C1215	1-115-414-11	CERAMIC CHIP	820PF	5%	25V
C1216	1-115-414-11	CERAMIC CHIP	820PF	5%	25V
C1217	1-115-414-11	CERAMIC CHIP	820PF	5%	25V
C1218	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1219	1-126-965-91	ELECT	22uF	20%	50V
C1220	1-115-414-11	CERAMIC CHIP	820PF	5%	25V
C1221	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1222	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1223	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1224	1-126-965-91	ELECT	22uF	20%	50V
C1225	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1226	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1227	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1228	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1229	1-126-965-91	ELECT	22uF	20%	50V
C1230	1-126-965-91	ELECT	22uF	20%	50V
C1231	1-126-965-91	ELECT	22uF	20%	50V
C1232	1-126-965-91	ELECT	22uF	20%	50V
C1233	1-126-947-11	ELECT	47uF	20%	35V
C1234	1-104-999-11	MYLAR	0.1uF	5%	200V
C1235	1-137-350-11	FILM	0.015uF	5%	100V
C1236	1-137-350-11	FILM	0.015uF	5%	100V
C1237	1-114-537-11	ELECT (BLOCK)	8200uF	20%	71V
C1238	1-126-936-11	ELECT	3300uF	20%	16V
C1239	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
C1240	1-126-941-11	ELECT	470uF	20%	25V
C1241	1-126-964-11	ELECT	10uF	20%	50V

Ref. No.	Part No.	Description			Remark
C1242	1-126-964-11	ELECT	10uF	20%	50V
C1243	1-126-964-11	ELECT	10uF	20%	50V
C1244	1-126-964-11	ELECT	10uF	20%	50V
C1245	1-126-964-11	ELECT	10uF	20%	50V
C1246	1-126-964-11	ELECT	10uF	20%	50V
C1247	1-126-964-11	ELECT	10uF	20%	50V
C1248	1-126-964-11	ELECT	10uF	20%	50V
C1249	1-126-964-11	ELECT	10uF	20%	50V
C1250	1-126-964-11	ELECT	10uF	20%	50V
C1251	1-126-964-11	ELECT	10uF	20%	50V
C1252	1-126-964-11	ELECT	10uF	20%	50V
C1253	1-126-965-91	ELECT	22uF	20%	50V
C1255	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1258	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C1259	1-126-947-11	ELECT	47uF	20%	35V
		< CONNECTOR >			
CN1001	1-691-765-11	PLUG (MICRO CONNECTOR) 3P			
CN1002	1-785-103-11	PIN, CONNECTOR (3.96mm PITCH) 5P			
CN1005	1-785-102-11	PIN, CONNECTOR (3.96mm PITCH) 4P			
CN1007	1-770-385-11	CONNECTOR, BOARD TO BOARD 18P			
CN1008	1-770-385-11	CONNECTOR, BOARD TO BOARD 18P			
CN1009	1-770-380-11	CONNECTOR, BOARD TO BOARD 8P			
CN1012	1-784-038-21	CONNECTOR, BOARD TO BOARD 9P			
CN1013	1-573-845-11	CONNECTOR, BOARD TO BOARD 13P			
CN1014	1-779-287-11	CONNECTOR, FFC (LIF (NON-ZIF)) 19P			
CN1020	1-784-927-11	PIN, CONNECTOR 12P			
		< DIODE >			
D1001	8-719-988-61	DIODE	1SS355TE-17		
D1002	8-719-988-61	DIODE	1SS355TE-17		
D1003	8-719-988-61	DIODE	1SS355TE-17		
D1004	8-719-988-61	DIODE	1SS355TE-17		
D1005	8-719-988-61	DIODE	1SS355TE-17		
D1006	8-719-988-61	DIODE	1SS355TE-17		
D1007	8-719-988-61	DIODE	1SS355TE-17		
D1008	8-719-988-61	DIODE	1SS355TE-17		
D1009	8-719-988-61	DIODE	1SS355TE-17		
D1010	8-719-988-61	DIODE	1SS355TE-17		
D1011	8-719-988-61	DIODE	1SS355TE-17		
D1012	8-719-988-61	DIODE	1SS355TE-17		
D1017	8-719-988-61	DIODE	1SS355TE-17		
D1018	8-719-988-61	DIODE	1SS355TE-17		
D1019	8-719-988-61	DIODE	1SS355TE-17		
D1020	8-719-988-61	DIODE	1SS355TE-17		
D1021	8-719-988-61	DIODE	1SS355TE-17		
D1023	8-719-988-61	DIODE	1SS355TE-17		
D1024	8-719-988-61	DIODE	1SS355TE-17		
D1025	8-719-988-61	DIODE	1SS355TE-17		
D1026	6-500-522-31	DIODE	10EDB40-TB5		
D1027	6-500-522-31	DIODE	10EDB40-TB5		
D1028	6-500-522-31	DIODE	10EDB40-TB5		
D1029	6-500-522-31	DIODE	10EDB40-TB5		
D1030	8-719-510-68	DIODE	D5SBA204101		
D1031	8-719-302-37	DIODE	RBV-602		
D1032	8-719-988-61	DIODE	1SS355TE-17		
D1033	8-719-988-61	DIODE	1SS355TE-17		

Ref. No.	Part No.	Description			Remark
		< EARTH TERMINAL >			
* ET1001	1-537-738-21	TERMINAL, EARTH			
		< FUSE HOLDER >			
FH1001	1-533-313-11	FUSE HOLDER			
FH1002	1-533-313-11	FUSE HOLDER			
FH1003	1-533-313-11	FUSE HOLDER			
FH1004	1-533-313-11	FUSE HOLDER			
		< IC >			
IC1001	6-710-586-01	IC	R2S15206FP		
IC1002	6-711-163-01	IC	NJU7311AM (TE2)		
IC1003	8-759-385-76	IC	MC14052 BDR2		
IC1004	8-759-071-48	IC	TA7807S		
IC1005	8-759-071-47	IC	TA79007S		
IC1006	8-759-710-97	IC	NJM4565M-D		
IC1007	8-759-710-97	IC	NJM4565M-D		
		< JACK >			
J1001	1-815-045-11	JACK, PIN 2P (PHONO IN)			
J1002	1-774-411-11	JACK, PIN 6P (SA-CD/CD/MD/TAPE IN, MD/TAPE OUT)			
J1003	1-774-411-11	JACK, PIN 6P (TV IN, SAT/CATV/DVD/BD AUDIO IN)			
J1004	1-774-411-11	JACK, PIN 6P (VIDEO 2/VIDEO 1 AUDIO IN, VIDEO 1 AUDIO OUT)			
J1005	1-815-045-11	JACK, PIN 2P (ZONE 2 AUDIO OUT)			
J1006	1-774-411-11	JACK, PIN 6P (MULTI CHANNEL INPUT FRONT/SURROUND/SUR BACK)			
J1007	1-793-777-12	JACK, PIN 2P (MULTI CHANNEL INPUT CENTER/SUB WOOFER)			
		< TRANSISTOR >			
Q1001	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
Q1006	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
Q1007	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
Q1008	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
Q1009	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
Q1010	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
Q1011	8-729-027-43	TRANSISTOR	DTC114EKA-T146		
Q1012	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF		
Q1013	8-729-209-15	TRANSISTOR	2SD2012		
		< RESISTOR >			
R1002	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1003	1-216-833-11	METAL CHIP	10K	5%	1/10W
⚠R1004	1-249-393-11	CARBON	10	5%	1/4W F
R1017	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1018	1-216-833-11	METAL CHIP	10K	5%	1/10W
⚠R1019	1-249-393-11	CARBON	10	5%	1/4W F
R1020	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1021	1-216-833-11	METAL CHIP	10K	5%	1/10W
⚠R1022	1-249-393-11	CARBON	10	5%	1/4W F
R1023	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1024	1-216-833-11	METAL CHIP	10K	5%	1/10W
⚠R1025	1-249-393-11	CARBON	10	5%	1/4W F
⚠R1026	1-249-393-11	CARBON	10	5%	1/4W F
⚠R1027	1-249-393-11	CARBON	10	5%	1/4W F

MAIN

Ref. No.	Part No.	Description			Remark
⚠R1028	1-249-393-11	CARBON	10	5%	1/4W F
R1029	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1030	1-216-833-11	METAL CHIP	10K	5%	1/10W
⚠R1031	1-249-393-11	CARBON	10	5%	1/4W F
R1033	1-216-833-11	METAL CHIP	10K	5%	1/10W
⚠R1034	1-249-393-11	CARBON	10	5%	1/4W F
R1035	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1036	1-216-837-11	METAL CHIP	22K	5%	1/10W
R1037	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1038	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1039	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1040	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1041	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1042	1-216-864-11	SHORT CHIP	0		
R1043	1-216-296-11	SHORT CHIP	0		
R1044	1-216-864-11	SHORT CHIP	0		
R1045	1-216-296-11	SHORT CHIP	0		
R1101	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1102	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1103	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1104	1-216-812-11	METAL CHIP	180	5%	1/10W
R1105	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R1106	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1107	1-216-809-11	METAL CHIP	100	5%	1/10W
R1108	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1109	1-216-817-11	METAL CHIP	470	5%	1/10W
R1110	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1111	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1112	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1113	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1114	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1115	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1116	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1117	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1118	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1119	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1120	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1121	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1122	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1123	1-216-809-11	METAL CHIP	100	5%	1/10W
R1124	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1125	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1126	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1127	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1128	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1129	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1130	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1131	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1132	1-216-845-11	METAL CHIP	100K	5%	1/10W
⚠R1133	1-215-867-00	METAL OXIDE	470	5%	1W F
⚠R1134	1-249-395-11	CARBON	15	5%	1/4W F
R1135	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1137	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1138	1-216-813-11	METAL CHIP	220	5%	1/10W
R1139	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R1140	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1144	1-216-809-11	METAL CHIP	100	5%	1/10W

Ref. No.	Part No.	Description			Remark
R1145	1-216-809-11	METAL CHIP	100	5%	1/10W
R1146	1-216-809-11	METAL CHIP	100	5%	1/10W
R1147	1-216-809-11	METAL CHIP	100	5%	1/10W
R1201	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1202	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1203	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1204	1-216-812-11	METAL CHIP	180	5%	1/10W
R1205	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R1206	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1207	1-216-809-11	METAL CHIP	100	5%	1/10W
R1208	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1209	1-216-817-11	METAL CHIP	470	5%	1/10W
R1210	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1211	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1212	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1213	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1214	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1215	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1216	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1217	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1218	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1219	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1220	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1221	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1222	1-216-809-11	METAL CHIP	100	5%	1/10W
R1223	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1224	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1225	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1226	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1227	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1228	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1229	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1230	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1231	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1232	1-216-845-11	METAL CHIP	100K	5%	1/10W
⚠R1233	1-215-867-00	METAL OXIDE	470	5%	1W F
⚠R1234	1-249-395-11	CARBON	15	5%	1/4W F
R1235	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1237	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1238	1-216-813-11	METAL CHIP	220	5%	1/10W
R1239	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R1240	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1244	1-216-809-11	METAL CHIP	100	5%	1/10W
R1245	1-216-809-11	METAL CHIP	100	5%	1/10W
R1246	1-216-809-11	METAL CHIP	100	5%	1/10W
R1247	1-216-809-11	METAL CHIP	100	5%	1/10W
		< RELAY >			
RY1001	1-755-486-11	RELAY			
RY1006	1-515-920-11	RELAY (24V)			
RY1007	1-515-920-11	RELAY (24V)			
RY1008	1-515-920-11	RELAY (24V)			
RY1009	1-755-486-11	RELAY			
RY1010	1-755-031-11	RELAY			

Ref. No.	Part No.	Description	Remark
		< TERMINAL >	
TB1001	1-780-404-11	TERMINAL BOARD (SP) (8P)	(FRONT SPEAKERS)
**********			
		MAIN VOL BOARD	
		**********	
		< CONNECTOR >	
CN712	1-564-722-11	PIN, CONNECTOR (SMALL TYPE) 6P	
		< ROTARY ENCODER >	
S722	1-418-725-41	ENCODER, ROTARY (12 TYPE)	(MASTER VOLUME)
**********			
		MIC BOARD	
		**********	
		< CAPACITOR >	
C755	1-164-230-11	CERAMIC CHIP 220PF 5% 50V	
		< CONNECTOR >	
CN718	1-564-719-11	PIN, CONNECTOR (SMALL TYPE) 3P	
		< DIODE >	
D717	8-719-404-50	DIODE MA111-TX	
D718	8-719-404-50	DIODE MA111-TX	
		< JACK >	
J701	1-820-056-11	SMALL TYPE JACK (AUTO CAL MIC)	
		< LEAD >	
W701	1-775-377-21	LEAD (WITH CONNECTOR)	
**********			
		POW SW BOARD	
		**********	
		< CONNECTOR >	
CN1	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P	
CN2	1-564-704-41	PIN, CONNECTOR (SMALL TYPE) 2P	
		< SWITCH >	
⚠SW1	1-786-377-11	SWITCH, POWER (POWER)	
**********			
	A-1254-657-A	POWER AMP BOARD, COMPLETE	
		**********	
		< CAPACITOR >	
C1512	1-107-597-11	CERAMIC 22PF 5% 500V	
C1513	1-107-597-11	CERAMIC 22PF 5% 500V	
C1562	1-107-597-11	CERAMIC 22PF 5% 500V	
C1563	1-107-597-11	CERAMIC 22PF 5% 500V	
C1612	1-107-597-11	CERAMIC 22PF 5% 500V	
C1613	1-107-597-11	CERAMIC 22PF 5% 500V	
C1712	1-107-597-11	CERAMIC 22PF 5% 500V	
C1713	1-107-597-11	CERAMIC 22PF 5% 500V	
C1762	1-107-597-11	CERAMIC 22PF 5% 500V	
C1763	1-107-597-11	CERAMIC 22PF 5% 500V	
C1812	1-107-597-11	CERAMIC 22PF 5% 500V	
C1813	1-107-597-11	CERAMIC 22PF 5% 500V	
C1862	1-107-597-11	CERAMIC 22PF 5% 500V	
C1863	1-107-597-11	CERAMIC 22PF 5% 500V	
C1903	1-128-563-11	ELECT 100uF 20% 100V	
C1904	1-128-563-11	ELECT 100uF 20% 100V	
		< CONNECTOR >	
CN1510	1-573-846-11	CONNECTOR, BOARD TO BOARD 14P	
CN1572	1-766-600-21	CONNECTOR, BOARD TO BOARD 7P	
CN1703	1-573-846-11	CONNECTOR, BOARD TO BOARD 14P	
CN1872	1-573-846-11	CONNECTOR, BOARD TO BOARD 14P	
CN1901	1-785-102-11	PIN, CONNECTOR (3.96mm PITCH) 4P	
CN1903	1-573-844-11	CONNECTOR, BOARD TO BOARD 12P	
CN1904	1-573-844-11	CONNECTOR, BOARD TO BOARD 12P	
		< COIL >	
L1501	1-420-872-52	COIL, AIR-CORE	
L1551	1-420-872-52	COIL, AIR-CORE	
L1601	1-420-872-52	COIL, AIR-CORE	
L1701	1-420-872-52	COIL, AIR-CORE	
L1751	1-420-872-52	COIL, AIR-CORE	
L1801	1-420-872-52	COIL, AIR-CORE	
L1851	1-420-872-52	COIL, AIR-CORE	
		< RESISTOR >	
⚠R1515	1-249-405-11	CARBON 100 5% 1/4W F	
⚠R1516	1-234-572-21	ENCAPSULATED COMPONENT 0.22 5W F	
⚠R1517	1-249-405-11	CARBON 100 5% 1/4W F	
⚠R1518	1-249-393-11	CARBON 10 5% 1/4W F	
⚠R1565	1-249-405-11	CARBON 100 5% 1/4W F	
⚠R1566	1-234-572-21	ENCAPSULATED COMPONENT 0.22 5W F	
⚠R1567	1-249-405-11	CARBON 100 5% 1/4W F	
⚠R1568	1-249-393-11	CARBON 10 5% 1/4W F	
⚠R1615	1-249-405-11	CARBON 100 5% 1/4W F	
⚠R1616	1-234-572-21	ENCAPSULATED COMPONENT 0.22 5W F	
⚠R1617	1-249-405-11	CARBON 100 5% 1/4W F	
⚠R1618	1-249-393-11	CARBON 10 5% 1/4W F	
⚠R1715	1-249-405-11	CARBON 100 5% 1/4W F	
⚠R1716	1-234-572-21	ENCAPSULATED COMPONENT 0.22 5W F	
⚠R1717	1-249-405-11	CARBON 100 5% 1/4W F	
⚠R1718	1-249-393-11	CARBON 10 5% 1/4W F	
⚠R1765	1-249-405-11	CARBON 100 5% 1/4W F	
⚠R1766	1-234-572-21	ENCAPSULATED COMPONENT 0.22 5W F	
⚠R1767	1-249-405-11	CARBON 100 5% 1/4W F	
⚠R1768	1-249-393-11	CARBON 10 5% 1/4W F	
⚠R1815	1-249-405-11	CARBON 100 5% 1/4W F	
⚠R1816	1-234-572-21	ENCAPSULATED COMPONENT 0.22 5W F	
⚠R1817	1-249-405-11	CARBON 100 5% 1/4W F	
⚠R1818	1-249-393-11	CARBON 10 5% 1/4W F	
⚠R1865	1-249-405-11	CARBON 100 5% 1/4W F	
⚠R1866	1-234-572-21	ENCAPSULATED COMPONENT 0.22 5W F	
⚠R1867	1-249-405-11	CARBON 100 5% 1/4W F	

POWER AMP **PREOUT** **PROTECTOR (F-C)**

Ref. No.	Part No.	Description			Remark
⚠R1868	1-249-393-11	CARBON	10	5%	1/4W F

****

PREOUT BOARD
****

< CAPACITOR >

C4051	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
C4052	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
C4053	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
C4054	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
C4055	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C4151	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C4152	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C4153	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C4154	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C4171	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C4172	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C4173	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C4174	1-162-927-11	CERAMIC CHIP	100PF	5%	50V

< CONNECTOR >

CN4051	1-779-287-11	CONNECTOR, FFC (LIF (NON-ZIF)) 19P	

< DIODE >

D4051	8-719-988-61	DIODE	1SS355TE-17
D4052	8-719-988-61	DIODE	1SS355TE-17
D4053	8-719-988-61	DIODE	1SS355TE-17
D4054	8-719-988-61	DIODE	1SS355TE-17
D4055	8-719-988-61	DIODE	1SS355TE-17
D4056	8-719-988-61	DIODE	1SS355TE-17

< JACK >

J4051	1-774-411-11	JACK, PIN 6P	(PRE OUT FRONT/SURROUND/SUR BACK)
J4052	1-793-777-12	JACK, PIN 2P	(PRE OUT CENTER/SUB WOOFER)

< TRANSISTOR >

Q4051	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF
Q4052	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF
Q4053	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF
Q4054	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF

< RESISTOR >

R4051	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R4052	1-216-833-11	METAL CHIP	10K	5%	1/10W
⚠R4053	1-249-393-11	CARBON	10	5%	1/4W F
R4054	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R4055	1-216-833-11	METAL CHIP	10K	5%	1/10W
⚠R4056	1-249-393-11	CARBON	10	5%	1/4W F
R4057	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R4058	1-216-833-11	METAL CHIP	10K	5%	1/10W
⚠R4059	1-249-393-11	CARBON	10	5%	1/4W F
R4060	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R4061	1-216-833-11	METAL CHIP	10K	5%	1/10W
⚠R4062	1-249-393-11	CARBON	10	5%	1/4W F
R4151	1-216-821-11	METAL CHIP	1K	5%	1/10W
R4152	1-216-821-11	METAL CHIP	1K	5%	1/10W
R4153	1-216-821-11	METAL CHIP	1K	5%	1/10W
R4154	1-216-821-11	METAL CHIP	1K	5%	1/10W
R4171	1-216-821-11	METAL CHIP	1K	5%	1/10W
R4172	1-216-821-11	METAL CHIP	1K	5%	1/10W
R4173	1-216-821-11	METAL CHIP	1K	5%	1/10W
R4174	1-216-821-11	METAL CHIP	1K	5%	1/10W

< RELAY >

RY4051	1-755-486-11	RELAY	
RY4052	1-755-486-11	RELAY	
RY4053	1-755-486-11	RELAY	
RY4054	1-755-486-11	RELAY	

****

	A-1252-367-A	PROTECTOR (F-C) BOARD, COMPLETE	

****

< CAPACITOR >

C1522	1-128-813-11	CERAMIC	220PF	5%	50V
C1523	1-136-153-00	MYLAR	0.01uF	5%	50V
C1524	1-126-964-11	ELECT	10uF	20%	50V
C1572	1-128-813-11	CERAMIC	220PF	5%	50V
C1573	1-136-153-00	MYLAR	0.01uF	5%	50V
C1574	1-126-964-11	ELECT	10uF	20%	50V
C1622	1-128-813-11	CERAMIC	220PF	5%	50V
C1623	1-136-153-00	MYLAR	0.01uF	5%	50V
C1624	1-126-964-11	ELECT	10uF	20%	50V

< CONNECTOR >

CN1501	1-766-715-21	CONNECTOR, BOARD TO BOARD 10P	
* CN1503	1-774-876-21	CONNECTOR, BOARD TO BOARD 8P	
* CN1521	1-573-828-11	CONNECTOR, BOARD TO BOARD 14P	
* CN1561	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P	
CN1571	1-766-724-11	CONNECTOR, BOARD TO BOARD 7P	
* CN1611	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P	

< DIODE >

D1521	8-719-991-33	DIODE	1SS133T-77
D1522	8-719-991-33	DIODE	1SS133T-77
D1571	8-719-991-33	DIODE	1SS133T-77
D1572	8-719-991-33	DIODE	1SS133T-77
D1621	8-719-991-33	DIODE	1SS133T-77
D1622	8-719-991-33	DIODE	1SS133T-77

< TRANSISTOR >

Q1522	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP
Q1523	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP
Q1524	8-729-119-78	TRANSISTOR	2SC2785-HFE
Q1572	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP
Q1573	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP
Q1574	8-729-119-78	TRANSISTOR	2SC2785-HFE
Q1622	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP
Q1623	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP
Q1624	8-729-119-78	TRANSISTOR	2SC2785-HFE

< RESISTOR >

R1525	1-247-847-91	CARBON	4.7K	5%	1/4W

PROTECTOR (F-C) **PROTECTOR (SB)** **PROTECTOR (SURR)**

Ref. No.	Part No.	Description			Remark
⚠R1526	1-240-855-91	CARBON	6.2K	5%	1/4W F
R1527	1-249-420-11	CARBON	1.8K	5%	1/4W
R1528	1-249-431-11	CARBON	15K	5%	1/4W
R1529	1-247-862-11	CARBON	20K	5%	1/4W
R1530	1-249-419-11	CARBON	1.5K	5%	1/4W
R1531	1-247-871-91	CARBON	47K	5%	1/4W
R1532	1-249-431-11	CARBON	15K	5%	1/4W
R1533	1-247-871-91	CARBON	47K	5%	1/4W
R1534	1-247-863-91	CARBON	22K	5%	1/4W
R1535	1-249-439-11	CARBON	68K	5%	1/4W
R1536	1-247-887-00	CARBON	220K	5%	1/4W
R1575	1-247-847-91	CARBON	4.7K	5%	1/4W
⚠R1576	1-240-855-91	CARBON	6.2K	5%	1/4W F
R1577	1-249-420-11	CARBON	1.8K	5%	1/4W
R1578	1-249-431-11	CARBON	15K	5%	1/4W
R1579	1-247-862-11	CARBON	20K	5%	1/4W
R1580	1-249-419-11	CARBON	1.5K	5%	1/4W
R1581	1-247-871-91	CARBON	47K	5%	1/4W
R1582	1-249-431-11	CARBON	15K	5%	1/4W
R1583	1-247-871-91	CARBON	47K	5%	1/4W
R1584	1-247-863-91	CARBON	22K	5%	1/4W
R1585	1-249-439-11	CARBON	68K	5%	1/4W
R1586	1-247-887-00	CARBON	220K	5%	1/4W
R1625	1-247-847-91	CARBON	4.7K	5%	1/4W
⚠R1626	1-240-855-91	CARBON	6.2K	5%	1/4W F
R1627	1-249-420-11	CARBON	1.8K	5%	1/4W
R1628	1-249-431-11	CARBON	15K	5%	1/4W
R1629	1-247-862-11	CARBON	20K	5%	1/4W
R1630	1-249-419-11	CARBON	1.5K	5%	1/4W
R1631	1-247-871-91	CARBON	47K	5%	1/4W
R1632	1-249-431-11	CARBON	15K	5%	1/4W
R1633	1-247-871-91	CARBON	47K	5%	1/4W
R1634	1-247-863-91	CARBON	22K	5%	1/4W
R1635	1-249-439-11	CARBON	68K	5%	1/4W
R1636	1-247-887-00	CARBON	220K	5%	1/4W

****

A-1252-369-A PROTECTOR (SB) BOARD, COMPLETE

****

< CAPACITOR >

C1822	1-128-813-11	CERAMIC	220PF	5%	50V
C1823	1-136-153-00	MYLAR	0.01uF	5%	50V
C1824	1-126-964-11	ELECT	10uF	20%	50V
C1872	1-128-813-11	CERAMIC	220PF	5%	50V
C1873	1-136-153-00	MYLAR	0.01uF	5%	50V
C1874	1-126-964-11	ELECT	10uF	20%	50V

< CONNECTOR >

CN1801	1-573-846-11	CONNECTOR, BOARD TO BOARD 14P	
* CN1861	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P	
* CN1871	1-573-828-11	CONNECTOR, BOARD TO BOARD 14P	

< DIODE >

D1821	8-719-991-33	DIODE	1SS133T-77
D1822	8-719-991-33	DIODE	1SS133T-77
D1871	8-719-991-33	DIODE	1SS133T-77
D1872	8-719-991-33	DIODE	1SS133T-77

Ref. No.	Part No.	Description			Remark

< TRANSISTOR >

Q1822	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP		
Q1823	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP		
Q1824	8-729-119-78	TRANSISTOR	2SC2785-HFE		
Q1872	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP		
Q1873	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP		
Q1874	8-729-119-78	TRANSISTOR	2SC2785-HFE		

< RESISTOR >

R1825	1-247-847-91	CARBON	4.7K	5%	1/4W
⚠R1826	1-240-855-91	CARBON	6.2K	5%	1/4W F
R1827	1-249-420-11	CARBON	1.8K	5%	1/4W
R1828	1-249-431-11	CARBON	15K	5%	1/4W
R1829	1-247-862-11	CARBON	20K	5%	1/4W
R1830	1-249-419-11	CARBON	1.5K	5%	1/4W
R1831	1-247-871-91	CARBON	47K	5%	1/4W
R1832	1-249-431-11	CARBON	15K	5%	1/4W
R1833	1-247-871-91	CARBON	47K	5%	1/4W
R1834	1-247-863-91	CARBON	22K	5%	1/4W
R1835	1-249-439-11	CARBON	68K	5%	1/4W
R1836	1-247-887-00	CARBON	220K	5%	1/4W
R1875	1-247-847-91	CARBON	4.7K	5%	1/4W
⚠R1876	1-240-855-91	CARBON	6.2K	5%	1/4W F
R1877	1-249-420-11	CARBON	1.8K	5%	1/4W
R1878	1-249-431-11	CARBON	15K	5%	1/4W
R1879	1-247-862-11	CARBON	20K	5%	1/4W
R1880	1-249-419-11	CARBON	1.5K	5%	1/4W
R1881	1-247-871-91	CARBON	47K	5%	1/4W
R1882	1-249-431-11	CARBON	15K	5%	1/4W
R1883	1-247-871-91	CARBON	47K	5%	1/4W
R1884	1-247-863-91	CARBON	22K	5%	1/4W
R1885	1-249-439-11	CARBON	68K	5%	1/4W
R1886	1-247-887-00	CARBON	220K	5%	1/4W

****

A-1252-368-A PROTECTOR (SURR) BOARD, COMPLETE

****

< CAPACITOR >

C1722	1-128-813-11	CERAMIC	220PF	5%	50V
C1723	1-136-153-00	MYLAR	0.01uF	5%	50V
C1724	1-126-964-11	ELECT	10uF	20%	50V
C1772	1-128-813-11	CERAMIC	220PF	5%	50V
C1773	1-136-153-00	MYLAR	0.01uF	5%	50V
C1774	1-126-964-11	ELECT	10uF	20%	50V

< CONNECTOR >

* CN1701	1-573-828-11	CONNECTOR, BOARD TO BOARD 14P	
CN1704	1-573-846-11	CONNECTOR, BOARD TO BOARD 14P	
* CN1761	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P	

< DIODE >

D1721	8-719-991-33	DIODE	1SS133T-77
D1722	8-719-991-33	DIODE	1SS133T-77
D1771	8-719-991-33	DIODE	1SS133T-77
D1772	8-719-991-33	DIODE	1SS133T-77

PROTECTOR (SURR) **S_SPTM** **TEMPERATURE DETECTION** **TUNER**

Ref. No.	Part No.	Description			Remark
		< TRANSISTOR >			
Q1722	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP		
Q1723	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP		
Q1724	8-729-119-78	TRANSISTOR	2SC2785-HFE		
Q1772	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP		
Q1773	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP		
Q1774	8-729-119-78	TRANSISTOR	2SC2785-HFE		
		< RESISTOR >			
R1725	1-247-847-91	CARBON	4.7K	5%	1/4W
⚠R1726	1-240-855-91	CARBON	6.2K	5%	1/4W F
R1727	1-249-420-11	CARBON	1.8K	5%	1/4W
R1728	1-249-431-11	CARBON	15K	5%	1/4W
R1729	1-247-862-11	CARBON	20K	5%	1/4W
R1730	1-249-419-11	CARBON	1.5K	5%	1/4W
R1731	1-247-871-91	CARBON	47K	5%	1/4W
R1732	1-249-431-11	CARBON	15K	5%	1/4W
R1733	1-247-871-91	CARBON	47K	5%	1/4W
R1734	1-247-863-91	CARBON	22K	5%	1/4W
R1735	1-249-439-11	CARBON	68K	5%	1/4W
R1736	1-247-887-00	CARBON	220K	5%	1/4W
R1775	1-247-847-91	CARBON	4.7K	5%	1/4W
⚠R1776	1-240-855-91	CARBON	6.2K	5%	1/4W F
R1777	1-249-420-11	CARBON	1.8K	5%	1/4W
R1778	1-249-431-11	CARBON	15K	5%	1/4W
R1779	1-247-862-11	CARBON	20K	5%	1/4W
R1780	1-249-419-11	CARBON	1.5K	5%	1/4W
R1781	1-247-871-91	CARBON	47K	5%	1/4W
R1782	1-249-431-11	CARBON	15K	5%	1/4W
R1783	1-247-871-91	CARBON	47K	5%	1/4W
R1784	1-247-863-91	CARBON	22K	5%	1/4W
R1785	1-249-439-11	CARBON	68K	5%	1/4W
R1786	1-247-887-00	CARBON	220K	5%	1/4W
**********					
		S_SPTM BOARD			
		**********			
		< CAPACITOR >			
C4001	1-137-395-91	MYLAR	0.022uF	5%	100V
C4002	1-137-395-91	MYLAR	0.022uF	5%	100V
C4003	1-137-395-91	MYLAR	0.022uF	5%	100V
C4004	1-137-395-91	MYLAR	0.022uF	5%	100V
C4005	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C4006	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C4007	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C4008	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C4009	1-131-992-91	CERAMIC CHIP	100000PF		35V
C4010	1-131-992-91	CERAMIC CHIP	100000PF		35V
		< CONNECTOR >			
CN4001	1-784-921-11	PIN, CONNECTOR 4P			
CN4002	1-785-105-11	PIN, CONNECTOR (3.96mm PITCH) 7P			
CN4003	1-785-101-11	PIN, CONNECTOR (3.96mm PITCH) 3P			
CN4004	1-785-104-11	PIN, CONNECTOR (3.96mm PITCH) 6P			
		< DIODE >			
D4001	8-719-988-61	DIODE 1SS355TE-17			
D4002	8-719-988-61	DIODE 1SS355TE-17			
		< TRANSISTOR >			
Q4001	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
Q4002	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF		
		< RESISTOR >			
⚠R4001	1-249-393-11	CARBON	10	5%	1/4W F
⚠R4002	1-249-393-11	CARBON	10	5%	1/4W F
⚠R4003	1-249-393-11	CARBON	10	5%	1/4W F
⚠R4004	1-249-393-11	CARBON	10	5%	1/4W F
⚠R4005	1-249-393-11	CARBON	10	5%	1/4W F
⚠R4006	1-249-393-11	CARBON	10	5%	1/4W F
R4007	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R4008	1-216-833-11	METAL CHIP	10K	5%	1/10W
R4009	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R4010	1-216-833-11	METAL CHIP	10K	5%	1/10W
		< RELAY >			
RY4001	1-515-920-11	RELAY (24V)			
RY4002	1-515-920-11	RELAY (24V)			
		< TERMINAL >			
TB4001	1-780-404-11	TERMINAL BOARD (SP) (8P) (SURROUND/ SURROUND BACK SPEAKERS)			
**********					
		TEMPERATURE DETECTION BOARD			
		**********			
		< CAPACITOR >			
C1909	1-127-888-11	CERAMIC	0.1uF	10%	50V
C1910	1-135-800-11	CERAMIC	1uF		50V
C1913	1-135-800-11	CERAMIC	1uF		50V
		< DIODE >			
D1906	8-719-109-93	DIODE RD6.2ESB2			
		< IC >			
IC1903	6-710-072-01	IC LM61CIZ/LFT2			
IC1905	6-710-072-01	IC LM61CIZ/LFT2			
		< RESISTOR >			
R1928	1-249-414-11	CARBON	560	5%	1/4W
**********					
	A-1382-222-A	TUNER BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C8001	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C8002	1-124-779-00	ELECT CHIP	10uF	20%	16V
C8003	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C8004	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C8005	1-126-193-11	ELECT CHIP	1uF	20%	50V
C8006	1-126-193-11	ELECT CHIP	1uF	20%	50V
C8007	1-126-193-11	ELECT CHIP	1uF	20%	50V
C8008	1-126-193-11	ELECT CHIP	1uF	20%	50V

Ref. No.	Part No.	Description			Remark
C8009	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C8010	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8011	1-164-733-11	CERAMIC CHIP	820PF	10%	50V
C8012	1-164-733-11	CERAMIC CHIP	820PF	10%	50V
C8013	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C8014	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8015	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C8016	1-126-208-21	ELECT CHIP	47uF	20%	4V
C8017	1-126-208-21	ELECT CHIP	47uF	20%	4V
C8018	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C8019	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C8020	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C8021	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8023	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8024	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8026	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8027	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8028	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8029	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8030	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8031	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8032	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C8033	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C8034	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8035	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8036	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8037	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8038	1-162-908-11	CERAMIC CHIP	3PF	0.25PF	50V
C8039	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8040	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8041	1-162-908-11	CERAMIC CHIP	3PF	0.25PF	50V
C8042	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8043	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8044	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8045	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8046	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C8047	1-126-208-21	ELECT CHIP	47uF	20%	4V
C8048	1-126-208-21	ELECT CHIP	47uF	20%	4V
C8049	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C8050	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8051	1-126-209-11	ELECT CHIP	100uF	20%	4V
C8052	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8053	1-117-681-11	ELECT CHIP	100uF	20%	16V
C8056	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8057	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8058	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C8059	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C8060	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8061	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8062	1-128-993-21	ELECT CHIP	22uF	20%	10V
C8063	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8064	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8065	1-126-204-11	ELECT CHIP	47uF	20%	16V
C8066	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8067	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8068	1-124-779-00	ELECT CHIP	10uF	20%	16V
C8070	1-124-779-00	ELECT CHIP	10uF	20%	16V

Ref. No.	Part No.	Description			Remark
C8071	1-124-779-00	ELECT CHIP	10uF	20%	16V
C8072	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C8073	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C8074	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8075	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8076	1-115-412-11	CERAMIC CHIP	680PF	5%	25V
C8077	1-115-412-11	CERAMIC CHIP	680PF	5%	25V
C8078	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8079	1-124-779-00	ELECT CHIP	10uF	20%	16V
C8080	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8081	1-124-779-00	ELECT CHIP	10uF	20%	16V
C8082	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8083	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8084	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C8085	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C8086	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8087	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C8088	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8090	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C8092	1-126-204-11	ELECT CHIP	47uF	20%	16V
C8093	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C8094	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C8095	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C8096	1-162-923-11	CERAMIC CHIP	47PF	5%	50V

< CONNECTOR >

CN8001	1-793-642-21	CONNECTOR (USB) (4P), SQUARE (XM)
CN8002	1-821-182-11	SOCKET, DIN 8P (SIRIUS)
CN8003	1-817-615-21	CONNECTOR BOARD TO BOARD 18P
CN8005	1-568-828-11	CONNECTOR, FFC 9P
CN8006	1-770-409-11	CONNECTOR, BOARD TO BOARD 16P
CN8007	1-770-407-11	CONNECTOR, BOARD TO BOARD 12P
CN8008	1-770-408-11	CONNECTOR, BOARD TO BOARD 14P

< DIODE >

D8001	8-719-988-61	DIODE 1SS355TE-17
D8002	8-719-988-61	DIODE 1SS355TE-17
D8003	8-719-083-02	DIODE KDS160-RTK
D8004	8-719-083-02	DIODE KDS160-RTK
D8005	6-500-462-01	DIODE NSAD500F-T1B
D8006	8-719-988-61	DIODE 1SS355TE-17

< EARTH TERMINAL >

ET8001	1-780-318-11	TERMINAL
ET8002	1-780-318-11	TERMINAL

< FERRITE BEAD >

FB8001	1-469-152-11	FERRITE, EMI (SMD) (2012)
FB8002	1-469-152-11	FERRITE, EMI (SMD) (2012)
FB8003	1-414-813-11	FERRITE, EMI (SMD) (2012)

< IC >

IC8001	6-705-469-01	IC BA50BC0FP-E2
IC8002	8-759-710-97	IC NJM4565M-D
IC8003	6-709-251-01	IC F2602E-01-TR
IC8004	6-702-302-01	IC TK11133CSCL-G
IC8005	6-707-111-01	IC PCM1753DBQR

TUNER **VIDEO3**

Ref. No.	Part No.	Description			Remark
IC8006	6-706-740-01	IC BA00BC0WFP-E2			
IC8007	6-705-337-01	IC TK11150CSCL-G			
IC8008	8-759-710-97	IC NJM4565M-D			
IC8009	6-711-170-01	IC NJU7313AM (TE2)			
IC8010	8-759-710-97	IC NJM4565M-D			
IC8011	6-709-800-01	IC TA7809AF-(T6L1SONQ			
IC8012	8-759-710-97	IC NJM4565M-D			
		< COIL >			
L8001	1-469-525-91	INDUCTOR	10uH		
L8002	1-469-525-91	INDUCTOR	10uH		
		< TRANSISTOR >			
Q8001	8-729-027-43	TRANSISTOR	DTC114EKA-T146		
Q8002	8-729-027-23	TRANSISTOR	DTA114EKA-T146		
Q8003	8-729-027-43	TRANSISTOR	DTC114EKA-T146		
Q8004	6-550-044-01	TRANSISTOR	2SB1689-T106		
		< RESISTOR/FERRITE BEAD >			
R8001	1-216-864-11	SHORT CHIP	0		
R8009	1-216-833-11	METAL CHIP	10K	5%	1/10W
R8010	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R8014	1-216-864-11	SHORT CHIP	0		
R8015	1-216-864-11	SHORT CHIP	0		
R8019	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8020	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8021	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8022	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8023	1-219-365-11	SHORT CHIP	0		
R8024	1-219-365-11	SHORT CHIP	0		
R8025	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8027	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8028	1-216-841-11	METAL CHIP	47K	5%	1/10W
R8029	1-216-841-11	METAL CHIP	47K	5%	1/10W
R8032	1-216-809-11	METAL CHIP	100	5%	1/10W
R8034	1-216-821-11	METAL CHIP	1K	5%	1/10W
R8035	1-216-809-11	METAL CHIP	100	5%	1/10W
R8036	1-216-821-11	METAL CHIP	1K	5%	1/10W
R8037	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8038	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8039	1-216-821-11	METAL CHIP	1K	5%	1/10W
R8040	1-216-809-11	METAL CHIP	100	5%	1/10W
R8041	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R8046	1-216-809-11	METAL CHIP	100	5%	1/10W
R8048	1-216-809-11	METAL CHIP	100	5%	1/10W
R8050	1-216-809-11	METAL CHIP	100	5%	1/10W
R8052	1-216-809-11	METAL CHIP	100	5%	1/10W
R8053	1-216-809-11	METAL CHIP	100	5%	1/10W
R8055	1-216-809-11	METAL CHIP	100	5%	1/10W
R8057	1-216-809-11	METAL CHIP	100	5%	1/10W
R8063	1-216-841-11	METAL CHIP	47K	5%	1/10W
R8064	1-216-841-11	METAL CHIP	47K	5%	1/10W
R8068	1-216-833-11	METAL CHIP	10K	5%	1/10W
R8070	1-216-809-11	METAL CHIP	100	5%	1/10W
R8071	1-216-833-11	METAL CHIP	10K	5%	1/10W
R8072	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R8073	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R8074	1-216-821-11	METAL CHIP	1K	5%	1/10W

Ref. No.	Part No.	Description			Remark
R8075	1-216-864-11	SHORT CHIP	0		
R8076	1-216-841-11	METAL CHIP	47K	5%	1/10W
R8077	1-216-833-11	METAL CHIP	10K	5%	1/10W
R8078	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8079	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8080	1-216-834-11	METAL CHIP	12K	5%	1/10W
R8081	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R8082	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R8083	1-216-834-11	METAL CHIP	12K	5%	1/10W
R8084	1-216-819-11	METAL CHIP	680	5%	1/10W
R8085	1-216-819-11	METAL CHIP	680	5%	1/10W
R8086	1-216-809-11	METAL CHIP	100	5%	1/10W
R8087	1-216-809-11	METAL CHIP	100	5%	1/10W
R8088	1-216-805-11	METAL CHIP	47	5%	1/10W
R8089	1-216-805-11	METAL CHIP	47	5%	1/10W
R8090	1-216-805-11	METAL CHIP	47	5%	1/10W
R8091	1-500-238-11	BEAD, FERRITE (CHIP) (1608)			
R8092	1-216-805-11	METAL CHIP	47	5%	1/10W
R8093	1-216-805-11	METAL CHIP	47	5%	1/10W
R8094	1-216-805-11	METAL CHIP	47	5%	1/10W
R8095	1-216-805-11	METAL CHIP	47	5%	1/10W
		< COMPOSITION CIRCUIT BLOCK >			
RB8001	1-234-378-21	RES, NETWORK	10K (1005X4)		
RB8002	1-234-378-21	RES, NETWORK	10K (1005X4)		
RB8003	1-234-378-21	RES, NETWORK	10K (1005X4)		
RB8004	1-234-378-21	RES, NETWORK	10K (1005X4)		
RB8005	1-234-372-11	RES, NETWORK	100 (1005X4)		
		< VIBRATOR >			
X8001	1-760-841-11	VIBRATOR, CRYSTAL (45.1584MHz)			
**********					
		VIDEO3 BOARD			
		**********			
		< CAPACITOR >			
C757	1-104-665-11	ELECT	100uF	20%	25V
C758	1-104-665-11	ELECT	100uF	20%	25V
C759	1-163-025-11	CERAMIC CHIP	0.001uF		50V
C760	1-163-025-11	CERAMIC CHIP	0.001uF		50V
C761	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C762	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C763	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C764	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C765	1-163-139-00	CERAMIC CHIP	820PF	5%	50V
C766	1-163-139-00	CERAMIC CHIP	820PF	5%	50V
C767	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C768	1-163-259-91	CERAMIC CHIP	220PF	5%	50V
C769	1-163-259-91	CERAMIC CHIP	220PF	5%	50V
		< CONNECTOR >			
CN721	1-784-923-11	PIN, CONNECTOR 7P			
CN723	1-779-978-11	PIN, CONNECTOR 3P			
CN725	1-784-922-11	PIN, CONNECTOR 5P			
CN728	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P			

Ref. No.	Part No.	Description			Remark
		< DIODE >			
D713	8-719-404-50	DIODE MA111-TX			
D714	8-719-404-50	DIODE MA111-TX			
D715	8-719-404-50	DIODE MA111-TX			
D716	8-719-404-50	DIODE MA111-TX			
		< EARTH TERMINAL >			
* ET702	1-537-738-21	TERMINAL, EARTH			
* ET703	1-537-738-21	TERMINAL, EARTH			
		< IC >			
IC706	8-759-710-97	IC NJM4565M-D			
IC707	6-600-219-01	IC GP1FM313RZ0F (VIDEO 3 IN/PORTABLE AV IN DIGITAL (OPT))			
		< JACK >			
J702	1-815-313-11	JACK (PHONES)			
J703	1-770-571-11	JACK BLOCK, PIN (L TYPE) 3P (VIDEO 3 IN/PORTABLE AV IN AUDIO/VIDEO)			
		< RESISTOR >			
R762	1-216-025-11	RES-CHIP	100	5%	1/10W
R763	1-216-049-11	RES-CHIP	1K	5%	1/10W
R764	1-216-049-11	RES-CHIP	1K	5%	1/10W
R765	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R768	1-216-089-91	RES-CHIP	47K	5%	1/10W
R769	1-216-089-91	RES-CHIP	47K	5%	1/10W
R770	1-216-295-91	SHORT CHIP	0		
R774	1-216-295-91	SHORT CHIP	0		
R775	1-216-295-91	SHORT CHIP	0		
R776	1-216-295-91	SHORT CHIP	0		
R785	1-216-295-91	SHORT CHIP	0		
**********					
		MISCELLANEOUS			
		**********			
55	1-543-793-41	FILTER, CLAMP (FERRITE CORE)			
153	1-828-318-51	WIRE (FLAT TYPE) (11 CORE)			
154	1-828-954-51	WIRE (FLAT TYPE) (9 CORE)			
155	1-693-728-11	TUNER (FM/AM)			
202	1-500-386-11	FILTER, CLAMP (FERRITE CORE)			
208	1-832-623-11	WIRE (FLAT TYPE) (23 CORE)			
* 210	1-469-435-11	CORE, FERRITE			
211	1-828-387-51	WIRE (FLAT TYPE) (25 CORE)			
251	1-500-386-11	FILTER, CLAMP (FERRITE CORE)			
354	1-500-386-11	FILTER, CLAMP (FERRITE CORE)			
360	1-828-362-51	WIRE (FLAT TYPE) (19 CORE)			
⚠F001	1-533-311-12	FUSE, GLASS CYLINDRICAL (DIA.5) (8A/125V)			
⚠F1001	1-532-504-33	FUSE (T4AL/250V)			
⚠F1002	1-532-504-33	FUSE (T4AL/250V)			
⚠F1405	1-532-506-33	FUSE (T6.3AL/250V)			
⚠J01	1-821-082-21	INLET, AC 2P (~AC IN)			
Q1507	6-702-390-01	TRANSISTOR	MN2488-OPY-MK		
Q1508	6-702-391-01	TRANSISTOR	MP1620-OPY-MK		
Q1521	8-729-026-08	TRANSISTOR	2SC4495		
Q1557	6-702-390-01	TRANSISTOR	MN2488-OPY-MK		
Q1558	6-702-391-01	TRANSISTOR	MP1620-OPY-MK		

Ref. No.	Part No.	Description		Remark
Q1571	8-729-026-08	TRANSISTOR	2SC4495	
Q1607	6-702-390-01	TRANSISTOR	MN2488-OPY-MK	
Q1608	6-702-391-01	TRANSISTOR	MP1620-OPY-MK	
Q1621	8-729-026-08	TRANSISTOR	2SC4495	
Q1707	6-702-390-01	TRANSISTOR	MN2488-OPY-MK	
Q1708	6-702-391-01	TRANSISTOR	MP1620-OPY-MK	
Q1721	8-729-026-08	TRANSISTOR	2SC4495	
Q1757	6-702-390-01	TRANSISTOR	MN2488-OPY-MK	
Q1758	6-702-391-01	TRANSISTOR	MP1620-OPY-MK	
Q1771	8-729-026-08	TRANSISTOR	2SC4495	
Q1807	6-702-390-01	TRANSISTOR	MN2488-OPY-MK	
Q1808	6-702-391-01	TRANSISTOR	MP1620-OPY-MK	
Q1821	8-729-026-08	TRANSISTOR	2SC4495	
Q1857	6-702-390-01	TRANSISTOR	MN2488-OPY-MK	
Q1858	6-702-391-01	TRANSISTOR	MP1620-OPY-MK	
Q1871	8-729-026-08	TRANSISTOR	2SC4495	
⚠T001	1-445-232-11	TRANSFORMER, POWER		
**********				
		ACCESSORIES		
		**********		
	1-480-201-11	REMOTE COMMANDER (RM-AAL011) (Full)		
	1-480-276-11	COMMANDER, STANDARD (RM-AAU018) (Simple)		
	1-501-374-12	ANTENNA, LOOP (AM loop antenna (aerial))		
	1-542-670-11	MEASUREMENT MIC (MONO) (Optimizer microphone: ECM-AC2)		
	1-793-184-23	CONNECTOR (F TYPE ADAPTOR) (FM wire antenna (aerial))		
⚠	1-834-508-11	POWER CORD (AC power cord (mains lead))		
	3-209-655-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH)		

MEMO

STR-DA4300ES

SONY

US Model
Canadian Model

SERVICE MANUAL

Ver. 1.1 2007.10

SUPPLEMENT-1

File this supplement with the service manual.

Subject: Change of DSP board (Combined Suffix-12)
Change of TUNER board (Combined Suffix-12/ -13)

In this set, DSP and TUNER boards have been changed in the midway of production.
Printed wiring board, schematic diagram and electrical parts list of new type are described in this supplement-1.
Refer to original service manual for other information.

TABLE OF CONTENTS

1. NEW/FORMER DISCRIMINATION 1

2. DIAGRAMS
2-1. Printed Wiring Board – TUNER Board (Component Side) (Suffix-12) – 3
2-2. Printed Wiring Board – TUNER Board (Conductor Side) (Suffix-12) – 4
2-3. Printed Wiring Board – TUNER Board (Component Side) (Suffix-13) – 5
2-4. Printed Wiring Board – TUNER Board (Conductor Side) (Suffix-13) – 6
2-5. Schematic Diagram – TUNER Board (1/2) – 7
2-6. Schematic Diagram – TUNER Board (2/2) – 8
2-7. Printed Wiring Board – DSP Board (Side A) – 9
2-8. Printed Wiring Board – DSP Board (Side B) – 10
2-9. Schematic Diagram – DSP Board (1/4) – 11
2-10. Schematic Diagram – DSP Board (2/4) – 12
2-11. Schematic Diagram – DSP Board (3/4) – 13
2-12. Schematic Diagram – DSP Board (4/4) – 14

3. ELECTRICAL PARTS LIST 15

9-887-785-81
STR-DA4300ES

1. NEW/FORMER DISCRIMINATION

– DSP Board (Side B) –

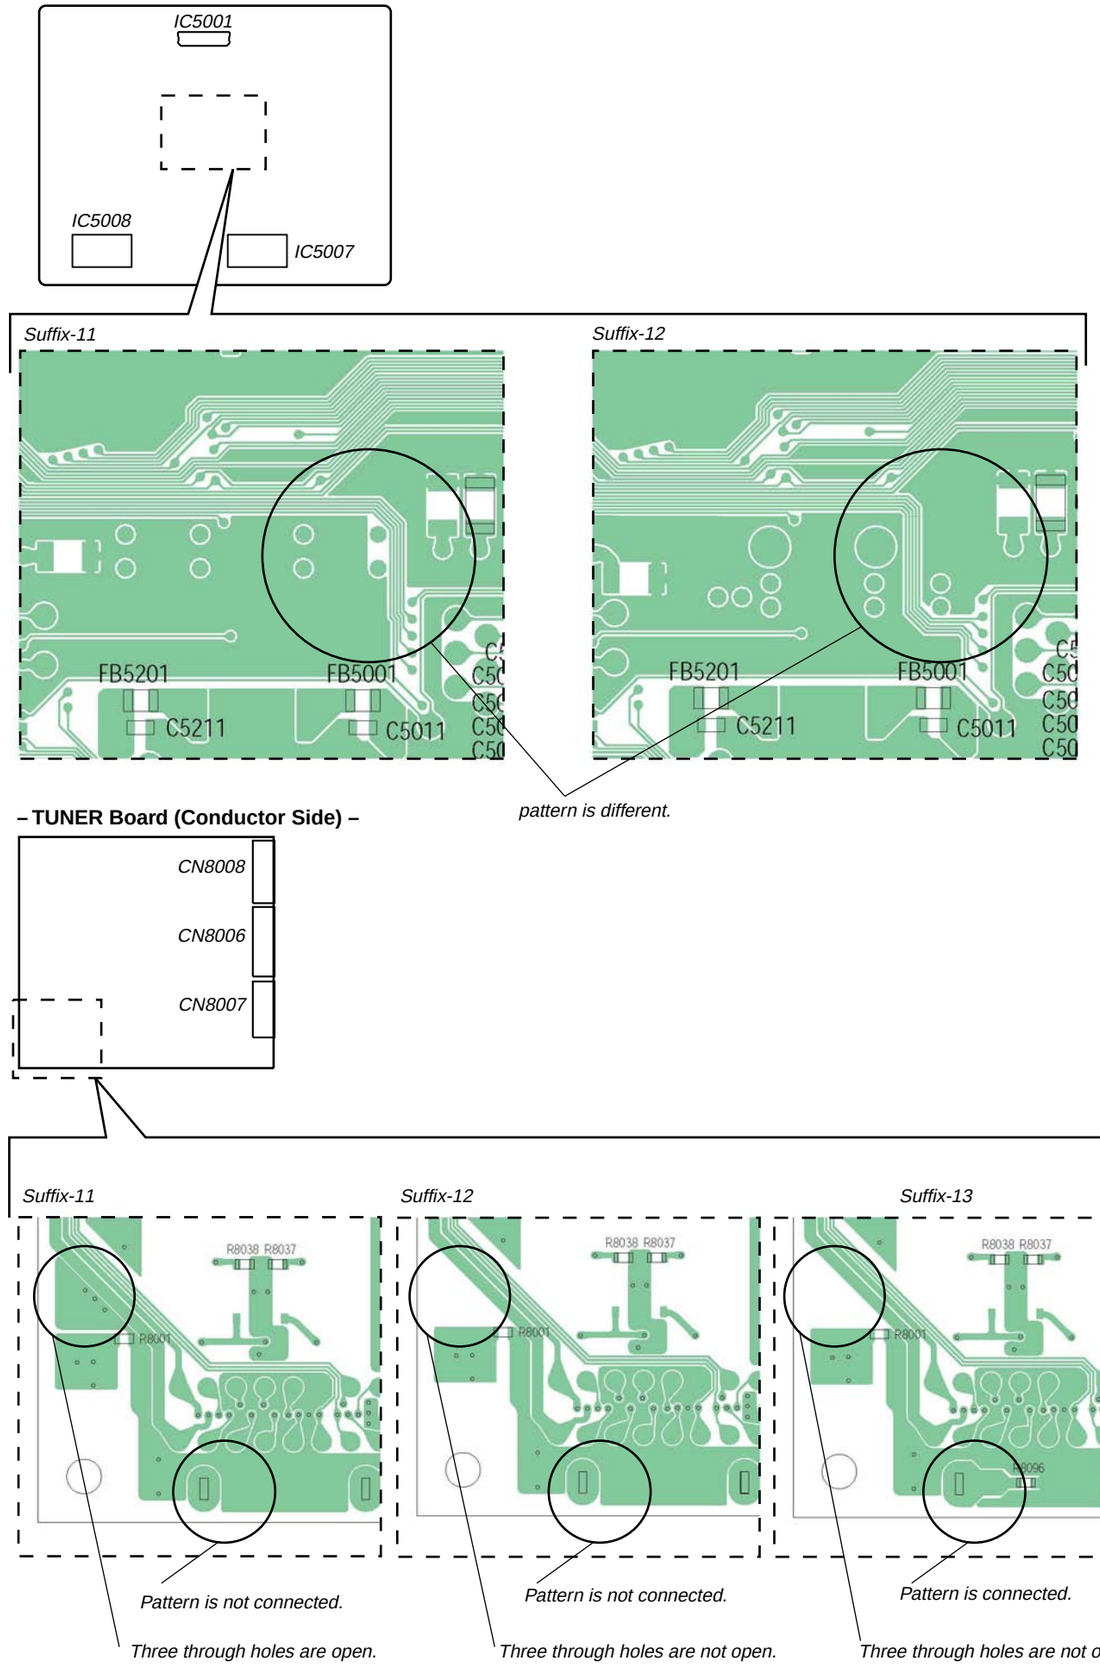

– TUNER Board (Conductor Side) –

2. DIAGRAMS

- **Note for Printed Wiring Boards and Schematic Diagrams**

Note on Printed Wiring Board:

- ○——— : parts extracted from the component side.
- ——— : parts extracted from the conductor side.
- △ : internal component.
- ▬ : Pattern from the side which enables seeing.

(The other layers' patterns are not indicated.)

Caution:	
Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component Side)	Parts on the parts face side seen from the parts face are indicated.

Caution:	
Pattern face side: (Side B)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Side A)	Parts on the parts face side seen from the parts face are indicated.

- DSP board is multi-layer printed board. However, the patterns of intermediate-layers have not been included in this diagrams.
- Indication of transistor



These are omitted.

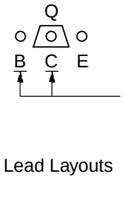

These are omitted.

- Lead Layouts

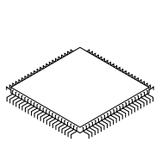

Lead layout of conventional IC

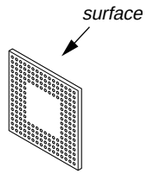

CSP (chip size package)

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. (p: pF) 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- △ : internal component.
- ▭ : panel designation.
- ▬ : B+ Line.
- ▬ ▬ ▬ : B– Line.
- Voltages are dc with respect to ground under no-signal (detuned) conditions.
  no mark : TUNER
- Voltages are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Signal path.
  ⇨ : AUDIO (ANALOG)
  ⇨ : AUDIO (DIGITAL)
  ⇨ : VIDEO
- The voltage and waveform of CSP (chip size package) cannot be measured, because its lead layout is different from that of conventional IC.

2-1. PRINTED WIRING BOARD – TUNER Board (Component Side) (Suffix-12) – : Uses unleaded solder.

【TUNER BOARD】(COMPONENT SIDE)

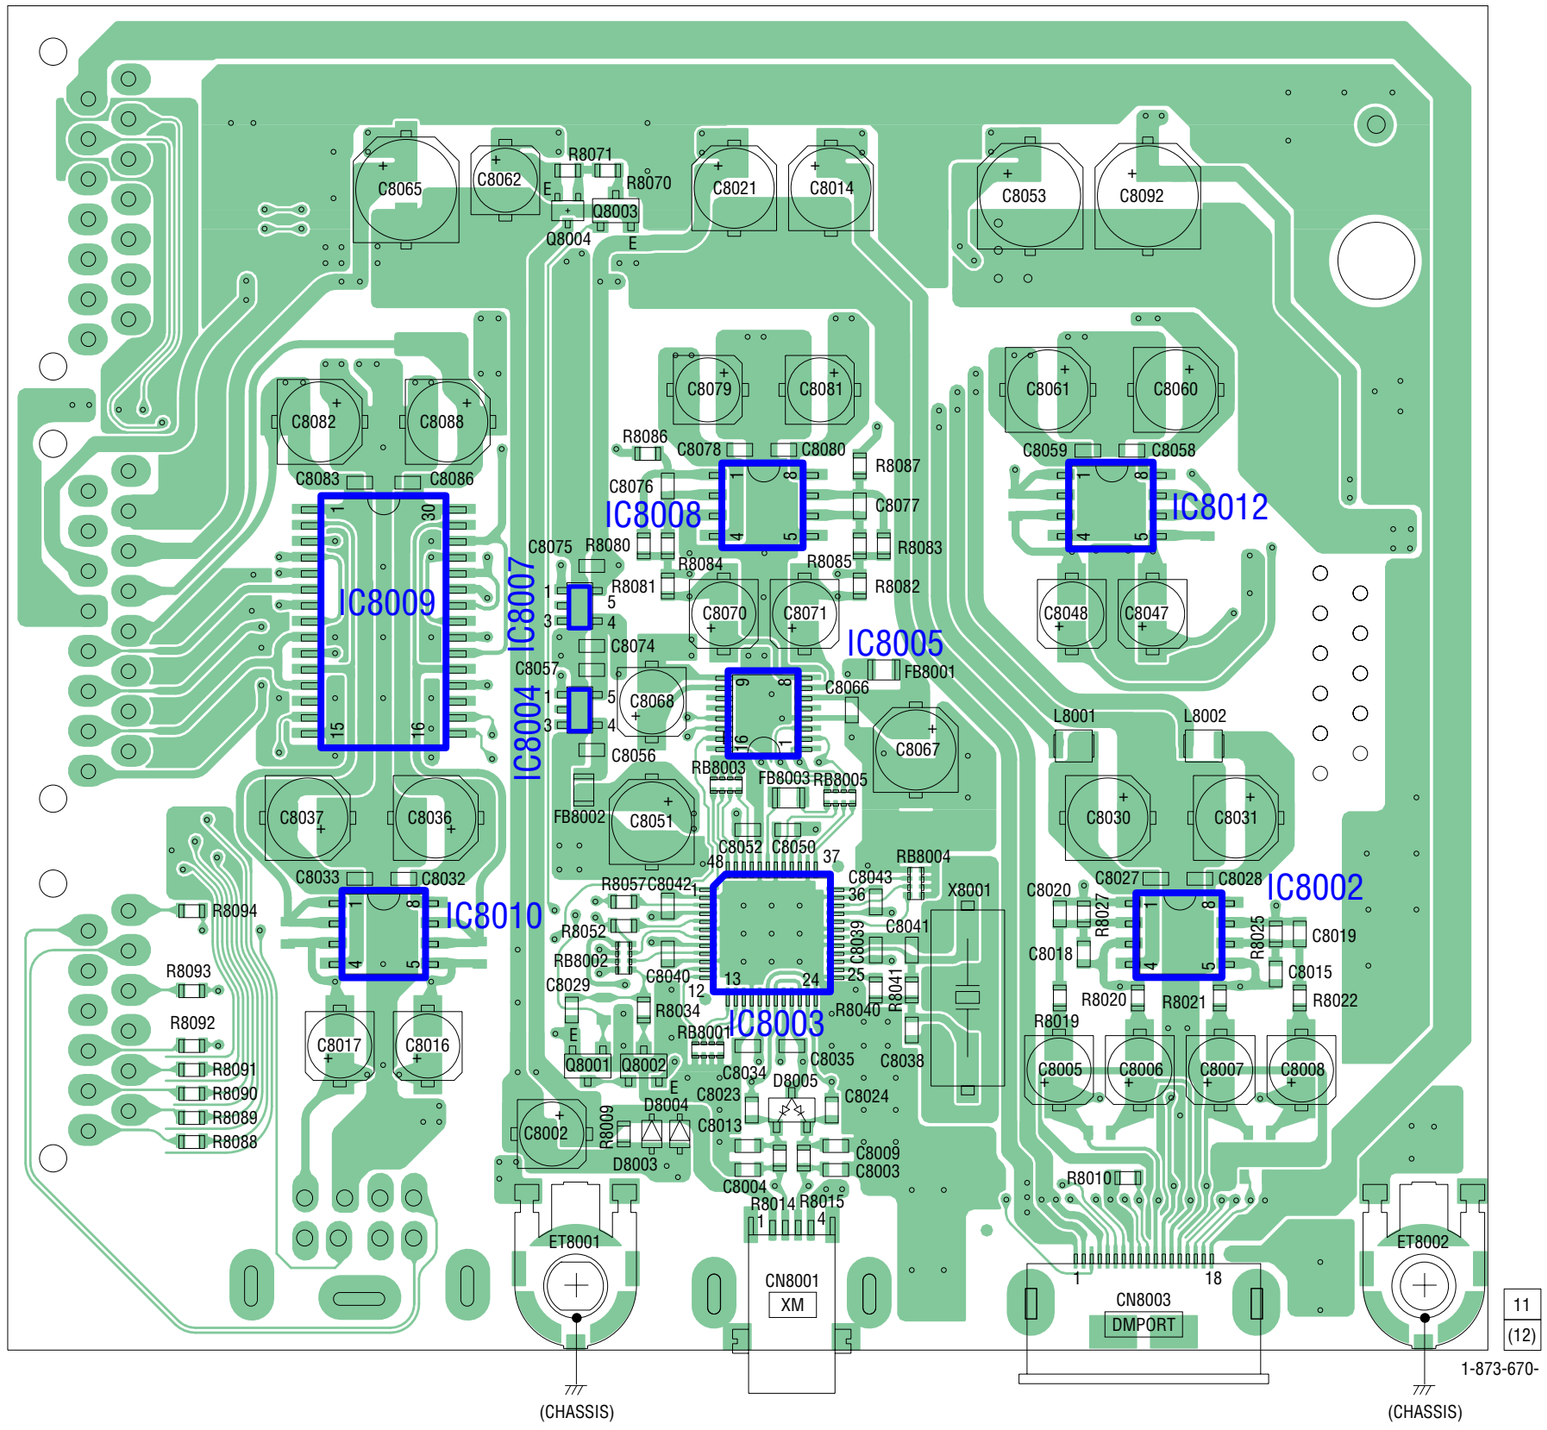

- **Semiconductor Location**

Ref. No.	Location
D8003	E-4
D8004	E-4
D8005	E-4
IC8002	D-5
IC8003	D-4
IC8004	C-4
IC8005	C-4
IC8007	C-4
IC8008	C-4
IC8009	C-3
IC8010	D-3
IC8012	C-5
Q8001	D-4
Q8002	D-4
Q8003	B-4
Q8004	B-3

2-2. PRINTED WIRING BOARD – TUNER Board (Conductor Side) (Suffix-12) – : Uses unleaded solder.

- **Semiconductor Location**

Ref. No.	Location
D8001	E-5
D8002	E-5
D8006	B-3
IC8001	B-4
IC8006	B-5
IC8011	B-3

【TUNER BOARD】(CONDUCTOR SIDE)

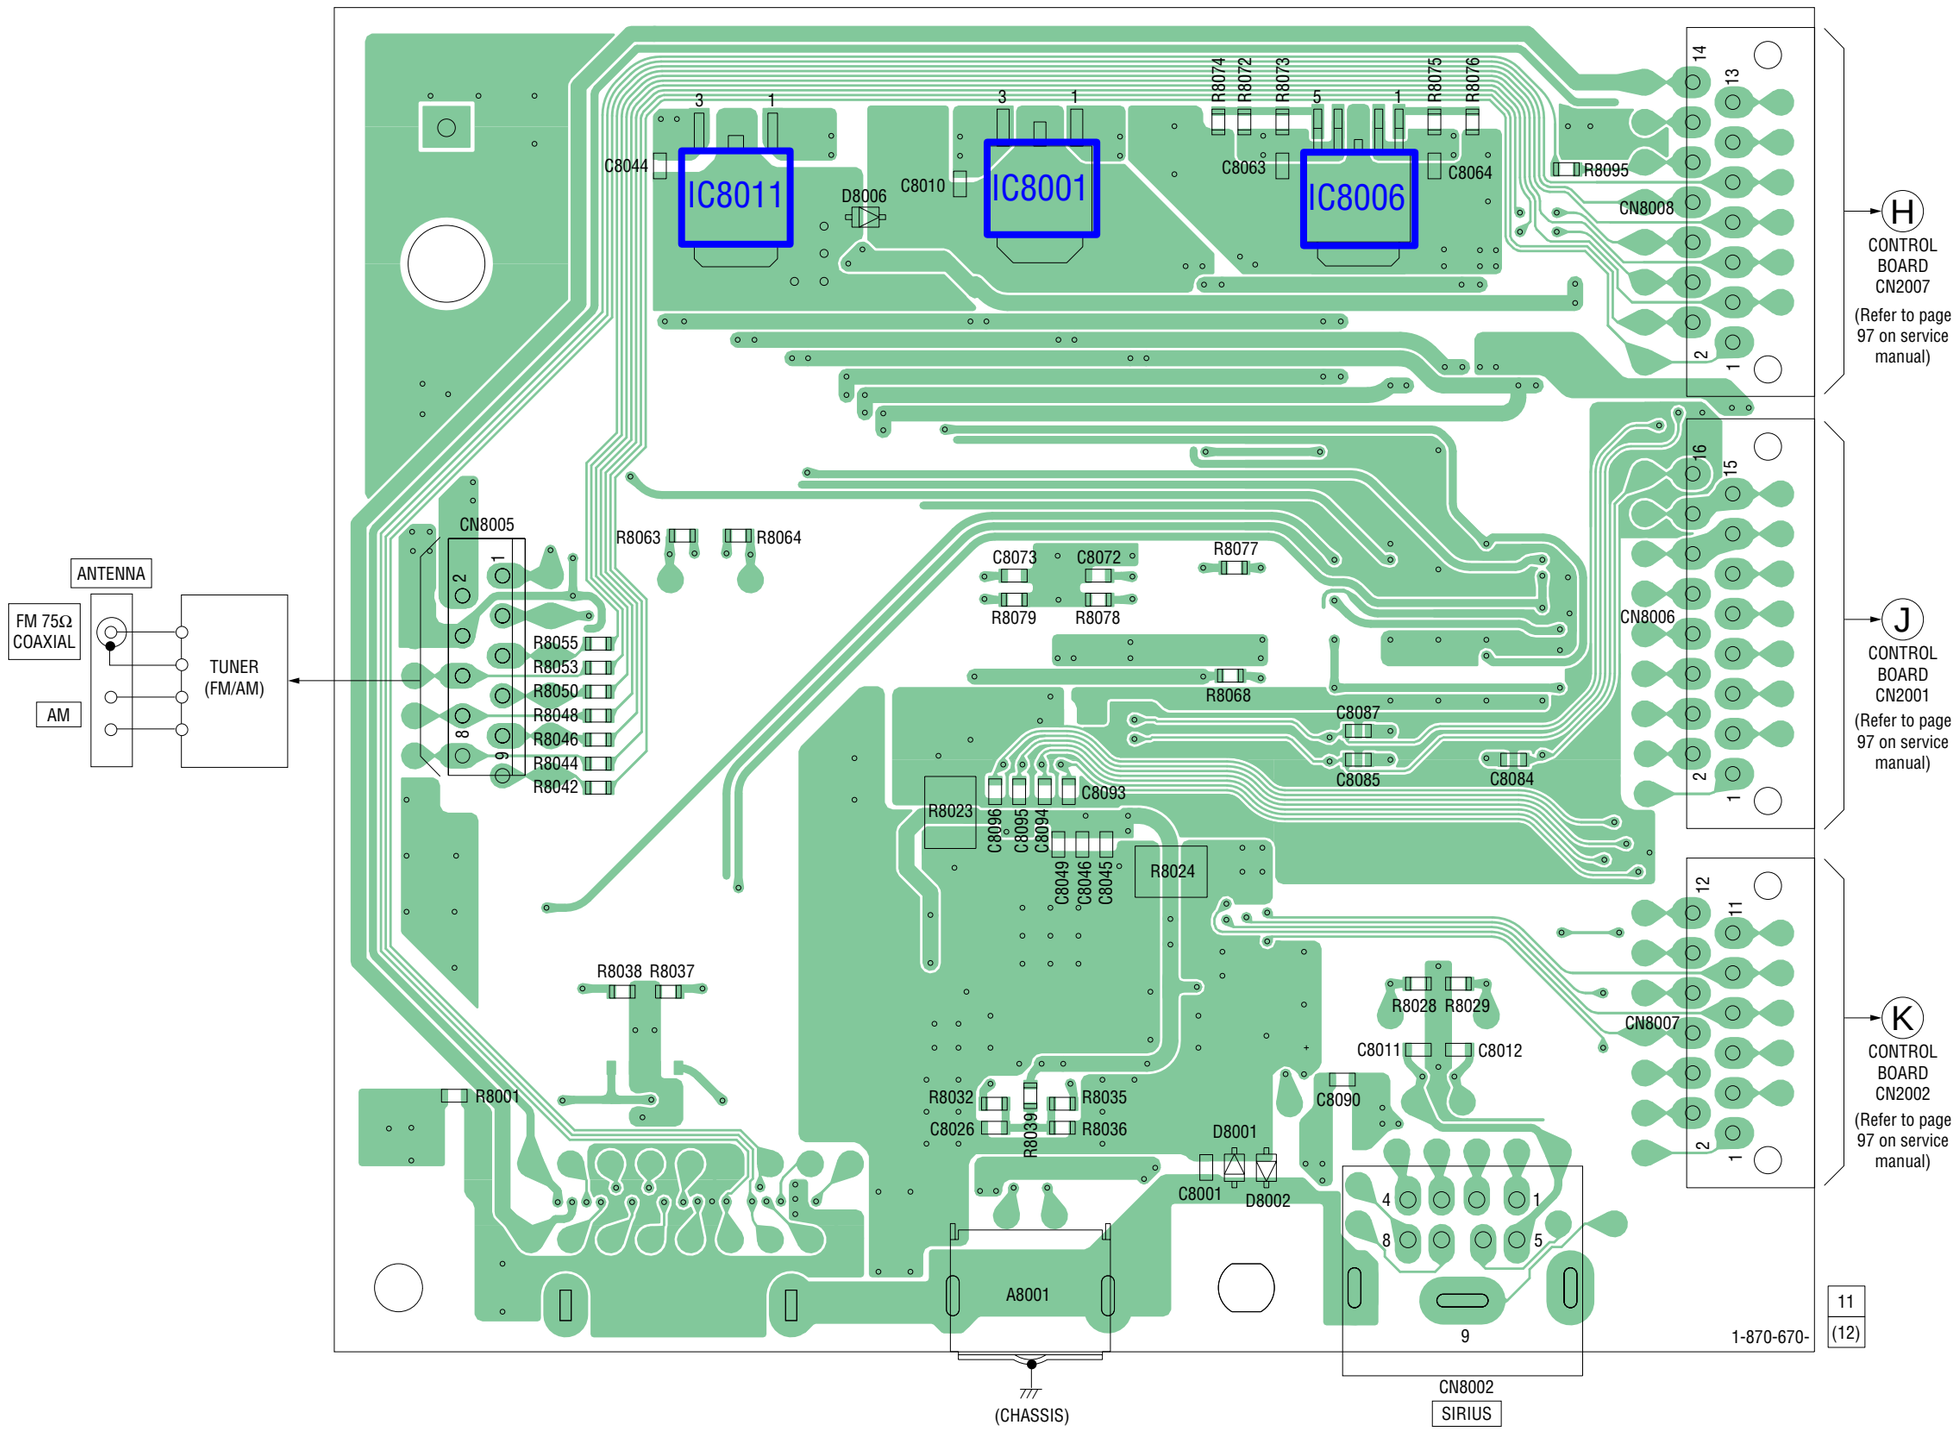

2-3. PRINTED WIRING BOARD – TUNER Board (Component Side) (Suffix-13) – : Uses unleaded solder.

【TUNER BOARD】(COMPONENT SIDE)

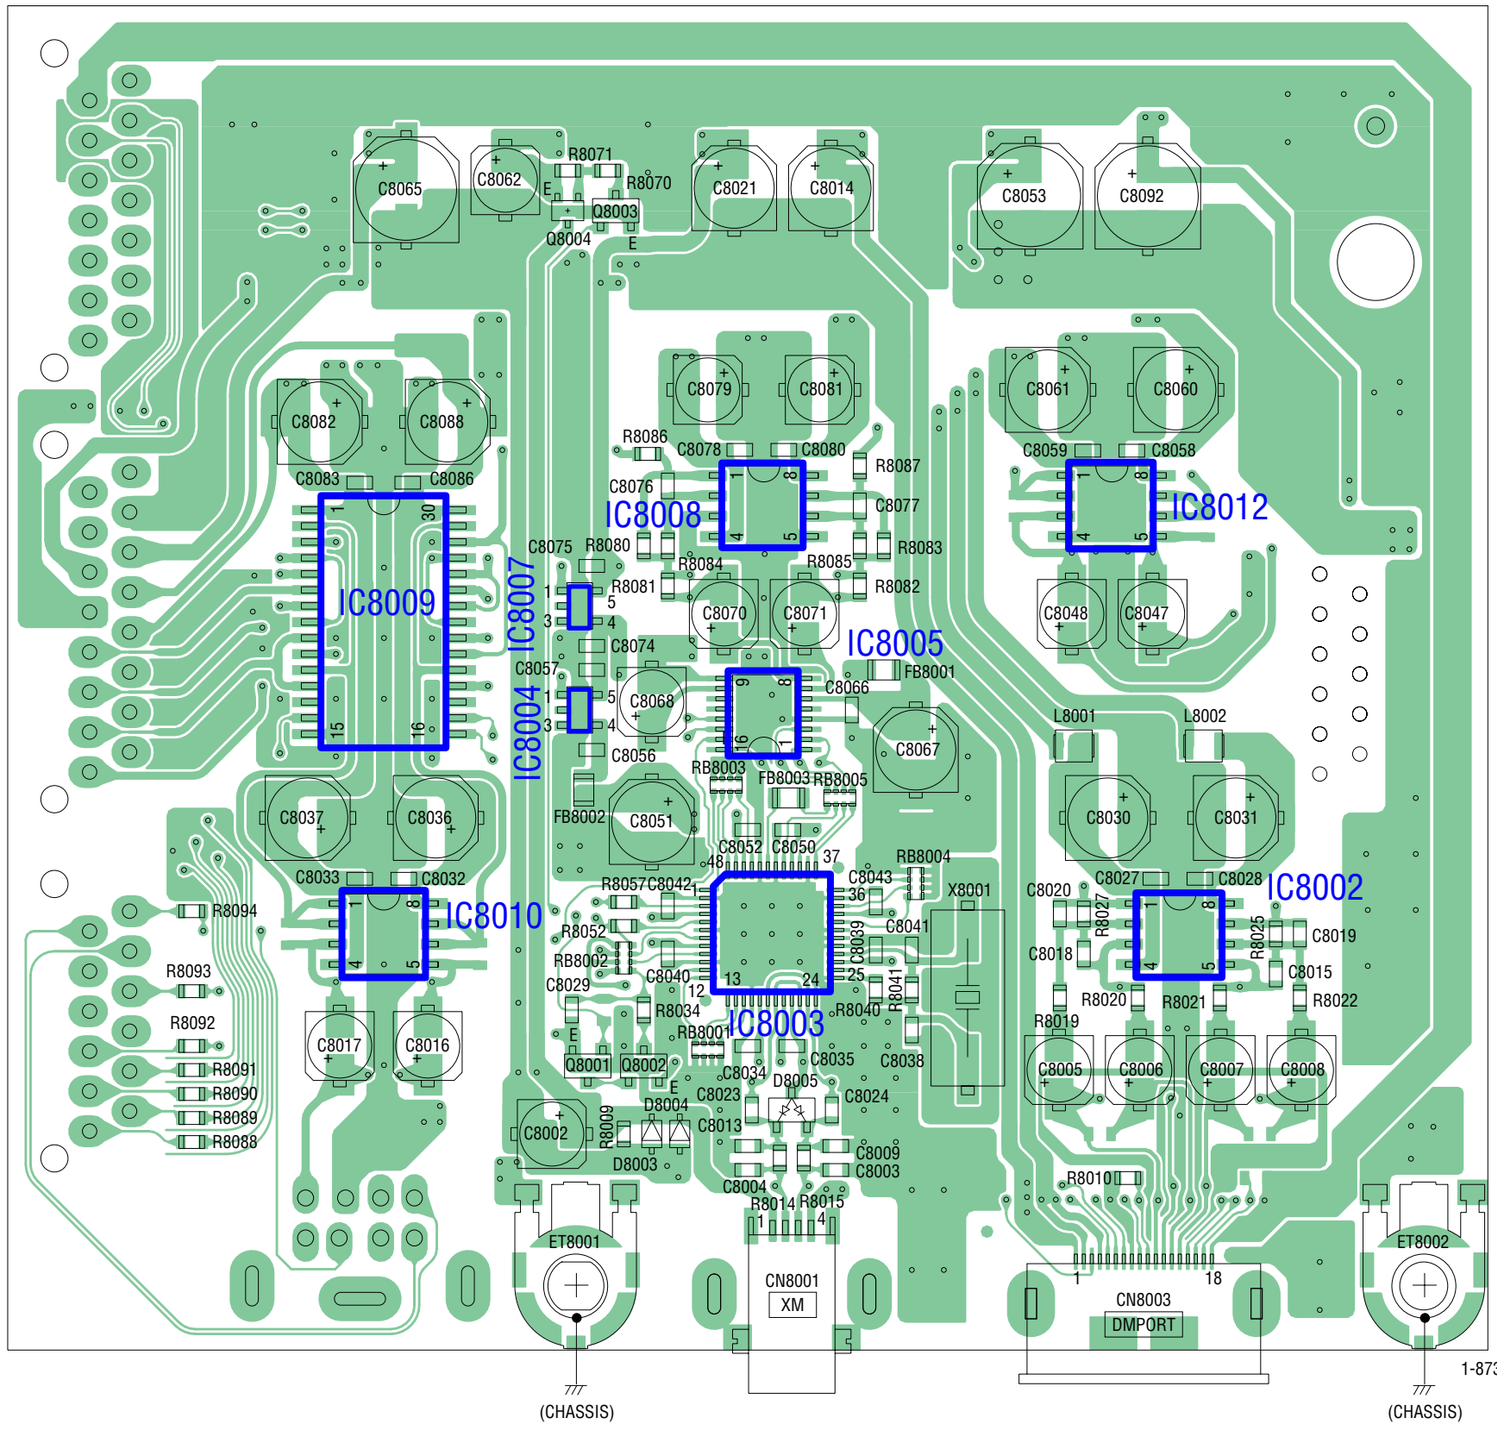

- **Semiconductor Location**

Ref. No.	Location
D8003	E-4
D8004	E-4
D8005	E-4
IC8002	D-5
IC8003	D-4
IC8004	C-4
IC8005	C-4
IC8007	C-4
IC8008	C-4
IC8009	C-3
IC8010	D-3
IC8012	C-5
Q8001	D-4
Q8002	D-4
Q8003	B-4
Q8004	B-3

2-4. PRINTED WIRING BOARD – TUNER Board (Conductor Side) (Suffix-13) – : Uses unleaded solder.

- **Semiconductor Location**

Ref. No.	Location
D8001	E-5
D8002	E-5
D8006	B-3
IC8001	B-4
IC8006	B-5
IC8011	B-3

【TUNER BOARD】(CONDUCTOR SIDE)

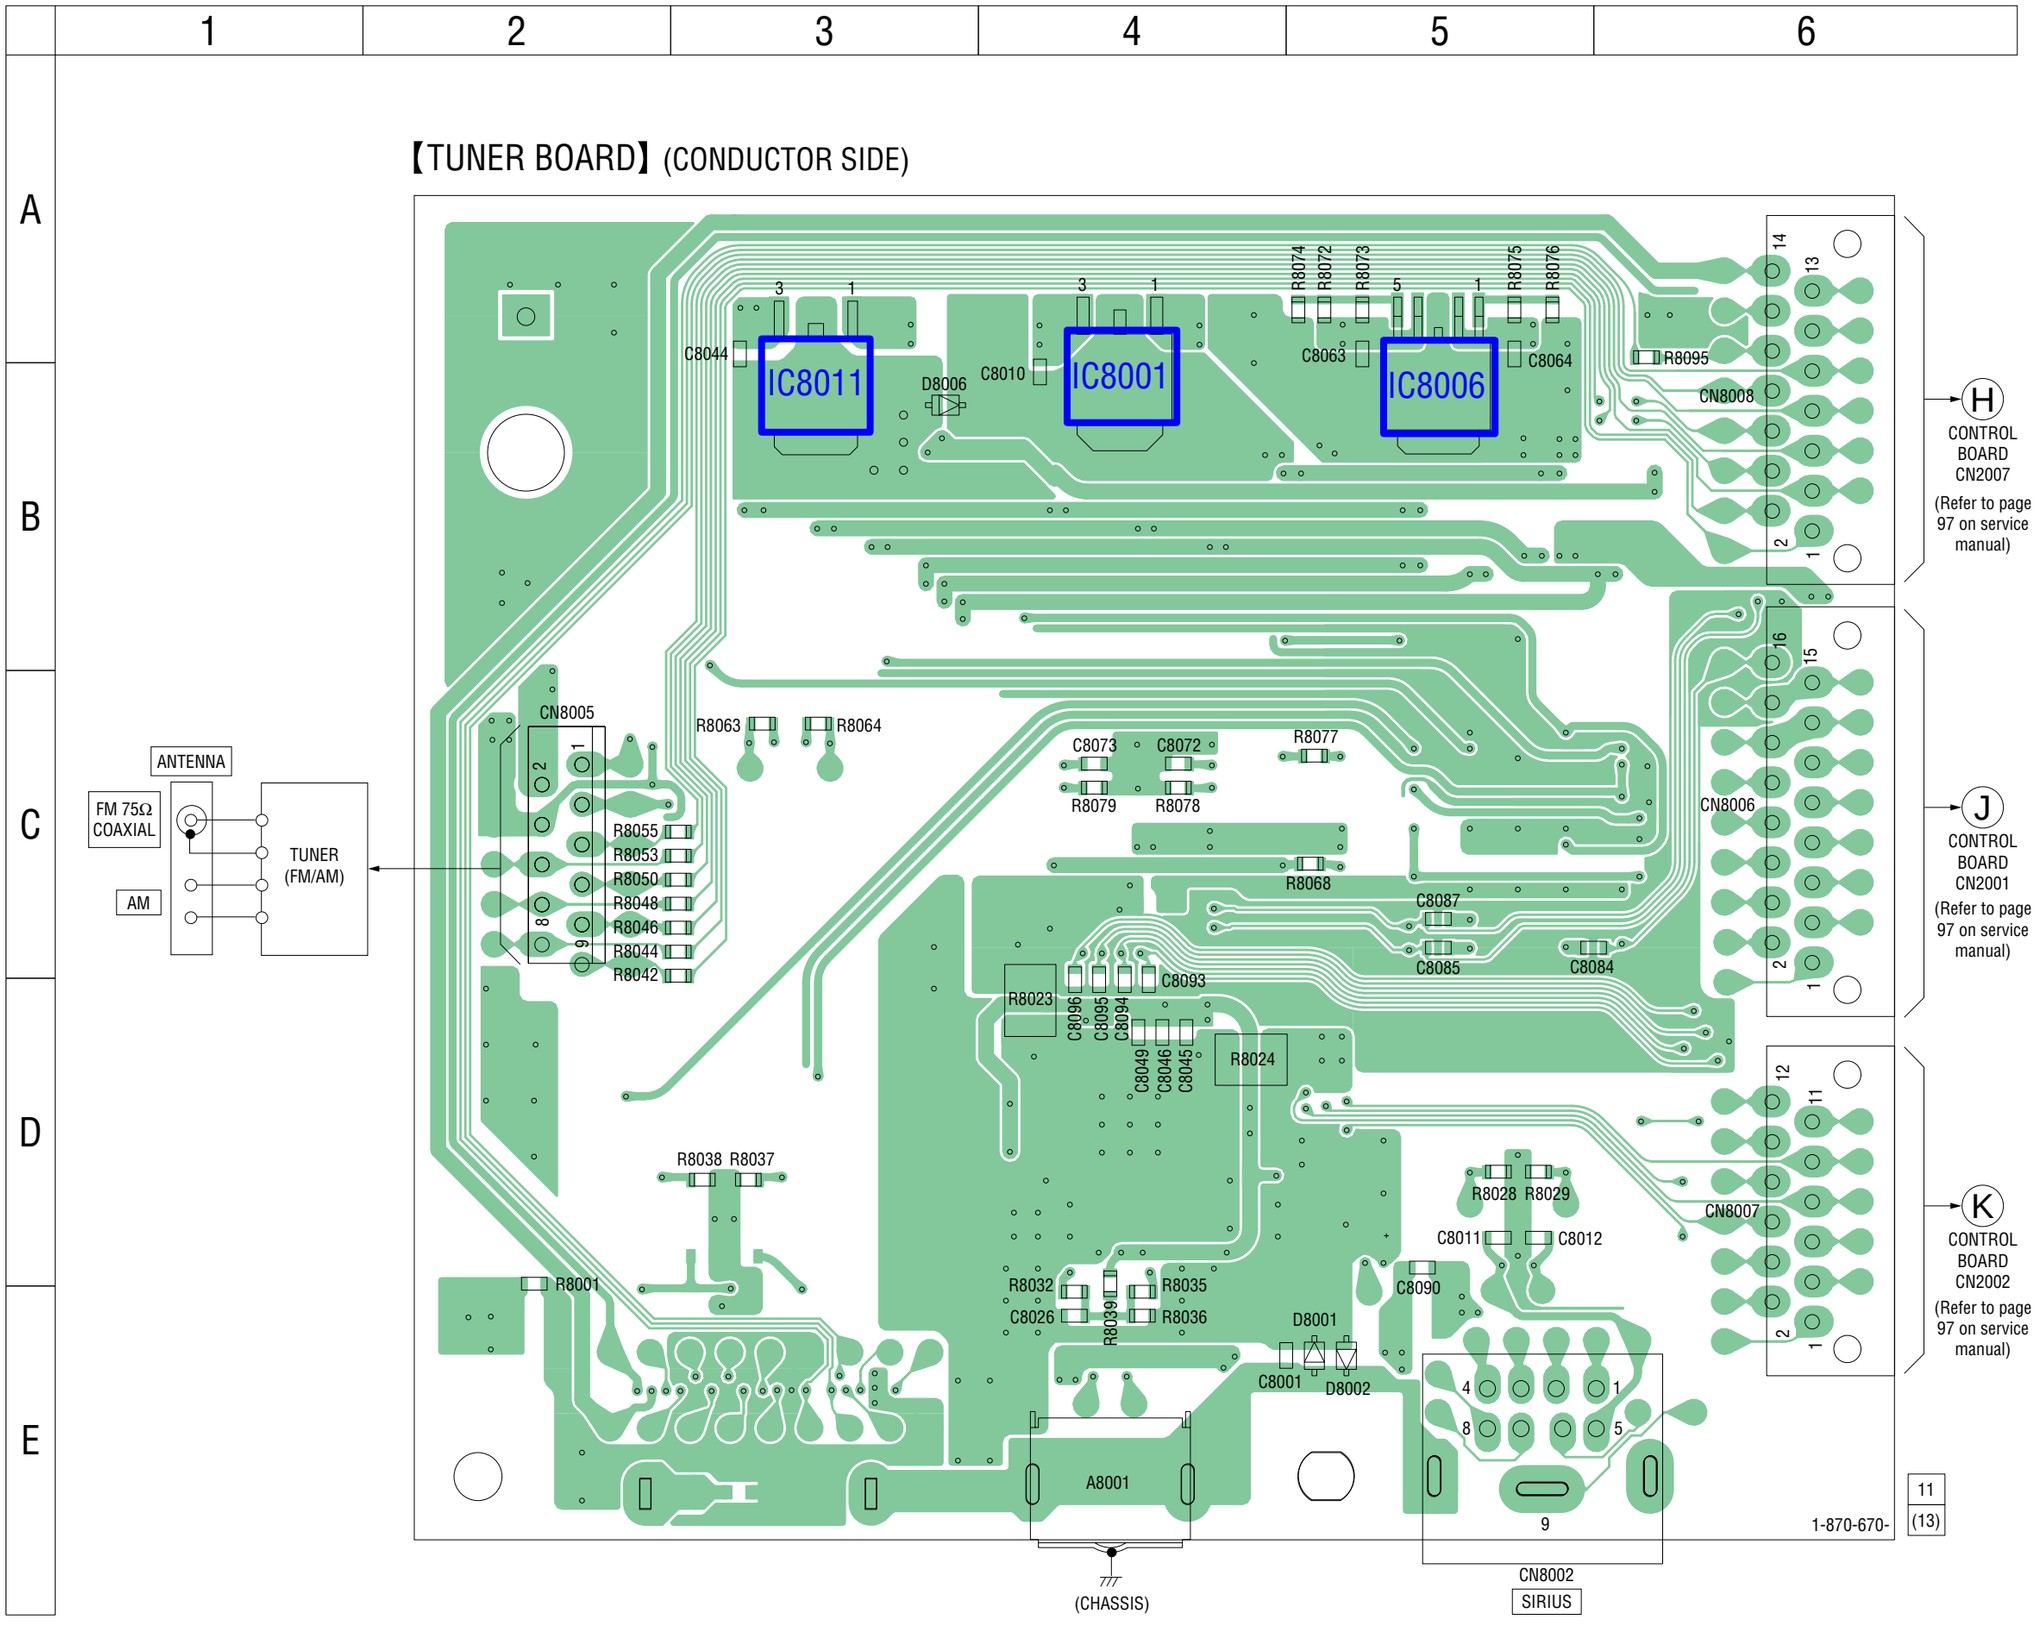

2-5. SCHEMATIC DIAGRAM – TUNER Board (1/2) –

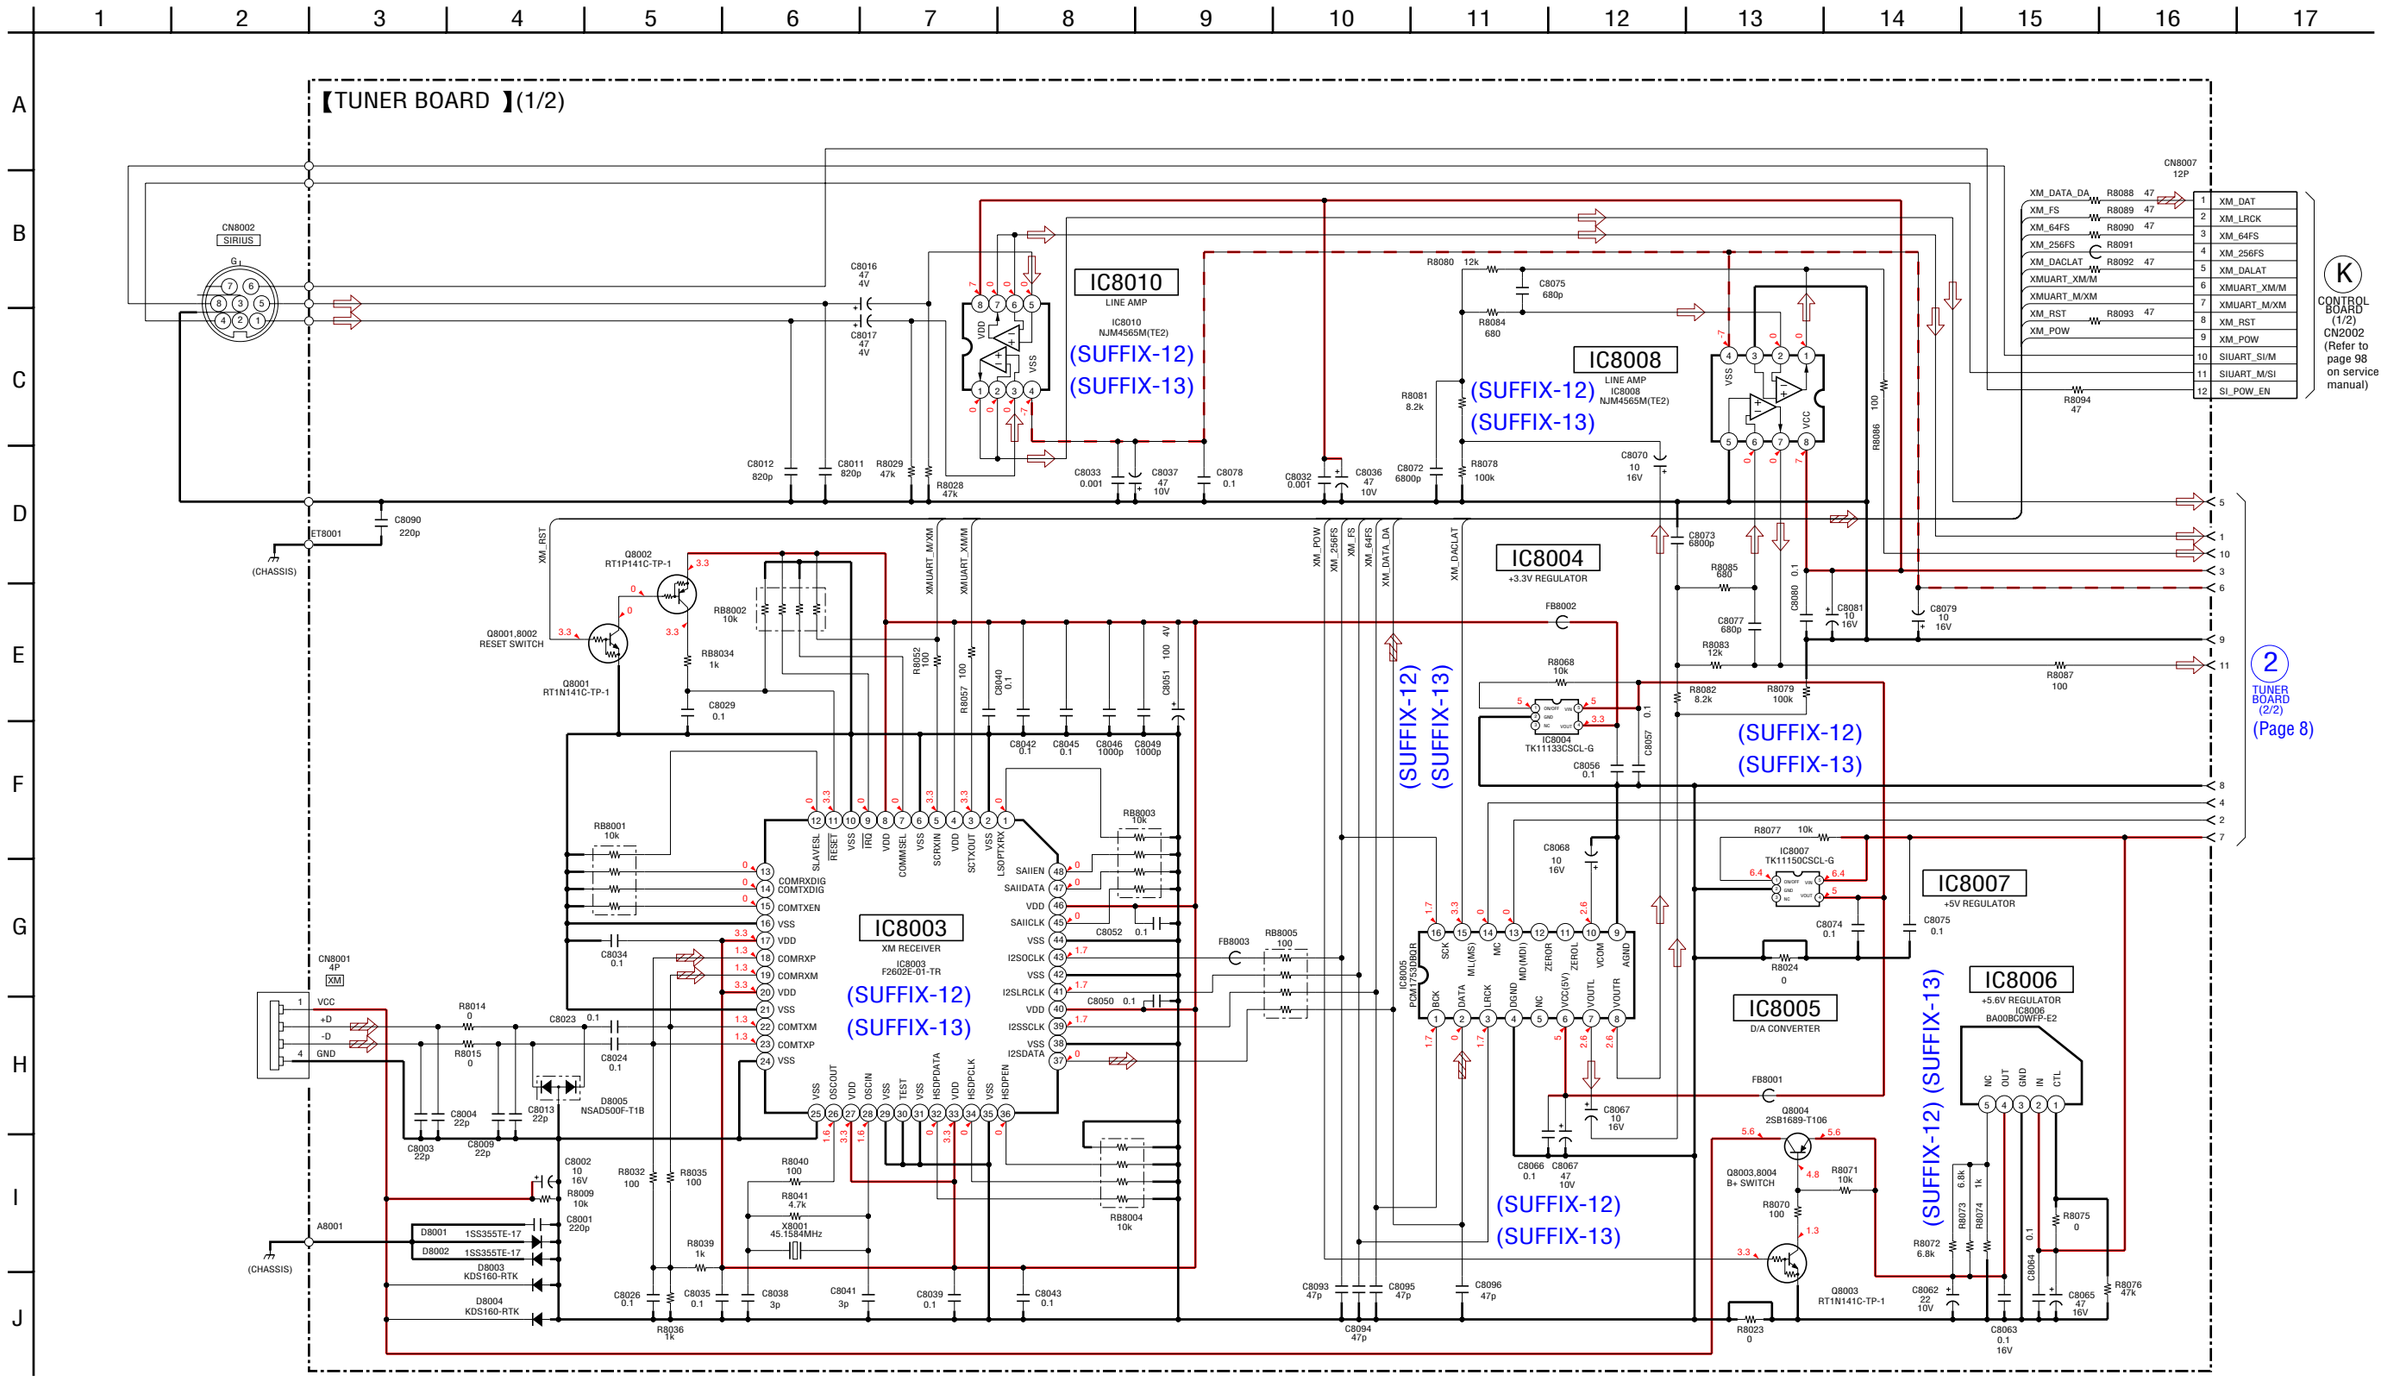
【TUNER BOARD 】(1/2)
IC8010
LINE AMP
IC8010
NJM4565M(TE2)
(SUFFIX-12)
(SUFFIX-13)
IC8008
LINE AMP
IC8008
NJM4565M(TE2)
(SUFFIX-12)
(SUFFIX-13)
IC8004
+3.3V REGULATOR
IC8004
TK11133CSCL-G
(SUFFIX-12)
(SUFFIX-13)
IC8003
XM RECEIVER
IC8003
F2602E-01-TR
(SUFFIX-12)
(SUFFIX-13)
IC8005
D/A CONVERTER
IC8005
PCM1753DBQR
(SUFFIX-12)
(SUFFIX-13)
IC8007
+5V REGULATOR
IC8007
TK11150CSCL-G
IC8006
+5.6V REGULATOR
IC8006
BA00BC0WFP-E2
(SUFFIX-12) (SUFFIX-13)
CN8002
SIRIUS
CN8001
4P
XM
CN8007
12P
K
CONTROL BOARD (1/2)
CN2002
(Refer to page 98 on service manual)
2
TUNER BOARD (2/2)
(Page 8)
ET8001
(CHASSIS)
A8001
(CHASSIS)
Q8002
RT1P141C-TP-1
Q8001,8002
RESET SWITCH
Q8001
RT1N141C-TP-1
Q8004
2SB1689-T106
Q8003.8004
B+ SWITCH
Q8003
RT1N141C-TP-1
D8001 1SS355TE-17
D8002 1SS355TE-17
D8003 KDS160-RTK
D8004 KDS160-RTK
D8005 NSAD500F-T1B
X8001
45.1584MHz
FB8002
FB8003
FB8001
XM_RST
XMUART_M/XM
XMUART_XM/M
XM_POW
XM_256FS
XM_64FS
XM_FS
XM_DATA_DA
XM_DACLAT
XM_DATA_DA
XM_FS
XM_64FS
XM_256FS
XM_DACLAT
XMUART_XM/M
XMUART_M/XM
XM_RST
XM_POW
SIAIEN
SAIIDATA
SAIICLK
I2SOCLK
I2SLRCLK
I2SSCLK
I2SDATA
COMRXDIG
COMTXDIG
COMTXEN
COMRXP
COMRXM
COMTXM
COMTXP
SLAVESEL
RESET
IRQ
COMMSEL
SCRXIN
SCTXOUT
LSQPTXRX
OSCOUT
OSCIN
TEST
HSQPDATA
HSQPCLK
HSQPEN
SCK
MI(MS)
MC
BCK
DATA
LRCK
MD/MDI
ZEROR
ZEROL
VCOM
AGND
DGND
VCC(6V)
VOUTL
VOUTR
NC
VCC
VSS
VDD
GND
CTL
IN
OUT
ON/OFF
VOUT
C8016 47 4V
C8017 47 4V
C8012 820p
C8011 820p
R8029 47k
R8028 47k
C8033 0.001
C8037 47 10V
C8078 0.1
C8032 0.001
C8036 47 10V
C8072 6800p
R8080 12k
C8075 680p
R8084 680
R8081 8.2k
R8078 100k
C8070 10 16V
R8086 100
R8094 47
R8088 47
R8089 47
R8090 47
R8091
R8092 47
R8093 47
C8090 220p
C8073 6800p
R8085 680
C8077 680p
R8083 12k
R8082 8.2k
R8079 100k
C8080 0.1
C8081 10 16V
C8079 10 16V
R8087 100
R8068 10k
C8056 0.1
C8057 0.1
C8068 10 16V
R8077 10k
C8074 0.1
C8075 0.1
R8024 0
C8067 10 16V
C8066 0.1
C8067 47 10V
C8029 0.1
C8042 0.1
C8045 0.1
C8046 1000p
C8049 1000p
C8051 100 4V
C8040 0.1
R8057 100
R8052 100
RB8002 10k
R8034 1k
RB8001 10k
C8034 0.1
RB8003 10k
C8052 0.1
RB8004 10k
C8026 0.1
C8035 0.1
C8038 3p
C8041 3p
C8039 0.1
C8043 0.1
R8036 1k
R8039 1k
C8093 47p
C8094 47p
C8095 47p
C8096 47p
C8062 22 10V
C8063 0.1 16V
C8064
C8065 47 16V
R8076 47k
R8075 0
R8071 10k
R8070 100
R8072 6.8k
R8073 6.8k
R8074 1k
R8023 0
C8023 0.1
C8024 0.1
R8014 0
R8015 0
C8004 22p
C8003 22p
C8013 22p
C8009 22p
C8002 10 16V
R8009 10k
C8001 220p
R8032 100
R8035 100
R8040 100
R8041 4.7k
C8050 0.1
RB8005 100
C8022 0.1
C8021 0.1
C8031 0.1
C8030 0.1
C8044 0.1
C8047 0.1
C8048 0.1
C8053 0.1
C8054 0.1
C8055 0.1
C8058 0.1
C8059 0.1
C8060 0.1
C8061 0.1
C8027 0.1
C8028 0.1
C8032 0.1
C8033 0.1
C8037 0.1
C8078 0.1
C8080 0.1
C8081 0.1
C8056 0.1
C8057 0.1
C8074 0.1
C8075 0.1
C8064 0.1
C8063 0.1 16V
C8065 47 16V
C8066 0.1
C8067 47 10V
C8068 10 16V
C8070 10 16V
C8073 6800p
C8077 680p
C8079 10 16V
C8081 10 16V
C8085 680
C8087 100
C8093 47p
C8094 47p
C8095 47p
C8096 47p
C8062 22 10V
C8063 0.1 16V
C8065 47 16V
C8076 47k
C8075 0.1
C8074 0.1
C8064 0.1
C8067 10

2-6. SCHEMATIC DIAGRAM – TUNER Board (2/2) –

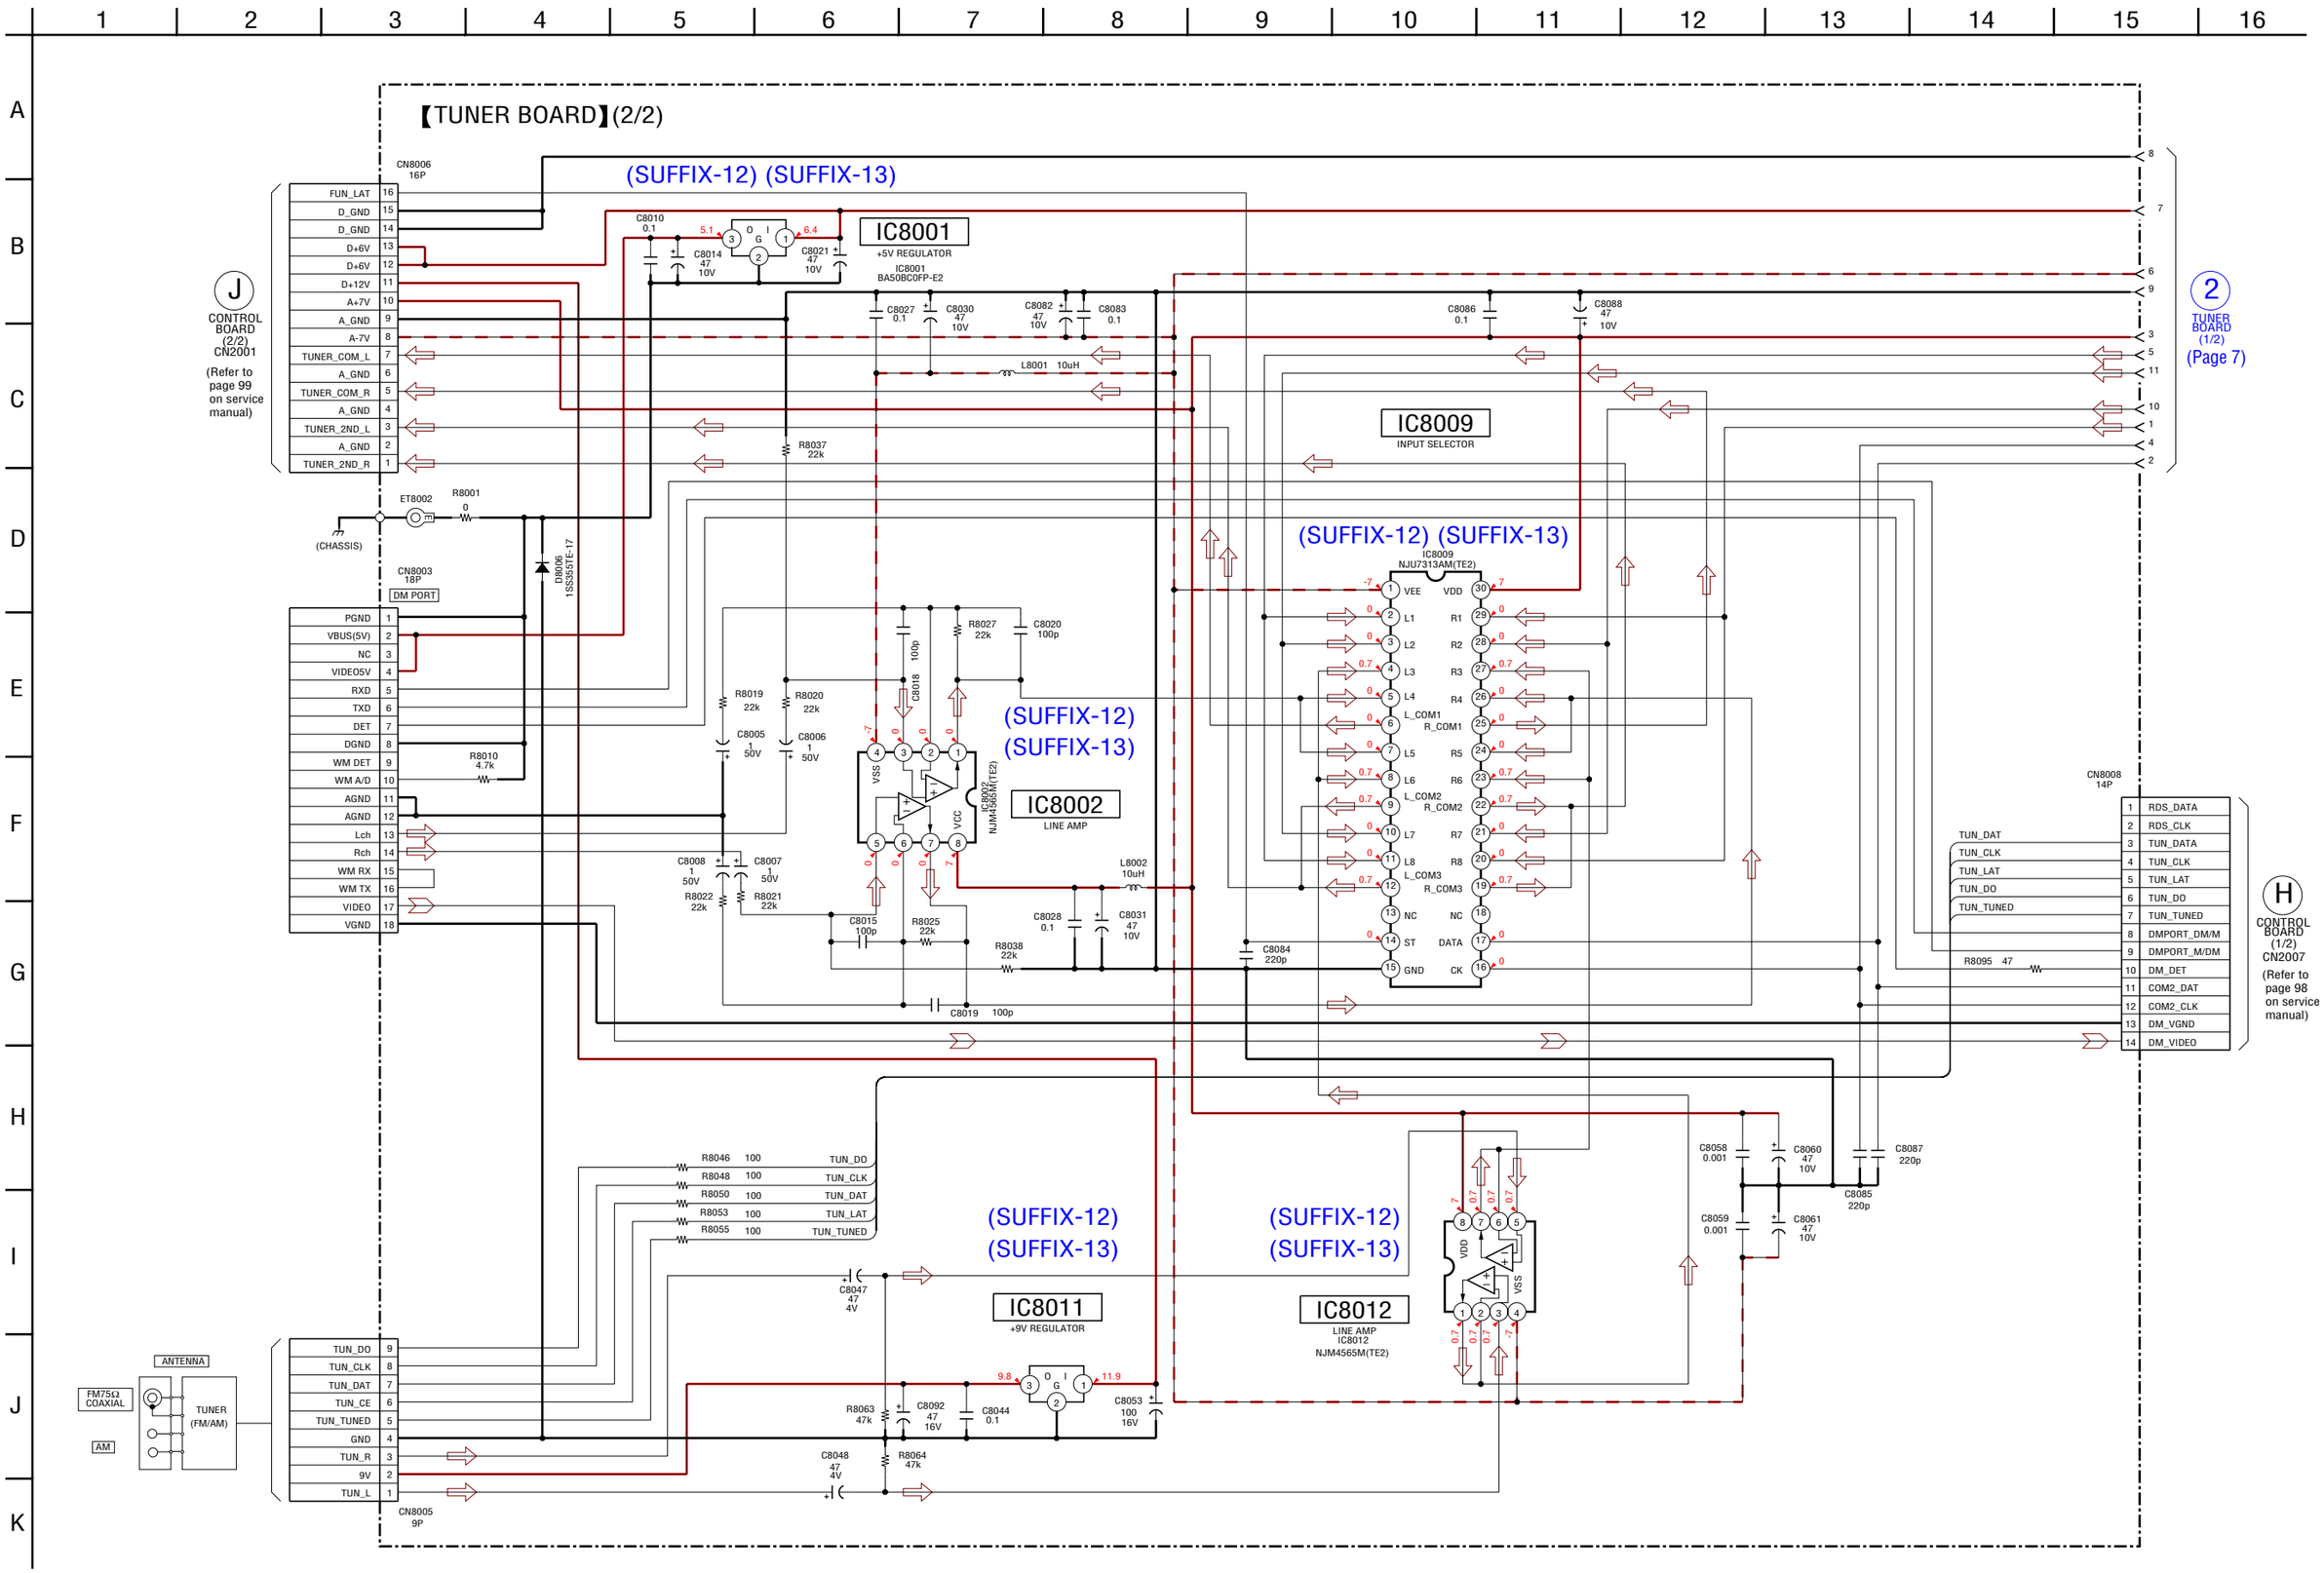

2-7. PRINTED WIRING BOARD – DSP Board (Side A) – : Uses unleaded solder.

【DSP BOARD】(SIDE A)

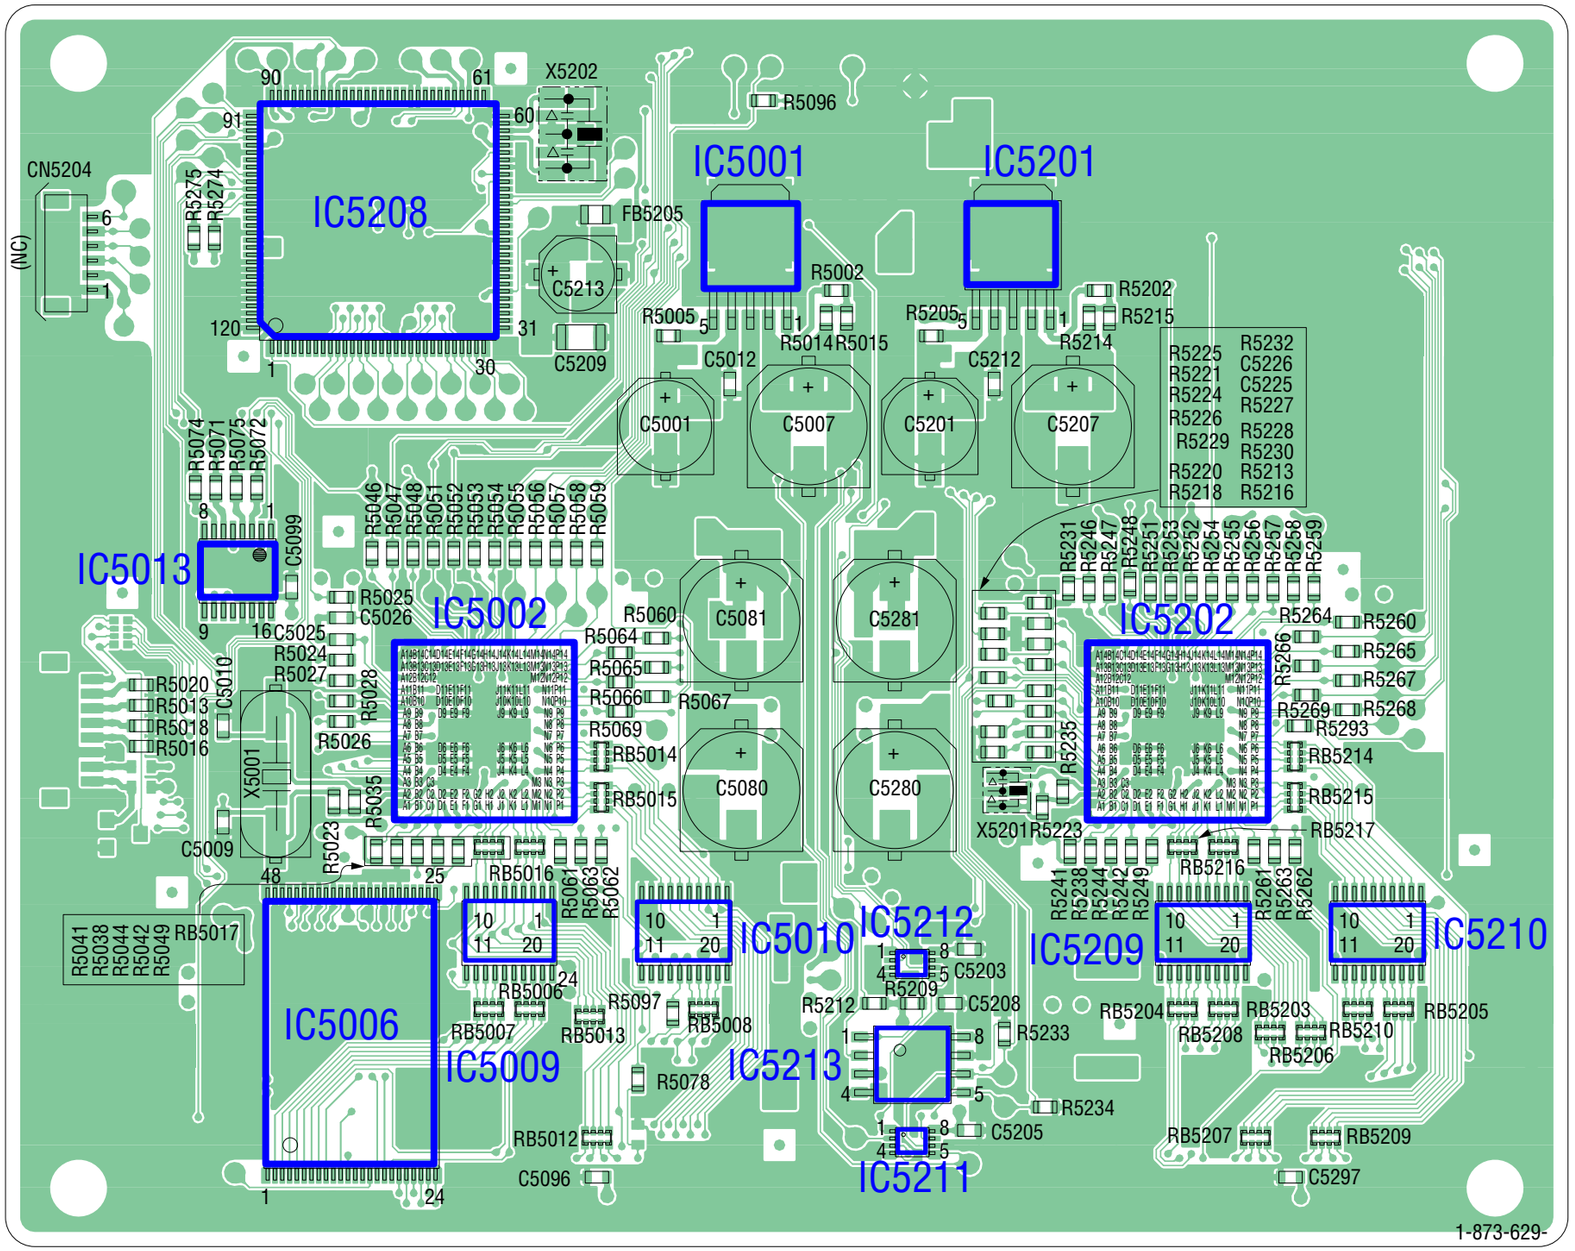

	1	2	3	4	5
A					
B					
C					
D					

1-873-629-

11
(12)

- **Semiconductor Location**

Ref. No.	Location
IC5001	B-3
IC5002	C-2
IC5006	D-2
IC5009	D-2
IC5010	D-3
IC5013	C-1
IC5201	B-4
IC5202	C-4
IC5208	B-2
IC5209	D-4
IC5210	D-5
IC5211	D-3
IC5212	D-3
IC5213	D-3

Note: IC5002 and IC5202 cannot exchange with single. When IC5002 and IC5202 are damaged, exchange the entire mounted board.

2-8. PRINTED WIRING BOARD – DSP Board (Side B) – : Uses unleaded solder.

- **Semiconductor Location**

Ref. No.	Location
D5001	B-3
IC5007	D-4
IC5012	D-3
IC5207	D-2

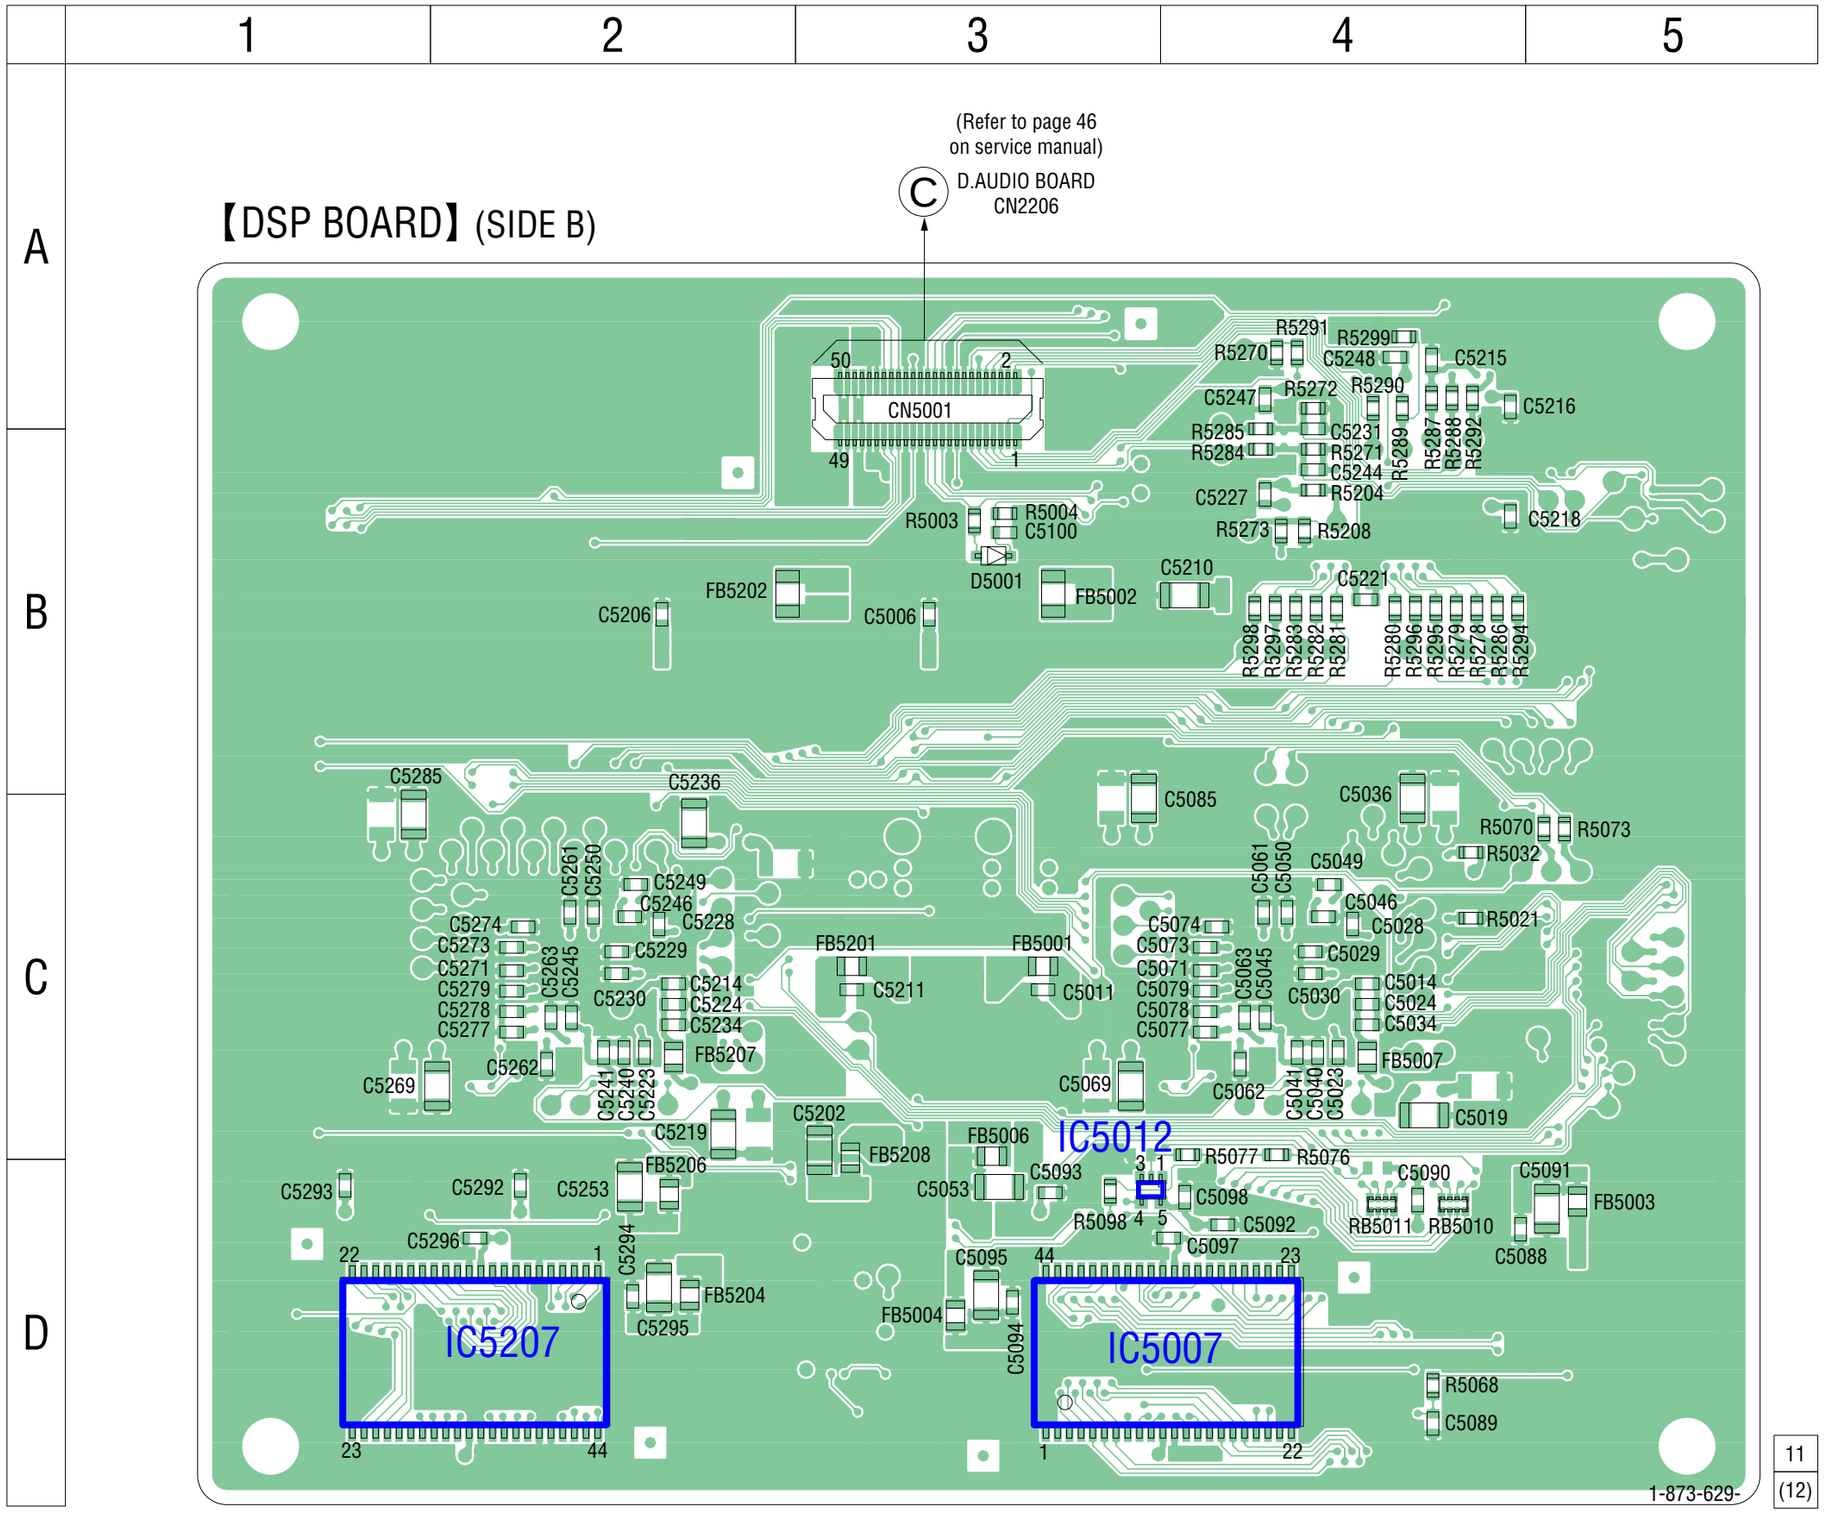

2-9. SCHEMATIC DIAGRAM – DSP Board (1/4) –

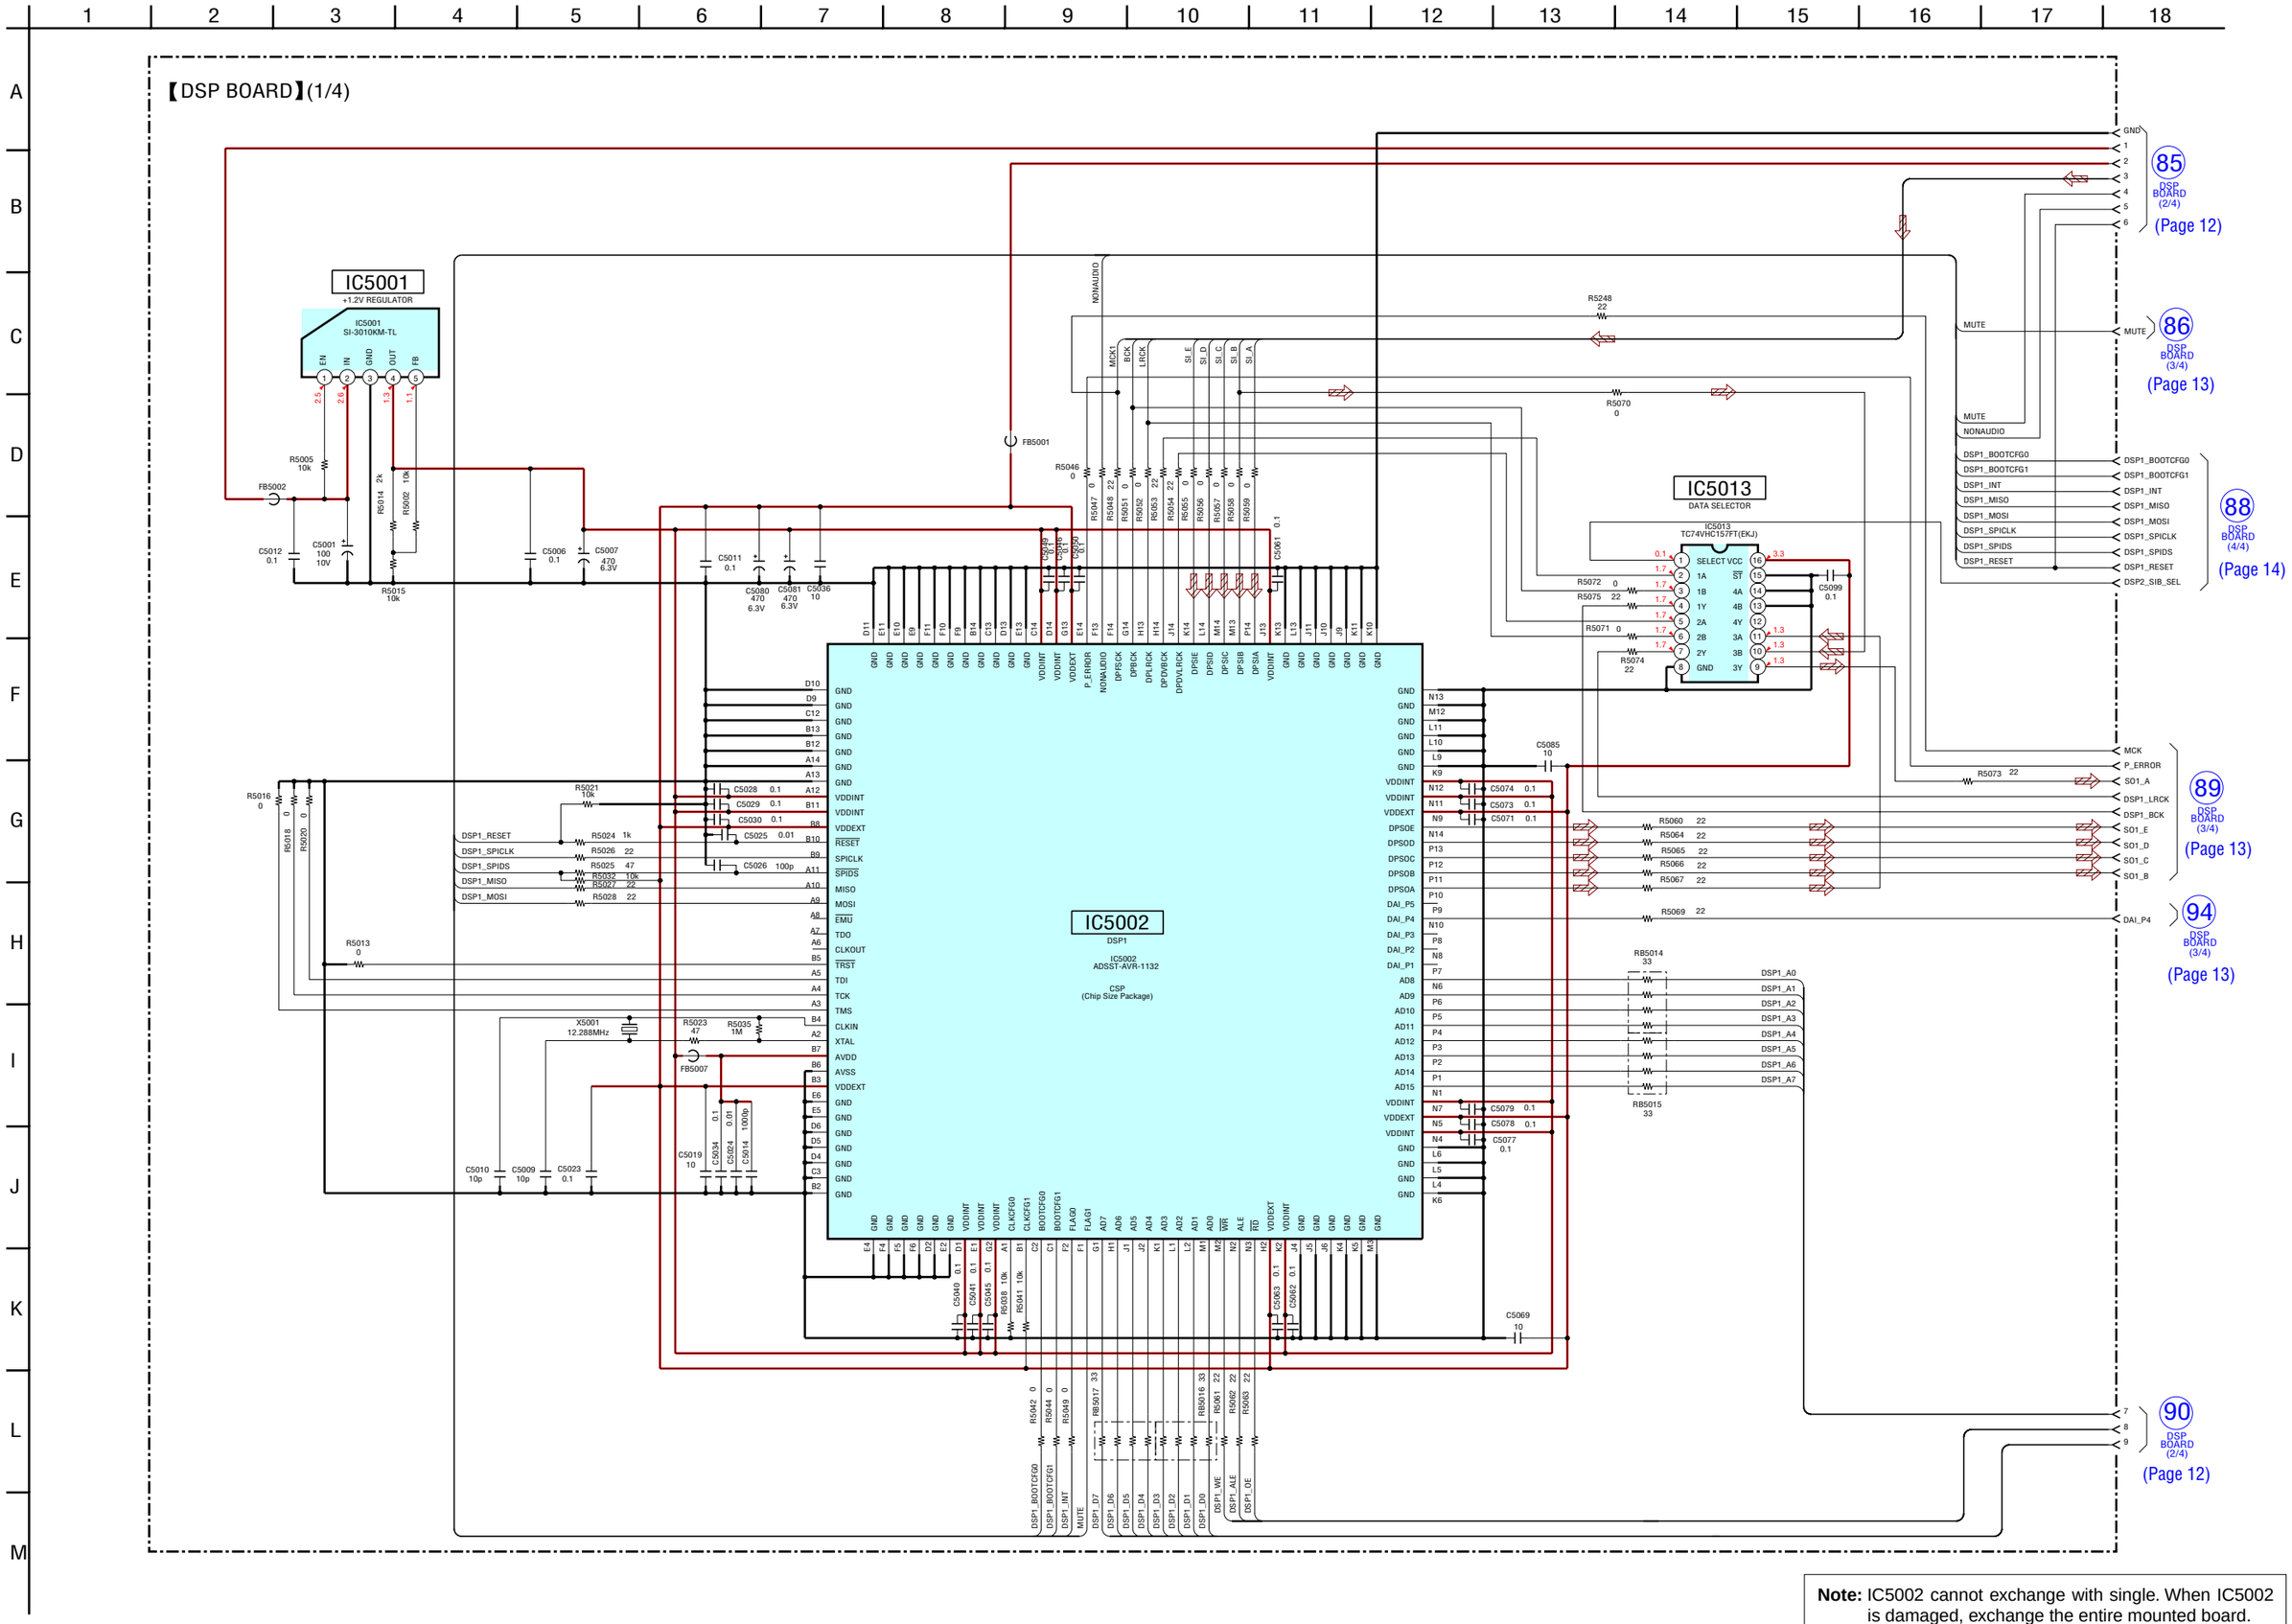

Note: IC5002 cannot exchange with single. When IC5002 is damaged, exchange the entire mounted board.

2-10. SCHEMATIC DIAGRAM – DSP Board (2/4) –

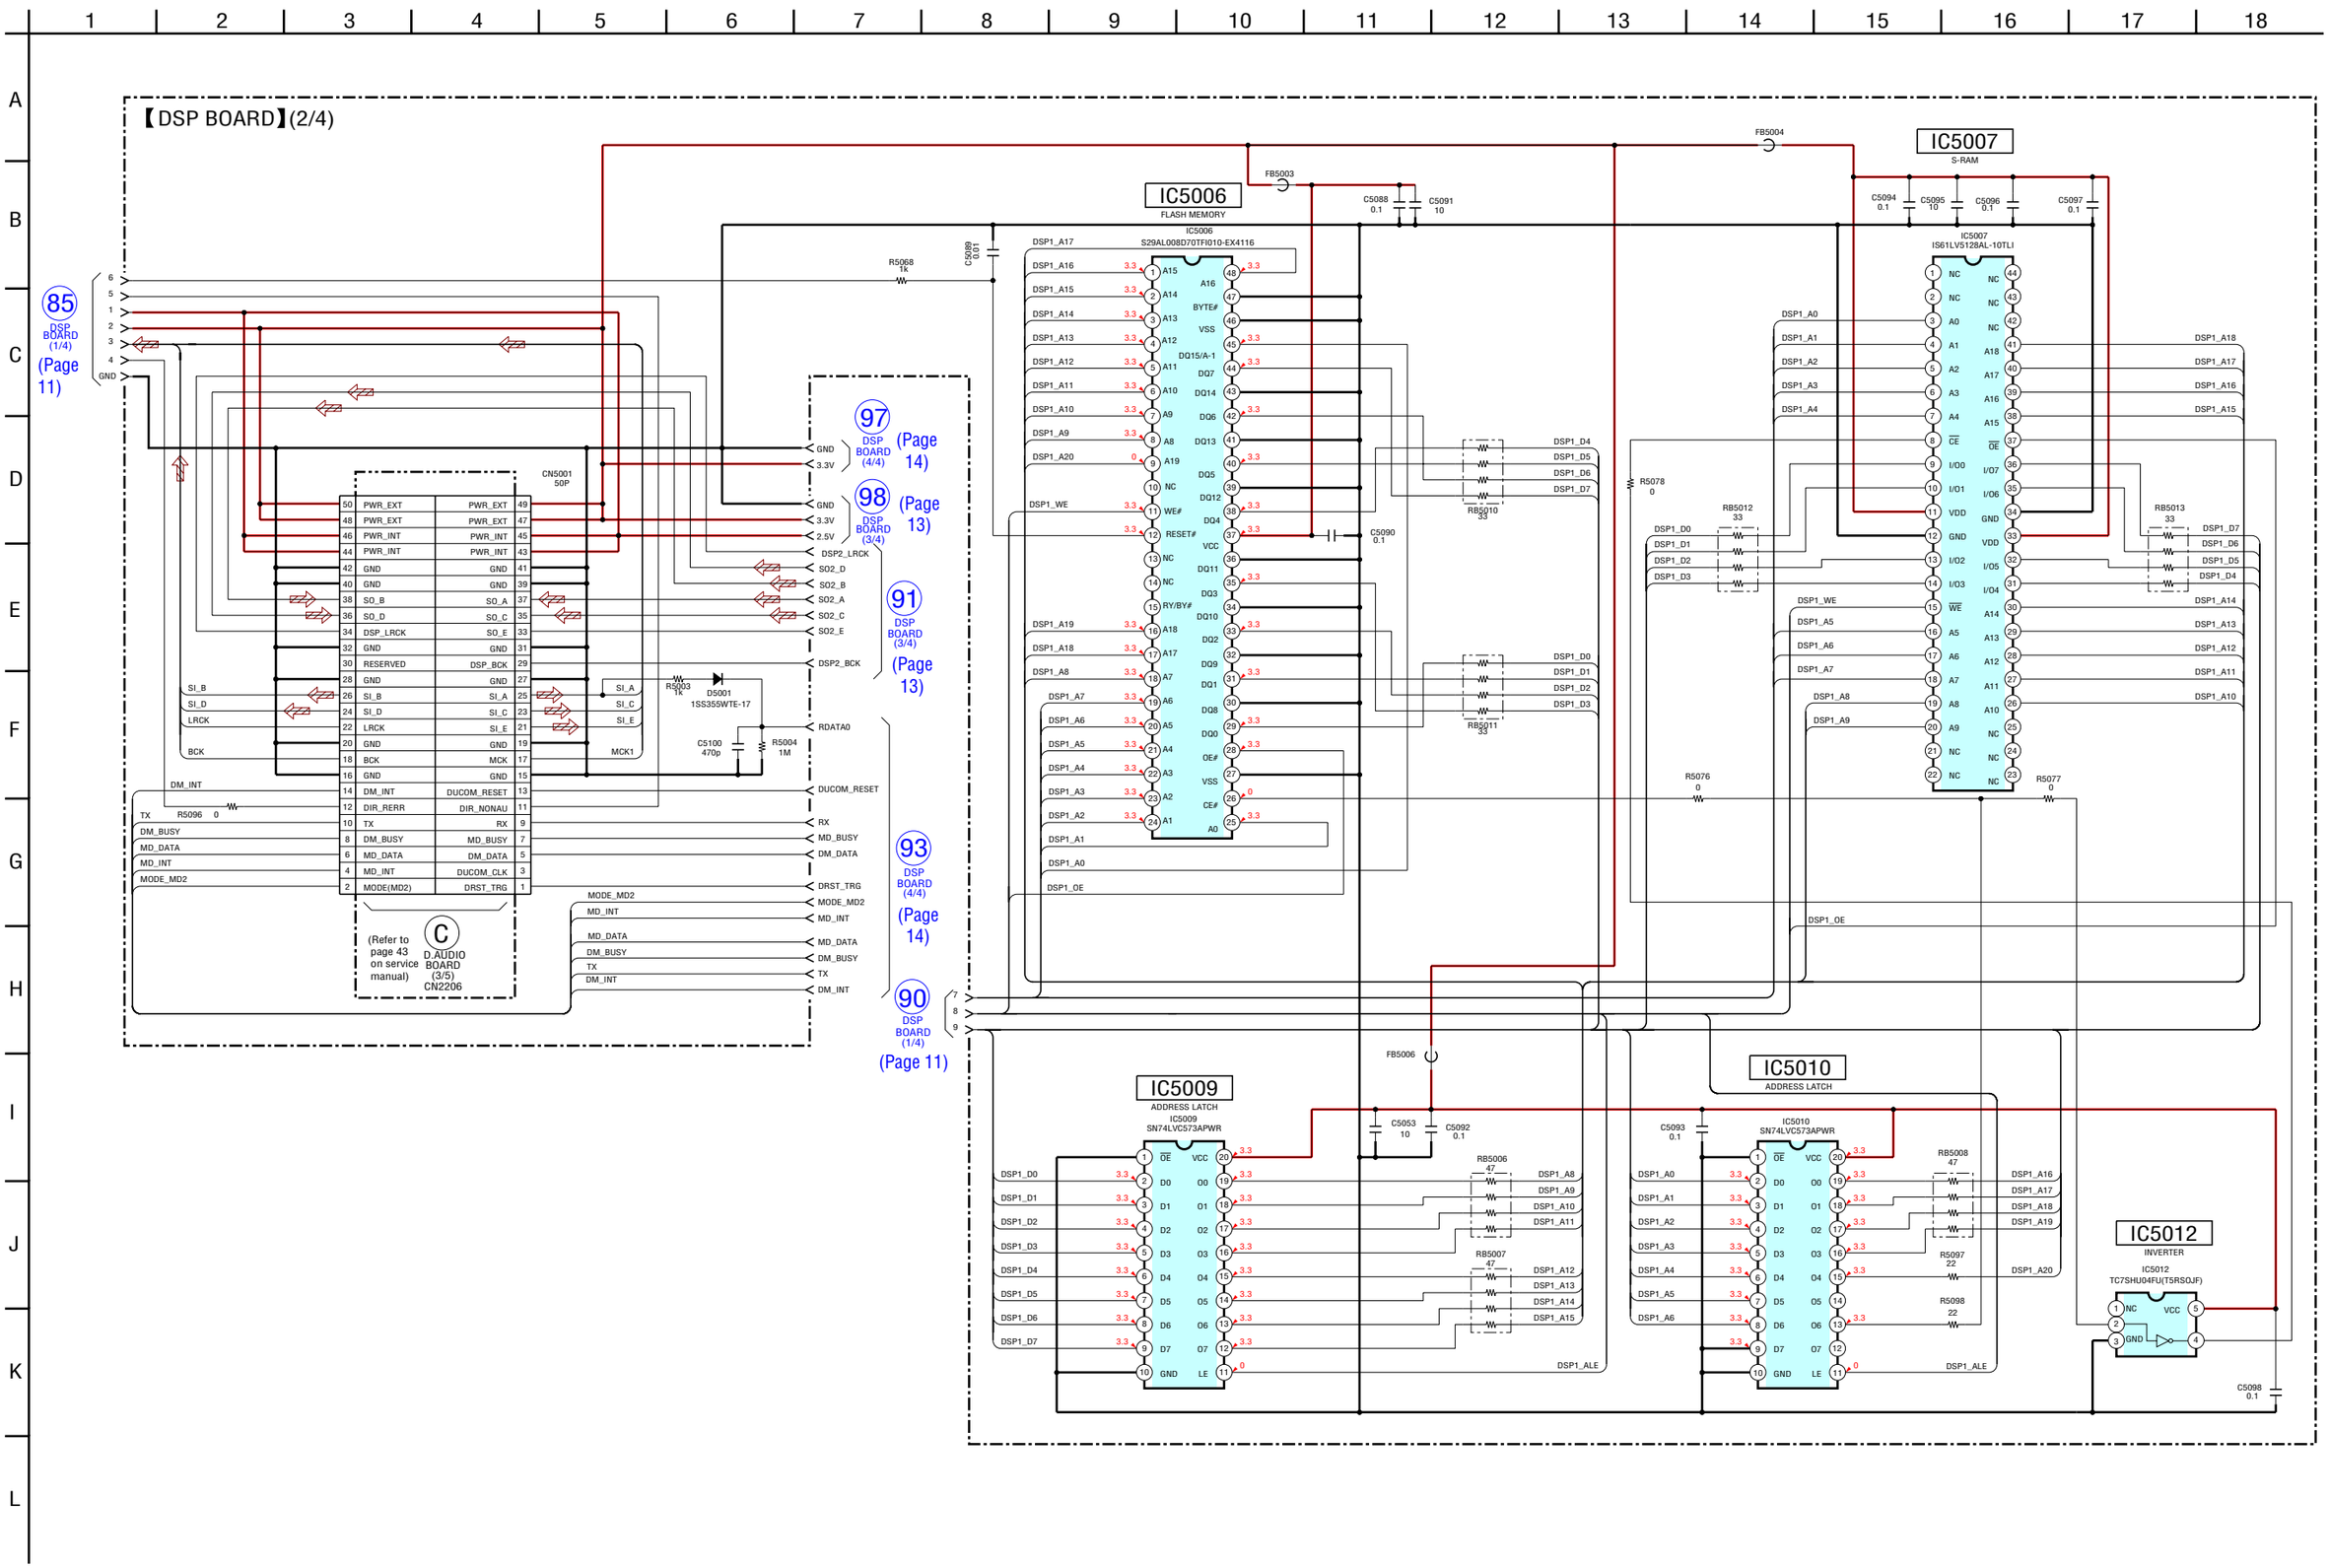

2-11. SCHEMATIC DIAGRAM – DSP Board (3/4) –

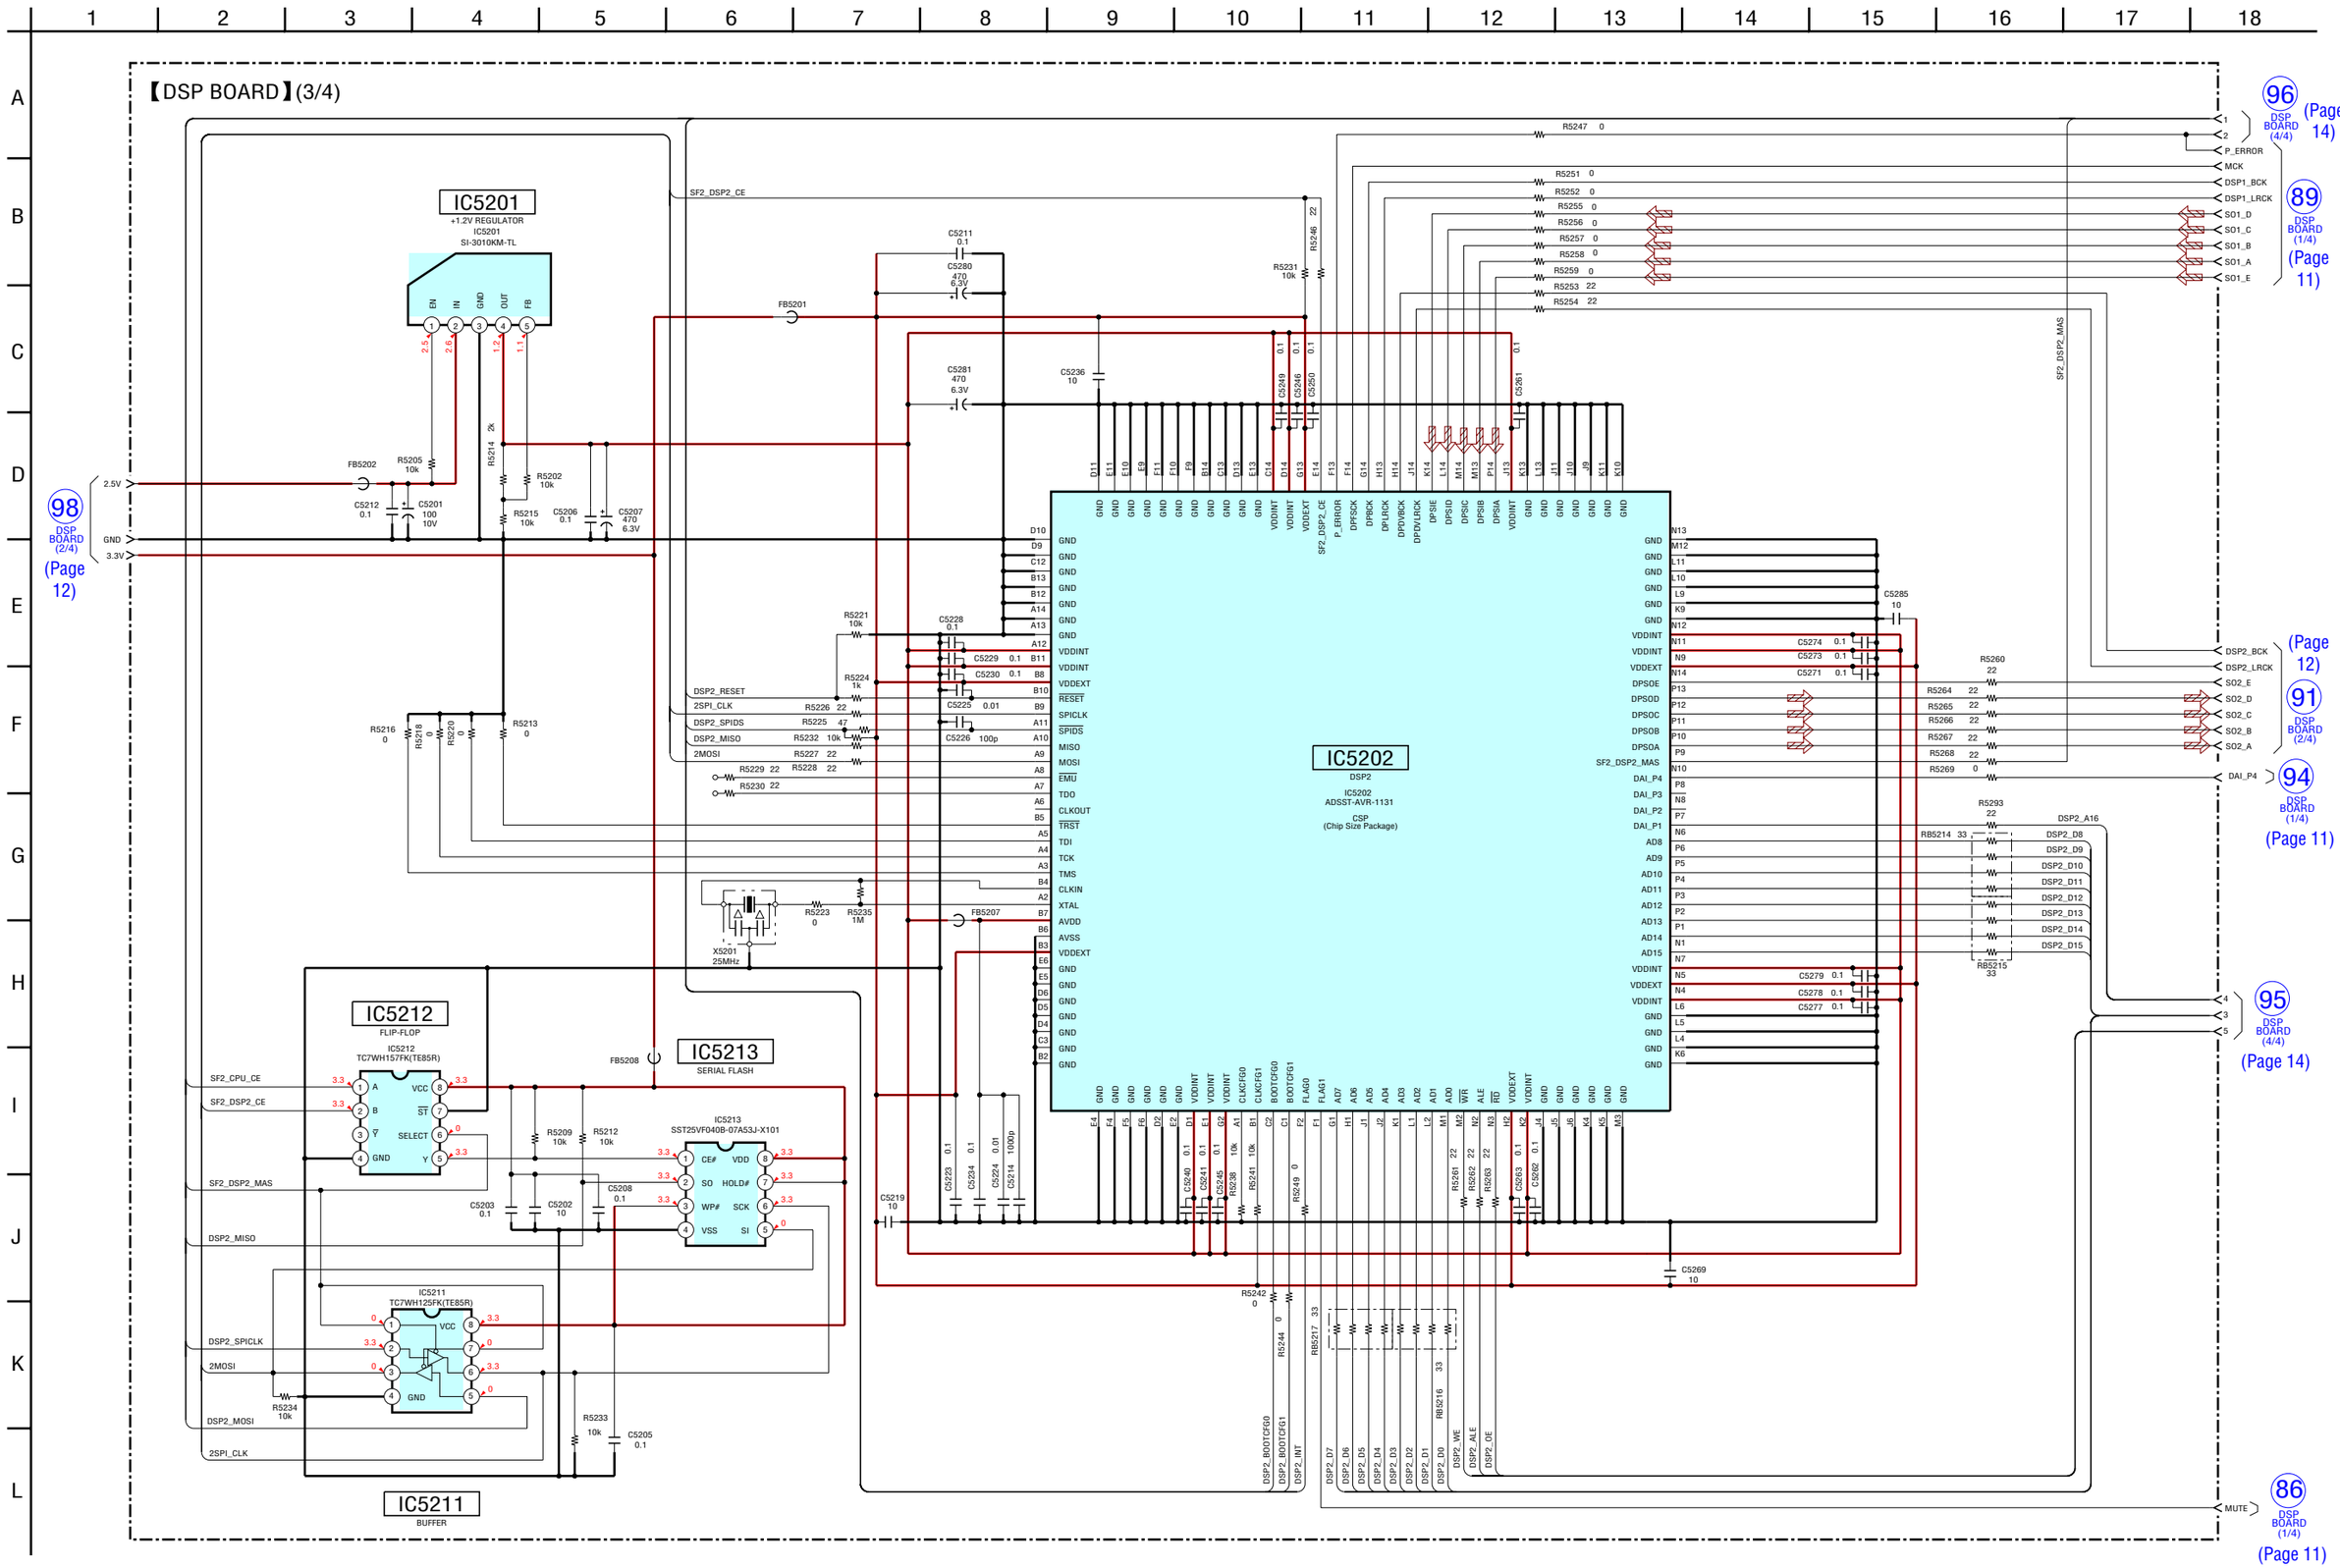

Note: IC5202 cannot exchange with single. When IC5202 is damaged, exchange the entire mounted board.

2-12. SCHEMATIC DIAGRAM – DSP Board (4/4) –

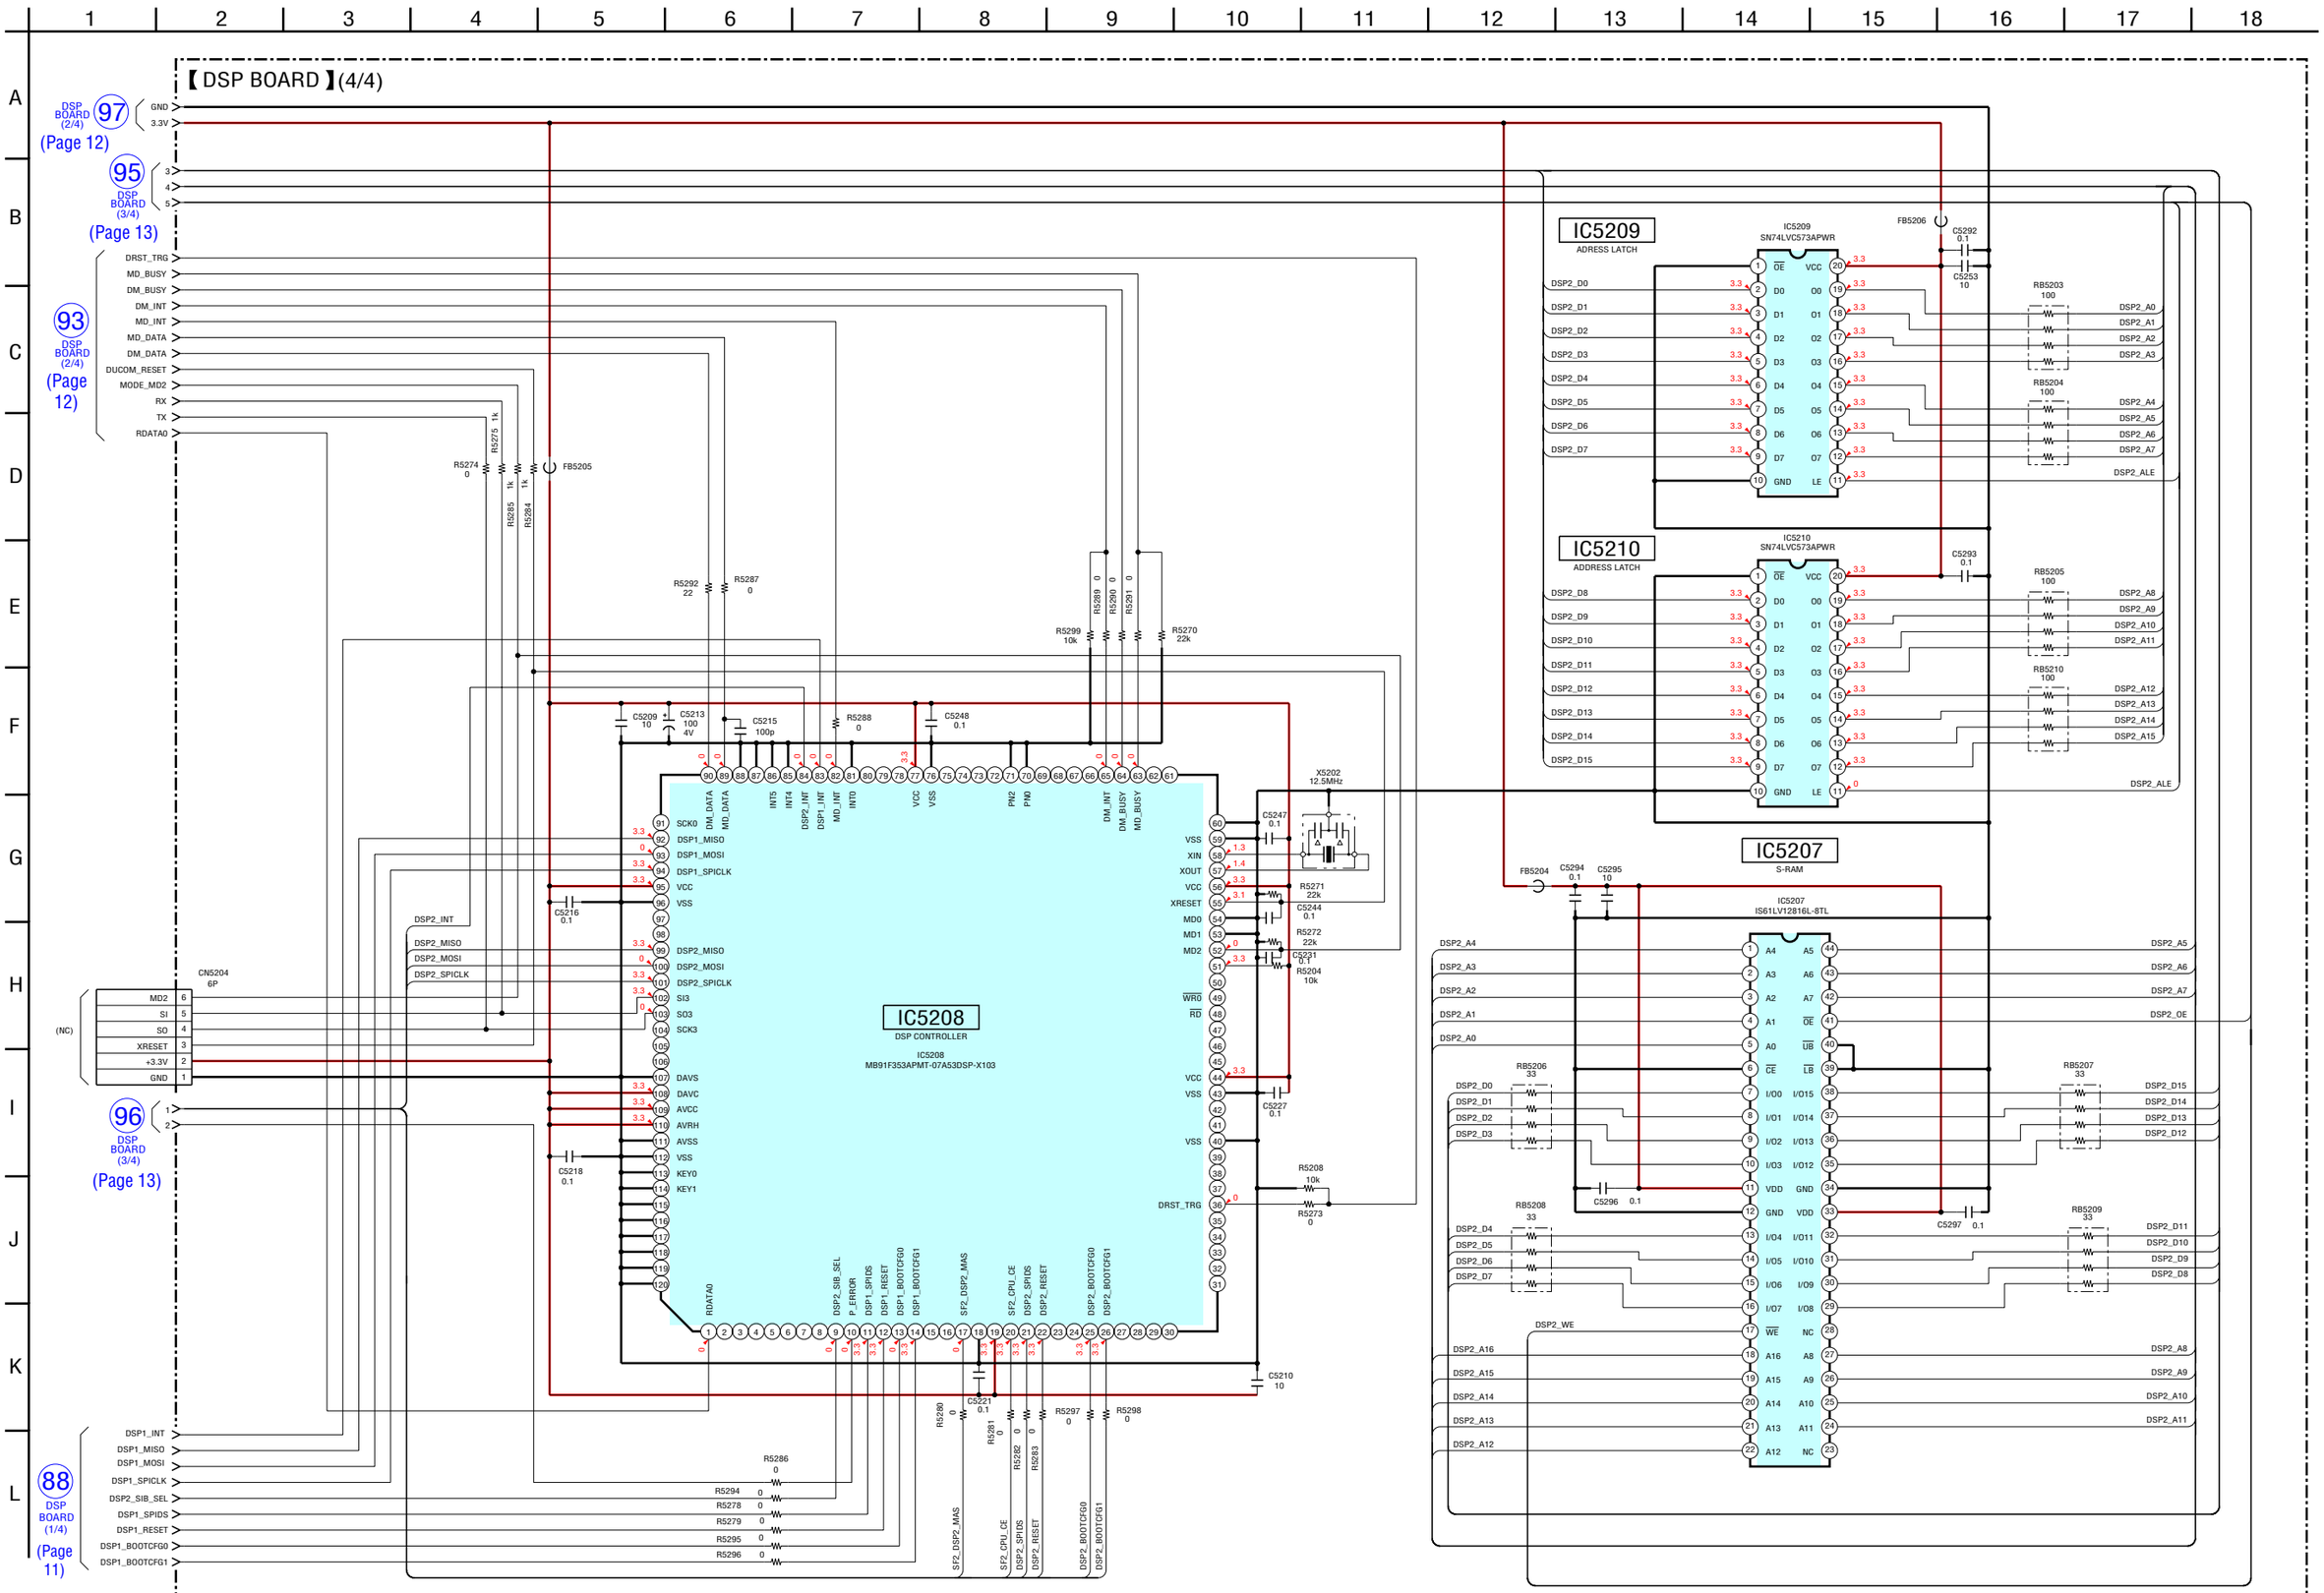

DSP

3. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS
  uF: µF
- COILS
  uH: µH
- RESISTORS
  All resistors are in ohms.
  METAL: Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F: nonflammable
- SEMICONDUCTORS
  In each case, u: µ, for example:
  uA... : µA... uPA... : µPA...
  uPB... : µPB... uPC... : µPC...
  uPD... : µPD...

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description			Remark
	A-1439-542-A	DSP BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C5001	1-100-669-11	ELECT CHIP	100uF	20%	10V
C5006	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5007	1-114-385-11	ELECT CHIP	470uF	20%	6.3V
C5009	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C5010	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C5011	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5012	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5014	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C5019	1-117-370-11	CERAMIC CHIP	10uF		10V
C5023	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5024	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5025	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5026	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C5028	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5029	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5030	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5034	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5036	1-117-370-11	CERAMIC CHIP	10uF		10V
C5040	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5041	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5045	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5046	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5049	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5050	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5053	1-117-370-11	CERAMIC CHIP	10uF		10V
C5061	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5062	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5063	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5069	1-117-370-11	CERAMIC CHIP	10uF		10V
C5071	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5073	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5074	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5077	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5078	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5079	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5080	1-114-385-11	ELECT CHIP	470uF	20%	6.3V
C5081	1-114-385-11	ELECT CHIP	470uF	20%	6.3V
C5085	1-117-370-11	CERAMIC CHIP	10uF		10V
C5088	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5089	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5090	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5091	1-117-370-11	CERAMIC CHIP	10uF		10V
C5092	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5093	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5094	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5095	1-117-370-11	CERAMIC CHIP	10uF		10V
C5096	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5097	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5098	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5099	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5100	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C5201	1-100-669-11	ELECT CHIP	100uF	20%	10V
C5202	1-117-370-11	CERAMIC CHIP	10uF		10V
C5203	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5205	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5206	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5207	1-114-385-11	ELECT CHIP	470uF	20%	6.3V
C5208	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5209	1-117-370-11	CERAMIC CHIP	10uF		10V
C5210	1-117-370-11	CERAMIC CHIP	10uF		10V
C5211	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5212	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5213	1-126-209-11	ELECT CHIP	100uF	20%	4V
C5214	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C5215	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C5216	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5218	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5219	1-117-370-11	CERAMIC CHIP	10uF		10V
C5221	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5223	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5224	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5225	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5226	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C5227	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5228	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5229	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5230	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5231	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5234	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5236	1-117-370-11	CERAMIC CHIP	10uF		10V
C5240	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V

DSP

Ref. No.	Part No.	Description			Remark
C5241	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5244	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5245	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5246	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5247	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5248	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5249	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5250	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5253	1-117-370-11	CERAMIC CHIP	10uF		10V
C5261	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5262	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5263	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5269	1-117-370-11	CERAMIC CHIP	10uF		10V
C5271	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5273	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5274	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5277	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5278	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5279	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5280	1-114-385-11	ELECT CHIP	470uF	20%	6.3V
C5281	1-114-385-11	ELECT CHIP	470uF	20%	6.3V
C5285	1-117-370-11	CERAMIC CHIP	10uF		10V
C5292	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5293	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5294	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5295	1-117-370-11	CERAMIC CHIP	10uF		10V
C5296	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5297	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
		< CONNECTOR >			
CN5001	1-815-136-21	CONNECTOR, BOARD TO BOARD			
* CN5204	1-785-125-21	CONNECTOR 6P			
		< DIODE >			
D5001	6-501-193-01	DIODE 1SS355WTE-17			
		< FERRITE BEAD >			
FB5001	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5002	1-400-703-21	(3216, EMI FERRITE (SMD)			
FB5003	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5004	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5006	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5007	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5201	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5202	1-400-703-21	(3216, EMI FERRITE (SMD)			
FB5204	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5205	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5206	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5207	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB5208	1-469-152-11	FERRITE, EMI (SMD) (2012)			
		< IC >			
IC5001	6-705-308-01	IC SI-3010KM-TL			
IC5002	(Not supplied)	IC ADSST-AVR-1132			
IC5006	6-807-374-04	IC S29AL008D70TFI010-EX4116			
IC5007	6-710-529-01	IC IS61LV5128AL-10TLI			
IC5009	6-701-992-01	IC SN74LVC573APWR			

Ref. No.	Part No.	Description			Remark
IC5010	6-701-992-01	IC SN74LVC573APWR			
IC5012	6-706-492-01	IC TC7SHU04FU (T5RSOJF)			
IC5013	6-707-870-01	IC TC74VHC157FT (EKJ)			
IC5201	6-705-308-01	IC SI-3010KM-TL			
IC5202	(Not supplied)	IC ADSST-AVR-1131			
IC5207	6-710-003-01	IC IS61LV12816L-8TL			
IC5208	6-807-422-01	IC MB91F353APMT-07A53DSP-X103			
IC5209	6-701-992-01	IC SN74LVC573APWR			
IC5210	6-701-992-01	IC SN74LVC573APWR			
IC5211	8-759-831-52	IC TC7WH125FK (TE85R)			
IC5212	8-759-680-48	IC TC7WH157FK (TE85R)			
IC5213	6-807-854-01	IC SST25VF040B-07A53J-X101			
		< RESISTOR >			
R5002	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5003	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5004	1-216-857-11	METAL CHIP	1M	5%	1/10W
R5005	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5013	1-216-864-11	SHORT CHIP	0		
R5014	1-218-854-11	METAL CHIP	2K	0.5%	1/10W
R5015	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R5016	1-216-864-11	SHORT CHIP	0		
R5018	1-216-864-11	SHORT CHIP	0		
R5020	1-216-864-11	SHORT CHIP	0		
R5021	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5023	1-216-805-11	METAL CHIP	47	5%	1/10W
R5024	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5025	1-216-805-11	METAL CHIP	47	5%	1/10W
R5026	1-216-801-11	METAL CHIP	22	5%	1/10W
R5027	1-216-801-11	METAL CHIP	22	5%	1/10W
R5028	1-216-801-11	METAL CHIP	22	5%	1/10W
R5032	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5035	1-216-857-11	METAL CHIP	1M	5%	1/10W
R5038	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5041	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5042	1-216-864-11	SHORT CHIP	0		
R5044	1-216-864-11	SHORT CHIP	0		
R5046	1-216-864-11	SHORT CHIP	0		
R5047	1-216-864-11	SHORT CHIP	0		
R5048	1-216-801-11	METAL CHIP	22	5%	1/10W
R5049	1-216-864-11	SHORT CHIP	0		
R5051	1-216-864-11	SHORT CHIP	0		
R5052	1-216-864-11	SHORT CHIP	0		
R5053	1-216-801-11	METAL CHIP	22	5%	1/10W
R5054	1-216-801-11	METAL CHIP	22	5%	1/10W
R5055	1-216-864-11	SHORT CHIP	0		
R5056	1-216-864-11	SHORT CHIP	0		
R5057	1-216-864-11	SHORT CHIP	0		
R5058	1-216-864-11	SHORT CHIP	0		
R5059	1-216-864-11	SHORT CHIP	0		
R5060	1-216-801-11	METAL CHIP	22	5%	1/10W
R5061	1-216-801-11	METAL CHIP	22	5%	1/10W
R5062	1-216-801-11	METAL CHIP	22	5%	1/10W
R5063	1-216-801-11	METAL CHIP	22	5%	1/10W
R5064	1-216-801-11	METAL CHIP	22	5%	1/10W
R5065	1-216-801-11	METAL CHIP	22	5%	1/10W
R5066	1-216-801-11	METAL CHIP	22	5%	1/10W
R5067	1-216-801-11	METAL CHIP	22	5%	1/10W

Note: IC5002 and IC5202 cannot exchange with single. When IC5002 and IC5202 are damaged, exchange the entire mounted board.

Ref. No.	Part No.	Description			Remark
R5068	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5069	1-216-801-11	METAL CHIP	22	5%	1/10W
R5070	1-216-864-11	SHORT CHIP	0		
R5071	1-216-864-11	SHORT CHIP	0		
R5072	1-216-864-11	SHORT CHIP	0		
R5073	1-216-801-11	METAL CHIP	22	5%	1/10W
R5074	1-216-801-11	METAL CHIP	22	5%	1/10W
R5075	1-216-801-11	METAL CHIP	22	5%	1/10W
R5076	1-216-864-11	SHORT CHIP	0		
R5077	1-216-864-11	SHORT CHIP	0		
R5078	1-216-864-11	SHORT CHIP	0		
R5096	1-216-864-11	SHORT CHIP	0		
R5097	1-216-801-11	METAL CHIP	22	5%	1/10W
R5098	1-216-801-11	METAL CHIP	22	5%	1/10W
R5202	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5204	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5205	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5208	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5209	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5212	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5213	1-216-864-11	SHORT CHIP	0		
R5214	1-218-854-11	METAL CHIP	2K	0.5%	1/10W
R5215	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R5216	1-216-864-11	SHORT CHIP	0		
R5218	1-216-864-11	SHORT CHIP	0		
R5220	1-216-864-11	SHORT CHIP	0		
R5221	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5223	1-216-864-11	SHORT CHIP	0		
R5224	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5225	1-216-805-11	METAL CHIP	47	5%	1/10W
R5226	1-216-801-11	METAL CHIP	22	5%	1/10W
R5227	1-216-801-11	METAL CHIP	22	5%	1/10W
R5228	1-216-801-11	METAL CHIP	22	5%	1/10W
R5229	1-216-801-11	METAL CHIP	22	5%	1/10W
R5230	1-216-801-11	METAL CHIP	22	5%	1/10W
R5231	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5232	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5233	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5234	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5235	1-216-857-11	METAL CHIP	1M	5%	1/10W
R5238	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5241	1-216-833-11	METAL CHIP	10K	5%	1/10W
R5242	1-216-864-11	SHORT CHIP	0		
R5244	1-216-864-11	SHORT CHIP	0		
R5246	1-216-801-11	METAL CHIP	22	5%	1/10W
R5247	1-216-864-11	SHORT CHIP	0		
R5248	1-216-801-11	METAL CHIP	22	5%	1/10W
R5249	1-216-864-11	SHORT CHIP	0		
R5251	1-216-864-11	SHORT CHIP	0		
R5252	1-216-864-11	SHORT CHIP	0		
R5253	1-216-801-11	METAL CHIP	22	5%	1/10W
R5254	1-216-801-11	METAL CHIP	22	5%	1/10W
R5255	1-216-864-11	SHORT CHIP	0		
R5256	1-216-864-11	SHORT CHIP	0		
R5257	1-216-864-11	SHORT CHIP	0		
R5258	1-216-864-11	SHORT CHIP	0		
R5259	1-216-864-11	SHORT CHIP	0		
R5260	1-216-801-11	METAL CHIP	22	5%	1/10W
R5261	1-216-801-11	METAL CHIP	22	5%	1/10W
R5262	1-216-801-11	METAL CHIP	22	5%	1/10W
R5263	1-216-801-11	METAL CHIP	22	5%	1/10W
R5264	1-216-801-11	METAL CHIP	22	5%	1/10W
R5265	1-216-801-11	METAL CHIP	22	5%	1/10W
R5266	1-216-801-11	METAL CHIP	22	5%	1/10W
R5267	1-216-801-11	METAL CHIP	22	5%	1/10W
R5268	1-216-801-11	METAL CHIP	22	5%	1/10W
R5269	1-216-864-11	SHORT CHIP	0		
R5270	1-216-837-11	METAL CHIP	22K	5%	1/10W
R5271	1-216-837-11	METAL CHIP	22K	5%	1/10W
R5272	1-216-837-11	METAL CHIP	22K	5%	1/10W
R5273	1-216-864-11	SHORT CHIP	0		
R5274	1-216-864-11	SHORT CHIP	0		
R5275	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5278	1-216-864-11	SHORT CHIP	0		
R5279	1-216-864-11	SHORT CHIP	0		
R5280	1-216-864-11	SHORT CHIP	0		
R5281	1-216-864-11	SHORT CHIP	0		
R5282	1-216-864-11	SHORT CHIP	0		
R5283	1-216-864-11	SHORT CHIP	0		
R5284	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5285	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5286	1-216-864-11	SHORT CHIP	0		
R5287	1-216-864-11	SHORT CHIP	0		
R5288	1-216-864-11	SHORT CHIP	0		
R5289	1-216-864-11	SHORT CHIP	0		
R5290	1-216-864-11	SHORT CHIP	0		
R5291	1-216-864-11	SHORT CHIP	0		
R5292	1-216-801-11	METAL CHIP	22	5%	1/10W
R5293	1-216-801-11	METAL CHIP	22	5%	1/10W
R5294	1-216-864-11	SHORT CHIP	0		
R5295	1-216-864-11	SHORT CHIP	0		
R5296	1-216-864-11	SHORT CHIP	0		
R5297	1-216-864-11	SHORT CHIP	0		
R5298	1-216-864-11	SHORT CHIP	0		
R5299	1-216-833-11	METAL CHIP	10K	5%	1/10W

< COMPOSITION CIRCUIT BLOCK >

RB5006	1-234-371-21	RES, NETWORK	47 (1005X4)
RB5007	1-234-371-21	RES, NETWORK	47 (1005X4)
RB5008	1-234-371-21	RES, NETWORK	47 (1005X4)
RB5010	1-242-963-21	RES, NETWORK	33 (1005X4)
RB5011	1-242-963-21	RES, NETWORK	33 (1005X4)
RB5012	1-242-963-21	RES, NETWORK	33 (1005X4)
RB5013	1-242-963-21	RES, NETWORK	33 (1005X4)
RB5014	1-242-963-21	RES, NETWORK	33 (1005X4)
RB5015	1-242-963-21	RES, NETWORK	33 (1005X4)
RB5016	1-242-963-21	RES, NETWORK	33 (1005X4)
RB5017	1-242-963-21	RES, NETWORK	33 (1005X4)
RB5203	1-234-372-11	RES, NETWORK	100 (1005X4)
RB5204	1-234-372-11	RES, NETWORK	100 (1005X4)
RB5205	1-234-372-11	RES, NETWORK	100 (1005X4)
RB5206	1-242-963-21	RES, NETWORK	33 (1005X4)
RB5207	1-242-963-21	RES, NETWORK	33 (1005X4)
RB5208	1-242-963-21	RES, NETWORK	33 (1005X4)
RB5209	1-242-963-21	RES, NETWORK	33 (1005X4)

DSP **TUNER**

Ref. No.	Part No.	Description			Remark
RB5210	1-234-372-11	RES, NETWORK	100 (1005X4)		
RB5214	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5215	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5216	1-242-963-21	RES, NETWORK	33 (1005X4)		
RB5217	1-242-963-21	RES, NETWORK	33 (1005X4)		
		< VIBRATOR >			
X5001	1-795-843-11	VIBRATOR, CRYSTAL (12.288MHz)			
X5201	1-813-967-21	PIEZOELECTRIC OSCILLAT (25MHz)			
X5202	1-781-893-21	VIBRATOR, CERAMIC (CHIP TYPE) (12.5MHz)			
**********					
	A-1382-222-A	TUNER BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C8001	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C8002	1-124-779-00	ELECT CHIP	10uF	20%	16V
C8003	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C8004	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C8005	1-126-193-11	ELECT CHIP	1uF	20%	50V
C8006	1-126-193-11	ELECT CHIP	1uF	20%	50V
C8007	1-126-193-11	ELECT CHIP	1uF	20%	50V
C8008	1-126-193-11	ELECT CHIP	1uF	20%	50V
C8009	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C8010	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8011	1-164-733-11	CERAMIC CHIP	820PF	10%	50V
C8012	1-164-733-11	CERAMIC CHIP	820PF	10%	50V
C8013	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C8014	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8015	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C8016	1-126-208-21	ELECT CHIP	47uF	20%	4V
C8017	1-126-208-21	ELECT CHIP	47uF	20%	4V
C8018	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C8019	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C8020	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C8021	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8023	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8024	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8026	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8027	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8028	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8029	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8030	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8031	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8032	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C8033	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C8034	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8035	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8036	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8037	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8038	1-162-908-11	CERAMIC CHIP	3PF	0.25PF	50V
C8039	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8040	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8041	1-162-908-11	CERAMIC CHIP	3PF	0.25PF	50V
C8042	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8043	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8044	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8045	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8046	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C8047	1-126-208-21	ELECT CHIP	47uF	20%	4V
C8048	1-126-208-21	ELECT CHIP	47uF	20%	4V
C8049	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V
C8050	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8051	1-126-209-11	ELECT CHIP	100uF	20%	4V
C8052	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8053	1-117-681-11	ELECT CHIP	100uF	20%	16V
C8056	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8057	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8058	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C8059	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C8060	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8061	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8062	1-128-993-21	ELECT CHIP	22uF	20%	10V
C8063	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8064	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8065	1-126-204-11	ELECT CHIP	47uF	20%	16V
C8066	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8067	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8068	1-124-779-00	ELECT CHIP	10uF	20%	16V
C8070	1-124-779-00	ELECT CHIP	10uF	20%	16V
C8071	1-124-779-00	ELECT CHIP	10uF	20%	16V
C8072	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C8073	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C8074	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8075	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8076	1-115-412-11	CERAMIC CHIP	680PF	5%	25V
C8077	1-115-412-11	CERAMIC CHIP	680PF	5%	25V
C8078	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8079	1-124-779-00	ELECT CHIP	10uF	20%	16V
C8080	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8081	1-124-779-00	ELECT CHIP	10uF	20%	16V
C8082	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8083	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8084	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C8085	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C8086	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8087	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C8088	1-128-994-21	ELECT CHIP	47uF	20%	10V
C8090	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C8092	1-126-204-11	ELECT CHIP	47uF	20%	16V
C8093	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C8094	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C8095	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C8096	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
		< CONNECTOR >			
CN8001	1-793-642-21	CONNECTOR (USB) (4P), SQUARE (XM)			
CN8002	1-821-182-11	SOCKET, DIN 8P (SIRIUS)			
CN8003	1-817-615-21	CONNECTOR BOARD TO BOARD 18P			
CN8005	1-568-828-11	CONNECTOR, FFC 9P			
CN8006	1-770-409-11	CONNECTOR, BOARD TO BOARD 16P			
CN8007	1-770-407-11	CONNECTOR, BOARD TO BOARD 12P			
CN8008	1-770-408-11	CONNECTOR, BOARD TO BOARD 14P			

Ref. No.	Part No.	Description			Remark
		< DIODE >			
D8001	8-719-988-61	DIODE 1SS355TE-17			
D8002	8-719-988-61	DIODE 1SS355TE-17			
D8003	8-719-083-02	DIODE KDS160-RTK			
D8004	8-719-083-02	DIODE KDS160-RTK			
D8005	6-500-462-01	DIODE NSAD500F-T1B			
D8006	8-719-988-61	DIODE 1SS355TE-17			
		< EARTH TERMINAL >			
ET8001	1-780-318-11	TERMINAL			
ET8002	1-780-318-11	TERMINAL			
		< FERRITE BEAD >			
FB8001	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB8002	1-469-152-11	FERRITE, EMI (SMD) (2012)			
FB8003	1-414-813-11	FERRITE, EMI (SMD) (2012)			
		< IC >			
IC8001	6-705-469-01	IC BA50BC0FP-E2			
IC8002	8-759-710-97	IC NJM4565M-D			
IC8003	6-709-251-01	IC F2602E-01-TR			
IC8004	6-702-302-01	IC TK11133CSCL-G			
IC8005	6-707-111-01	IC PCM1753DBQR			
IC8006	6-706-740-01	IC BA00BC0WFP-E2			
IC8007	6-705-337-01	IC TK11150CSCL-G			
IC8008	8-759-710-97	IC NJM4565M-D			
IC8009	6-711-170-01	IC NJU7313AM (TE2)			
IC8010	8-759-710-97	IC NJM4565M-D			
IC8011	6-709-800-01	IC TA7809AF-(T6L1SONQ			
IC8012	8-759-710-97	IC NJM4565M-D			
		< COIL >			
L8001	1-469-525-91	INDUCTOR	10uH		
L8002	1-469-525-91	INDUCTOR	10uH		
		< TRANSISTOR >			
Q8001	8-729-027-43	TRANSISTOR	DTC114EKA-T146		
Q8002	8-729-027-23	TRANSISTOR	DTA114EKA-T146		
Q8003	8-729-027-43	TRANSISTOR	DTC114EKA-T146		
Q8004	6-550-044-01	TRANSISTOR	2SB1689-T106		
		< RESISTOR/FERRITE BEAD >			
R8001	1-216-864-11	SHORT CHIP	0		
R8009	1-216-833-11	METAL CHIP	10K	5%	1/10W
R8010	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R8014	1-216-864-11	SHORT CHIP	0		
R8015	1-216-864-11	SHORT CHIP	0		
R8019	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8020	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8021	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8022	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8023	1-219-365-11	SHORT CHIP	0		
R8024	1-219-365-11	SHORT CHIP	0		
R8025	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8027	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8028	1-216-841-11	METAL CHIP	47K	5%	1/10W
R8029	1-216-841-11	METAL CHIP	47K	5%	1/10W

Ref. No.	Part No.	Description			Remark
R8032	1-216-809-11	METAL CHIP	100	5%	1/10W
R8034	1-216-821-11	METAL CHIP	1K	5%	1/10W
R8035	1-216-809-11	METAL CHIP	100	5%	1/10W
R8036	1-216-821-11	METAL CHIP	1K	5%	1/10W
R8037	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8038	1-216-837-11	METAL CHIP	22K	5%	1/10W
R8039	1-216-821-11	METAL CHIP	1K	5%	1/10W
R8040	1-216-809-11	METAL CHIP	100	5%	1/10W
R8041	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R8046	1-216-809-11	METAL CHIP	100	5%	1/10W
R8048	1-216-809-11	METAL CHIP	100	5%	1/10W
R8050	1-216-809-11	METAL CHIP	100	5%	1/10W
R8052	1-216-809-11	METAL CHIP	100	5%	1/10W
R8053	1-216-809-11	METAL CHIP	100	5%	1/10W
R8055	1-216-809-11	METAL CHIP	100	5%	1/10W
R8057	1-216-809-11	METAL CHIP	100	5%	1/10W
R8063	1-216-841-11	METAL CHIP	47K	5%	1/10W
R8064	1-216-841-11	METAL CHIP	47K	5%	1/10W
R8068	1-216-833-11	METAL CHIP	10K	5%	1/10W
R8070	1-216-809-11	METAL CHIP	100	5%	1/10W
R8071	1-216-833-11	METAL CHIP	10K	5%	1/10W
R8072	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R8073	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R8074	1-216-821-11	METAL CHIP	1K	5%	1/10W
R8075	1-216-864-11	SHORT CHIP	0		
R8076	1-216-841-11	METAL CHIP	47K	5%	1/10W
R8077	1-216-833-11	METAL CHIP	10K	5%	1/10W
R8078	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8079	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8080	1-216-834-11	METAL CHIP	12K	5%	1/10W
R8081	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R8082	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R8083	1-216-834-11	METAL CHIP	12K	5%	1/10W
R8084	1-216-819-11	METAL CHIP	680	5%	1/10W
R8085	1-216-819-11	METAL CHIP	680	5%	1/10W
R8086	1-216-809-11	METAL CHIP	100	5%	1/10W
R8087	1-216-809-11	METAL CHIP	100	5%	1/10W
R8088	1-216-805-11	METAL CHIP	47	5%	1/10W
R8089	1-216-805-11	METAL CHIP	47	5%	1/10W
R8090	1-216-805-11	METAL CHIP	47	5%	1/10W
R8091	1-500-238-11	BEAD, FERRITE (CHIP) (1608)			
R8092	1-216-805-11	METAL CHIP	47	5%	1/10W
R8093	1-216-805-11	METAL CHIP	47	5%	1/10W
R8094	1-216-805-11	METAL CHIP	47	5%	1/10W
R8095	1-216-805-11	METAL CHIP	47	5%	1/10W
		< COMPOSITION CIRCUIT BLOCK >			
RB8001	1-234-378-21	RES, NETWORK	10K (1005X4)		
RB8002	1-234-378-21	RES, NETWORK	10K (1005X4)		
RB8003	1-234-378-21	RES, NETWORK	10K (1005X4)		
RB8004	1-234-378-21	RES, NETWORK	10K (1005X4)		
RB8005	1-234-372-11	RES, NETWORK	100 (1005X4)		
		< VIBRATOR >			
X8001	1-760-841-11	VIBRATOR, CRYSTAL (45.1584MHz)			

REVISION HISTORY

Clicking the version allows you to jump to the revised page.
Also, clicking the version at the top of the revised page allows you to jump to the next revised page.

Ver.	Date	Description of Revision
1.0	2007.08	New
1.1	2007.10	Change of Part No. for COMPLETE DSP BOARD Change of DSP board (Combined Suffix-12) (SUPPLEMENT-1) Change of TUNER board (Combined Suffix-12/-13) (SUPPLEMENT-1) (ECN-ECC38337/ECC43289/ECC44805)